




As you read this manual, you will find Information that is preceded by a **NOTICE** symbol. This information is intended to help you avoid damage to your vehicle, other property, or the environment.

Symbols   on labels attached to your vehicle are to remind you to read this owner's manual for proper and safe operation of your vehicle.

 is colour-coded to indicate "danger" (red), "warning" (orange), or "caution" (amber).

 **Safety Labels** P. 72


A Few Words About Safety

Your safety, and the safety of others, is very important. And operating this vehicle safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all the hazards associated with operating or maintaining your vehicle. You must use your own good judgement.

You will find this important safety information in a variety of forms, including:

- **Safety Labels** - on the vehicle.
- **Safety Messages** - preceded by a safety alert symbol  and one of three signal words: **DANGER**, **WARNING**, or **CAUTION**. These signal words mean:

 **DANGER**

You **WILL** be KILLED or SERIOUSLY HURT if you don't follow instructions.

 **WARNING**

You **CAN** be KILLED or SERIOUSLY HURT if you don't follow instructions.

 **CAUTION**

You **CAN** be HURT if you don't follow instructions.

- **Safety Headings** - such as Important Safety Precautions.
- **Safety Section** - such as Safe Driving.
- **Instructions** - how to use this vehicle correctly and safely.

This entire book is filled with important safety information - please read it carefully.

Event Data Recorders

Your vehicle is equipped with several devices commonly referred to as Event Data Recorders. They record various types of real time vehicle data such as SRS airbag deployment and SRS system components failure.

This data belongs to the vehicle owner and may not be accessed by anyone else except as legally required or with the permission of the vehicle owner.

However this data may be accessed by Honda, its authorised dealers and authorised repairers, employees, representatives and contractors only for the purpose of the technical diagnosis, research and development of the vehicle.

Service Diagnostic Recorders

Your vehicle is equipped with service-related devices that record information about powertrain performance and driving conditions. The data can be used to help technicians diagnose, repair and maintain the vehicle. This data may not be accessed by anyone else except as legally required or with the permission of the vehicle owner.

However this data may be accessed by Honda, its authorised dealers and authorised repairers, employees, representatives and contractors only for the purpose of the technical diagnosis, research and development of the vehicle.

This owner's manual should be considered a permanent part of the vehicle and should remain with the vehicle when it is sold.

This owner's manual covers all models of your vehicle. You may find descriptions of equipment and features that are not on your particular model.

Images throughout this owner's manual represent features and equipment that are available on some, but not all, models. Your particular model may not have some of these features.

The information and specifications included in this publication were in effect at the time of approval for printing. Honda Motor Co., Ltd. reserves the right, however, to discontinue or change specifications or design at any time without notice and without incurring any obligation.

Safe Driving P. 29

For Safe Driving P. 30

Seat Belts P. 34

Airbags P. 43

Instrument Panel P. 73

Indicators P. 74

Gauges and Displays P. 99

Controls P. 115

Clock P. 116

Locking and Unlocking the Doors P. 118

Opening and Closing the Windows P. 134

Adjusting the Mirrors P. 148

Adjusting the Seats P. 151

Climate Control System P. 166

Features P. 173

Driving P. 175

Before Driving P. 176

Towing a Trailer P. 180

Refueling P. 211

Maintenance P. 215

Before Performing Maintenance P. 216

Maintenance Schedule P. 219

Checking and Maintaining Wiper Blades P. 243

Climate Control System Maintenance P. 256

Handling the Unexpected P. 265

Tools P. 266

If a Tyre Goes Flat P. 267

Overheating P. 285

Indicator, Coming On/Blinking P. 287

Information P. 299

Specifications P. 300

Identification Numbers P. 302

Contents

Child Safety P. 52

Exhaust Gas Hazard P. 71

Safety Labels P. 72

Opening and Closing the Boot P. 129

Security System P. 131

Operating the Switches Around the Steering Wheel P. 137

Interior Lights/Interior Convenience Items P. 159

When Driving P. 181

Braking P. 203

Parking Your Vehicle P. 208

Fuel Economy and CO₂ Emissions P. 213

Maintenance Under the Bonnet P. 224

Replacing Light Bulbs P. 234

Checking and Maintaining Tyres P. 245

12-volt Battery P. 252

Remote Transmitter Care P. 255

Cleaning P. 258

Accessories and Modifications P. 263

Power System Won't Start P. 280

Jump Starting P. 283

Fuses P. 290

Emergency Towing P. 297

Quick Reference Guide P. 4

Safe Driving P. 29

Instrument Panel P. 73

Controls P. 115

Features P. 173

Driving P. 175


Maintenance P. 215


Handling the Unexpected P. 265

Information P. 299


Index P. 303


Visual Index

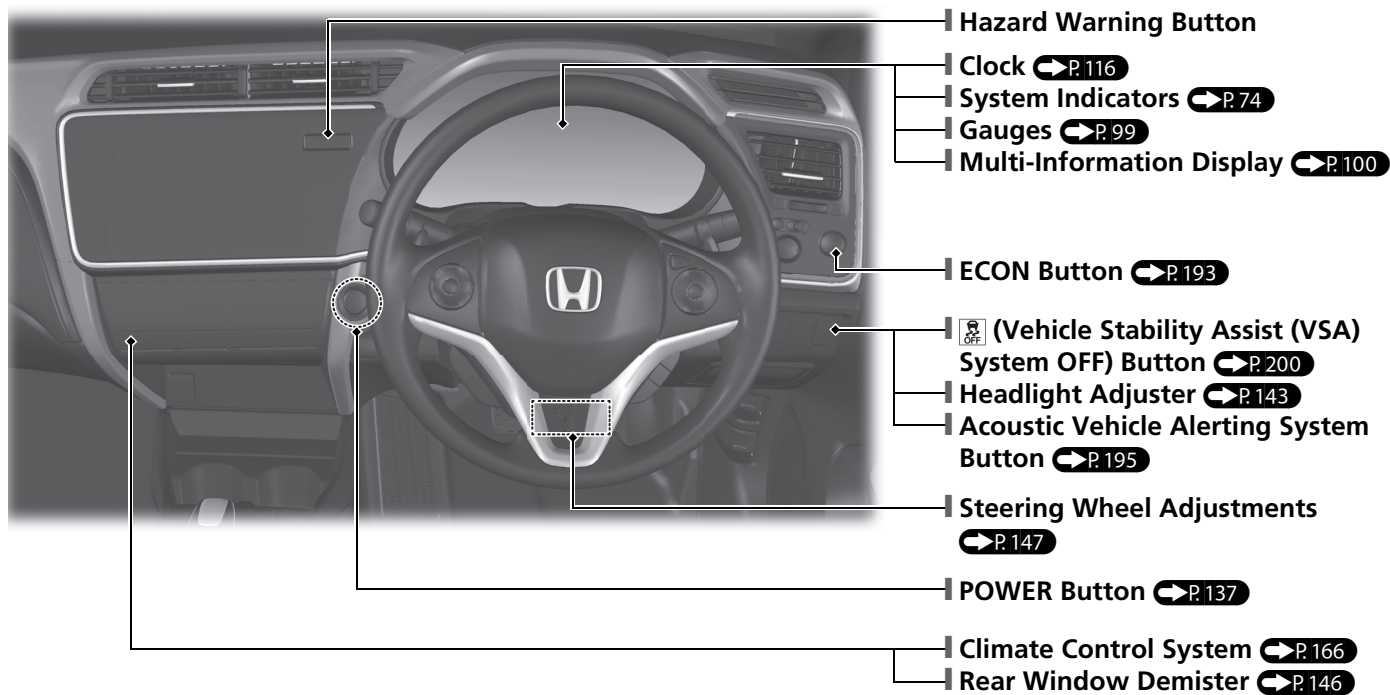


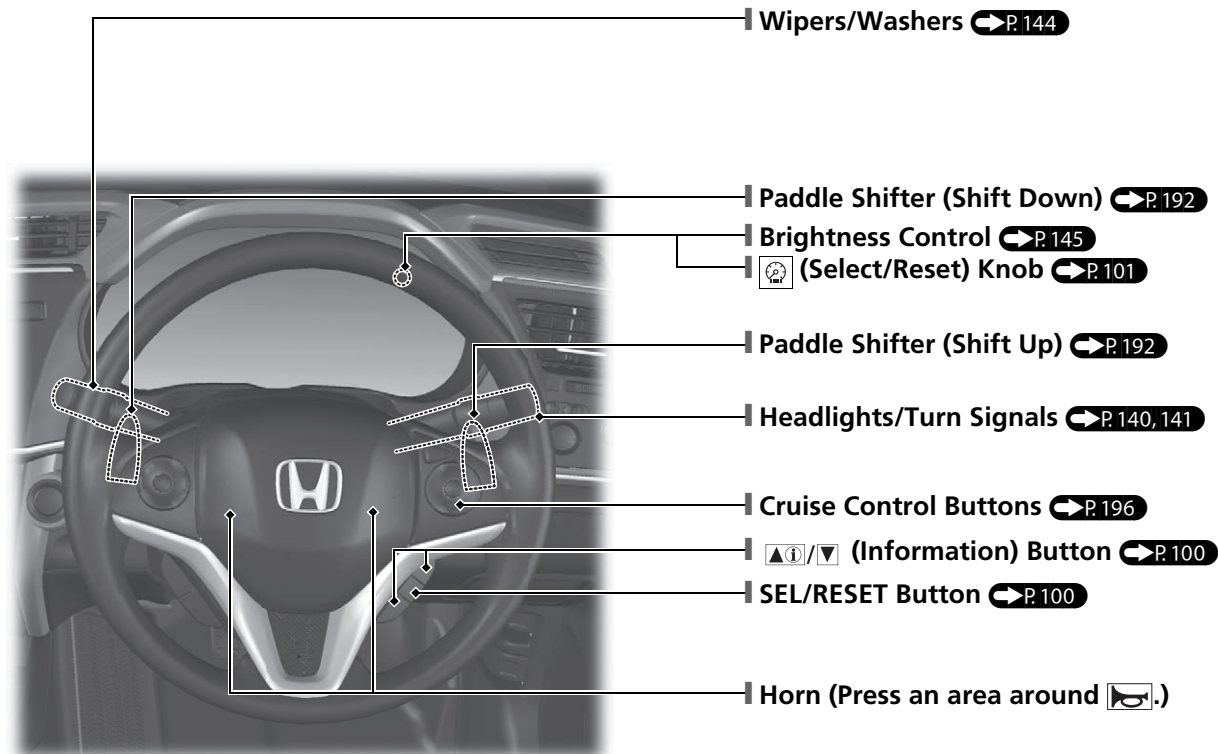


Visual Index

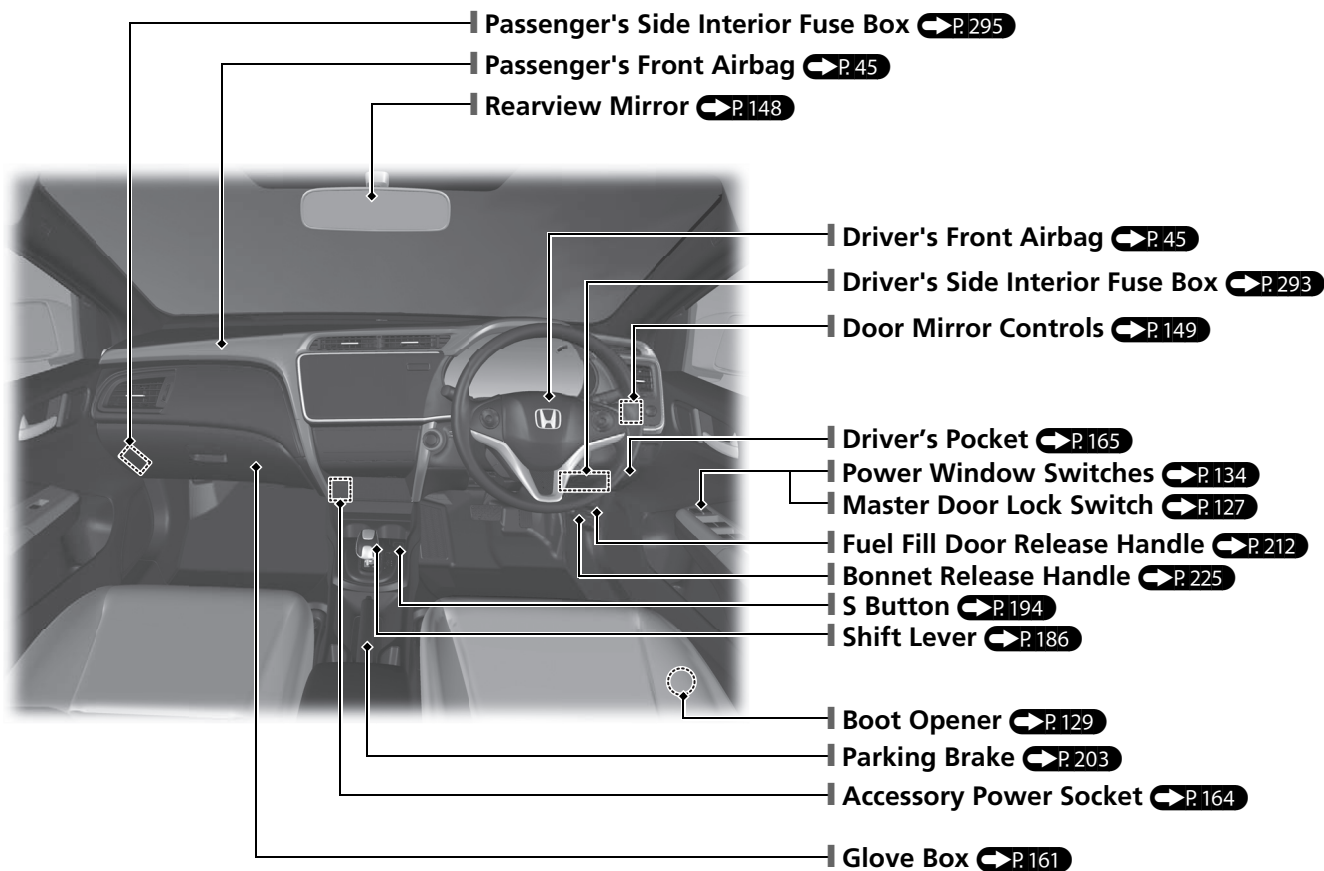

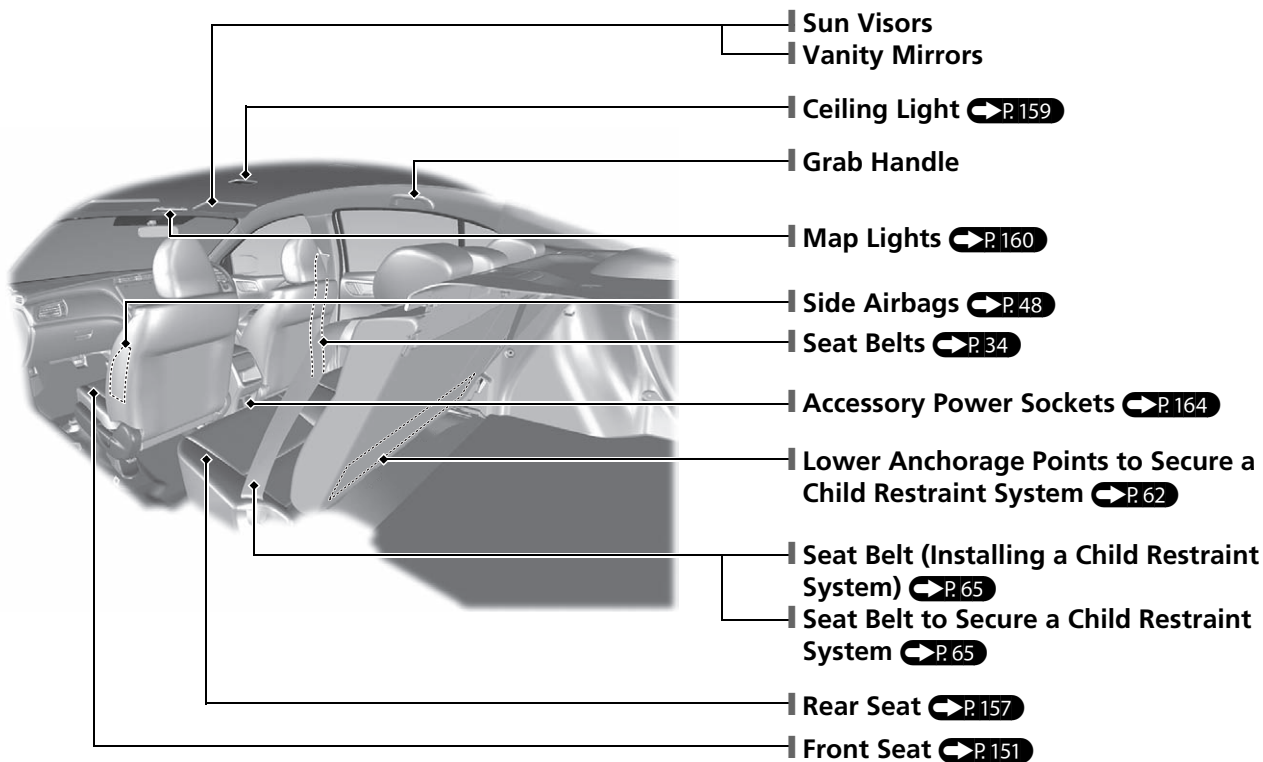





Visual Index

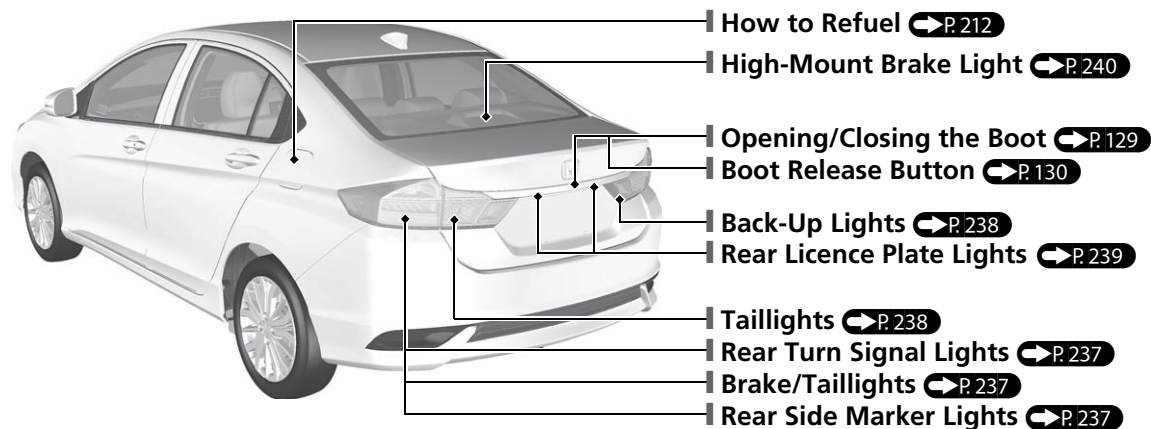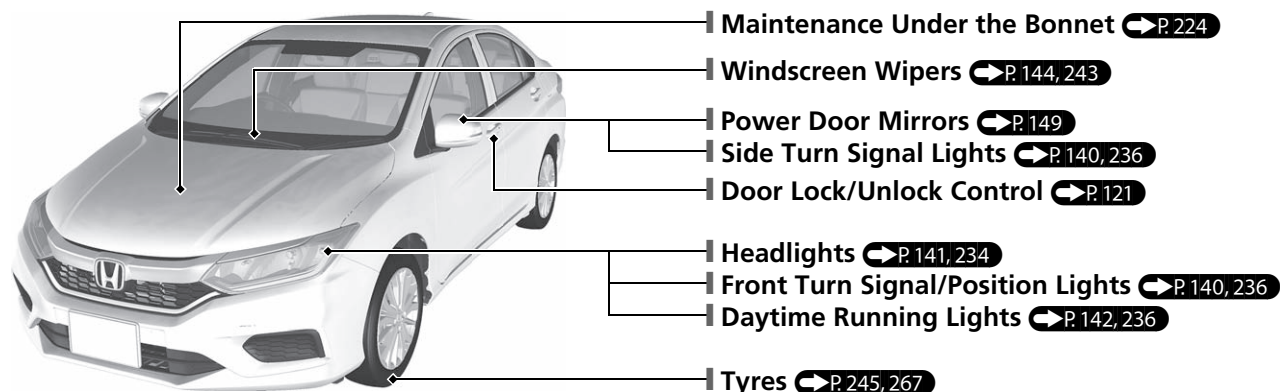

SPORTS HYBRID i-DCD (intelligent Dual Clutch Drive)

Your SPORTS HYBRID i-DCD vehicle uses both an electric motor and a petrol engine as propulsion sources.


🔌 **Power Flow Monitor** ➡ P.105

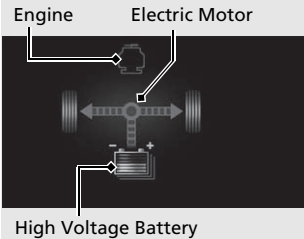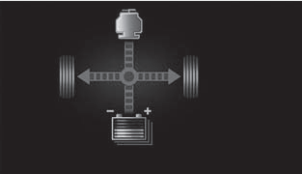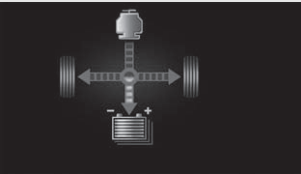Operating mode	Electric Vehicle (EV)	Hybrid	Engine (direct drive)	Regeneration
Driving state	<p>The vehicle is accelerating from a stop, driving at low speeds, or cruising at a moderate speed.</p> <ul style="list-style-type: none"> Only the electric motor provides propulsion to the wheels. The EV indicator in the meter lights ups. <p>🔌 Indicators ➡ P.74</p>	<p>The vehicle is accelerating under a heavy load.</p> <ul style="list-style-type: none"> The engine drives the generator, supplying electricity to the electric motor for additional power. 	<p>The vehicle is gently accelerating or cruising at a high speed.</p> <ul style="list-style-type: none"> Only the engine provides propulsion. Depending on the condition of the vehicle, the electric motor acts as a generator to recharge the High Voltage battery. 	<p>The accelerator pedal is released and the vehicle is decelerating.</p> <ul style="list-style-type: none"> The electric motor provides electricity to the High Voltage battery through regenerative braking.
Power flow monitor	 <p>Engine Electric Motor</p> <p>High Voltage Battery</p>			
Electric motor	Running	Running	Generating	Regenerating
Engine	Stopped	Running	Running	Stopped/No Output
High Voltage battery	Discharging	Discharging	Charging/Discharging	Charging

* Not available on all models

Fuel Efficient Driving

To improve fuel efficiency, keep the following points in mind when driving:

- Avoid sudden acceleration and deceleration.
- Refer to the fuel efficiency indicator. 

Batteries

Your vehicle is equipped with two batteries; a 12-volt battery that powers the airbags, lights, and other standard 12-volt systems; and a High Voltage battery that powers the electric motor and charges the 12-volt battery.

Regenerative Energy and Regenerative Braking

When the vehicle is decelerating or descending a hill, the electric motor acts as a generator, supplying electricity to recharge the high-voltage battery. The electric motor also helps slow the vehicle down in a manner similar to how engine braking works in petrol-driven vehicles.

Auto Engine Start/Stop

Depending on power demand or the state of the High Voltage battery, the petrol engine will automatically stop or restart.

In the following cases, the engine will continue running:

- The vehicle momentarily needs additional power for hard acceleration, or for driving uphill or at high speeds.
- The climate control system is in use, and the temperature is set to high.
- The temperature of the High Voltage battery is high or low.

The engine may continue running in other cases as well.

In the following case, the engine may automatically start:

- The driver leaves the shift position in **[P]**, unfasten his or her seatbelt, and then opens the door.

About Hybrid Vehicles

High Voltage sections and High Voltage cables are insulated by electromagnetic shielding.


Compared to conventional vehicles and household appliances, hybrid vehicles generate a high number of electromagnetic waves.

Sounds Unique to the SPORTS HYBRID i-DCD System


When you first start driving this vehicle, you will likely hear some unfamiliar sounds, particularly when you turn on the power system, or while you are driving or accelerating from a stop. Some of these sounds are unique to this vehicle's powertrain, fuel, and climate control systems; others are similar to sounds generated by conventional automobiles that typically are masked by louder noises absent from a vehicle of this design.

These sounds are not a cause for concern, and you will soon recognize them as normal and thus be able to detect any new or unusual noise should one develop.

Safety Precautions

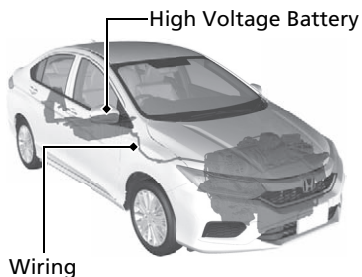

Do not cover the air intake.

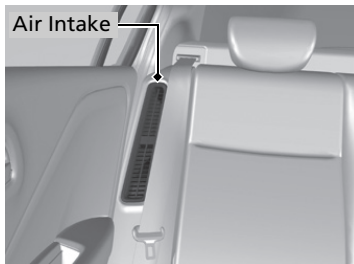

If the air intake is obstructed during vehicle operation, the High Voltage battery can become too hot. To protect the battery, the system may limit the battery's output and cause the power system and 12-volt battery charging system indicators to come on.

Do not touch the High Voltage system

Attempting to take a High Voltage system component apart or disconnect one of its wires can cause severe electrical shock. Make sure that any maintenance or repairs to the High Voltage system is performed by a Honda dealer.

If a crash occurs

- Be careful of electric shock hazard.

- ▶ If a severe crash damages your vehicle's High Voltage system, there is a possibility of electrical shock due to exposed High Voltage components or wires. If this happens, do not touch any of the High Voltage system components or any of its orange wires.

- Avoid contact with High Voltage battery fluid.

- ▶ The High Voltage battery contains a flammable electrolyte that could leak as a result of a severe crash. Avoid skin or eye contact with the electrolyte as it is corrosive. If you accidentally come into contact with the electrolyte, rinse the exposed skin or flush your eyes with copious amounts of water for at least five minutes, and seek medical attention immediately.

- Use a fire extinguisher for an electrical fire.

- ▶ Attempting to extinguish an electrical fire with a small quantity of water, from a garden hose for instance, can be dangerous.

- Anytime the vehicle is damaged in an accident, have it repaired by a dealer.


Emergency Shutdown System for the High Voltage System

If the vehicle is involved in a crash, the emergency shutdown system will activate depending on the severity of the impact. When the system activates, the High Voltage system automatically shuts down, and the vehicle can no longer move under its own power. To return the High Voltage system back to normal operation, consult a dealer. Honda collects and recycles High Voltage batteries used in its vehicles. Consult a dealer for more information.

Eco Assist System P. 193


Ambient Meter

- The colour of the ambient meter changes to green to indicate that the vehicle is being driven in a fuel efficient manner.

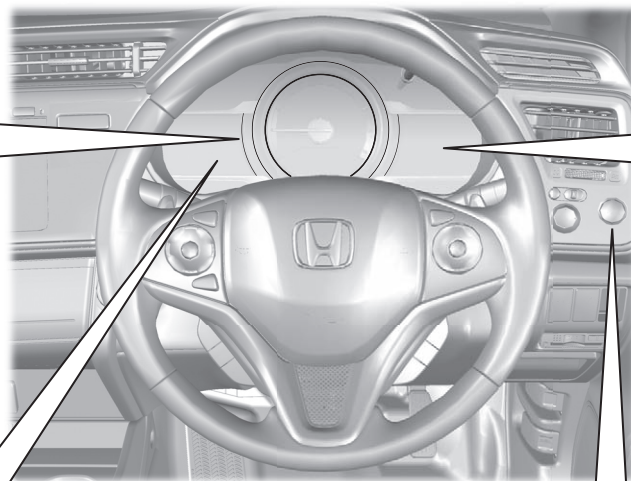

ECON Mode Indicator P. 87

- Comes on when ECON mode is pressed.
- The message is displayed for a few seconds when ECON mode is turned on.

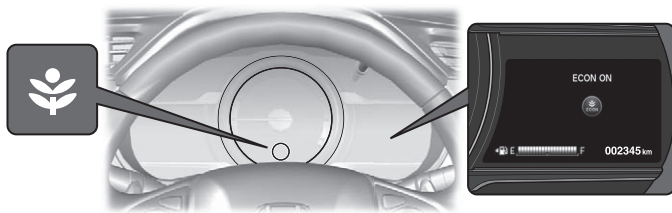

ECON Button  P. 193
Helps to maximise fuel economy.



Eco Drive Display

- Keep the vehicle icon near the centre of the circle.

Fuel economy is: Worse




Aggressive
Deceleration

Better




Moderate
Deceleration

Best

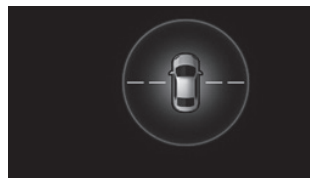

Slow
Acceleration/Deceleration

Better



Moderate
Acceleration

Worse




Aggressive
Acceleration



Drive Cycle Score/Lifetime Points

- Comes on when the power mode is in VEHICLE OFF (LOCK).

Drive Cycle Score

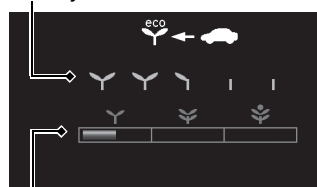

Lifetime Points

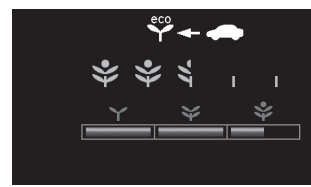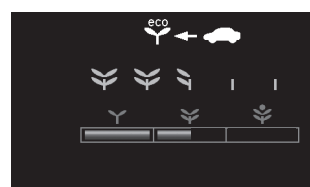

Safe Driving P. 29

Before Driving Checklist P. 176

- Before driving, check that the front seats, head restraints, steering wheel, and mirrors have been properly adjusted.

Child Safety P. 52

- All children 12 and younger should be seated in the rear seat.
- Small children should be properly restrained in a front facing child restraint system.
- Infants must be properly restrained in a rear-facing child restraint system on a rear seat.

Exhaust Gas Hazard P. 71

- Your vehicle emits dangerous exhaust gases that contain carbon monoxide. Do not run the engine in confined spaces where carbon monoxide gas can accumulate.

Seat Belts P. 34


- Fasten your seat belt and sit upright well back in the seat.
- Check that your passengers are wearing their seat belts correctly.

Airbags P. 43

- Your vehicle is fitted with airbags to help to protect you and your passengers during a moderate-to-severe collision.





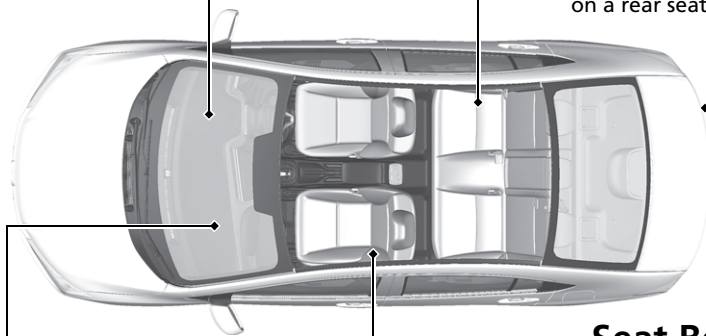









Fasten your lap belt as low as possible.




Instrument Panel



Gauges  / Multi-Information Display  / System Indicators 

System Indicators

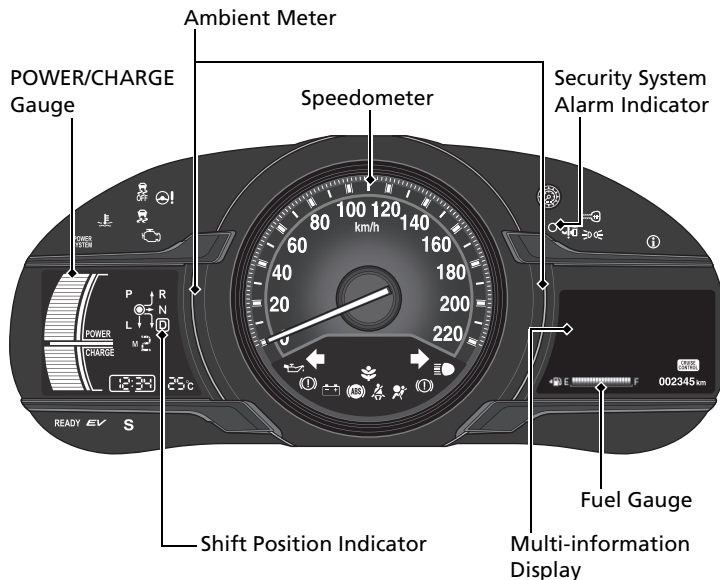







-  Malfunction Indicator Lamp
-  Low Oil Pressure Indicator
-  12-volt Battery Charging System Indicator
-  Vehicle Stability Assist (VSA) System Indicator
-  VSA OFF Indicator
-  Immobilizer System Indicator
-  Electric Power Steering (EPS) System Indicator
-  High Temperature Indicator (Red)
-  Low Temperature Indicator (Blue)
-  System Message Indicator
-  Keyless Access System Indicator
-  ECON mode Indicator



Lights Indicators


-  Lights On Indicator
-  High Beam Indicator




System Indicators

-  Turn Signal and Hazard Warning Indicators
-  Anti-lock Brake System (ABS) Indicator
-  Parking Brake and Brake System Indicator (Red)
-  Brake System Indicator (Amber)
-  Seat Belt Reminder Indicator
-  Supplemental Restraint System Indicator
- READY** **READY Indicator**
- POWER SYSTEM** **POWER SYSTEM Indicator**
- EV** **EV Indicator**
- S** **[S] Mode Indicator**
-  **CRUISE MAIN Indicator**
-  **CRUISE CONTROL Indicator**

Controls P.115

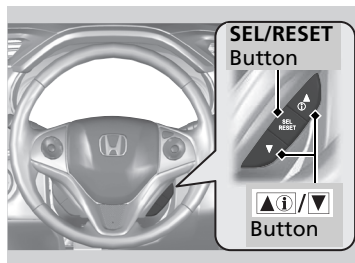Clock P.116




The clock in the multi-information display is adjusted using the    buttons on the steering wheel.

 P.116


POWER Button P.137

Press the button to change the vehicle's power mode.

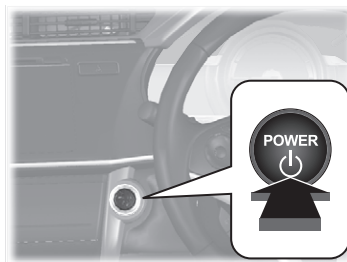


Turn Signals P.140

Turn Signal Control Lever

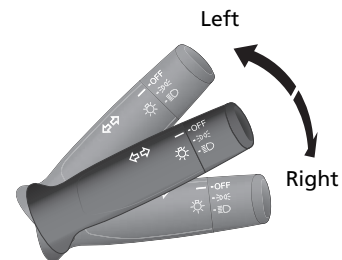

Lights ➡ P.141


Light Control Switches

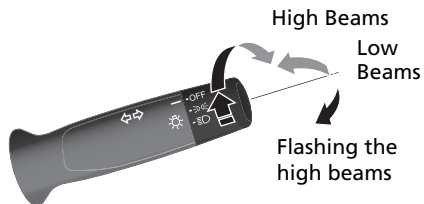

Wipers and Washers

➡ P.144

Wiper/Washer Control Lever

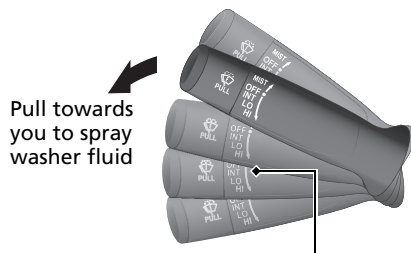

MIST

OFF


INT: Low speed with intermittent

LO: Low speed wipe

HI: High speed wipe

Steering Wheel ➡ P.147

- To adjust, pull the adjustment lever towards you, adjust to the desired position, then lock the lever back in place.

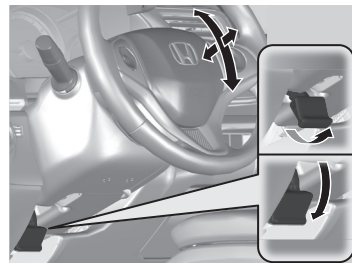


Unlocking the Driver's Door from the Inside

➡ P.126

- Pull the driver's door inner handle to unlock and open it at the same time.



Boot ➡ P.129

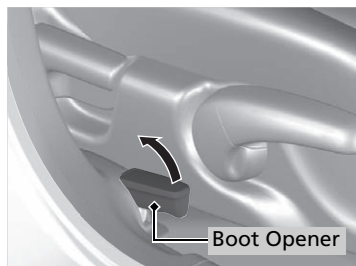


- To unlock and open the boot:
- Pull the boot opener.
- Press the boot release button on the keyless remote.
- Press the boot release button on the boot lid.

Power Door Mirrors


➡ P.149

- With the power mode is in ON, move the selector switch to **L** or **R**.
- Push the appropriate edge of the adjustment switch to adjust the mirror.
- Press the folding button to fold in and out the door mirrors.

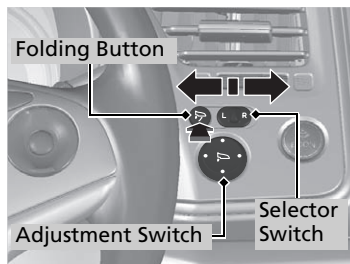




Power Windows ➡ P.134

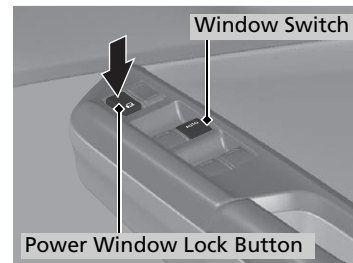- With the power mode is in ON, open and close the power windows.
- If the power window lock button is in the off position, each passenger's window can be opened and closed with its own switch.
- If the power window lock button is in the on position, each passenger's window switch is disabled.



Climate Control System P.166


- Select the **AUTO** icon to activate the climate control system.
- Select the  **(ON/OFF)** icon to turn the system on and off.
- Select the  icon to defrost the windscreen.

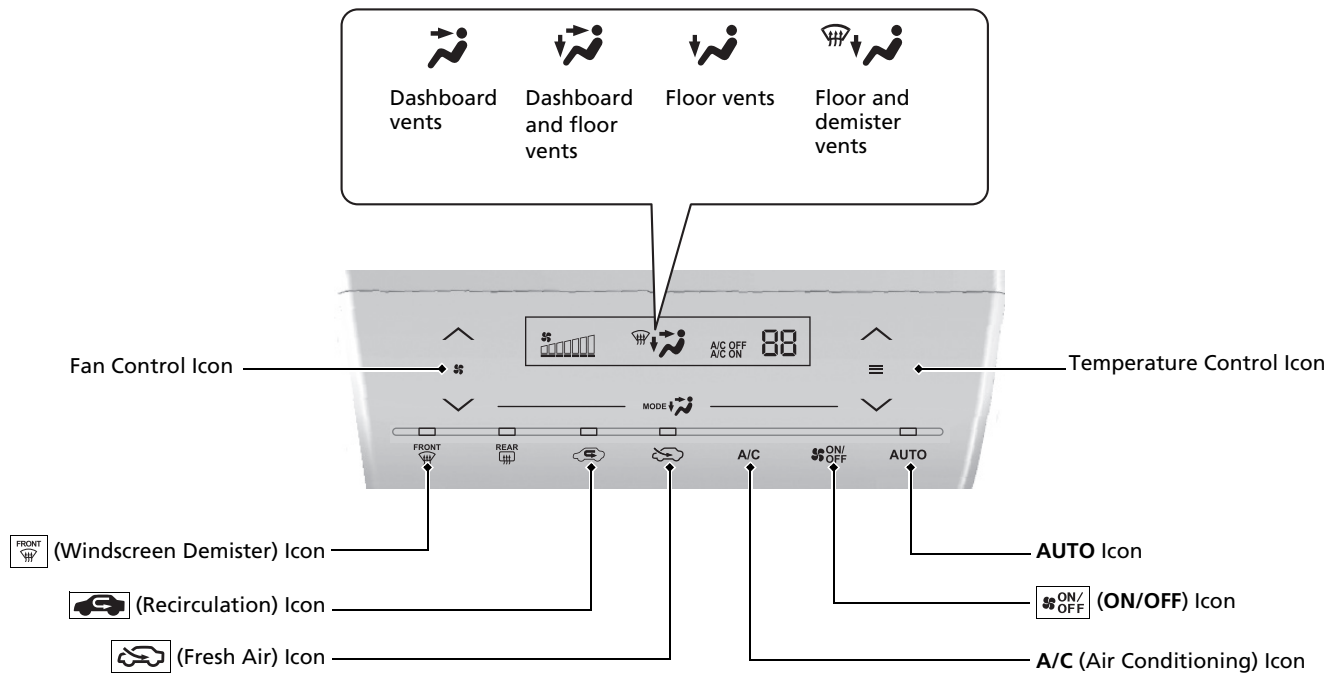

Driving

Dual Clutch Transmission

- Always depress the brake pedal before selecting **P** or changing the gear position from **P**.
- Select **P** and depress the brake pedal when turning on the power.
- Gear selection

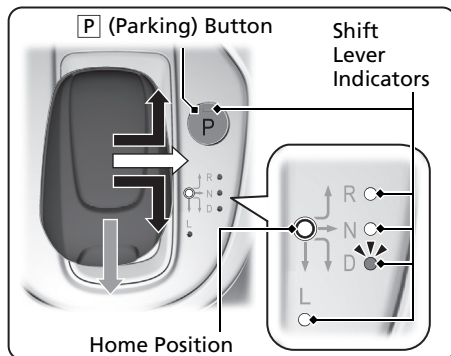


READY Indicator
You can operate the vehicle when it is on.

READY

Shift Position Indicator

The selected shift position is displayed in the shift lever indicator and the shift position indicator simultaneously.

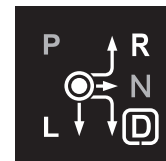

Press the **P** (Park) button to change to **P**.



Move the shift lever in the direction of the arrow to change to **R** or **D**.



Slide the shift lever to the driver side and hold it for a while to change to **N**.



L is only available when the transmission is in **D**.

Change the gear position to **D**, then move the shift lever in the direction of the arrow to change to **L**.

The shift lever automatically returns to Home position as you release it.



Park

Used when parking or turning the power on or off



Reverse

Used when reversing



Neutral

Propulsion power is not transmitted to wheels



Drive

Used:

- For normal driving
- When temporarily driving in the sequential mode
- When driving in the sequential mode (when driving in **S** mode)



Low


Used:

- To further increase engine braking
- When going up or down hills

Sequential Mode P. 191

- Paddle shifters allow you to shift gears much like a manual transmission (1st through 7th). This is useful for regenerative braking.
- D-paddle shift mode: The transmission will shift back to automatic mode once the system detects that the vehicle is cruising.
- Sequential mode: Holds the selected gear, and the **M** (Sequential Mode) indicator comes on, when the **S** mode is on.
- The selected gear position is shown in the instrument panel.

M (Sequential Mode) Indicator

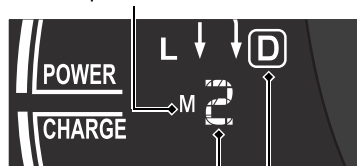



Sequential Mode Gear Selection Indicator

Shift Position Indicator

Shift Down
 Paddle Shifter



Shift Up 
Paddle Shifter

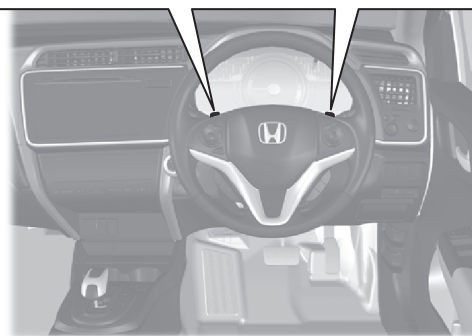

VSA On and Off ➡ P. 200

- The vehicle stability assist (VSA) system helps to stabilise the vehicle during cornering, and helps to maintain traction while accelerating on loose or slippery road surfaces.
- VSA comes on automatically every time you start the engine.
- To partially disable or fully restore VSA function, press and hold the button until you hear a beep.

Cruise Control ➡ P. 196

- Cruise control allows you to maintain a set speed without keeping your foot on the accelerator pedal.
- To use cruise control, press the **CRUISE** button, then press **–/SET** button when the vehicle speed is above 40 km/h.

Refueling ➡ P.211

Fuel recommendation:

**Unleaded petrol, research octane
number 91 or higher**

Fuel tank capacity: 40 L


- 1 Pull on the fuel fill door release handle under the dashboard at the driver's side.



- 2 Turn the fuel fill cap slowly to remove the cap.

- 3 Place the cap in the holder on the fuel fill door.

- 4 After refueling, screw the cap back on until it clicks at least once.

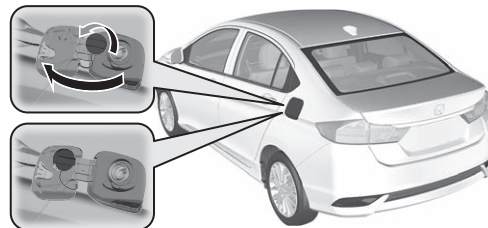

Maintenance P.215


Under the Bonnet P.224

- Check engine oil, engine coolant, and window washer fluid. Add when necessary.
- Check brake fluid.
- Check the 12-volt battery condition monthly.

- 1 Pull the bonnet release handle under the driver's side lower outside corner of the dashboard.



- 2 Locate the bonnet latch lever, pull it up, and then raise the bonnet. Once you have raised the bonnet slightly, you can release the lever.

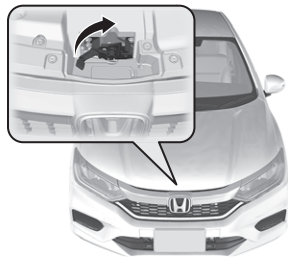

- 3 When finished, close the bonnet and make sure it is firmly locked in place.

Wiper Blades P.243

- Replace blades if they leave streaks across the windscreen.



Tyres P.245

- Inspect tyres and wheels regularly.
- Check tyre pressures regularly.
- Install winter tyres for winter driving.

Lights P.234

- Inspect all lights regularly.

Handling the Unexpected ➡ P.265


Flat Tyre ➡ P.267

- Park in a safe place and repair the flat tyre using the temporary tyre repair kit.



Power System Won't Start ➡ P.280

- If the 12-volt battery is dead, jump start using a booster battery.

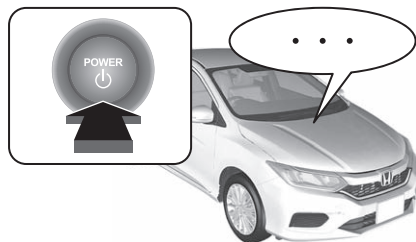


Overheating ➡ P.285

- Park in a safe location. If you do not see steam under the bonnet, open the bonnet, and let the engine cool down.




Indicators Come On ➡ P.287

- Identify the indicator and consult the owner's manual.

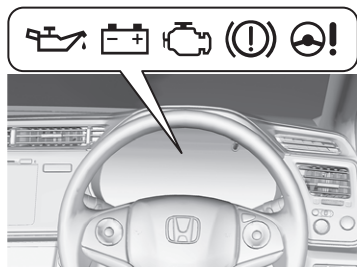

Blown Fuse ➡ P.290

- Check for a blown fuse if an electrical device does not operate.

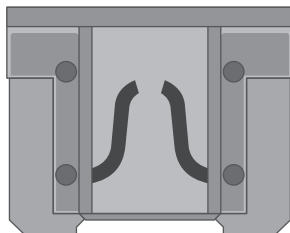

Emergency Towing ➡ P.297

- Call a professional towing service if you need to tow your vehicle.



What to Do If


Q Why does the brake pedal pulsate slightly when applying the brakes?

A This can occur when the ABS activates and does not indicate a problem. Apply firm, steady pressure on the brake pedal. Never pump the brake pedal.

► Anti-lock Brake System (ABS) ➔ P 205

Q The rear door cannot be opened from inside the vehicle. Why?

A Check if the childproof lock is in the lock position. If so, open the rear door with the outside door handle.

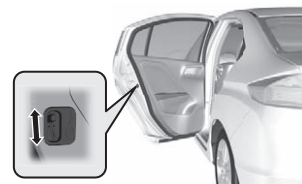

To cancel this function, slide the lever up to the unlock position.

Q Why do the doors lock after I unlocked the doors?

A If you do not open a door within 30 seconds, the doors are relocked automatically for security.

Q Why does the beeper sound when I open the driver's door?

A The beeper sounds when:

- The power mode is in ACCESSORY.
- The exterior lights are left on.



Why does the beeper sound when I start driving?



The beeper sounds when:

- Driver and/or front passenger are not wearing their seat belts.
- The parking brake lever is not fully released.



Why do I hear a screeching sound when I apply the brake pedal?




The brake pads may need to be replaced. Have your vehicle inspected by a dealer.



Why does the gear position automatically change to **P** when I open the driver's door to check for parking space lines when reversing?



- Fasten the driver's seat belt.
- Close the driver's door and manually change the gear position.

► When opening the driver's door  **P 189**

Safe Driving

You can find many safety recommendations throughout this chapter, and throughout this manual.

For Safe Driving

Important Safety Precautions	30
Your Vehicle's Safety Features.....	32
Safety Checklist	33

Seat Belts

About Your Seat Belts	34
Fastening a Seat Belt	38
Seat Belt Inspection.....	41
Anchorage Points.....	42

Airbags

Airbag System Components.....	43
Types of Airbags	45

Front Airbags (SRS)	45
Side Airbags	48
Airbag System Indicators.....	50
Airbag Care	51

Child Safety

Protecting Child Passengers	52
Safety of Infants and Small Children ..	56
Safety of Larger Children	68

Exhaust Gas Hazard

Carbon Monoxide Gas.....	71
--------------------------	----

Safety Labels

Label Locations	72
-----------------------	----

The following pages explain your vehicle's safety features and how to use them properly. The safety precautions below are ones that we consider to be among the most important.

Important Safety Precautions

■ Always wear your seat belt

A seat belt is your best protection in all types of collisions. Airbags are designed to supplement seat belts, not replace them. So even though your vehicle is equipped with airbags, make sure you and your passengers always wear your seat belts, and wear them properly.

■ Restrain all children

Children aged 12 and under should ride properly restrained in a back seat, not the front seat. Infants and small children should be restrained in a child restraint system. Larger children should use a booster seat and a lap/shoulder seat belt until they can use the belt properly without a booster seat.

■ Be aware of airbag hazards

While airbags can save lives, they can cause serious or fatal injuries to occupants who sit too close to them, or are not properly restrained. Infants, young children, and short adults are at the greatest risk. Be sure to follow all instructions and warnings in this manual.

■ Don't drink and drive

Alcohol and driving don't mix. Even one drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. So don't drink and drive, and don't let your friends drink and drive, either.

⌘ Important Safety Precautions

Some countries prohibit the use of mobile phones other than hands-free devices by the driver while driving.

■ Pay appropriate attention to the task of driving safely

Engaging in mobile phone conversation or other activities that keep you from paying close attention to the road, other vehicles, and pedestrians could lead to a crash. Remember, situations can change quickly, and only you can decide when it is safe to divert some attention away from driving.


■ Control your speed

Excessive speed is a major factor in crash injuries and deaths. Generally, the higher the speed, the greater the risk, but serious injuries can also occur at lower speeds. Never drive faster than is safe for current conditions, regardless of the maximum speed posted.

■ Keep your vehicle in safe condition

Having a tyre blowout or a mechanical failure can be extremely hazardous. To reduce the possibility of such problems, check your tyre pressures and condition frequently, and perform all regularly scheduled maintenance.

Your Vehicle's Safety Features

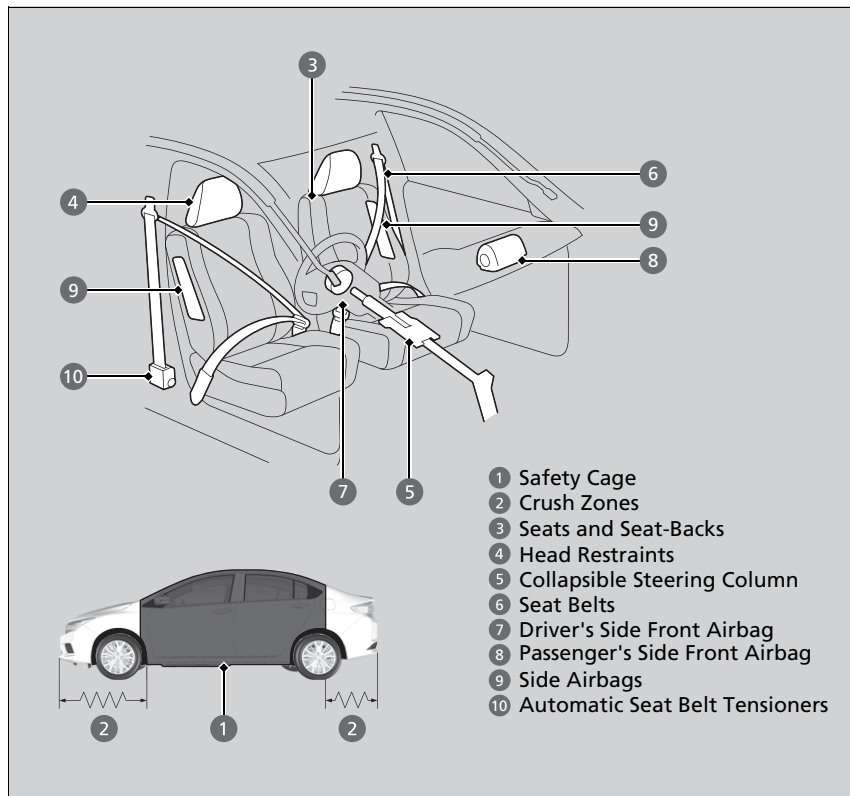

The following checklist will help you take an active role in protecting yourself and your passengers.

►► Your Vehicle's Safety Features

Your vehicle is equipped with many features that work together to help to protect you and your passengers during a crash.

Some features do not require any action on your part. These include a strong steel framework that forms a safety cage around the passenger compartment, front and rear crush zones, a collapsible steering column, and tensioners that tighten the front seat belts in a sufficient crash.

However, you and your passengers cannot take full advantage of these features unless you remain seated in the correct position and always wear your seat belts. In fact, some safety features can contribute to injuries if they are not used properly.

Safety Checklist

For the safety of you and your passengers, make a habit of checking these items each time before you drive.

- Adjust your seat to a position suitable for driving. Be sure the front seats are adjusted as far to the rear as possible while allowing the driver to control the vehicle. Sitting too close to a front airbag can result in serious or fatal injury in a crash.

✎ **Adjusting the Seats** P. 151

- Adjust head restraints to the proper position. Head restraints are most effective when the centre of the head restraint aligns with the centre of your head. Taller persons should adjust their head restraint to the highest position.

✎ **Adjusting the Front Head Restraints** P. 154

- Always wear your seat belt, and make sure you wear it properly. Confirm that any passengers are properly belted as well.

✎ **Fastening a Seat Belt** P. 38

- Protect children by using seat belts or child restraint systems according to a child's age, height and weight.

✎ **Child Safety** P. 52

✎ Safety Checklist

If the door and/or boot open message appears on the multi-information display, a door and/or the boot is not completely closed. Close all doors and the boot tightly until the message disappears.

✎ **Multi-Information Display Warning and Information Messages** P. 88



About Your Seat Belts

Seat belts are the single most effective safety device because they keep you connected to the vehicle so that you can take advantage of many built-in safety features. They also help to keep you from being thrown against the inside of the vehicle, against any passengers, or out of the vehicle. When worn properly, seat belts also keep your body properly positioned in a crash so that you can take full advantage of the additional protection provided by the airbags.

In addition, seat belts help to protect you in almost every type of crash, including:

- frontal impacts
- side impacts
- rear impacts
- rollovers

» About Your Seat Belts

WARNING

Not wearing a seat belt properly increases the chance of serious injury or death in a crash, even though your vehicle has airbags.

Be sure you and your passengers always wear seat belts and wear them properly.

WARNING: Seat belts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders, as applicable; wearing the lap section of the belt across the abdominal area must be avoided.

WARNING: Seat belts should be adjusted as firmly as possible, consistent with comfort, to provide the protection for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer.

WARNING: Belts should not be worn with straps twisted.

WARNING: Each belt assembly must only be used by one occupant; it is dangerous to put a belt around a child being carried on the occupant's lap.

■ Lap/shoulder seat belts

All five seating positions are equipped with lap/shoulder seat belts with emergency locking retractors. In normal driving the retractor lets you move freely while keeping some tension on the belt. During a collision or sudden stop the retractor locks to restrain your body.

The seat belt must be properly secured when using a front facing child restraint system.

✎ **Installing a Child Restraint System with a Lap/Shoulder Seat Belt** P. 65

■ Proper use of seat belts

Follow these guidelines for proper use:

- All occupants should sit upright, well back in the seat, and remain in that position for the duration of the trip. Slouching and leaning reduce the effectiveness of the belt and can increase the chance of serious injury in a crash.
- Never place the shoulder part of a lap/shoulder seat belt under your arm or behind your back. This could cause very serious injuries in a crash.
- Two people should never use the same seat belt. If they do, they could be very seriously injured in a crash.
- Do not put any accessories on the seat belts. Devices intended to improve comfort or reposition the shoulder part of a seat belt can reduce the protective capability and increase the chance of serious injury in a crash.

✎ About Your Seat Belts

Seat belts cannot completely protect you in every crash. But in most cases, seat belts can reduce your risk of serious injury.

Most countries require you to wear seat belts. Take time to familiarise with the legal requirements of the countries in which you will drive.

If you extend the seat belt too quickly, it will lock in place. If this happens, slightly retract the seat belt, then extend it slowly.

■ Seat Belt Reminder



The seat belt system includes an indicator on the instrument panel to remind the driver or a front passenger or both to fasten their seat belts.

If you set the power mode to ON and a seat belt is not fastened, a beeper will sound and the indicator will blink. After a few seconds, the beeper will stop and the indicator will come on and remain illuminated until the seat belt is fastened.

The beeper will periodically sound and the indicator will blink while the vehicle is moving until the seat belt is fastened.

▶▶ Seat Belt Reminder

The indicator will also come on if a front passenger does not fasten their seat belt within six seconds after the power mode is set to ON.

When no one is sitting in the front passenger's seat, the indicator will not come on and the beeper will not sound.

If the indicator comes on or the beeper sounds with no one sitting in the front passenger's seat. Check if:

- There is nothing heavy placed on the front passenger seat.
- The driver's seat belt is fastened.

If the indicator does not light when the passenger is seated and is not fastened, something may be interfering with the occupant detection sensor.

Check if:


- A cushion is placed on the seat.
- The front passenger is not sitting properly.

If none of these conditions exist, have your vehicle checked by a dealer.

Automatic Seat Belt Tensioners

The front seats are equipped with automatic seat belt tensioners to enhance safety.

The tensioners automatically tighten the front seat belts during a moderate-to-severe frontal collision, sometimes even if the collision is not severe enough to inflate the front airbags.

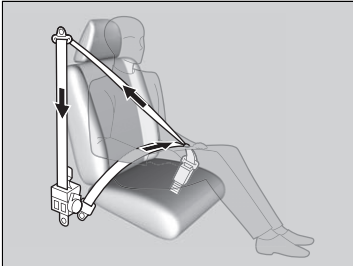



Automatic Seat Belt Tensioners

The seat belt tensioners can only operate once. If a tensioner is activated, the SRS indicator will come on. Have a dealer replace the tensioner and thoroughly inspect the seat belt system as it may not offer protection in a subsequent crash.

Fastening a Seat Belt

After adjusting a front seat to the proper position, and while sitting upright and well back in the seat:

► Adjusting the Seats P. 151

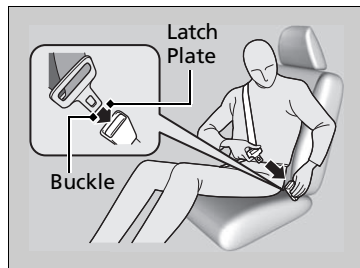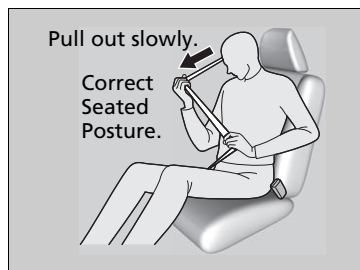

1. Pull the seat belt out slowly.

2. Insert the latch plate into the buckle, then tug on the belt to make sure the buckle is secure.

► Make sure that the belt is not twisted or caught on anything.

► Fastening a Seat Belt

No one should sit in a seat with an inoperative seat belt or one that does not appear to be working correctly. Using a seat belt that is not working properly may not protect the occupant in a crash. Have a dealer check the belt as soon as possible.

Never insert any foreign objects into the buckle or retractor mechanism.



3. Position the lap part of the belt as low as possible across your hips, then pull up on the shoulder part of the belt so the lap part fits snugly. This lets your strong pelvic bones take the force of a crash and reduces the chance of internal injuries.
4. If necessary, pull up on the belt again to remove any slack, then check that the belt rests across the centre of your chest and over your shoulder. This spreads the forces of a crash over the strongest bones in your upper body.

Fastening a Seat Belt

⚠ WARNING

Improperly positioning the seat belts can cause serious injury or death in a crash.

Make sure all seat belts are properly positioned before driving.

To release the belt, push the red **PRESS** button and then guide the belt by hand until it has retracted completely.

When exiting the vehicle, be sure the belt is properly stowed so that it will not get caught in the closing door.

■ Advice for Pregnant Women

If you are pregnant, the best way to protect yourself and your unborn child when driving or riding in a vehicle is to always wear a seat belt and keep the lap part of the belt as low as possible across the hips.

Wear the shoulder belt across the chest avoiding the abdomen.



Wear the lap part of the belt as low as possible across the hips.

►► Advice for Pregnant Women

Each time you have a checkup, ask your doctor if it is okay for you to drive.

To reduce the risk of injuries to both you and your unborn child that can be caused by an inflating front airbag:

- When driving, sit upright and adjust the seat as far back as possible while allowing full control of the vehicle.
- When sitting in the front passenger's seat, adjust the seat as far back as possible.

Seat Belt Inspection

Regularly check the condition of your seat belts as follows:

- Pull each belt out fully, and look for frays, cuts, burns, and wear.
- Check that the latch plates and buckles work smoothly and the belts retract easily.
 - ▶ If a belt does not retract easily, cleaning the belt may correct the problem. Only use a mild soap and warm water. Do not use bleach or cleaning solvents. Make sure the belt is completely dry before allowing it to retract.

Any belt that is not in good condition or working properly will not provide proper protection and should be replaced as soon as possible.

A belt that has been worn during a crash may not provide the same level of protection in a subsequent crash. Have your seat belts inspected by a dealer after any collision.

Seat Belt Inspection

WARNING

Not checking or maintaining seat belts can result in serious injury or death if the seat belts do not work properly when needed.


Check your seat belts regularly and have any problem corrected as soon as possible.

WARNING: No modifications or additions should be made by the user which will either prevent the seat belt adjusting devices from operating to remove slack, or prevent the seat belt assembly from being adjusted to remove slack.


WARNING: It is essential to replace the entire assembly after it has been worn in a severe impact even if damage to the assembly is not obvious.

WARNING: Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water. The belt should be replaced if webbing becomes frayed, contaminated or damaged.

Anchorage Points

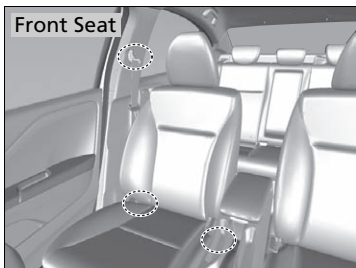

When replacing the seat belts, use the anchorage points shown in the images. The front seat has a lap/shoulder belt.

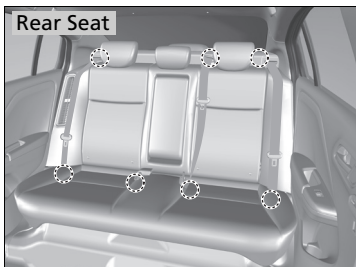

The rear seat has three lap/shoulder belts.

Airbag System Components

The front and front side airbags are deployed according to the direction and severity of impact. The airbag system includes:

- Two SRS (Supplemental Restraint System) front airbags. The driver's airbag is stored in the centre of the steering wheel; the front passenger's airbag is stored in the dashboard. Both are marked **SRS**

AIRBAG.

- Two side airbags, one for the driver and one for a front passenger. The airbags are stored in the outer edges of the seat-backs. Both are marked **SIDE AIRBAG.**

- An electronic control unit that, when the vehicle is on, continually monitors information about the sensors, the airbag activators, the seat belt tensioners, and driver and front passenger seat belt. During a crash event the unit can record such information.
- Automatic front seat belt tensioners.
- Impact sensors that can detect a moderate-to-severe front or side impact.
- An indicator on the instrument panel that alerts you to a possible problem with your airbag system or seat belt tensioners.

■ Important Facts About Your Airbags

Airbags can pose serious hazards. To do their job, airbags must inflate with tremendous force. So, while airbags help to save lives, they can cause burns, bruises, and other minor injuries, sometimes even fatal ones if occupants are not wearing their seat belts properly and sitting correctly.

What you should do: Always wear your seat belt properly, and sit upright and as far back from the steering wheel as possible while allowing full control of the vehicle. A front passenger should move their seat as far back from the dashboard as possible.

Remember, however, that no safety system can prevent all injuries or deaths that can occur in a severe crash, even when seat belts are properly worn and the airbags deploy.

Do not place hard or sharp objects between yourself and a front airbag.

Carrying hard or sharp objects on your lap, or driving with a pipe or other sharp object in your mouth, can result in injuries if your front airbag inflates.

Do not attach or place objects on the front airbag covers. Objects on the covers marked **SRS AIRBAG** could interfere with the proper operation of the airbags or be propelled inside the vehicle and hurt someone if the airbags inflate.

► Important Facts About Your Airbags

Do not attempt to deactivate your airbags. Together, airbags and seat belts provide the best protection.

When driving, keep hands and arms out of the deployment path of the front airbag by holding each side of the steering wheel. Do not cross an arm over the airbag cover.

Types of Airbags

Your vehicle is equipped with two types of airbags:

- **Front airbags:** Airbags in front of the driver's and front passenger's seats.
- **Side airbags:** Airbags in the driver's and front passenger's seat-backs.

Each is discussed in the following pages.

Front Airbags (SRS)

The front SRS airbags inflate in a moderate-to-severe frontal collision to help to protect the head and chest of the driver and/or front passenger.

SRS (Supplemental Restraint System) indicates that the airbags are designed to supplement seat belts, not replace them. Seat belts are the occupant's primary restraint system.

Housing Locations

The front airbags are housed in the centre of the steering wheel for the driver, and in the dashboard for the front passenger. Both airbags are marked **SRS AIRBAG**.

Types of Airbags

The airbags can inflate whenever the power mode is in ON.


After an airbag inflates in a crash, you may see a small amount of smoke. This is from the combustion process of the inflator material and is not harmful. People with respiratory problems may experience some temporary discomfort. If this occurs, get out of the vehicle as soon as it is safe to do so.

■ Operation

Front airbags are designed to inflate during moderate-to-severe frontal collisions. When the vehicle decelerates suddenly, the sensors send information to the control unit which signals one or both front airbags to inflate.

A frontal collision can be either head-on or angled between two vehicles, or when a vehicle crashes into a stationary object, such as a concrete wall.

■ How the Front Airbags Work

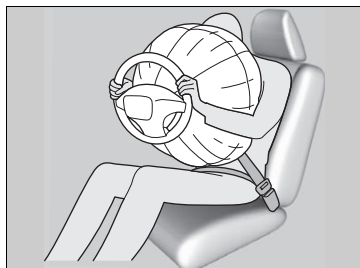

While your seat belt restrains your torso, the front airbag provides supplemental protection for your head and chest.

The front airbags deflate immediately so that they won't interfere with the driver's visibility or the ability to steer or operate other controls.

The total time for inflation and deflation is so fast that most occupants are not aware that the airbags deployed until they see them lying in front of them.

■ When front airbags should not deploy

Minor frontal crashes: Front airbags were designed to supplement seat belts and help to save lives, not to prevent minor scrapes, or even broken bones that might occur during a less than moderate-to-severe frontal crash.

Side impacts: Front airbags can provide protection when a sudden deceleration causes a driver or front passenger to move towards the front of the vehicle. Side airbags have been specifically designed to help to reduce the severity of injuries that can occur during a moderate-to-severe side impact which can cause the driver or passenger to move towards the side of the vehicle.

Rear impacts: Head restraints and seat belts are your best protection during a rear impact. Front airbags cannot provide any significant protection and are not designed to deploy in such collisions.

Rollovers: Seat belts, offer the best protection in a rollover. Because front airbags could provide little if any protection, they are not designed to deploy during a rollover.

■ When front airbags deploy with little or no visible damage

Because the airbag system senses sudden deceleration, a strong impact to the vehicle framework or suspension might cause one or more of the airbags to deploy. Examples include running into a curb, the edge of a hole, or other low fixed object that causes a sudden deceleration in the vehicle chassis. Since the impact is underneath the vehicle, damage may not be readily apparent.


■ When front airbags may not deploy, even though exterior damage appears severe

Since crushable body parts absorb crash energy during an impact, the amount of visible damage does not always indicate proper airbag operation. In fact, some collisions can result in severe damage but no airbag deployment because the airbags would not have been needed or would not have provided protection even if they had deployed.

Side Airbags

The side airbags help to protect the torso and pelvis of the driver or a front passenger during a moderate-to-severe side impact.

Housing Locations

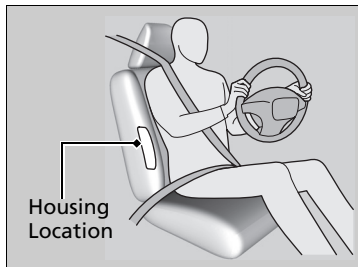

The side airbags are housed in the outside edge of the driver's and passenger's seat-backs.


Both are marked **SIDE AIRBAG**.

Side Airbags

Do not let the front passenger lean sideways with their head in the deployment path of the side airbag. An inflating side airbag can strike with strong force and seriously injure the passenger.

Do not attach accessories on or near the side airbags. They can interfere with the proper operation of the airbags, or hurt someone if an airbag inflates.

Operation

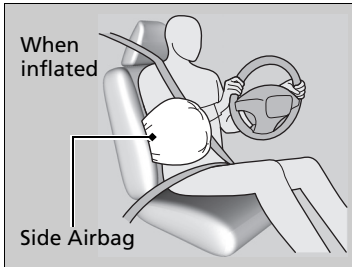

When the sensors detect a moderate-to-severe side impact, the control unit signals the side airbag on the impact side to immediately inflate.

■ When a side airbag deploys with little or no visible damage

Because the airbag system senses sudden acceleration, a strong impact to the side of the vehicle's framework can cause a side airbag to deploy. In such cases, there may be little or no damage, but the side impact sensors detected a severe enough impact to deploy the airbag.

■ When a side airbag may not deploy, even though visible damage appears severe

It is possible for a side airbag to not deploy during an impact that results in apparently severe damage. This can occur when the point of impact was towards the far front or rear of the vehicle, or when the vehicle's crushable body parts absorbed most of the crash energy. In either case, the side airbag would not have been needed nor provided protection even if it had deployed.

Side Airbags

Do not cover or replace the front seat-back covers without consulting a dealer. Improperly replacing or covering front seat-back covers can prevent your side airbags from properly deploying during a side impact.

Airbag System Indicators

If a problem occurs in the airbag system, the SRS indicator will come on and a message appears on the multi-information display.

■ Supplemental Restraint System (SRS)



■ When the power mode is set to ON

The indicator comes on for a few seconds, then goes off. This tells you the system is working properly.

If the indicator comes on at any other time, or does not come on at all, have the system checked by a dealer as soon as possible. If you don't, your airbags and seat belt tensioners may not work properly when they are needed.

► Supplemental Restraint System (SRS)

⚠ WARNING

Ignoring the SRS indicator can result in serious injury or death if the airbag systems or tensioners do not work properly.

Have your vehicle checked by a dealer as soon as possible if the SRS indicator alerts you to a possible problem.

Airbag Care

You do not need to, and should not, perform any maintenance on or replace any airbag system components yourself. However, you should have your vehicle inspected by a dealer in the following situations:

■ When the airbags have deployed

If an airbag has inflated, the control unit and other related parts must be replaced. Similarly, once an automatic seat belt tensioner has been activated, it must be replaced.

■ When the vehicle has been in a moderate-to-severe collision

Even if the airbags did not inflate, have your dealer inspect the following: front seat belt tensioners, and each seat belt that was worn during the crash.

⌘ Airbag Care

The removal of airbag components from the vehicle is prohibited.

In case of malfunction, or shutdown, or after the airbag inflation/seat belt tensioner operation, ask a qualified personnel for handling.

We recommend against the use of salvaged airbag system components, including the airbag, tensioners, sensors, and control unit.

Protecting Child Passengers

Each year, many children are injured or killed in vehicle crashes because they are either unrestrained or not properly restrained. In fact, vehicle crashes are the number one cause of death of children aged 12 and under.

To reduce the number of child deaths and injuries, infants and children should be properly restrained when they ride in a vehicle.

Protecting Child Passengers

WARNING


Children who are unrestrained or improperly restrained can be seriously injured or killed in a crash.

Any child too small for a seat belt should be properly restrained in an approved child restraint system. A larger child should be properly restrained with a seat belt, using a booster seat if necessary.

In many countries, the law requires all children aged 12 and under, and whose height are shorter than 150 cm be properly restrained in a rear seat.

In many countries, it is required to use an officially approved and suitable child restraint system for transporting a child on any passenger seat. Check your local legal requirement.

Child restraint systems must meet UN Regulation No. 44 or the regulations of the subject countries.

 **Selecting a Child Restraint System** P. 59

Children should sit properly restrained in a rear seat. This is because:



- An inflating front or side airbag can injure or kill a child sitting in the front seat.
- A child in the front seat is more likely to interfere with the driver's ability to safely control the vehicle.
- Statistics show that children of all sizes and ages are safer when they are properly restrained in a rear seat.

► Protecting Child Passengers

⚠ WARNING

Allowing a child to play with a seat belt or wrap one around their neck can result in serious injury or death.

Instruct children not to play with any seat belt.

To remind you of the passenger's front airbag hazards and child safety, your vehicle has the warning label on the passenger's sun visor. There is also a warning label on the passenger's doorjamb. Please read and follow the instructions on these labels.

► **Safety Labels** P. 72

- Any child who is too small to wear a seat belt must be properly restrained in an approved child restraint system that is properly secured to the vehicle using the seat belt or the child restraint anchorage system.
- Never hold a child on your lap because it is impossible to protect them in the event of a collision.
- Never put a seat belt over yourself and a child. During a crash, the belt would likely press deep into the child and cause serious or fatal injuries.
- Never let two children use the same seat belt. Both children could be very seriously injured in a crash.

►► Protecting Child Passengers

Front Passenger's Sun Visor

⚠ WARNING



NEVER use a rearward facing child restraint on a seat protected by an **ACTIVE AIRBAG** in front of it, **DEATH** or **SERIOUS INJURY** to the **CHILD** can occur.

- Do not allow children to operate the doors, windows or seat adjustments.
- Do not leave children in the vehicle unattended, especially in hot weather when the inside of the vehicle can get hot enough to kill them. They could also activate vehicle controls causing it to move unexpectedly.

► Protecting Child Passengers

Front Passenger's Doorjamb

⚠ WARNING



Extreme Hazard!
DO NOT use a rear-facing child restraint on a seat protected by an airbag in front of it!

WARNING: Use the power window lock button to prevent children from opening the windows. Using this feature will prevent children from playing with the windows, which could expose them to hazards or distract the driver.


► **Opening/Closing the Power Windows**
P. 134

WARNING: Always take the ignition key with you whenever you leave the vehicle alone (with other occupants).

Safety of Infants and Small Children

Protecting Infants

An infant must be properly restrained in a rear-facing, reclining child restraint system until the infant reaches the restraint system manufacturer's weight or height limit for the seat, and the infant is at least one year old.

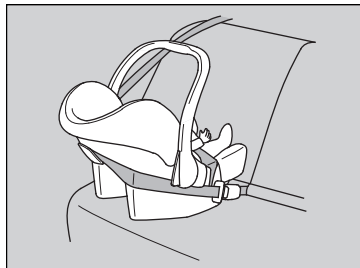

Positioning a rear-facing child restraint system

Child restraint system must be placed and secured in a rear seating position.

Protecting Infants

⚠ WARNING

Placing a rear-facing child restraint system in the front seat can result in serious injury or death if the passenger's front airbag inflates.

Always place a rear-facing child restraint system in the back seat, not the front.

As required by UN Regulation No.94:

⚠ WARNING



NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

When properly installed, a rear-facing child restraint system may prevent the driver or a front passenger from moving their seat all the way back, or from locking their seat-back in the desired position.

►► Protecting Infants

If the passenger's front airbag inflates, it can hit the rear-facing child restraint system with great force, which can dislodge or strike the system, and seriously injure the child.

Rear-facing child restraint systems should never be installed in a front facing position.

Always refer to the child restraint system manufacturer's instructions before installation.

Many experts recommend use of a rear-facing child restraint system for a child up to two years old if the child's height and weight are appropriate for a rear-facing child restraint system.

■ Protecting Smaller Children

If a child is at least one year old and has exceeded the weight and height limitations of a rear-facing child restraint system, the child should be properly restrained in a firmly secured front facing child restraint system until they exceed the weight and height limitations for the front facing child restraint system.



■ Front facing child restraint system placement

We strongly recommend placing a front facing child restraint system in a rear seating position.

Placing a front facing child restraint system in the front seat can be hazardous. A rear seat is the safest place for a child.

►► Protecting Smaller Children

⚠ WARNING

Placing a front facing child restraint system in the front seat can result in serious injury or death if the front airbag inflates.

If you must place a front facing child restraint system in front, move the vehicle seat as far back as possible, and properly restrain the child.

Educate yourself about the laws and regulations regarding child restraint system use where you are driving, and follow the child restraint system manufacturer's instructions.

■ Selecting a Child Restraint System

Some child restraint systems are lower anchorage compatible. Some have a rigid-type connector while others have a flexible-type connector. Both are equally easy to use. Some existing and previously owned child restraint systems can only be installed using the seat belt. Whichever type you choose, follow the child restraint system manufacturer's use and care instructions including recommended expiration dates as well as the instructions in this manual. Proper installation is key to maximizing your child's safety.

In seating positions and vehicles not equipped with lower anchorages, install a child restraint system using the seat belt and a top tether for added security. This is because all child restraint systems must be secured with the seat belt when not using the lower anchorage system. In addition, the child restraint system manufacturer may advise that a seat belt be used to attach an ISO FIX restraint system once a child reaches a specified weight. Please read the child restraint system owner's manual for proper installation instructions.

■ Important consideration when selecting a child restraint system

Make sure the child restraint system meets the following three requirements:

- The child restraint system is the correct type and size for the child.
- The child restraint system is the correct type for the seating position.
- The child restraint system is compliant with safety standards. We recommend a child restraint system compliant with the UN Regulation No. 44 or the regulations of the subject countries. Look for the approval mark on the system and the manufacturer's statement of compliance on the box.

✎ Selecting a Child Restraint System

Installation of a lower anchorage-compatible child restraint system is simple.

Lower anchorage-compatible child restraint systems have been developed to simplify the installation process and reduce the likelihood of injuries caused by incorrect installation.

■ Child Seat Standards

If a child seat, either an ISOFIX type or one that is fitted with a seat belt, meets UN safety standards, it will be affixed with an approval label.

Before purchasing an ISOFIX child seat, make sure to check the approval label to ensure that it is compatible with your vehicle and that it meets European safety standards.

■ The Recommended Child Restraint Systems

Various types of child restraint systems are available. Not all types are suitable for your vehicle. Please refer to the table below to select which category of child restraint system can be used on each seating position.

Mass Group		Seating position		
		Front Passenger	Rear Passenger	
			L/R Side	Centre
group 0	Up to 10 kg	X	U	U
group 0+	Up to 13 kg	X	U or IL (Honda BABY SAFE ISOFIX)	U
group I	9 kg to 18 kg	UF*1, *2	U or IUF (Size class A, B1, B)	U
group II	15 kg to 25 kg	UF*1, *2	U	U
group III	22 kg to 36 kg	UF*1, *2	U	U

IL: Suitable for particular ISOFIX child restraint systems (CRS) given in this list.

IUF: Suitable for front facing ISOFIX child restraints system of universal category approved for use in this mass group.

U: Suitable for "universal" category restraints approved for use in this mass group.

UF: Suitable for front facing "universal" category restraints approved for use in this mass group.

X: Seat position not suitable for children in this mass group.

*1: Seat-back angle to the upright position (Front most lock position).

*2: Move the front seat to its slide rail rearmost position.

A size class is specified for some child restraint systems. Make sure to check the size class as indicated on the manufacturer's instructions, package, and labels of the child restraint.

The particular child restraints in the table are Honda Genuine Parts. They are available from your dealer.

For a correct installation, please refer to the Child Restraint Instruction Manual.

■ Installing a Lower Anchorage-Compatible Child Restraint System

A lower anchorage-compatible child restraint system can be installed in either of the two outer rear seats. A child restraint system is attached to the lower anchorages with either the rigid or flexible type of connectors.




1. Open the lower anchorage cover.






2. Locate the lower anchorages under the marks.

►► Installing a Lower Anchorage-Compatible Child Restraint System

Some child restraint systems come with optional guide-cups, which avoid possible damage to the seat surface. Follow the manufacturer's instructions when using the guide-cups, and attach them to the lower anchorages as shown in the image.

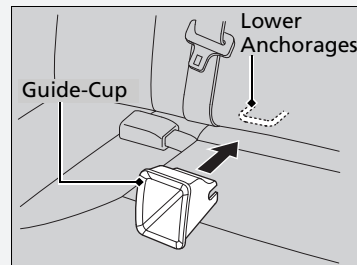

When not using the lower anchorages, store the lower anchorage cover between the rear seat cushion and backrest.

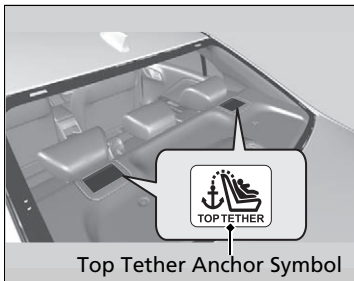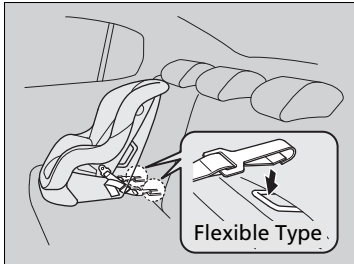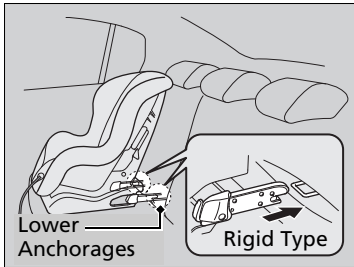

3. Place the child restraint system on the vehicle seat then attach the child restraint system to the lower anchorages according to the instructions that came with the child restraint system.

► When installing the child restraint system, make sure that the lower anchorages are not obstructed by the seat belt or any other object.



4. Open the tether anchorage cover behind the head restraint or pillow.

► Installing a Lower Anchorage-Compatible Child Restraint System

For your child's safety, when using a child restraint system installed using the lower anchorage system, make sure that the child restraint system is properly secured to the vehicle. A child restraint system that is not properly secured will not adequately protect a child in a crash and may cause injury to the child or other vehicle occupants.


The flexible type may not be available in your country.

WARNING: Never use a hook that does not come with a Top Tether anchor symbol when securing an installed child restraint system.

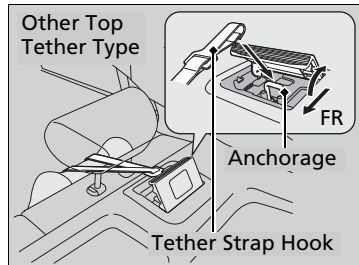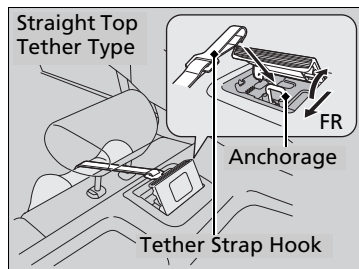

5. Raise the head restraint to its highest position, then route the tether strap through the head restraint legs, and secure the tether strap hook to the anchorage. Make sure the strap is not twisted.



■ Installing a Child Restraint System with a Lap/Shoulder Seat Belt

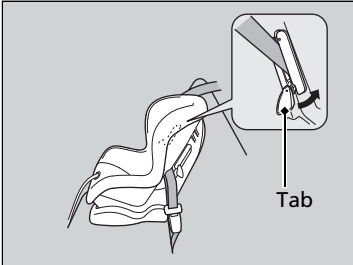

1. Place the child restraint system on the vehicle seat.
2. Route the seat belt through the child restraint system according to the child restraint system manufacturer's instructions, and insert the latch plate into the buckle.
► Insert the latch plate fully until it clicks.
3. Push down the tab. Route the shoulder part of the belt into the slit at the side of the restraint.
4. Grab the shoulder part of the belt near the buckle, and pull up to remove any slack from the lap part of the belt.
► When doing this, place your weight on child restraint system and push it into the vehicle seat.
5. Position the belt properly and push up the tab. Make sure the belt is not twisted.
► When pushing up the tab, pull up the upper shoulder part of the belt to remove any slack from the belt.

▣ Installing a Child Restraint System with a Lap/Shoulder Seat Belt

A child restraint system that is not properly secured will not adequately protect a child in a crash and may cause injury to the child or other vehicle occupants.

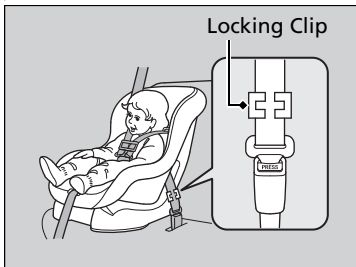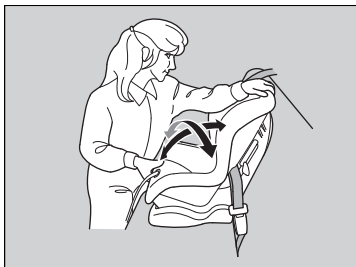



6. Make sure the child restraint system is firmly secured by rocking it forward and back, and side to side; little movement should be felt.
7. Make sure any unused seat belt that a child can reach is buckled.

If your child restraint system does not come with a mechanism that secures the belt, install a locking clip on the seat belt.

After going through the step 1 and 2, pull up the shoulder part of the belt and make sure there is no slack in the lap portion.

3. Tightly grasp the belt near the latch plate.
Pinch both parts of the belt together so they do not slip through the latch plate.
Unbuckle the seat belt.
4. Install the locking clip as shown in the image. Position the clip as close as possible to the latch plate.
5. Insert the latch plate into the buckle. Go to step 6 and 7.

Adding Security with a Tether

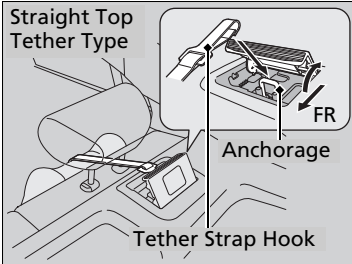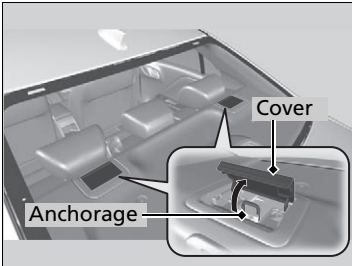

A tether anchorage point is provided behind each rear seating position. If you have a child restraint system that comes with a tether but can be installed with a seat belt, the tether may be used for additional security.

1. Locate the appropriate tether anchorage point.
2. Raise the head restraint to its highest position, then route the tether strap through the head restraint legs, and secure the tether strap hook to the anchorage. Make sure the strap is not twisted.
3. Secure the tether strap hook onto the anchorage.
4. Tighten the tether strap as instructed by the child restraint system manufacturer.

Adding Security with a Tether

WARNING: Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts, harnesses or for attaching other items or equipment to the vehicle.

Always use a tether for forward facing child seats when using the seat belt or lower anchors.

Safety of Larger Children

■ Protecting Larger Children

The following pages give instructions on how to check proper seat belt fit, what kind of booster seat to use if one is needed, and important precautions for a child who must sit in front.

■ Checking Seat Belt Fit

When a child is too big for a child restraint system, secure the child in a rear seat using the lap/shoulder seat belt. Have the child sit upright and all the way back, then answer the following questions.



■ Checklist

- Do the child's knees bend comfortably over the edge of the seat?
- Does the shoulder belt cross between the child's neck and arm?
- Is the lap part of the seat belt as low as possible, touching the child's thighs?
- Will the child be able to stay seated like this for the whole trip?

If you answer yes to all these questions, the child is ready to wear the lap/shoulder seat belt correctly. If you answer no to any question, the child needs to ride on a booster seat until the seat belt fits properly without a booster seat.

►► Safety of Larger Children

⚠ WARNING


Allowing a child aged 12 or under to sit in front can result in injury or death if the passenger's front airbag inflates.

If a larger child must ride in front, move the vehicle seat as far to the rear as possible, have the child sit up properly and wear the seat belt properly, using a booster seat if needed.

Booster Seats



If a lap/shoulder seat belt cannot be used properly, position the child in a booster seat in the rear seat. For the child's safety, check that the child meets the booster seat manufacturer's recommendations.

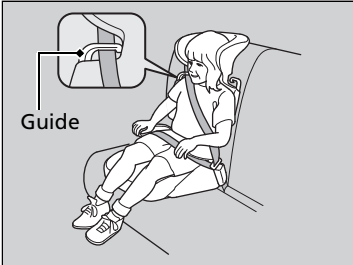

A backrest is available for a specific booster seat. Install the backrest to the booster seat and adjust it to the vehicle seat according to the booster seat manufacturer's instructions. Make sure the seat belt is properly routed through the guide at the shoulder of the backrest and the belt does not touch and cross the child's neck.

Booster Seats

When installing a booster seat, make sure to read the instructions that came with it, and install the seat accordingly.

There are high- and low-type booster seats. Choose a booster seat that allows the child to wear the seat belt correctly.

We recommend a booster seat with a backrest as it is easier to adjust the shoulder belt.

■ Protecting Larger Children - Final Checks

Your vehicle has a rear seat where children can be properly restrained. If you ever have to carry a group of children, and a child must ride in front:

- Make sure you read and fully understand the instructions and safety information in this manual.
- Move the front passenger seat as far back as possible.
- Have the child sit upright and well back in the seat.
- Check that the seat belt is properly positioned so that the child is secure in the seat.

■ Monitoring child passengers

We strongly recommend that you keep an eye on child passengers. Even older, more mature children sometimes need to be reminded to fasten their seat belts and sit up properly.


Carbon Monoxide Gas

The engine exhaust from this vehicle contains carbon monoxide, a colourless, odourless, and highly toxic gas. As long as you properly maintain your vehicle, carbon monoxide gas will not get into the interior.

■ Have the exhaust system inspected for leaks whenever

- The exhaust system is making an unusual noise.
- The exhaust system may have been damaged.
- The vehicle is raised for an oil change.

When you operate a vehicle with the boot open, airflow can pull exhaust gas into the interior and create a hazardous condition. If you must drive with the boot open, open all the windows and set the climate control system as shown below.

1. Select the fresh air mode.
2. Select the  mode.
3. Set the fan speed to high.
4. Set the temperature control to a comfortable setting.

Adjust the climate control system in the same manner if you sit in your parked vehicle with the engine running.

Carbon Monoxide Gas

⚠ WARNING

Carbon monoxide gas is toxic.

Breathing it can cause unconsciousness and even kill you.


Avoid any enclosed areas or activities that expose you to carbon monoxide.

An enclosed area such as a garage can quickly fill up with carbon monoxide gas.
Do not run the engine with the garage door closed. Even when the garage door is open, drive out of the garage immediately after starting the engine.

Label Locations

These labels are in the locations shown. They warn you of potential hazards that can cause serious injury or death. Read these labels carefully.

If a label comes off or becomes hard to read, contact a dealer for a replacement.

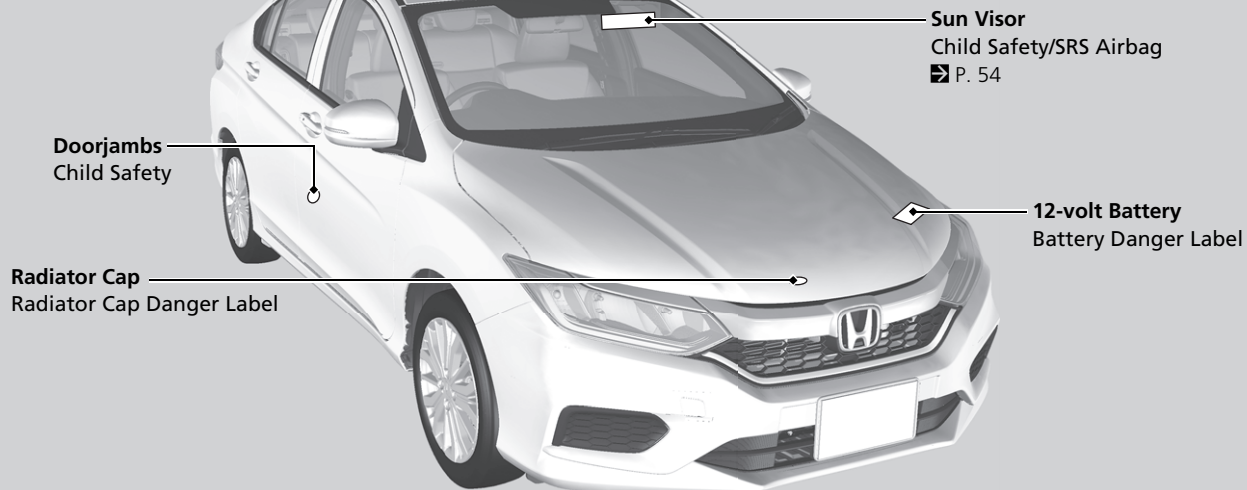

Instrument Panel

This chapter describes the buttons, indicators, and gauges that are used while driving.










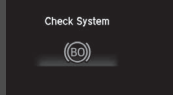
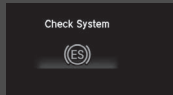
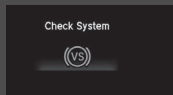
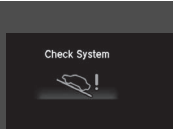
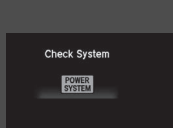
Indicators




Multi-Information Display Warning and
Information Messages..... 88


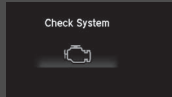

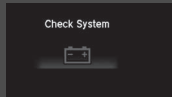
Gauges and Displays








Gauges..... 99
Multi-Information Display 100




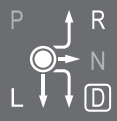
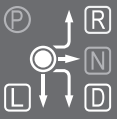




Indicator	Name	On/Blinking	Explanation	Message
	Parking Brake and Brake System Indicator (Red)	<ul style="list-style-type: none"> Comes on for a few seconds when you set the power mode to ON, then goes off if the parking brake has been released. Comes on when the parking brake is applied, and goes off when it is released. Comes on when the brake fluid level is low. Comes on if there is a problem with the brake system. The beeper sounds and the indicator comes on if you drive with the parking brake not fully released. 	<ul style="list-style-type: none"> Comes on while driving - Make sure the parking brake is released. Check the brake fluid level.  What to do when the indicator comes on while driving P. 288 Comes on along with the ABS indicator - Have your vehicle checked by a dealer.  If the Brake System Indicator (Red) Comes On P. 288 Comes on along with the brake system indicator (amber) - Immediately stop in a safe place. Contact a dealer for repair. The brake pedal becomes harder to operate. Depress the pedal further than you normally do. 	<div>Release Parking Brake </div> <div>Brake Fluid Low </div> <div>Check System </div>



Indicator	Name	On/Blinking	Explanation	Message
	Brake System Indicator (Amber)	<ul style="list-style-type: none"> • Comes on for a few seconds when you set the power mode to ON, then goes off. • Comes on if there is a problem with a system related to braking other than the conventional brake system. • Comes on if there is a problem with the electric servo system. 	<ul style="list-style-type: none"> • Stays on constantly - Have your vehicle checked by a dealer. • With this indicator on, your vehicle still has normal braking ability. 	  
		<ul style="list-style-type: none"> • Comes on if there is a problem with the hill start assist system. 	<ul style="list-style-type: none"> • The hill start assist system is malfunctioning. Have your vehicle checked by a dealer. 	
POWER SYSTEM	POWER SYSTEM Indicator	<ul style="list-style-type: none"> • Comes on for a few seconds when you set the power mode to ON, then goes off. • Comes on if there is a problem with the power system. 	<ul style="list-style-type: none"> • Comes on while driving - Have your vehicle checked by a dealer Immediately. 	


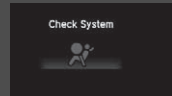

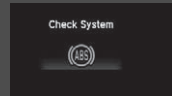
Indicator	Name	On/Blinking	Explanation	Message
READY	READY Indicator	<ul style="list-style-type: none"> Comes on when the vehicle is ready to drive. 	<ul style="list-style-type: none"> Goes off when the transmission indicator comes on. ► Turning on the Power P. 181 	
EV	EV Indicator	<ul style="list-style-type: none"> Comes on for a few seconds when you set the power mode to ON, then goes off. Comes on when the vehicle is moved by the motor, and the engine is not operating. 	—	—
S	S Mode Indicator	<ul style="list-style-type: none"> Comes on for a few seconds when you set the power mode to ON, then goes off. Comes on when you press the S mode button. 	► S Mode P. 194	—
	Low Oil Pressure Indicator	<ul style="list-style-type: none"> Comes on when you set the power mode to ON, and goes off when the power system is ON. Comes on when the engine oil pressure is low. 	<ul style="list-style-type: none"> Comes on while driving - Immediately stop in a safe place. ► If the Low Oil Pressure Indicator Comes On P. 287 	



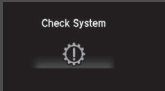



Indicator	Name	On/Blinking	Explanation	Message
	Malfunction Indicator Lamp	<ul style="list-style-type: none"> Comes on when you set the power mode to ON, and goes off either when the power system is on or after several seconds if the vehicle did not start. Comes on if there is a problem with the emissions control systems. Blinks when a misfire in the engine's cylinders is detected. 	<p>➤ If the Malfunction Indicator Lamp Comes On or Blinks P. 288</p>	
	12-volt Battery Charging System Indicator	<ul style="list-style-type: none"> Comes on when you set the power mode to ON, and goes off when the power system is ON. Comes on when the 12-volt battery is not charging. 	<ul style="list-style-type: none"> Immediately stop in a safe place. Contact a dealer for repair. <p>➤ If the 12-volt battery Charging System Indicator Comes On P. 287</p>	

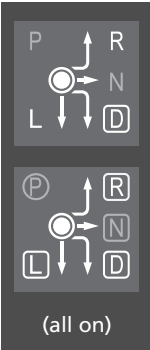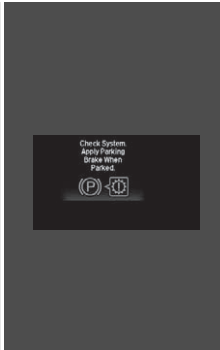



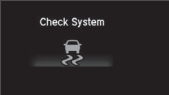

Indicator	Name	On/Blinking	Explanation	Message
	Seat Belt Reminder Indicator	<ul style="list-style-type: none"> Comes on and the beeper sounds if you are not wearing a seat belt when you set the power mode to ON. Blinks when you set the power mode to ON while driving if you have not fastened the seat belt. The beeper sounds and the indicator blinks at regular intervals. If the front passenger is not wearing a seat belt, the indicator comes on about a few seconds later. Blinks while driving if the front passenger has not fastened a seat belt. The beeper sounds and the indicator blinks at regular intervals. 	<ul style="list-style-type: none"> The beeper stops and the indicator goes off when you fasten the seat belt. Stays on after you have fastened the seat belt - A detection error may have occurred in the sensor. Have your vehicle checked by a dealer. The beeper stops and the indicator goes off when the front passenger fastens their seat belt. Stays on after the front passenger has fastened the seat belt - A detection error may have occurred in the sensor. Have your vehicle checked by a dealer.  Seat Belt Reminder P. 36 	 
	Sequential Mode Gear Selection Indicator	<ul style="list-style-type: none"> Indicates the current sequential mode gear position. 	 Shifting P. 186	—
M	M (sequential mode) Indicator	<ul style="list-style-type: none"> Comes on when the manual sequential mode is applied. 	 Sequential Mode P. 191	—


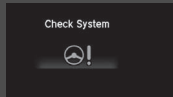




Indicator	Name	On/Blinking	Explanation	Message
	Shift Position Indicator	<ul style="list-style-type: none"> Indicates the current shift position. 	 Shifting P. 186	
  (all on)	Transmission Indicator	<ul style="list-style-type: none"> All shift position indicators come on when the transmission is operated. The current shift position indicator blinks if the transmission system has a problem. The current shift position indicator or all the shift position indicators blink if there is a problem with the transmission and the vehicle is no longer able to run. 	<ul style="list-style-type: none"> Acceleration is not possible while the indicator is on. Goes off a few seconds later if there is no problem. After the indicator goes off, you can drive normally. Blinks while driving - Avoid sudden starts and acceleration and have your vehicle checked by a dealer immediately. Immediately park your car in a safe place.  Emergency Towing P. 297 Have your vehicle checked by a dealer. 	  




Indicator	Name	On/Blinking	Explanation	Message
	Transmission Indicator	<ul style="list-style-type: none"> The current shift position indicator or all the shift position indicators blink if there is a problem with the transmission and it is not possible to select P. 	<ul style="list-style-type: none"> Depending on the circumstances, you can set the power system to ON as an emergency measure. ► If the Transmission Indicator Blinks along with the Warning Message P. 289 While the vehicle is stopped, apply the parking brake. Have your vehicle checked by a dealer immediately. 	


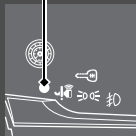


Indicator	Name	On/Blinking	Explanation	Message
	Supplemental Restraint System Indicator	<ul style="list-style-type: none"> Comes on for a few seconds when you set the power mode to ON, then goes off. Comes on if a problem with any of the following is detected: <ul style="list-style-type: none"> Supplemental restraint system Side airbag system Seat belt tensioner 	<ul style="list-style-type: none"> Stays on constantly or does not come on at all - Have your vehicle checked by a dealer. 	
	Anti-lock Brake System (ABS) Indicator	<ul style="list-style-type: none"> Comes on for a few seconds when you set the power mode to ON, then goes off. If it comes on at any other time, there is a problem with the ABS. 	<ul style="list-style-type: none"> Stays on constantly - Have your vehicle checked by a dealer. With this indicator on, your vehicle still has normal braking ability but no anti-lock function. ➤ Anti-lock Brake System (ABS) P. 205 	


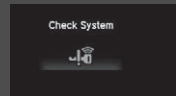



Indicator	Name	On/Blinking	Explanation	Message
	Vehicle Stability Assist (VSA) System Indicator	<ul style="list-style-type: none"> Comes on for a few seconds when you set the power mode to ON, then goes off. Blinks when VSA is active. Comes on if there is a problem with the VSA assist system. 	<ul style="list-style-type: none"> Stays on constantly - Have your vehicle checked by a dealer.  Vehicle Stability Assist (VSA) System P. 199 	
	Vehicle Stability Assist (VSA) OFF Indicator	<ul style="list-style-type: none"> Comes on for a few seconds when you set the power mode to ON, then goes off. Comes on when you deactivate VSA. 	 VSA On and Off P. 200	

Indicator	Name	On/Blinking	Explanation	Message
	High Temperature Indicator (Red)	<ul style="list-style-type: none"> Comes on for a few seconds when you set the power mode to ON, then goes off. Blinks when the engine coolant temperature goes up, and stays on if the temperature continues to rise. 	<ul style="list-style-type: none"> Goes off, then comes on blue when the engine coolant temperature is low. Blinks while driving - Drive slowly to prevent overheating. Stays on while driving - Immediately stop in a safe place and allow the engine to cool.  Overheating P. 285 	 
	Low Temperature Indicator (Blue)	<ul style="list-style-type: none"> Comes on when the engine coolant temperature is low. 	<ul style="list-style-type: none"> If the indicator stays on after the engine has reached normal operating temperature, there may be a problem with the temperature sensors. Have your vehicle inspected by a dealer. 	


Indicator	Name	On/Blinking	Explanation	Message
	Electric Power Steering (EPS) System Indicator	<ul style="list-style-type: none"> Comes on when you set the power mode to ON, and goes off when the power system is ON. Comes on if there is a problem with the EPS system. 	<ul style="list-style-type: none"> Stays on constantly or does not come on at all - Have your vehicle checked by a dealer. ► If the Electric Power Steering (EPS) System Indicator Comes On P. 289 	
	System Message Indicator	<ul style="list-style-type: none"> Comes on for a few seconds when you set the power mode to ON, then goes off. Comes on along with a beep when a problem is detected. A system message on the multi-information display appears at the same time. 	<ul style="list-style-type: none"> While the indicator is on, press the /  (information) button to see the message again. Refer to the Indicators information in this chapter when a system message appears on the multi-information display. Take appropriate action for the message. The multi-information display does not return to the normal screen unless the warning is cancelled, or the button is pressed. 	










Indicator	Name	On/Blinking	Explanation	Message
	Turn Signal and Hazard Warning Indicators	<ul style="list-style-type: none"> • Blinks when you operate the turn signal lever. • Blink along with all turn signals if you press the hazard warning button. • Blink along with all turn signals when you depress the brake pedal while the high speed driving. 	<ul style="list-style-type: none"> • Does not blink or blinks rapidly - A turn signal light bulb has blown. Change the bulb immediately. <ul style="list-style-type: none"> ☒ Replacing Light Bulbs P. 236, 237 ☒ Emergency Stop Signal P. 207 	—
	High Beam Indicator	<ul style="list-style-type: none"> • Comes on when the high beam headlights are on. 	—	—
	Lights On Indicator	<ul style="list-style-type: none"> • Comes on whenever the light switch is on. 	<ul style="list-style-type: none"> • If you set the power mode to VEHICLE OFF (LOCK) while the exterior lights are on, a chime sounds when the driver's door is opened. 	—




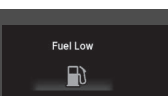
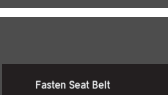
Indicator	Name	On/Blinking	Explanation	Message
	Immobilizer System Indicator	<ul style="list-style-type: none"> Comes on briefly when you set the power mode to ON, then goes off. Comes on if the immobilizer system cannot recognize the key information. 	<ul style="list-style-type: none"> Blinks - You cannot start the power system. Set the power mode to VEHICLE OFF (LOCK), then select the ON mode again. Repeatedly blinks - The system may be malfunctioning. Have your vehicle checked by a dealer. Do not try to alter this system or add other devices to it. Electrical problems can occur. 	—
<p>Indicator</p>  <p>(Red Blinks)</p>	Security System Alarm Indicator	<ul style="list-style-type: none"> Blinks when the security system alarm has been set. 	<p>➤ Security System Alarm P. 132</p>	—
	CRUISE MAIN Indicator	<ul style="list-style-type: none"> Comes on when you press the CRUISE button. 	<p>➤ Cruise Control P. 196</p>	—
	CRUISE CONTROL Indicator	<ul style="list-style-type: none"> Comes on when you have set a speed for cruise control. 	<p>➤ Cruise Control P. 196</p>	—





Indicator	Name	On/Blinking	Explanation	Message
	Keyless Access System Indicator	<ul style="list-style-type: none"> Comes on for a few seconds when you set the power mode to ON, then goes off. Comes on as soon as a problem is detected in the keyless access system or keyless starting system. 	<ul style="list-style-type: none"> Stays on constantly or does not come on at all - Have your vehicle checked by a dealer. 	
	ECON Mode Indicator	<ul style="list-style-type: none"> Comes on for a few seconds when you set the power mode to ON, then goes off. Comes on when ECON mode is on. 	 ECON Button P. 193	





Multi-Information Display Warning and Information Messages

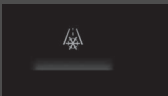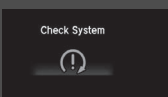

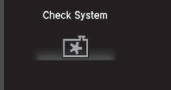
The following messages appear only on the multi-information display. Press the /▼ (information) button to see the message again with the system message indicator on.



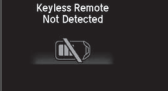

Message	Condition	Explanation
	<ul style="list-style-type: none">Appears when the vehicle is no longer able to run due to a malfunction.	<ul style="list-style-type: none">Immediately stop in a safe place.Have your vehicle checked by a dealer immediately.
	<ul style="list-style-type: none">Appears if you cannot select P due to a malfunction.	<ul style="list-style-type: none">While the vehicle is stopped, apply the parking brake.Depending on the circumstances, you can set the power system to ON as an emergency measure.<ul style="list-style-type: none"> If the Transmission Indicator Blinks along with the Warning Message P. 289Have your vehicle checked by a dealer.
	<ul style="list-style-type: none">Appears if the transmission is in a position other than N and a malfunction is preventing the system from starting.	<ul style="list-style-type: none">Depending on the circumstances, you can set the power system to ON as an emergency measure.<ul style="list-style-type: none"> If the Transmission Indicator Blinks along with the Warning Message P. 289Have your vehicle checked by a dealer.
	<ul style="list-style-type: none">Appears when you set the power mode to ON again and the vehicle is able to run.	<ul style="list-style-type: none"> Turning on the Power P. 181
	<ul style="list-style-type: none">Appears if you try to customize the settings without the transmission in P.	<ul style="list-style-type: none"> Customized Features P. 108



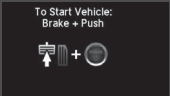

Message	Condition	Explanation
	<ul style="list-style-type: none"> Appears once if the outside temperature is below 3°C while you set the power mode to ON. 	<ul style="list-style-type: none"> There is a possibility that the road surface is icy and slippery.
	<ul style="list-style-type: none"> Appears when the starter system has a problem. 	<ul style="list-style-type: none"> As a temporary measure, press and hold the POWER button for 15 seconds while pressing the brake pedal and manually start the power system. Have your vehicle checked by a dealer.
	<ul style="list-style-type: none"> Appears if there is a problem with the fuel gauge. 	<ul style="list-style-type: none"> Have your vehicle checked by a dealer.
	<ul style="list-style-type: none"> Appears when the fuel reserve is running low (approximately 5.3 Litres left). 	<ul style="list-style-type: none"> Refuel your vehicle as soon as possible. ➡ Fuel Gauge P. 103
	<ul style="list-style-type: none"> Appears if you are not wearing your seatbelt at the time you set the power mode to ON. Appears if you take the transmission out of [P], after the automatic parking system has been activated and the door is open, the seatbelt is not fastened, or the brake pedal is not depressed. 	<ul style="list-style-type: none"> Fasten the seat belt properly before you start to drive. ➡ Shift Lever Operation P. 188


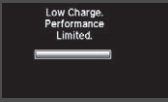



Message	Condition	Explanation
	<ul style="list-style-type: none"> Appears if there is a problem with the radiator system. 	<ul style="list-style-type: none"> Drive slowly to prevent overheating and have your vehicle checked by a dealer as soon as possible.
	<ul style="list-style-type: none"> Appears if a door is ajar. A beeper sounds and a message appears if the boot or a door is ajar while the vehicle is moving. 	<ul style="list-style-type: none"> Goes off when the door is completely closed.
	<ul style="list-style-type: none"> Appears when the boot is ajar. 	<ul style="list-style-type: none"> Goes off when the boot is completely closed.
	<ul style="list-style-type: none"> Appears if any door or the boot is not completely closed. 	<ul style="list-style-type: none"> Goes off when all doors and the boot are closed.




Message	Condition	Explanation
 <p>Keyless Remote Not Detected</p>	<ul style="list-style-type: none"> Appears when close the door with the power mode in ON without the keyless remote inside the vehicle. 	<ul style="list-style-type: none"> Goes off when you bring the keyless remote back inside the vehicle and close the door. ➡ Keyless Remote Reminder P. 139
 <p>Change Keyless Remote Battery</p>	<ul style="list-style-type: none"> Appears when the keyless remote battery becomes weak. 	<ul style="list-style-type: none"> Replace the battery as soon as possible. ➡ Replacing the Button Battery P. 255
 <p>ECON OFF</p>	<ul style="list-style-type: none"> Appears when ECON mode is turned off by pressing ECON button. 	<p>➡ ECON Button P. 193</p>
 <p>To Turn Vehicle Off: Push Twice</p>	<ul style="list-style-type: none"> Appears after the driver's door is opened when the power mode is in ACCESSORY. 	<ul style="list-style-type: none"> Press the POWER button twice with your foot off the brake pedal to change the power mode to VEHICLE OFF (LOCK).





Message	Condition	Explanation
	<ul style="list-style-type: none"> Appears if the keyless remote battery is too weak to turn on the power system or the key is not within operating range to turn on the power system. A beeper sounds six times. 	<ul style="list-style-type: none"> Bring the keyless remote in front of the POWER button to be touched with. <ul style="list-style-type: none"> ➤ POWER Button P. 137 ➤ If the Keyless Remote Battery is Weak P. 281
	<ul style="list-style-type: none"> Appears when the power mode is in ACCESSORY. 	—
	<ul style="list-style-type: none"> Appears when set the power mode to ACCESSORY or ON. Appears three seconds after you bring the keyless remote in front of the POWER button when To Start, Hold Remote Near Start Button appears. To Start Vehicle: Brake + Push appears sequentially. 	<ul style="list-style-type: none"> ➤ Changing the Power Mode P. 137



Message	Condition	Explanation
	<ul style="list-style-type: none"> Appears when you set the power mode to ON while driving. 	<p>► Emergency Power System Off P. 282</p>
	<ul style="list-style-type: none"> Appears if you try to turn the power system on without the transmission in P. 	<ul style="list-style-type: none"> Press the P button.
	<ul style="list-style-type: none"> Appears when you try to change the gear position without depressing the brake pedal. 	<ul style="list-style-type: none"> Depress the brake pedal, then move the shift lever.
	<ul style="list-style-type: none"> Appears when you try to change the gear position without releasing your foot off the accelerator pedal. 	<ul style="list-style-type: none"> Release your foot off the accelerator pedal, then move the shift lever.

Message	Condition	Explanation
 <p>Shift To D Before Shifting To L</p>	<ul style="list-style-type: none"> Appears if you try to put the transmission into L without first putting it into D. 	<ul style="list-style-type: none"> Put the transmission into D, then L. Shift Lever Operation P. 188
 <p>To Shift: Vehicle Must Be Stopped</p>	<ul style="list-style-type: none"> Appears when the P button is pressed while the vehicle is moving. Appears if you change the gear position to R while the vehicle is moving forward, or to D while the vehicle is reversing. 	<ul style="list-style-type: none"> Make sure that the vehicle comes to a stop before moving the shift lever.
 <p>Stop The Vehicle When Safe. Use Caution. Vehicle May Move When Parked</p>	<ul style="list-style-type: none"> Appears if there is a problem with the electric system. Appears when you set the power mode to OFF while driving. 	<ul style="list-style-type: none"> Immediately stop in a safe place and set the parking brake. Continue driving if the message goes off soon after. If there is a problem with the transmission system, the transmission indicator comes on. Transmission Indicator P. 79
 <p>Shift To Park</p>	<ul style="list-style-type: none"> Appears if you press the POWER button within five seconds of putting the transmission into N. Appears if the vehicle is stopped and the driver's seat belt is unfastened, as there is a possibility that the vehicle may roll. 	<ul style="list-style-type: none"> The transmission remains in N for 15 minutes, then automatically switches to P. If you want to keep the N position in ACCESSORY P. 189 When the vehicle is idling or when you are parking or exiting the vehicle, put the transmission into P before releasing the brake pedal. Shift Lever Operation P. 188

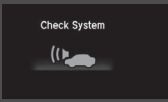Message	Condition	Explanation
	<ul style="list-style-type: none"> Appears after the 12-volt battery charging system indicator comes on. 	<ul style="list-style-type: none"> Your vehicle has less ability to accelerate and may be harder to start on an incline. Have your vehicle checked by a dealer immediately.
	<ul style="list-style-type: none"> Appears when the High Voltage battery is running extremely low due to continuous slow driving. 	<ul style="list-style-type: none"> Driving at low speed for a long time decreases the amount of electricity generated, leading to High Voltage battery drain.
 <p>(Red)</p>	<ul style="list-style-type: none"> Appears when the High Voltage battery is drained even further and a stop is needed to charge the battery. 	<ul style="list-style-type: none"> Stop in a safe place and put the transmission in P. Then charge the High Voltage battery by letting the engine idle.
 <p>(Red)</p>	<ul style="list-style-type: none"> Appears when the High Voltage battery is being charged, after it has lost most of its charge. In this case, the vehicle is parked and the engine is running to supply power to the charging system. 	<ul style="list-style-type: none"> Do not drive the vehicle until the READY indicator comes on. Apply the parking brake.  READY Indicator P. 76

Message	Condition	Explanation
	<ul style="list-style-type: none"> Appears if the temperature of the transmission is too high and the vehicle cannot drive normally. 	<ul style="list-style-type: none"> It may be difficult to accelerate or start uphill. Immediately stop in a safe place. Until the message goes off, allow the engine to idle so that the transmission can cool down. Immediately after the message goes off, have your vehicle checked by a dealer. <p>📖 Parking Your Vehicle P. 208</p>
	<ul style="list-style-type: none"> Appears if the transmission is shifted back and forth between P and another position repeatedly over a short time. 	<ul style="list-style-type: none"> Wait for a while, then change the gear position.
	<ul style="list-style-type: none"> Appears if you depress the accelerator pedal when the transmission is in N. 	<ul style="list-style-type: none"> Release the accelerator pedal. After that, depress the brake pedal and change the transmission position.

Message	Condition	Explanation
 <p>Check System</p>	<ul style="list-style-type: none"> Appears if there is a problem with the acoustic vehicle alerting system. 	<ul style="list-style-type: none"> Have your vehicle checked by a dealer immediately.
 <p>Check Transmission, Reverse Gear Not Available</p>	<ul style="list-style-type: none"> Appears if there is a problem with the transmission and it is not possible to select R. 	<ul style="list-style-type: none"> Have your vehicle checked by a dealer.
 <p>Shifting To Reverse, Apply Brake Pedal</p>	<ul style="list-style-type: none"> Appears if it takes more time than usual to put the transmission into R. 	<ul style="list-style-type: none"> Depress the brake pedal and keep it depressed until the message goes off. Have your vehicle checked by a dealer.
 <p>Temperature Too Low For Vehicle To Operate</p>	<ul style="list-style-type: none"> Appears when the High Voltage battery and other system control temperatures are too low to operate (approx. -40°C or below). 	<ul style="list-style-type: none"> You must wait for an increase in the ambient temperature or move the vehicle to a warmer location. Contact a dealer if necessary.

Message	Condition	Explanation
	<ul style="list-style-type: none">Appears when the High Voltage battery temperature is too low to operate (approx. -30°C or below).	<ul style="list-style-type: none">You can start the engine and use the climate control system to warm up the interior, which will also warm the High Voltage battery enough for you to drive the vehicle.The engine speed does not increase even if you fully depress the accelerator pedal.
	<ul style="list-style-type: none">Appears when there is a problem with the sensor on the 12-volt battery.	<ul style="list-style-type: none">Have your vehicle checked by a dealer.Appears along with the 12-volt battery charging system indicator - Turn off the climate control system and rear demister to reduce electricity consumption.<ul style="list-style-type: none">❏ If the 12-volt battery Charging System Indicator Comes On P. 287

Gauges

Gauges include the speedometer, **POWER/CHARGE** gauge, outside temperature, and related indicators. They are displayed when the power mode is in ON.

■ Speedometer

Displays your driving speed in km/h.

■ POWER/CHARGE Gauge

■ Electric motor

The degree to which the electric motor is being powered is displayed by the readings on the **POWER** side.

■ Battery charge in progress

The degree to which the High Voltage battery is being charged is displayed by the readings on the **CHARGE** side.

■ Outside Temperature

Shows the outside temperature in Celsius.

If the outside temperature has been below 3°C at the time you set the power mode to ON, the outside temperature indicator blinks for 10 seconds.

■ Adjusting the outside temperature display

Adjust the temperature reading up to $\pm 3^{\circ}\text{C}$ if the temperature reading seems incorrect.

⌘ Outside Temperature

The temperature sensor is in the front bumper. Road heat and exhaust from another vehicle can affect the temperature reading when your vehicle speed is less than 30 km/h.

It may take several minutes for the display to be updated after the temperature reading has stabilized.

Use the multi-information display's customized features to correct the temperature.

➤ **Customized Features** P. 108

Multi-Information Display


The multi-information display shows the fuel gauge, odometer, trip meter, and other gauges.

It also displays important messages such as warnings and other helpful information.

Switching the Display


Main displays

Press the /▼ (information) button to change the display.

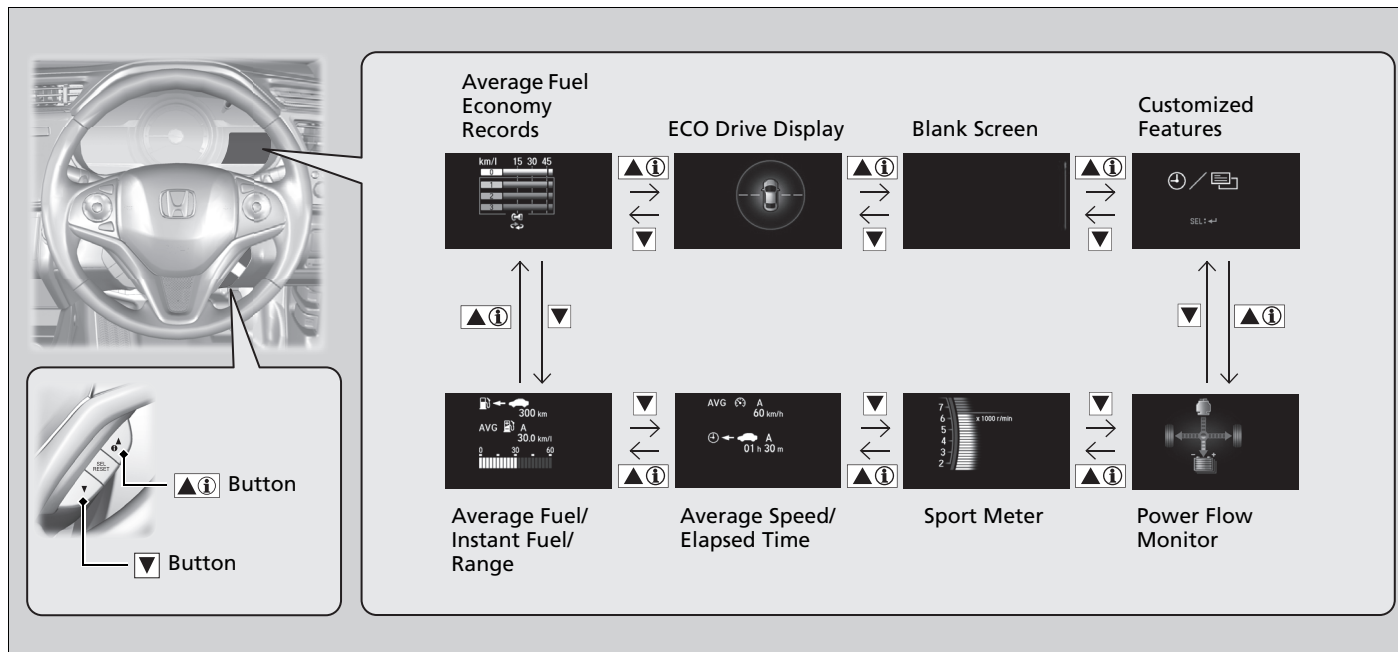

■ Lower displays

Press the **SEL/RESET** button or  (Select/Reset) knob to change the display.

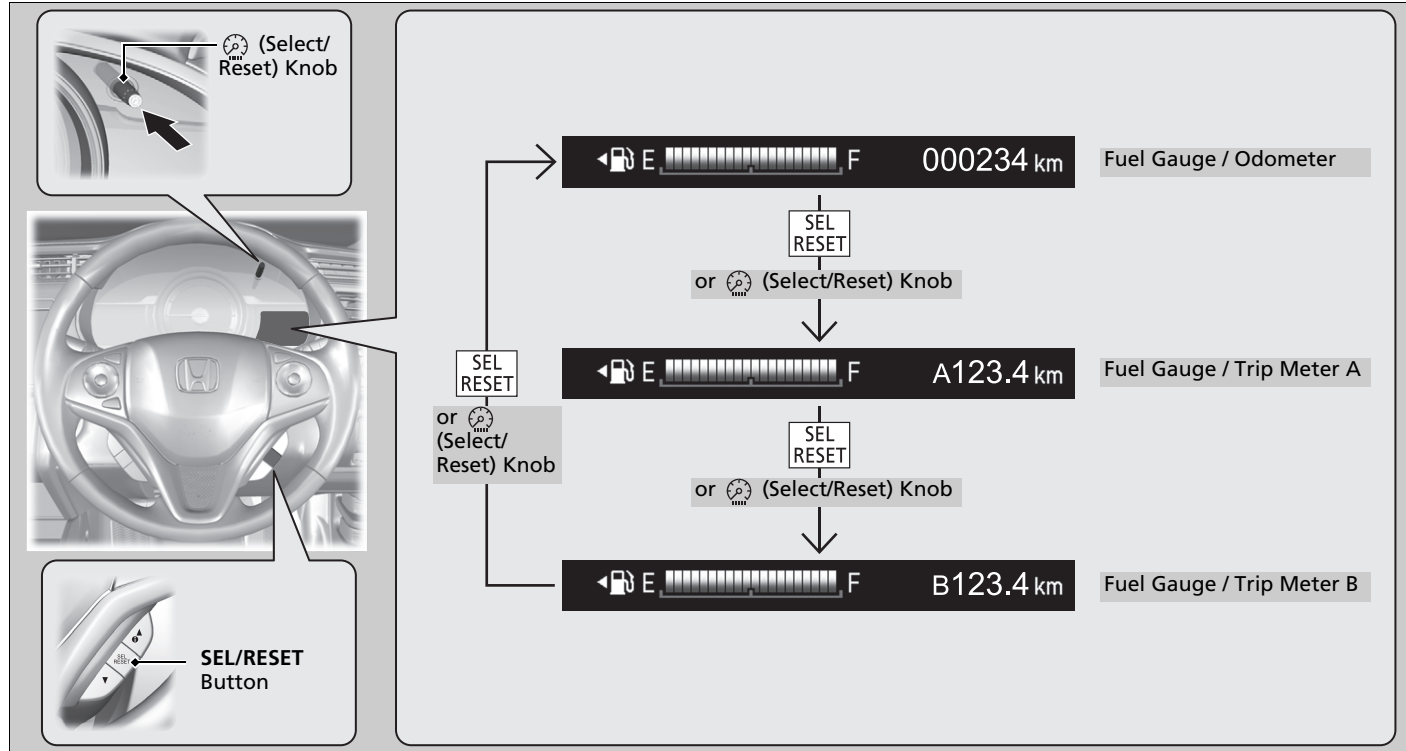


■ Odometer

Shows the total number of kilometres that your vehicle has accumulated.

■ Trip Meter

Shows the total number of kilometres driven since the last reset. Trip A and B can be used to measure two separate trips.

■ Resetting a trip meter

To reset a trip meter, display it, then press and hold the **SEL/RESET** button or  (Select/Reset) knob. The trip meter is reset to **0.0**.

■ Average Fuel Economy

Shows the estimated average fuel economy of each trip meter in km/l. The display is updated at set intervals. When a trip meter is reset, the average fuel economy is also reset.


■ Range

Shows the estimated distance you can travel on the remaining fuel. This distance is estimated from the fuel economy of your previous trips.

■ Elapsed Time

Shows the time elapsed since trip A or trip B was reset.

» Trip Meter

Switch between trip A and B by pressing the **SEL/RESET** button or  (Select/Reset) knob.

» Average Fuel Economy

You can change when to reset the average fuel economy.

► **Customized Features** P. 108

» Elapsed Time

You can change when to reset the elapsed time.

► **Customized Features** P. 108

■ Average Speed


Shows the average speed in km/h since the last time trip A or trip B was reset.

■ Instant Fuel Economy

Shows the instant fuel economy as a bar graph in km/l.

■ Fuel Gauge

Displays the amount of fuel left in the fuel tank.

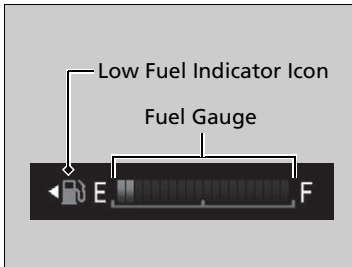

■ Fuel Low warning

When the remaining fuel is running low, the display colour will change to orange and warns you to refuel as soon as possible.

The icon will start to blink when the fuel gauge is malfunctioning.

🔍 **Multi-Information Display Warning and Information Messages** P. 88


» Fuel Gauge

NOTICE

You should refuel when the reading approaches [E]. Running out of fuel can cause the engine to misfire, damaging the catalytic converter.

The actual amount of remaining fuel may differ from the fuel gauge reading.


■ Average Fuel Economy Records

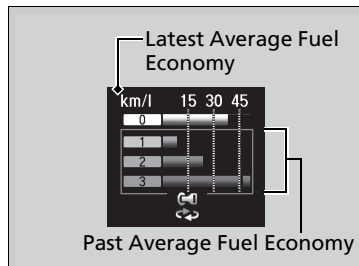

Shows the average fuel economy for the last three driving cycles (1-3), and the current driving cycle (0) in km/l.

Each time you set the power mode to ON, the display is updated, and the oldest record is deleted.

■ SPORT Meter

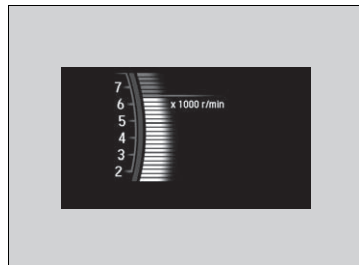

Shows the average engine rotation speed per minute.

The information is displayed when the S Mode button is pressed.

➤ **S Mode** P. 194

This information can also be displayed when the Information buttons are operated.

➤ **Switching the Display** P. 100

►► SPORT Meter

When the gear position is in **[R]**, the fuel supply will stop even when the engine rotation speed is below its limit in order to protect the transmission.


Over revving the engine when the vehicle is in reverse can damage the transmission. To prevent over revving when the transmission is in **[R]**, the fuel supply to the engine is cut before engine RPM reaches its limit.

Power Flow Monitor

Displays the power flow of the motor and engine, indicating the vehicle's power source and whether the battery is being charged.

Power Flow

Engine

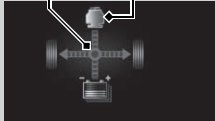

Hybrid (HV)

Power is supplied by the motor and the engine.



Engine ON



Engine OFF




Electric Vehicle (EV)

Power is supplied by the motor.



Engine (Direct Drive)

The engine is running and the motor is charging the High Voltage battery.

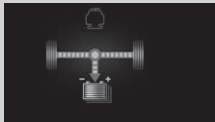


Regeneration

The motor is charging the High Voltage battery.




Power is being supplied by only the engine.

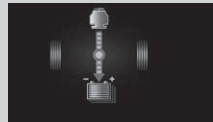

The engine is running and the motor is charging the High Voltage battery.

Power Flow Monitor


While the vehicle is stationary with the engine running, the following may appear on the multi-information display.

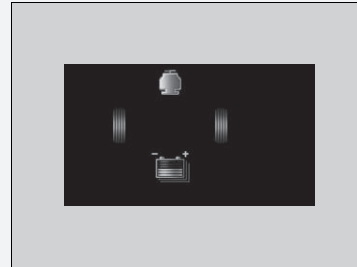

■ Eco Drive Display/Drive Cycle Score/Lifetime Points

■ Eco Drive Display

The vehicle icon on the display moves forward or backward while driving. The more aggressive the acceleration is, the further the icon moves forward. The more aggressive the deceleration is, the further the icon moves backward. Keep the icon near the centre of the circle for better fuel economy while driving.

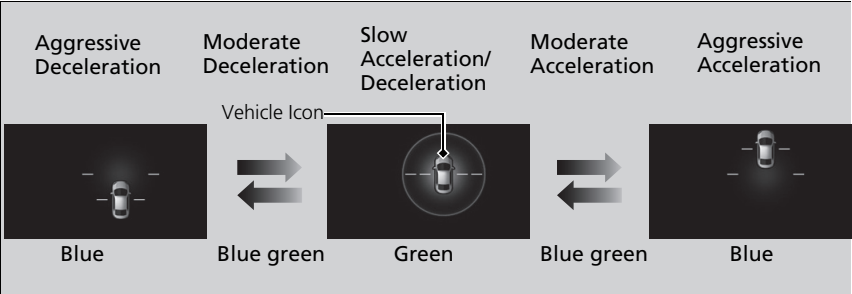


The fuel economy display colour changes while driving. The area around the vehicle icon becomes blue with aggressive acceleration and deceleration, and blue green as fuel economy gets better, then green when driving in the most fuel efficient style. Keep the colour green as long as possible.

▣ Eco Drive Display

The ambient meter colour changes corresponding to the eco drive display.

■ Drive Cycle Score/Lifetime Points

Appear for a few seconds when you set the power mode to VEHICLE OFF (LOCK). Each has three stages. Depending on your driving style, the leaf icon(s) and the gauge increase or decrease to indicate that you have reached a different stage of fuel economy.

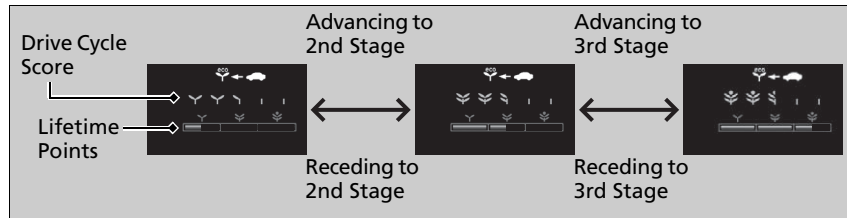




■ Resetting the Drive Cycle Score


1. Make sure the gear position is in **[P]**. Turn the power mode to ON.
2. If ECON mode is on, press the **ECON** button to turn it off.
3. Turn the power mode to VEHICLE OFF (LOCK).
4. Turn the power mode to ON again.
 - Make sure to complete steps from 4 through 6 within 30 seconds.
5. Depress the brake pedal twice.
 - The colour of the ambient meter will change from blue to green.
 - When the **Fuel Efficiency Backlight** setting on the multi-information display is off, the colour stays blue.
6. Press the **ECON** button twice.
 - The colour of the ambient meter will turn to monochrome.
7. Turn the power mode to VEHICLE OFF (LOCK).

■ Customized Features


Use the multi-information display to customize certain features.

■ How to customize

Select the  /  (Customize Settings) screen by pressing the  button while the power mode is in ON, the vehicle is at a complete stop, and the gear position is in **P**. Press the **SEL/RESET** button to enter the customizing mode.

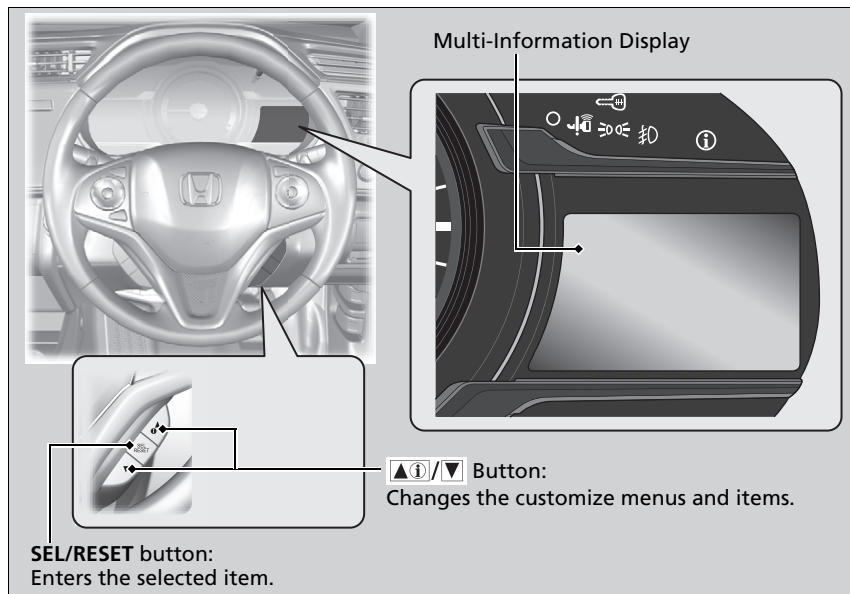

▶ Customized Features


To customize other features, press the  button.


- ▶ **List of customizable options** P. 111
- ▶ **Example of customization settings** P. 113

When you customize settings:
Shift to **P**.

■ Customization flow

Press the /▼ button.

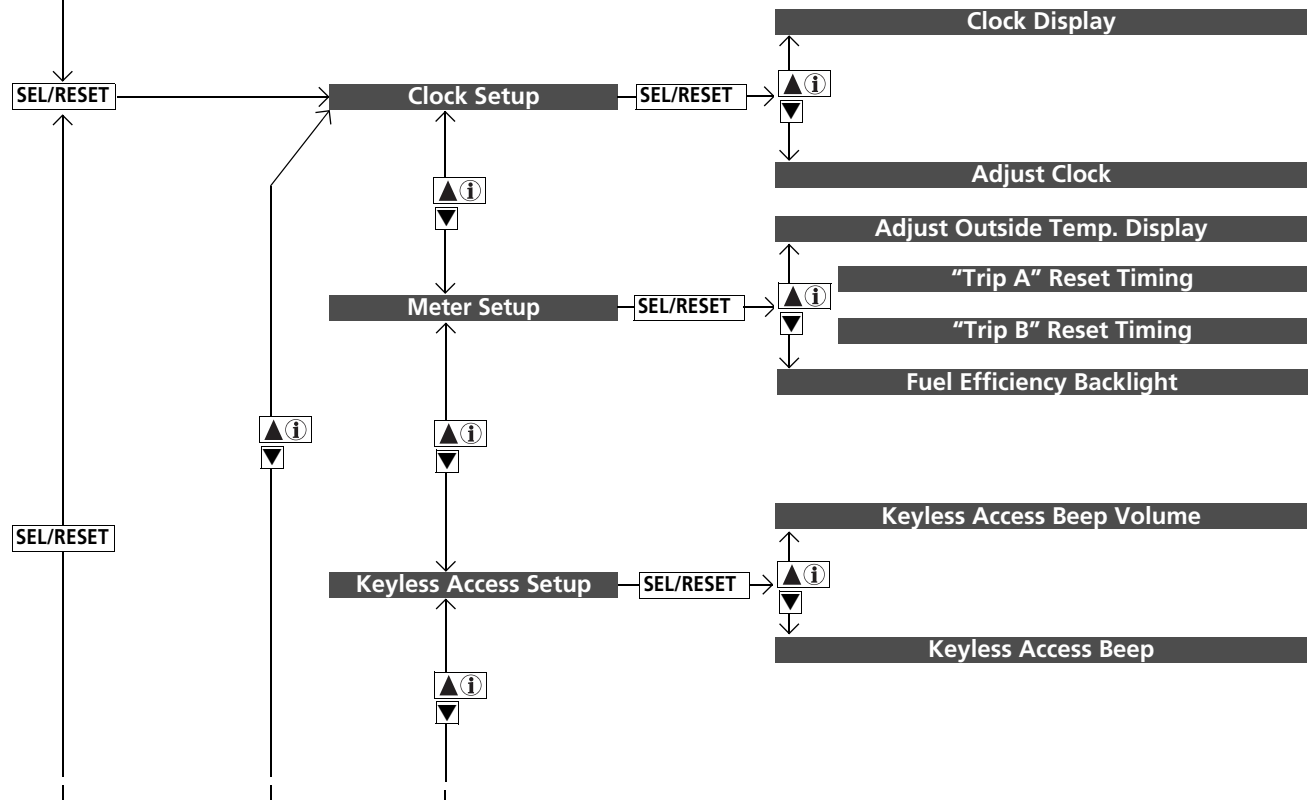

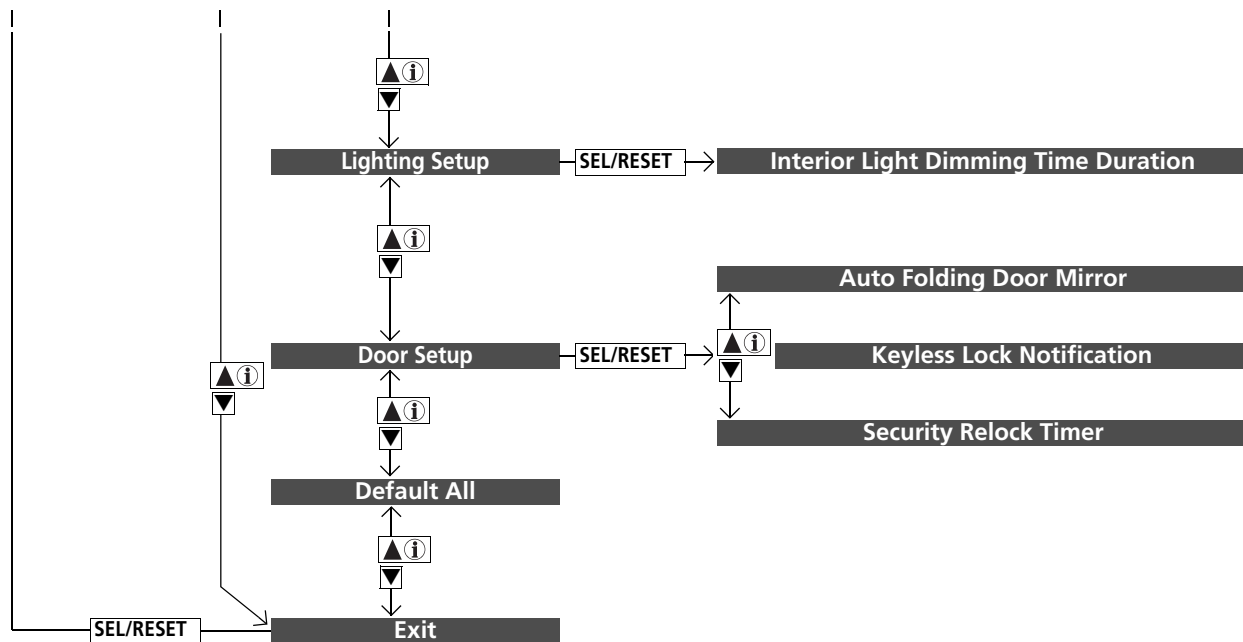

■ List of customizable options

Setup Group	Customizable Features	Description	Selectable Settings
Clock Setup	Adjust Clock	Adjusts the clock.	hour (00 - 23), minute (00 - 59)
	Clock Display	Changes the setting of the clock display.	24h, 12h ^{*1} , OFF
Meter Setup	Adjust Outside Temp. Display	Adjusts the temperature reading by a few degrees.	-3°C ~ ±0°C ^{*1} ~ +3°C
	"Trip A" Reset Timing	Changes the setting of how to reset trip meter A, average fuel economy A, average speed A, and elapsed time A.	When Refueled/When Ignition Is Turned Off/Manual Reset ^{*1}
	"Trip B" Reset Timing	Changes the setting of how to reset trip meter B, average fuel economy B, average speed B, and elapsed time B.	When Refueled/When Ignition Is Turned Off/Manual Reset ^{*1}
	Fuel Efficiency Backlight	Turns the ambient meter feature on and off.	ON ^{*1} /OFF
Keyless Access Setup	Keyless Access Beep Volume	Changes the setting of keyless access beep volume.	High ^{*1} /Low
	Keyless Access Beep	Turns the keyless access beep feature on and off.	ON ^{*1} /OFF

*1:Default Setting

Setup Group	Customizable Features	Description	Selectable Settings
Lighting Setup	Interior Light Dimming Duration	Changes the length of time the interior lights.	60sec/30sec ^{*1} /15sec
Door Setup	Auto Folding Door Mirror	Changes how you can fold the door mirrors.	Auto Fold With Keyless ^{*1} / Manual Only
	Keyless Lock Notification	Turns the keyless lock notification feature on and off.	ON ^{*1} /OFF
	Security Relock Timer	Changes the length of security relock timer.	90sec/60sec/30sec ^{*1}
Default All	—	Cancels/Resets all the customized settings as default.	Cancel/OK

*1: Default Setting

■ Example of customization settings



The steps for changing the **"Trip A" Reset Timing** setting to **When Refueled** are shown below. The default setting for **"Trip A" Reset Timing** is **Manual Reset**.



1. Press the button until / (Customize Settings) appears on the display, then press the **SEL/RESET** button.



2. Press the button until **Meter Setup** appears on the display.
3. Press the **SEL/RESET** button.

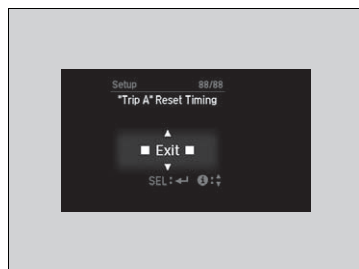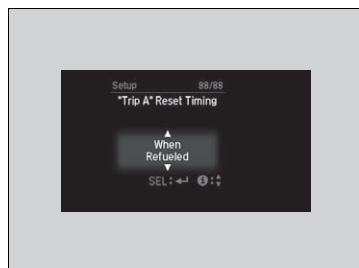

4. Press the /▼ button until **"Trip A"** **Reset Timing** appears on the display, then press the **SEL/RESET** button.

► The display switches to the customization setup screen, where you can select **When Refueled**, **When Ignition Is Turned Off**, **Manual Reset**, or **Exit**.

5. Press the /▼ button and select **When Refueled**, then press the **SEL/RESET** button.

► The **When Refueled Setup** screen appears, then the display returns to the customization menu screen.

6. Press the /▼ button until **Exit** appears on the display, then press the **SEL/RESET** button.

7. Repeat Step 6 until you return to the normal screen.

Controls




This chapter explains how to operate the various controls necessary for driving.

Clock	116
Locking and Unlocking the Doors	
Key Type and Functions	118
Low Keyless Remote Signal Strength	120
Locking/Unlocking the Doors from the Outside	121
Locking/Unlocking the Doors from the Inside	126
Childproof Door Locks	128
Opening and Closing the Boot	129
Security System	
Immobilizer System	131
Security System Alarm	132
Opening and Closing the Windows	134

Operating the Switches Around the Steering Wheel	
POWER Button	137
Turn Signals	140
Light Switches	141
Daytime Running Lights	142
Headlight Adjuster	143
Wipers and Washers	144
Brightness Control	145
Rear Demister Button	146
Adjusting the Steering Wheel	147
Adjusting the Mirrors	
Interior Rearview Mirror	148
Power Door Mirrors	149


Adjusting the Seats	
Front Seat	151
Head Restraints	154
Maintain a Proper Sitting Position	156
Rear Seats	157
Armrest	158
Interior Lights/Interior Convenience Items	
Interior Lights	159
Interior Convenience Items	161
Climate Control System	
Using Automatic Climate Control	166
Automatic Climate Control Sensors	171

Adjusting the Clock

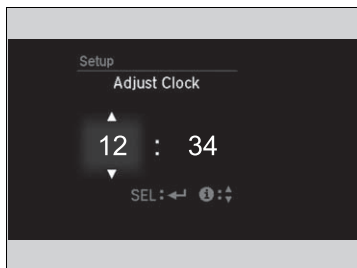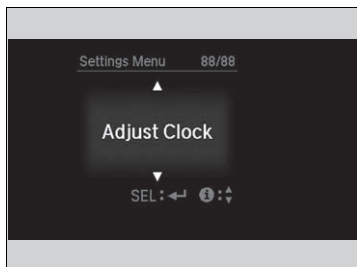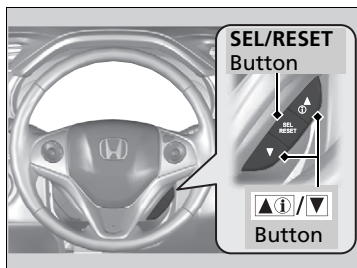

1. Press the button repeatedly to display / , then press the **SEL/RESET** button.
 - ▶ The display changes to **Vehicle Settings**, and **Clock Setup** appears.
2. Press the **SEL/RESET** button.
 - ▶ The display changes to **Settings Menu**.
3. Press the button repeatedly to display **Adjust Clock**, then press the **SEL/RESET** button.
 - ▶ The hour can be adjusted.
4. Press the button up or down to adjust the hours. Then press the **SEL/RESET** button.
 - ▶ The display switches to minute adjustment.
5. Press the button up or down to adjust the minutes. Then press the **SEL/RESET** button.
 - ▶ The display returns to / .

■ To change the setting between 12h and 24h

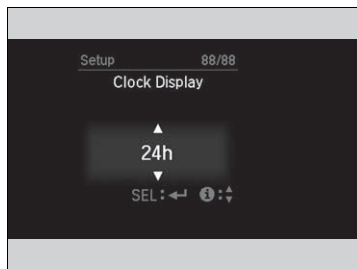

1. Press the button repeatedly to display / , then press the **SEL/RESET** button.
 - ▶ The display changes to **Vehicle Settings**, and **Clock Setup** appears.
2. Press the **SEL/RESET** button.
 - ▶ The display changes to **Settings Menu**, and **Clock Display** appears.
3. Press the **SEL/RESET** button.
 - ▶ The display changes to **Setup**.
4. Press the button to switch between **12h** and **24h**.
 - ▶ Selecting **12h** or **24h** can show the 12 hour clock or 24 hour clock respectively.
 - ▶ Press the button to select the setting between **12h** and **24h**.
 - ▶ Select **OFF** to stop displaying the clock on the multi-information display.
5. Press the **SEL/RESET** button.
 - ▶ The display returns to / .

Key Type and Functions

This vehicle comes with the following key:


Keyless Remote



Use the key to start and stop the power system, and to lock and unlock all the doors and to open the boot. You can also use the remote transmitter to lock and unlock all the doors and to open the boot.

Built-in Key

Release Knob

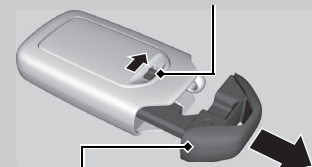

Built-in Key

The built-in key can be used to lock/unlock the doors when the keyless remote battery becomes weak and the power door lock/unlock operation is disabled. To remove the built-in key, slide the release knob and then pull out the key. To reinstall the built-in key, push the built-in key into the keyless remote until it clicks.

Key Type and Functions

All the keys have an immobilizer system. The immobilizer system helps to protect against vehicle theft.

Immobilizer System P. 131


Follow the advice below to prevent damage to the keys:

- Do not leave the keys in direct sunlight, or in locations with high temperature or high humidity.
- Do not drop the keys or set heavy objects on them.
- Keep the keys away from liquids, dust and sand.
- Do not take the keys apart except for replacing the battery.

If the circuits in the keys are damaged, the power system, may not activate, and the remote transmitter may not work.

If the keys do not work properly, have them inspected by a dealer.

■ Key Number Tag

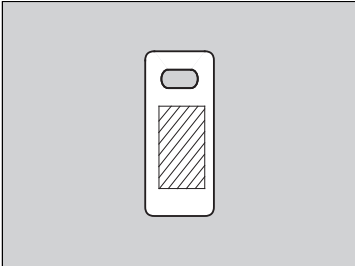

Contains a number that you will need if you purchase a replacement key.

▣ Key Number Tag

Keep the key number tag separate from the key in a safe place outside of your vehicle.
If you wish to purchase an additional key, contact a dealer.

If you lose your key and you cannot activate the power system, contact a dealer.

Low Keyless Remote Signal Strength

The vehicle transmits radio waves to locate the keyless remote when locking/unlocking the doors, opening the boot, or to activate the power system.

In the following cases, locking/unlocking the doors and opening the boot, or activating the power system may be inhibited or operation may be unstable:

- Strong radio waves are being transmitted by nearby equipment.
- You are carrying the keyless remote together with telecommunications equipment, laptop computers, mobile phones, or wireless devices.
- A metallic object is touching or covering the keyless remote.

Low Keyless Remote Signal Strength


Communication between the keyless remote and the vehicle consumes the keyless remote's battery.

Battery life is about two years, but this varies depending on regularity of use.

The battery is consumed whenever the keyless remote is receiving strong radio waves. Avoid placing it near electrical appliances such as televisions and personal computers.


Locking/Unlocking the Doors from the Outside

■ Using the Keyless Access System

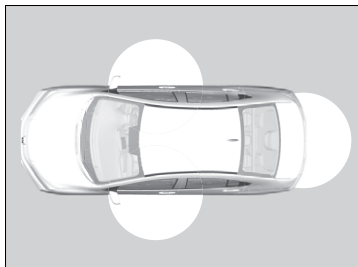

When you carry the keyless remote, you can lock/unlock the doors and open the boot.

You can lock/unlock the doors within a radius of about 80 cm of the outside door handle or boot release button.

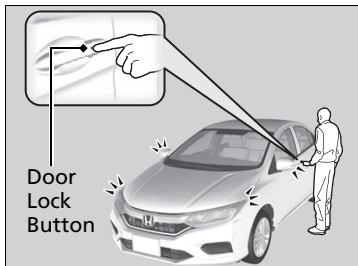

■ Locking the doors

Press the door lock button on the front door.

- Some exterior lights flash three times; the beeper sounds; all the doors and the boot lock; the security system sets.

► Locking/Unlocking the Doors from the Outside

If the interior light switch is in the door activated position, the interior light comes on when you unlock the doors.

No doors opened: The light fades out after 30 seconds.

Doors relocked: The light goes off immediately.

► **Interior Lights** P. 159

► Using the Keyless Access System

If you do not open a door within 30 seconds of unlocking the vehicle, the doors will automatically relock.

You can lock or unlock doors using the keyless access system only when the power mode is in VEHICLE OFF (LOCK).

- Do not leave the keyless remote in the vehicle when you get out. Carry it with you.
- Even if you are not carrying the keyless remote, you can lock/unlock the doors while someone else with the remote is within range.
- The door may be unlocked if the door handle is covered with water in heavy rain or in a car wash if the keyless remote is within range.
- If you grip a front door handle wearing gloves, the door sensor may be slow to respond or may not respond by unlocking the doors.



■ Unlocking the doors


Grab the front door handle.

- All the doors and the boot unlock.
- Some exterior lights flash once; the beeper sounds.

Press the boot release button:

- The boot unlocks and opens.
- A beeper will sound.

➤ **Using the Boot Release Button** P. 130

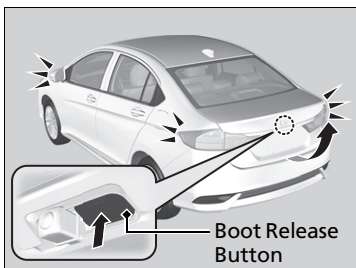


►► Using the Keyless Access System

- After locking the door, you have up to 2 seconds during which you can pull the door handle to confirm whether the door is locked. If you need to unlock the door immediately after locking it, wait at least 2 seconds before gripping the handle, otherwise the door will not unlock.
- The door may not open if you pull it immediately after gripping the door handle. Grip the handle again and confirm that the door is unlocked before pulling the handle.
- Even within the 80 cm radius, you may not be able to lock/unlock the doors with the keyless remote if it is above or below the outside handle.
- The keyless remote may not operate if it is too close to the door and door glass.

The beep settings can be customized using the multi-information display.

➤ **Customized Features** P. 108

■ Using the Remote Transmitter

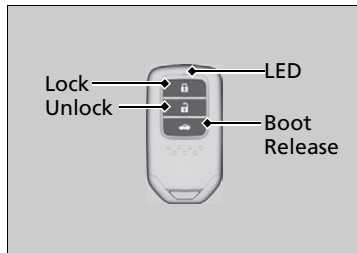

■ Locking the doors

Press the lock button.

▶ Some exterior lights flash three times, all

the doors lock and the security system sets.

■ Unlocking the doors

Press the unlock button.

▶ Some exterior lights flash once, and all doors unlock.

⌘ Using the Remote Transmitter

If you do not open a door within 30 seconds of unlocking the vehicle with the remote transmitter, the doors will automatically relock. You can change the relock timer setting.

➤ **Customized Features** P. 108

You can lock or unlock doors using the remote transmitter or keyless access system only when the power mode is in VEHICLE OFF (LOCK).

The remote transmitter uses low-power signals, so the operating range may vary depending on the surroundings.


The remote will not lock the vehicle when a door is open.

If the distance at which the remote transmitter works varies, the battery is probably low. If the LED does not come on when you press a button, the battery is dead.

➤ **Replacing the Button Battery** P. 255

■ Locking/Unlocking the Doors Using a Key

If the keyless remote battery or the vehicle 12-volt battery is dead, use the key instead of the keyless remote.

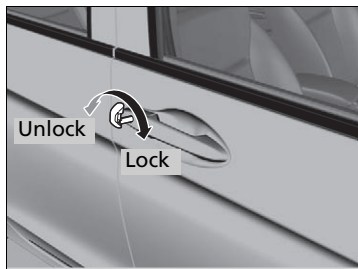

Fully insert the key and turn it.


► Locking/Unlocking the Doors Using a Key

When you lock/unlock the driver's door with the key, all the other doors lock/unlock at the same time.

Unlocking the door with the key will cause the security system to alarm. Always unlock the door with the remote transmitter.

■ Locking a Door Without Using a Key

If you do not have the key on you, or if for some reason you cannot lock a door using the key, you can lock the door without it.

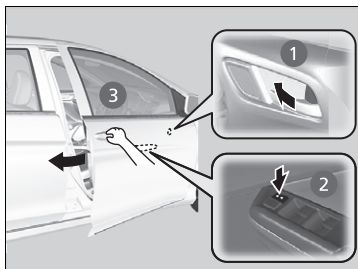

■ Locking the driver's door

Push the lock tab forward ① or push the master door lock switch in the lock direction ②, then pull and hold the outside door handle ③. Close the door, then release the handle.

■ Locking the passenger's doors

Push the lock tab forward and close the door.

■ Lockout prevention system

The doors cannot be locked when the keyless remote is inside the vehicle.


▣ Locking a Door Without Using a Key

When you lock the driver's door, all the other doors lock at the same time.

Before locking a door, make sure that the key is not inside the vehicle.

Locking/Unlocking the Doors from the Inside

■ Using the Lock Tab

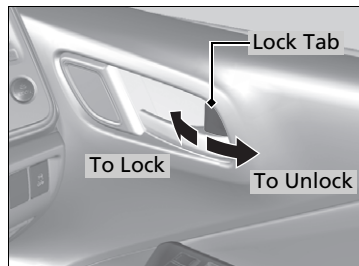


■ **Locking a door**
Push the lock tab forward.

■ **Unlocking a door**
Pull the lock tab rearward.

►► Using the Lock Tab

When you lock/unlock the door using the lock tab on the driver's door, all the other doors lock/unlock at the same time.

■ Unlocking Using the Driver's Door Inner Handle

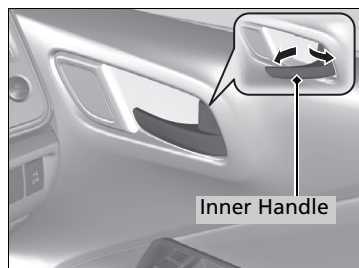

Pull the driver's door inner handle.

- The door unlocks and opens in one motion.

Unlocking and opening the driver's door from the inner handle unlocks all the other doors.


►► Unlocking Using the Driver's Door Inner Handle

The driver's door inner handle are designed to allow the driver to open the door in one motion. However, this feature requires that the driver never pull the door inner handle while the vehicle is in motion.

Children should always ride in a rear seat where childproof door locks are provided.

► **Childproof Door Locks** P. 128

■ Using the Master Door Lock Switch

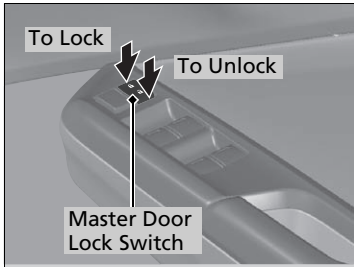

Press the master door lock switch in as shown to lock or unlock all the doors.

▣ Using the Master Door Lock Switch

When you lock/unlock the driver's door using the master door lock switch, all the other doors lock/unlock at the same time.

Childproof Door Locks

The childproof door locks prevent the rear doors from being opened from the inside regardless of the position of the lock tab.

■ Setting the Childproof Door Locks



Slide the lever in the rear door to the lock position, and close the door.

■ When opening the door

Open the door using the outside door handle.

⌘ Childproof Door Locks

To open the door from the inside when the childproof door lock is on, put the lock tab in the unlock position, lower the rear window, put your hand out of the window, and pull the outside door handle.

Precautions for Opening/Closing the Boot

■ Opening the boot

Open the boot all the way.

- ▶ If it is not fully opened, the boot lid may begin to close under its own weight.


■ Closing the boot

Keep the boot lid closed while driving to:

- ▶ Avoid possible damage.
- ▶ Prevent exhaust gas from leaking into the vehicle.


⚠ **Exhaust Gas Hazard** P. 71

Using the Boot Opener

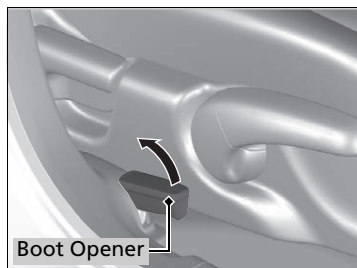

Pulling the boot opener on the outside of the driver's seat unlocks and opens the boot.

Using the Boot Release Button

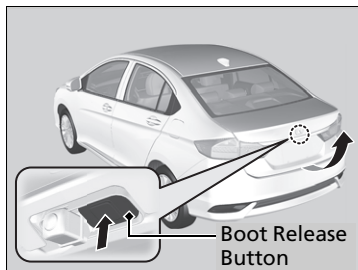


Push up the release button on the boot lid after the doors are unlocked.

Even if the boot is locked, you can open the boot if you carry the keyless remote.

► The beeper sounds.

Using the Remote Transmitter

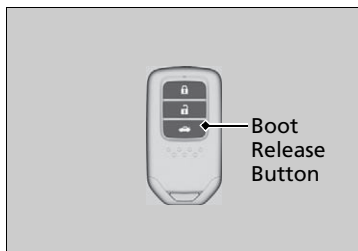

Press the boot release button for approximately one second to unlock and open the boot.

►► Using the Boot Release Button

- If you forget the remote inside, the beeper will sound and the boot will not close.
- A person who is not carrying the keyless remote can unlock the boot if a person who is carrying it is within range.
- If the beeper sounds after you close the boot, move the keyless remote away from the boot and close again.
- The keyless access remote may not operate if it is too close to the boot.

Immobilizer System

The immobilizer system prevents a key that has not been pre-registered from activating the power system. Each key contains electronic transmitters that use electronic signals to verify the key.

Pay attention to the following when pressing the **POWER** button:

- Do not allow objects that emit strong radio waves near the **POWER** button.
- Make sure the key is not covered by or touching a metal object.
- Do not bring a key from another vehicle's immobilizer system near the **POWER** button.

Do not put the key near magnetic items. Electronic device, such as televisions and audio systems emit strong magnetic fields. Note that even a key chain can become magnetic.

Immobilizer System

NOTICE

Leaving the key in the vehicle can result in theft or accidental movement of the vehicle. Always take the key with you whenever you leave the vehicle unattended.

Do not alter the system or add other devices to it. Doing so may damage the system and make your vehicle inoperable.

If the system repeatedly does not recognise the coding of your key, contact your dealer. If you have lost your key and cannot start your vehicle, contact a dealer.

Security System Alarm

The security system alarm activates when the doors, boot, or bonnet are opened without the remote transmitter or keyless access system.

■ When the security system alarm activates

The horn sounds intermittently and the turn signal lights flash.

■ To deactivate the security system alarm

Unlock the vehicle using the remote transmitter or keyless access system, or power mode to ON. The system, along with the horn and flashing lights, is deactivated.

■ Setting the security system alarm

The security system alarm automatically sets when the following conditions have been met:

- The power mode is set to VEHICLE OFF (LOCK).
- The bonnet are closed.
- All doors and the boot are locked from outside with the key, remote transmitter, or keyless access system.

■ When the security system alarm sets

The security system alarm indicator in the instrument panel blinks. When the blinking interval changes after about 15 seconds, the security system alarm is set.

» Security System Alarm

Do not alter the system or add other devices to it. Doing so may damage the system and make your vehicle inoperable.

The security alarm will continue for approximately 5 minutes before the security system deactivates.

The system will go through ten 30-second cycles, during which the horn will sound and an emergency indicator will flash.

Depending on circumstances, the security system may continue operating for more than 5 minutes.

Do not set the security system alarm when someone is in the vehicle or a window is open. The system can accidentally activate when:

- Unlocking the door with the lock tab or the master door lock switch.
- Opening the boot with the boot release on the outside of the driver's seat.
- Opening the bonnet with the bonnet release.

If the 12-volt battery goes dead after you have set the security system alarm, the security alarm may go off once the 12-volt battery is recharged or replaced.

If this occurs, deactivate the security system alarm by unlocking a door using the remote transmitter or keyless access system.

■ To cancel the security system alarm

The security system alarm is cancelled when the vehicle is unlocked using the remote transmitter, keyless access system, or the power mode to ON. The security system alarm indicator goes off at the same time.

▣ Security System Alarm

Do not attempt to alter this system or add another device to it.

Do not unlock the door using the key. The security system alarm goes off.

Opening/Closing the Power Windows

The power windows can be opened and closed when the power mode is in ON, using the switches on the doors. The driver's side switches can be used to open and close all of the windows.

The power window lock button on the driver side must be switched off (not pushed in, indicator off) to open and close the windows from anywhere other than the driver's seat.

When the power window lock button is pushed in, the indicator comes on and you can only operate the driver's window. Turn the power window lock button on if a child is in the vehicle.

Opening/Closing the Power Windows

WARNING


Closing a power window on someone's hands or fingers can cause serious injury.

Make sure your passengers are away from the windows before closing them.

WARNING: Always take the ignition key with you whenever you leave the vehicle alone (with other occupants).

The power windows can be operated for up to 10 minutes after you set the power mode to VEHICLE OFF. Opening either front door cancels this function.

■ Opening/Closing Windows with Auto-Open/Close Function

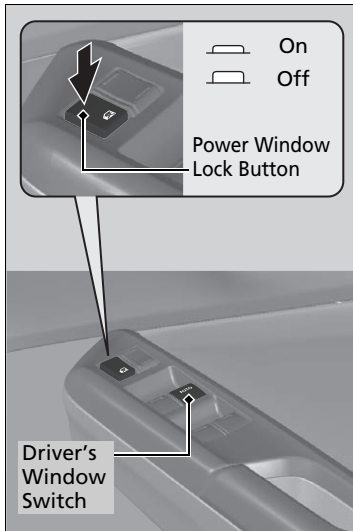

■ Manual operation

To open: Push the switch down lightly, and hold it until the desired position is reached.

To close: Pull the switch up lightly, and hold it until the desired position is reached.

■ Automatic operation

To open: Push the switch down firmly.

To close: Pull the switch up firmly.

The window opens or closes completely. To stop the window at any time, push or pull the switch briefly.

▣ Opening/Closing the Power Windows


Auto Reverse

If a power window senses resistance when closing automatically, it will stop closing and reverse direction.

The driver's window auto reverse function is disabled when you continuously pull up the switch.

The auto reverse function stops sensing when the window is almost closed to ensure that it fully closes.

■ Opening/Closing Windows without Auto-Open/Close Function

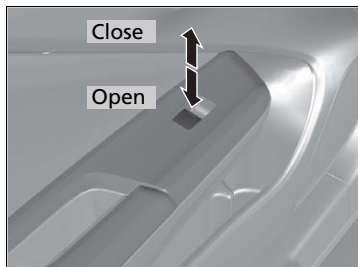


To open: Push the switch down.

To close: Pull the switch up.

Release the switch when the window reaches the desired position.

POWER Button

Changing the Power Mode

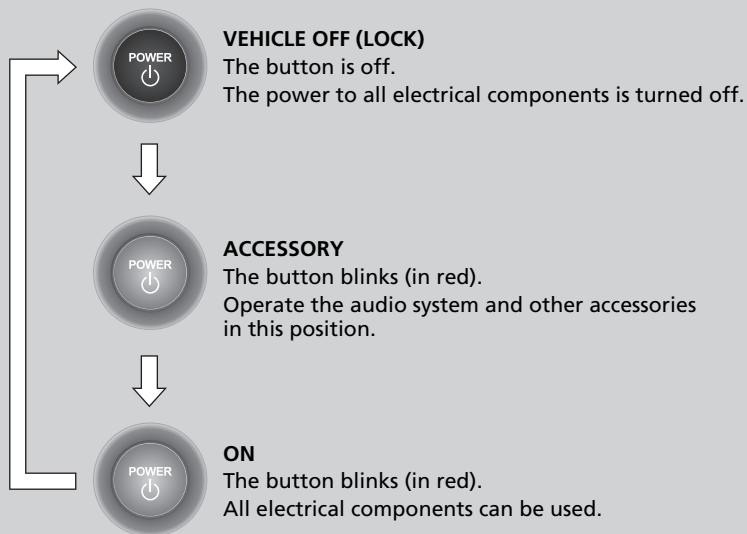


Without pressing the brake pedal

➡ Press the button.

POWER Button

POWER Button Operating Range

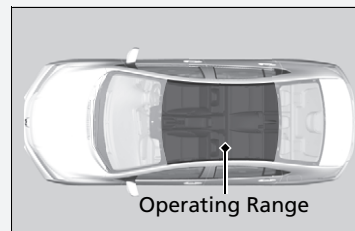

You can start the power system when the keyless remote is inside the vehicle.

The power system may also start if the keyless remote is close to the door or window, even if it is outside the vehicle.

ON mode:

The **POWER** button is on (in red), if the power system is on.

If the battery of the keyless remote is getting low, the power system may not start when you push the **POWER** button. If the engine does not start, refer to the following link.

➡ **If the Keyless Remote Battery is Weak**

P. 281

Do not leave the power mode in ACCESSORY or ON when you get out.

■ Automatic Power Off

If you leave the vehicle for 30 to 60 minutes with the transmission in **P** and the power mode in ACCESSORY, the vehicle automatically goes into the mode similar to VEHICLE OFF (LOCK) to avoid draining the 12-volt battery.

■ Power Mode Reminder

If you open the driver's door when the power mode is set to ACCESSORY, a warning buzzer sounds.

■ Keyless Remote Reminder



Warning buzzers may sound from inside or/ and outside the vehicle to remind you that the keyless remote is out of the vehicle. If the buzzer continues even after the remote is put back inside, place it to be within its operational range.

■ When the power mode is in ON

If the keyless remote is taken out of the vehicle, and the driver's door is closed, warning buzzer sounds from both inside and outside the vehicle. A warning message on the information display notifies the driver inside that the remote outside of the vehicle.

■ When the power mode is in ACCESSORY

If the keyless remote is taken out of the vehicle, and the all doors are closed, a warning buzzer sounds from outside the vehicle.

⌘ Keyless Remote Reminder


When the keyless remote is within the system's operational range, and the driver's door is closed, the warning function cancels.

If the keyless remote is taken out of the vehicle after the power system has been turned on, you can no longer change the **POWER** button mode or restart the power system. Always make sure if the remote is in your vehicle when you operate the **POWER** button.

Removing the keyless remote from the vehicle through a window does not activate the warning buzzer.

Do not put the keyless remote on the dashboard or in the glove box. It may cause the warning buzzer to go off. Under some other conditions that can prevent the vehicle from locating the remote, the warning buzzer may also go off even if the remote is within the system's operational range.

Turn Signals

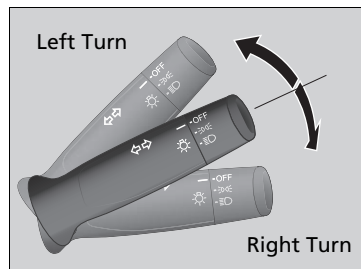


The turn signals can be used when the power mode is in ON.

■ One-touch turn signal

When you lightly push up or down and release the turn signal lever, the exterior turn signals and turn signal indicator blink three times.

This feature can be used when signalling for a lane change.

Light Switches

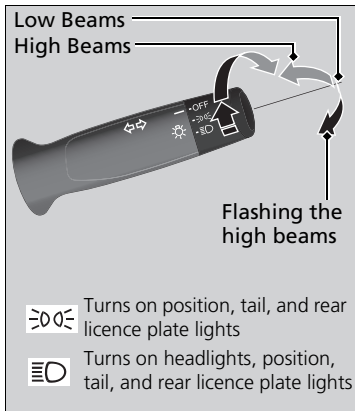

Rotating the light switch turns the lights on and off, regardless of the power mode setting.

■ High beams

Push the lever forward until you hear a click.

■ Low beams

When in high beams, pull the lever back to return to low beams.

■ Flashing the high beams

Pull the lever back, and release it.

►► Light Switches

If you leave the power mode in VEHICLE OFF (LOCK) with the lights on, a light on reminder chime will sound when you open the driver's door.

When the lights are on, the lights on indicator in the instrument panel will be on.

► **Indicators** P. 74

Do not leave the lights on when the power system is off because it will cause the 12-volt battery to discharge.


Daytime Running Lights

The position/daytime running lights comes on when the following conditions have been met:

- The power mode is in ON.
- The headlight switch is off.

The lights remain on even if you set the parking brake. Setting the power mode to VEHICLE OFF (LOCK) will turn off the daytime running lights.

Headlight Adjuster

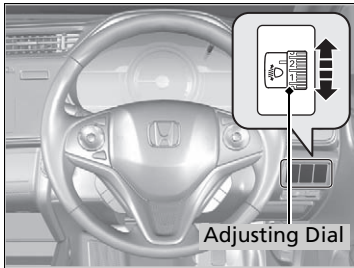

You can adjust the vertical angle of the low beam headlights when the power mode is in ON.

Turn the adjustment dial to select an appropriate angle for the headlights.

The larger dial number indicates the lower angle.

■ To select the adjustment dial position

Refer to the below table for the appropriate dial position for your vehicle's riding and loading conditions.

Condition	Dial position
A driver	0
A driver and a front passenger	
Five persons in the front and rear seats	1
Five persons in the front and rear seats and luggage in the boot, within the limits of maximum permissible axle weight and maximum permissible vehicle weight	2
A driver and luggage in the boot, within the limits of maximum permissible axle weight and maximum permissible vehicle weight	3


⌘ Headlight Adjuster

You may need to alter the headlight beam distribution.

► **Adjusting Headlight Distribution** P. 202

Wipers and Washers

■ Windscreen Wipers/Washers

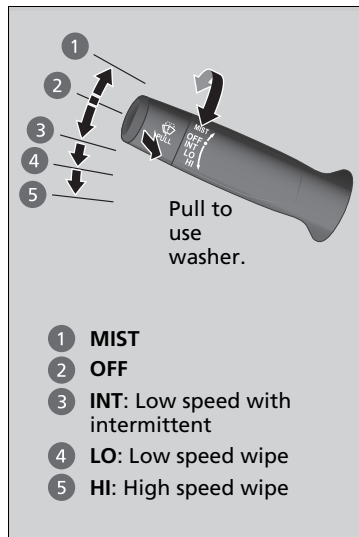

The windscreen wipers and washers can be used when the power mode is in ON.

■ MIST

The wipers run at high speed until you release the lever.

■ Wiper switch (OFF, INT, LO, HI)

Change the wiper switch setting according to the amount of rain.

■ Washer

Sprays while you pull the lever towards you. When you release the lever for more than one second, the spray stops, the wipers sweep two or three more times to clear the windscreen, then stop.

►► Wipers and Washers

NOTICE

Do not use the wipers when the windscreen is dry. The windscreen will get scratched, or the rubber blades will get damaged.

Turn the washers off if no washer fluid comes out. The pump may get damaged.

The wiper motor may stop motor operation temporarily to prevent an overload. Wiper operation will return to normal within a few minutes, once the circuit has returned to normal.


NOTICE

In cold weather, the blades may freeze to the windscreen. Operating the wipers in this condition may damage the wipers. Use the demister to warm the windscreen, then turn the wipers on.

If the wipers stop operating due to any obstacle such as the build-up of snow, park the vehicle in a safe place.

Rotate the wiper switch to **OFF**, and set the power mode to ACCESSORY or VEHICLE OFF (LOCK), then remove the obstacle.

Brightness Control

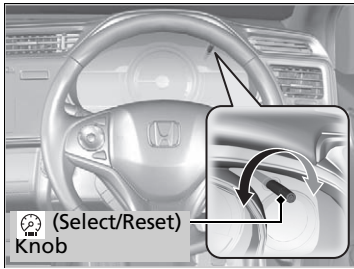

When the position lights are turned on and the power mode is in ON, you can use the (Select/Reset) knob to adjust interior panel brightness.


Brighten: Turn the knob to the right.

Dim: Turn the knob to the left.

You will hear a beeper when the brightness reaches minimum or maximum. Several seconds after you have adjusted the brightness, you will be returned to the previous screen.

■ Brightness level indicator

The brightness level is shown on the information display while you are adjusting it.

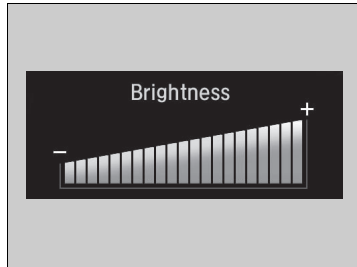

▣ Brightness Control


Instrument panel brightness varies, depending on whether the exterior lights are on or off. The instrument panel dims to reduce glare when they are on.

To cancels the reduced instrument panel brightness when the exterior lights are on, turn the knob to the right until the brightness display is up to max, the beeper sounds.

The brightness can be set differently for when the exterior lights are on, and when they are off.

Rear Demister Button

Press the rear demister button to defog the rear window when the power mode is in ON.

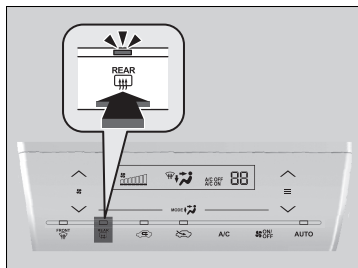

The rear demister automatically switch off after 10-30 minutes depending on the outside temperature.

However, if the outside temperature is 0°C or below, they do not automatically switch off.

► Rear Demister Button


NOTICE

When cleaning the inside of the rear window, be careful not to damage the heating wires. It is critical to wipe the window from side to side along the demister heating wires.

This system consumes a lot of power, so turn it off when the window has been demister. Also, do not use the system for a long time while the power system is stopped. This may weaken the 12-volt battery, making it difficult to turn the power system on.

Adjusting the Steering Wheel

The steering wheel height and distance from your body can be adjusted so that you can comfortably grip the steering wheel in an appropriate driving posture.

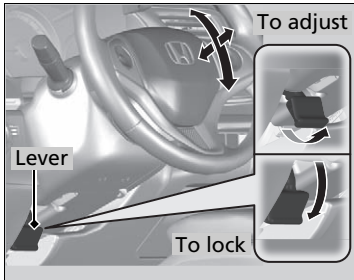

1. Pull the steering wheel adjustment lever up.
 - The steering wheel adjustment lever is under the steering column.
2. Move the steering wheel up or down, and in or out.
 - Make sure you can see the instrument panel gauges and indicators.
3. Push the steering wheel adjustment lever down to lock the steering wheel in position.
 - After adjusting the position, make sure you have securely locked the steering wheel in place by trying to move it up, down, in, and out.

Adjusting the Steering Wheel

⚠ WARNING


Adjusting the steering wheel position while driving may cause you to lose control of the vehicle and be seriously injured in a crash.

Adjust the steering wheel only when the vehicle is stopped.

Interior Rearview Mirror

Adjust the angle of the rearview mirror when you are sitting in the correct driving position.

Rearview Mirror with Day and Night Positions

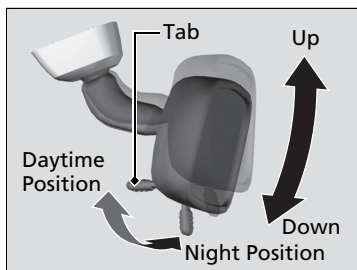

Flip the tab to switch the position. The night position will help to reduce the glare from headlights behind you when driving after dark.


Adjusting the Mirrors

Keep the inside and outside mirrors clean and adjusted for best visibility.

Adjust the mirrors before you start driving.

Front Seat P. 151

Power Door Mirrors

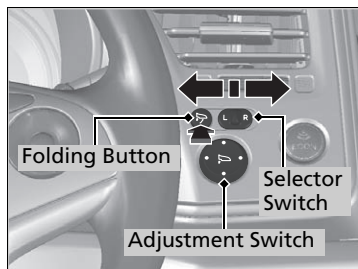

You can adjust the door mirrors when the power mode is in ON.

■ Mirror position adjustment

L/R selector switch: Select the left or right mirror. After adjusting the mirror, return the switch to the centre position.

Mirror position adjustment switch: Press the switch left, right, up, or down to move the mirror.

■ Folding door mirrors

Press the folding button to fold in and out the door mirrors.

■ Automatic Folding Door Mirror Function

■ Folding in the door mirrors

The mirrors start folding in automatically when:

- Press the lock button on the keyless access remote.
- Press the door lock button on either front door.

■ Folding out the door mirrors

Unlock all doors using the keyless remote.

Open the driver's door.

- The mirrors start folding out automatically.

Grab the door handle on either front door and unlock all doors. Open the driver's door.

- The mirrors start folding out automatically.

► Automatic Folding Door Mirror Function


You can turn the automatic folding door mirror function on and off.

► **Customized Features** P. 108

You cannot turn the automatic folding out automatically if they have been folded in using the folding button.

Door mirrors will not fold automatically when locking from inside the vehicle using lock tab or master door lock switch.

Front Seat

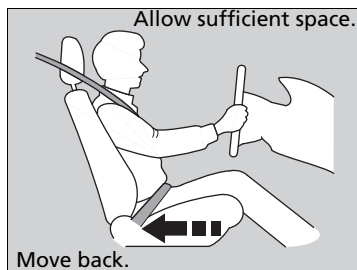

Adjust the driver's seat as far back as possible while allowing you to maintain full control of the vehicle. You should be able to sit upright, well back in the seat and be able to adequately press the pedals without leaning forward, and grip the steering wheel comfortably. The passenger's seat should be adjusted in a similar manner, so that it is as far back from the front airbag in the dashboard as possible.

Adjusting the Seats

⚠ WARNING

Sitting too close to a front airbag can result in serious injury or death if the front airbags inflate.


Always sit as far back from the front airbags as possible while maintaining control of the vehicle.

In addition to the seat adjustment, you can adjust the steering wheel up and down, in and out. Allow at least 25 cm between the centre of the steering wheel and the chest.

Always make seat adjustments before driving.

Once a seat is adjusted correctly, rock it back and forth to make sure it is locked in position.


■ Adjusting the Seat Positions

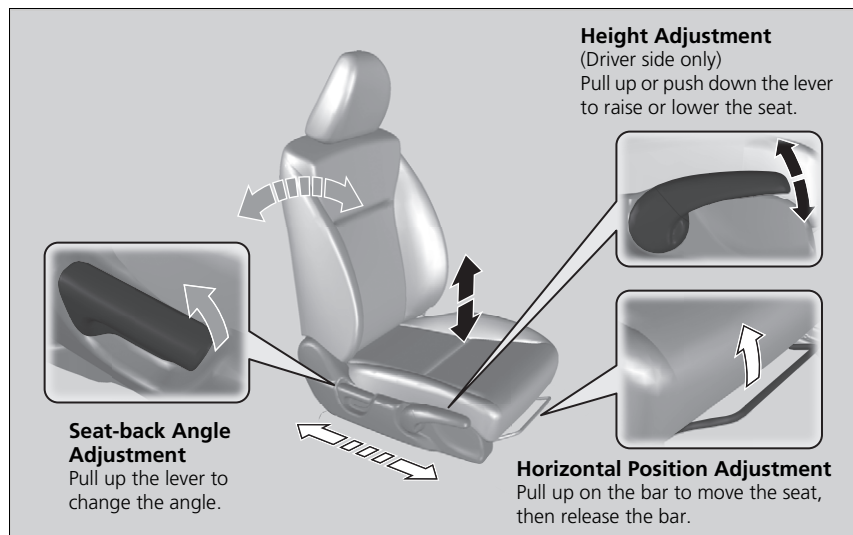

► Adjusting the Seat Positions

Once a seat is adjusted correctly, rock it back and forth to make sure it is locked in position.

■ Adjusting the Seat-Backs

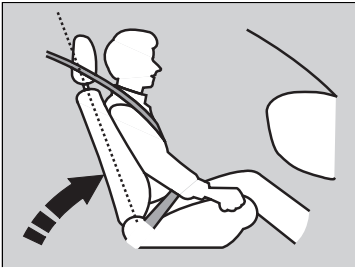

Adjust the driver's seat-back to a comfortable, upright position, leaving ample space between your chest and the airbag cover in the centre of the steering wheel.

The front seat passenger should also adjust their seat-back to a comfortable, upright position.

Reclining a seat-back so that the shoulder part of the belt no longer rests against the occupant's chest reduces the protective capability of the belt. It also increases the chance of sliding under the belt in a crash and being seriously injured. The farther a seat-back is reclined, the greater the risk of injury.

►► Adjusting the Seat-Backs

⚠ WARNING

Reclining the seat-back too far can result in serious injury or death in a crash.

Adjust the seat-back to an upright position, and sit well back in the seat.

Do not put a cushion, or other object, between the seat-back and your back.


Doing so may interfere with proper seat belt or airbag operation.

If you cannot get far enough away from the steering wheel and still reach the controls, we recommend that you investigate whether some type of adaptive equipment may help.


Head Restraints

Your vehicle is equipped with head restraints in both front seating positions. Rear seat also has head restraints on outer and centre seating positions.

■ Adjusting the Front Head Restraints

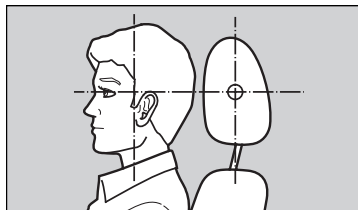

Position head in the centre of the head restraint.

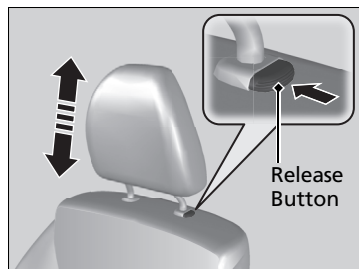

Head restraints are most effective for protection against whiplash and other rear-impact crash injuries when the centre of the back of the occupant's head rests against the centre of the restraint. The tops of the occupant's ears should be level with the centre height of the restraint.

To raise the head restraint:

Pull it upward.

To lower the head restraint:

Push it down while pressing the release button.

► Adjusting the Front Head Restraints

⚠ WARNING


Improperly positioning head restraints reduces their effectiveness and increases the likelihood of serious injury in a crash.

Make sure head restraints are in place and positioned properly before driving.

For a head restraint system to work properly:

- Do not hang any items on the head restraints, or from the restraint legs.
- Do not place any object between an occupant and the seat-back.
- Install each restraint in its proper location.

■ Changing the Rear Seat Head Restraint Position

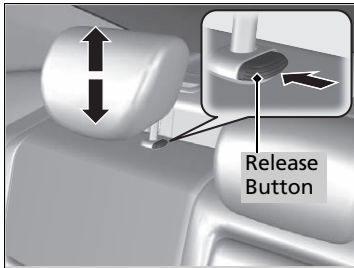

A passenger sitting in the outer seating position should adjust the height of their head restraint to an appropriate position before the vehicle begins moving.

To raise the head restraint:

Pull it upward.

To lower the head restraint:

Push it down while pressing the release button.

■ Removing and Reinstalling the Head Restraints

Head restraints can be removed for cleaning or repair.

To remove the head restraint:

Pull the restraint up as far as it will go. Then push the release button, and pull the restraint up and out.

To reinstall the head restraint:

Insert the legs back in place, then adjust the head restraint to an appropriate height while pressing the release button. Pull up on the restraint to make sure it is locked in position.

✎ Removing and Reinstalling the Head Restraints

⚠ WARNING

Failure to reinstall, or correctly reinstall, the head restraints can result in severe injury during a crash.

Always replace the head restraints before driving.

Maintain a Proper Sitting Position

After all occupants have adjusted their seats and head restraints, and put on their seat belts, it is very important that they continue to sit upright, well back in their seats, with their feet on the floor, until the vehicle is safely parked and the power mode is off.

Sitting improperly can increase the chance of injury during a crash. For example, if an occupant slouches, lies down, turns sideways, sits forward, leans forward or sideways, or puts one or both feet up, the chance of injury during a crash is greatly increased.

In addition, an occupant who is out of position in the front seat can be seriously or fatally injured in a crash by striking interior parts of the vehicle or being struck by an inflating front airbag.

►► Maintain a Proper Sitting Position


WARNING

Sitting improperly or out of position can result in serious injury or death in a crash.


Always sit upright, well back in the seat, with your feet on the floor.

Rear Seats


Folding Down the Rear Seats

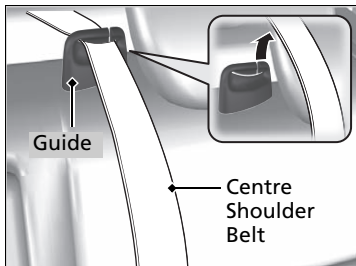

1. Remove the centre shoulder belt from the guide.

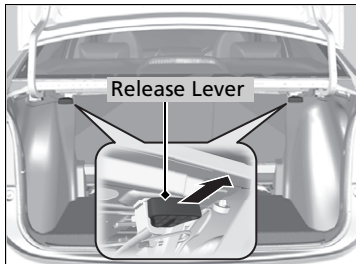

2. Pull the release lever in the boot to release the lock.

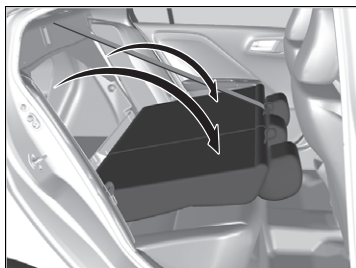

3. Fold the seat-back down.

If the rear head restraints get caught on the front seat-backs, remove the head restraints.

❏ **Removing and Reinstalling the Head Restraints** P. 155

❏ Folding Down the Rear Seats

⚠ WARNING

Make sure the seat-backs are latched securely before driving.

The rear seat-backs can be folded down to accommodate bulkier items in the boot.

Never drive with the seat-back folded down and the boot lid open.

❏ **Exhaust Gas Hazard** P. 71


To lock the seat-back upright, push it backwards until it locks.

When returning the seat-back to its original position, push it firmly back. Also, make sure all rear shoulder belts are positioned in front of the seat-back, and the centre shoulder belt is re-positioned in the guide.

Make sure all items in the boot or items extending through the opening into the rear seats are properly secured. Loose items can fly forward if you have to brake hard.


Armrest

■ Using the Front Seat Armrest

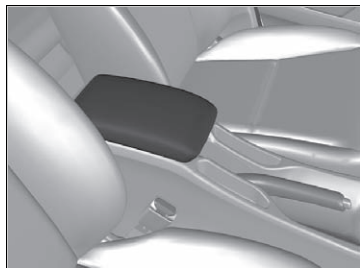

The console lid can be used as an armrest.


■ Using the Rear Seat Armrest

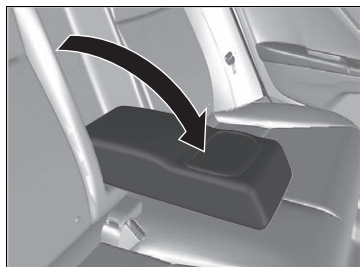

Pull down the armrest in the centre seat-back.

Interior Lights

Interior Light Switch

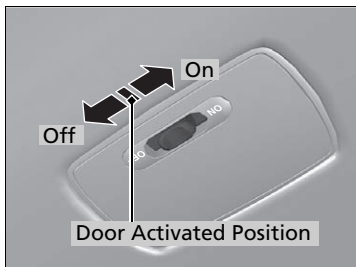

■ ON

The interior light comes on regardless of whether the doors are open or closed.

■ Door activated

The interior light comes on in the following situations:

- When any of the doors are opened.
- You unlock the driver's door.
- When you set the power mode to VEHICLE OFF (LOCK).

■ OFF

The interior light remains off regardless of whether the doors are open or closed.

Interior Light Switch

In the door activated position, the interior light fades out and goes off about 30 seconds after the doors are closed.

The light goes off after about 30 seconds in the following situations:

- When you unlock the driver's door but do not open it.
- When you set the power mode to VEHICLE OFF (LOCK), but do not open a door.

You can change the interior lights dimming time.

➔ **Customized Features** P. 108


The interior light goes off immediately in the following situations:

- When you lock the driver's door.
- When you close the driver's door in ACCESSORY mode.
- When you set the power mode to ON.

If you leave any of the doors open in VEHICLE OFF (LOCK) mode, the interior light goes off after about 15 minutes.

When the interior light switch is in ON, if you close the all doors in VEHICLE OFF (LOCK) mode, the interior lights go off after about 30 minutes. However, when the 12-volt battery is weakened, the interior lights go off after about 30 minutes if any door is open.


■ Map Lights

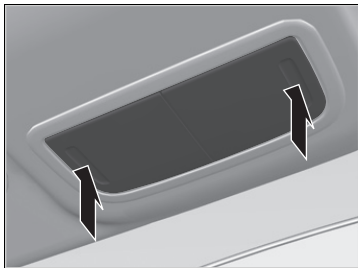

The map lights can be turned on and off by pressing the lenses.


Interior Convenience Items

■ Glove Box

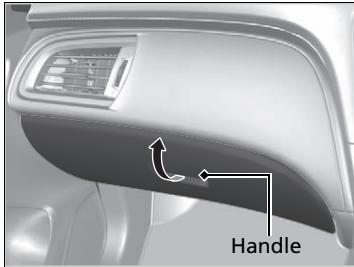

Pull the handle to open the glove box.

■ Console Compartment

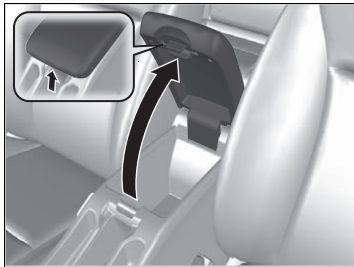

Pull the handle to open the console compartment.

» Glove Box

⚠ WARNING


An open glove box can cause serious injury to your passenger in a crash, even if the passenger is wearing the seat belt.

Always keep the glove box closed while driving.

■ Beverage Holders




■ Front seat beverage holders

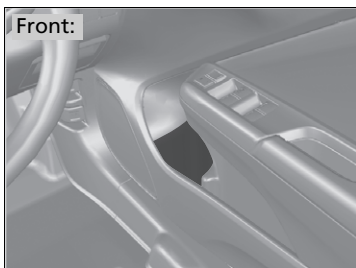

Front:

■ Door pocket beverage holders

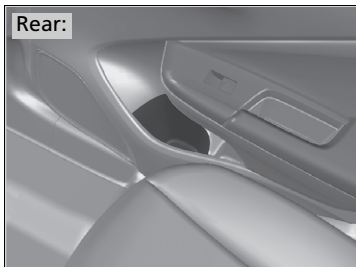


Rear:

►► Beverage Holders

NOTICE

Spilled liquids damage the upholstery, carpeting, and electrical components in the interior.

Be careful when you are using the beverage holders. Hot liquid can scald you.

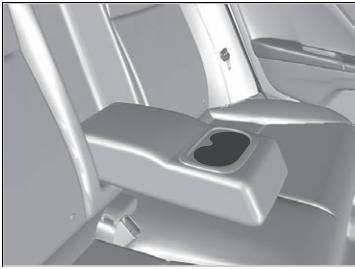


■ **Rear seat beverage holders**

Fold the armrest down to use the rear seat beverage holders.


■ Accessory Power Sockets

The accessory power sockets can be used when the power mode is in ACCESSORY or ON.

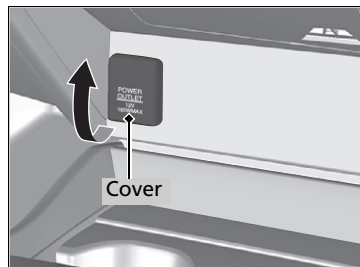

■ Accessory power socket on the console panel

Open the cover to use it.

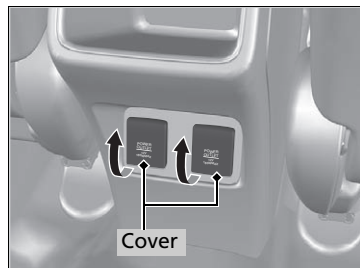

■ Accessory power sockets in the console compartment

Open the cover to use it.

►► Accessory Power Sockets

NOTICE


Do not insert an automotive type cigarette lighter element:

The power socket can overheat.

The accessory power sockets are designed to supply power for 12-volt DC accessories that are rated 180 watts or less (15 amps).

To prevent 12-volt battery drain, use the power socket with the power system on.


■ Driver's Pocket

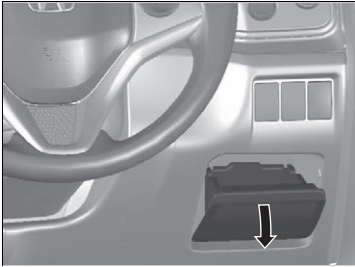


Pull the lid to open the pocket.

Using Automatic Climate Control

The automatic climate control system maintains the interior temperature you select. The system also selects the proper mix of heated or cooled air that raises or lowers the interior temperature to your preference as quickly as possible.

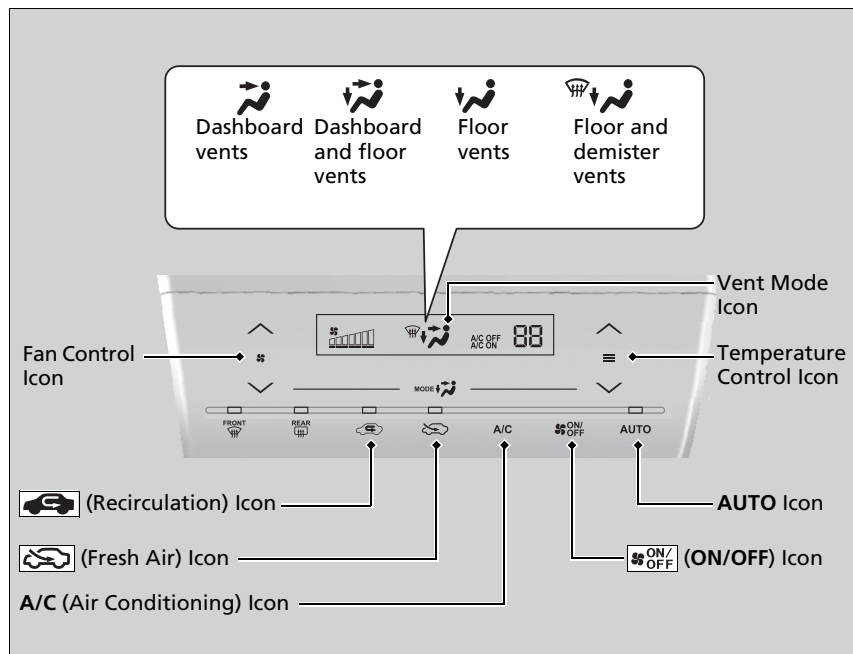

Use the system when the power system is on.

1. Select the **AUTO** icon.
2. Adjust the interior temperature using the temperature control icon.
3. Select the  (ON/OFF) icon to cancel.

Using Automatic Climate Control

If any icons are selected while using the climate control system in auto, the function of the icon that was selected will take priority.



The **AUTO** indicator will go off, but functions unrelated to the icon that was selected will be controlled automatically.

To prevent cold air from blowing in from outside, the fan may not start immediately when the **AUTO** icon is selected.

If the interior is very warm, you can cool it down more rapidly by partially opening the windows, turning the system on **AUTO**, and setting the temperature to low. Change the fresh air mode to recirculation mode until the temperature cools down.

When you set the temperature to the lower or upper limit, **Lo** or **Hi** is displayed.


■ Switching between the recirculation and fresh air modes

Select the  (Recirculation) icon or  (Fresh air) icon and switch the mode depending on environmental conditions.


Recirculation mode: Recirculates air from the vehicle's interior through the system.

Fresh air mode: Maintains outside ventilation. Keep the system in fresh air mode in normal situations.

☒ Using Automatic Climate Control


Selecting the  icon switches the climate control system between on and off. The system selects your last selection.

You can raise or lower the temperature or fan speed setting flicking either control icon.

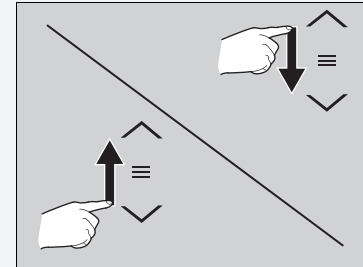


While ECON mode is active, the climate control system may have reduced cooling performance.

■ Defrosting the Windscreen and Windows

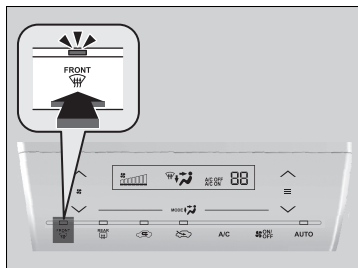

Selecting the  icon turns the air conditioning system on.

■ To rapidly defrost or defog the windows

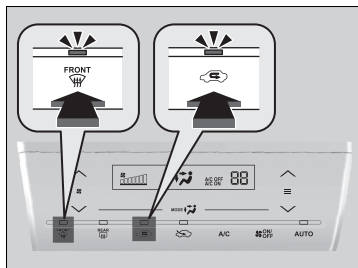

1. Select the  icon.
2. Select the  icon.

►► Defrosting the Windscreen and Windows

For your safety, make sure you have a clear view through all the windows before driving.

Do not set the temperature near the upper or lower limit.

When cold air hits the windscreen, the outside of the windscreen may fog up.

If the side windows fog up, adjust the vents so that the air hits the side windows.


►► To rapidly defrost or defog the windows

After defrosting or defogging the windows, switch over to fresh air mode.



If you keep the system in recirculation mode, the windows may fog up from humidity. This impedes visibility.


■ Turning the touch screen beep on and off

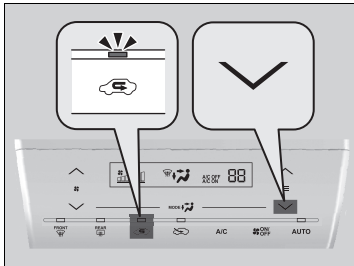You can select whether to sound a beep every time you operate the climate control using the touch screen.





To turn off the beep:

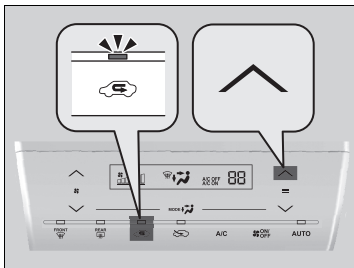1. Set the power mode to ON.
2. Touch the ▼ of the temperature control icon five times while pressing and holding the .
3. Release the , after -- blinks five times and **OF** is displayed.



To turn on the beep:


1. Set the power mode to ON.
2. Touch the ▲ of the temperature control icon five times while pressing and holding the .
3. Release the , after **OF** blinks five times and -- is displayed.

▣ Turning the touch screen beep on and off

Do not press any other icon while changing the beep setting. If you cannot turn on or off the setting after going through the procedure, set the power mode to VEHICLE OFF (LOCK), then go over again.

■ Touch Panel Sensitivity Setting

You can set the level of sensitivity of the touch control panel to high, normal, or low.

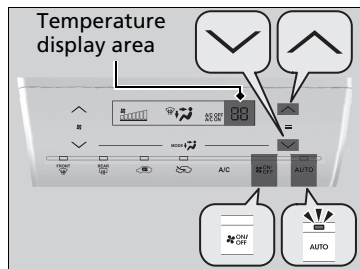


1. Set the power mode to ON.
2. Press and hold the **AUTO** icon, then press any of the following icons five times to set the level.
 - : High (**Hi**)*¹
 - Previous setting blinks five times and **Hi** will be displayed in the temperature display area.
 - : Normal (**--**)
 - Previous setting blinks five times and **--** will be displayed in the temperature display area.
 - : Low (**Lo**)
 - Previous setting blinks five times and **Lo** will be displayed in the temperature display area.
3. Release the **AUTO** icon.

►► Touch Panel Sensitivity Setting


If you touch any other icons during this procedure, the setting may fail. In this case, once you set the power mode to VEHICLE OFF (LOCK), then follow this procedure again.

*1: Default Setting

Automatic Climate Control Sensors

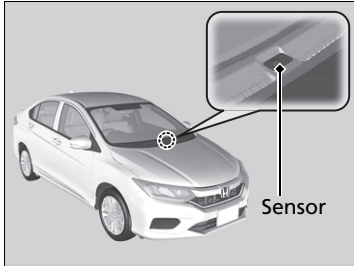

The automatic climate control system is equipped with sensors. Do not cover or spill any liquid on them.

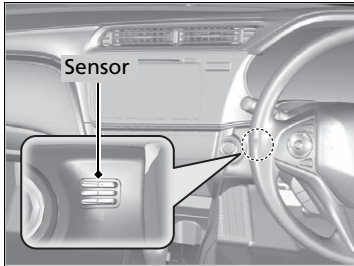

Features

This vehicle is not equipped with an audio system.
Consult a dealer for available audio system information.





Driving

This chapter discusses driving, refueling, and information on items such as accessories.

Before Driving

Driving Preparation	176
Load Limit	179

Towing a Trailer..... 180

When Driving

Turning on the Power	181
Precautions While Driving.....	184
Dual Clutch Transmission	185
Shifting	186
ECON Button	193
S Mode	194
Acoustic Vehicle Alerting System.....	195
Cruise Control	196
Vehicle Stability Assist (VSA) System	199

High Voltage Battery.....	201
Adjusting Headlight Distribution.....	202

Braking

Brake System	203
Anti-lock Brake System (ABS)	205
Brake Assist System.....	206
Emergency Stop Signal.....	207

Parking Your Vehicle

When Stopped.....	208
Parking Sensor System	209

Refueling

Fuel Information	211
How to Refuel.....	212

Fuel Economy and CO₂ Emissions

Improving Fuel Economy and Reducing CO ₂ Emissions.....	213
---	-----

Driving Preparation

Check the following items before you start driving.

Exterior Checks

- Make sure there are no obstructions on the windows, door mirrors, exterior lights, or other parts of the vehicle.
 - ▶ Remove any frost, snow, or ice.
 - ▶ Remove any snow on the roof, as this can slip down and obstruct your field of vision while driving. If frozen solid, remove ice once it has softened.
 - ▶ When removing ice from around the wheels, be sure not to damage the wheel or wheel components.
- Make sure the bonnet is securely closed.
 - ▶ If the bonnet opens while driving, your front view will be blocked.
- Make sure the tyres are in good condition.
 - ▶ Check air pressures, and check for damage and excessive wear.
- **☒ Checking and Maintaining Tyres** P. 245
- Make sure there are no people or objects behind or around the vehicle.
 - ▶ There are blind spots from the inside.

Exterior Checks

NOTICE

When doors are frozen shut, use warm water around the door edges to melt any ice. Do not try to force them open, as this can damage the rubber trim around the doors. When done, wipe dry to avoid further freezing.

Do not pour warm water into the key cylinder. You will be unable to insert the key if the water freezes in the hole.

Heat from the engine and exhaust can ignite flammable materials left under the bonnet, causing a fire. If you've parked your vehicle for an extended period, inspect and remove any debris that may have collected, such as dried grass and leaves that have fallen or have been carried in for use as a nest by a small animal. Also check under the bonnet for leftover flammable materials after you or someone else has performed maintenance on your vehicle.

Interior Checks

- Store or secure all items on board properly.
 - Carrying too much luggage, or improperly storing it, can affect your vehicle's handling, stability, stopping distance, and tyres, and make it unsafe.
 - ✎ **Load Limit** P. 179
- Do not pile items higher than the seat height.
 - They can block your view and may be thrown forward in the event of sudden braking.
- Do not place anything in the front seat footwells. Make sure to secure the floor mat.
 - An object or unsecured floor mat can interfere with your brake and accelerator pedal operation while driving.
- If you have any animals on board, do not let them move around in the vehicle.
 - They may interfere with driving and a crash could occur.
- Securely close all doors and the boot.
- Adjust your seating position properly.
 - Adjust the head restraint, too.
 - ✎ **Adjusting the Seats** P. 151
 - ✎ **Adjusting the Front Head Restraints** P. 154
- Adjust the mirrors and steering wheel properly for your driving.
 - Adjust them while sitting in the proper driving position.
 - ✎ **Adjusting the Mirrors** P. 148
 - ✎ **Adjusting the Steering Wheel** P. 147

Interior Checks

The headlight aim is set by the factory, and does not need to be adjusted. However, if you regularly carry heavy items in the boot, have the aiming readjusted at a dealer or by a qualified technician.

You can adjust the low beam headlight angle by your self.

✎ **Headlight Adjuster** P. 143

- Be sure items placed on the floor behind the front seats cannot roll under the seats.
 - They can interfere with the driver's ability to operate the pedals, or the operation of the seats.
- Everyone in the vehicle must fasten their seat belt.
 - 📖 **Fastening a Seat Belt** P. 38
- Make sure that the indicators in the instrument panel come on when you start the vehicle, and go off soon after.
 - Always have a dealer check the vehicle if a problem is indicated.
 - 📖 **Indicators** P. 74

Load Limit

When you load luggage, the total weight of the vehicle, all passengers, and luggage must not exceed the maximum permissible weight.

📖 **Specifications** P. 300

Load Limit

WARNING


Overloading or improper loading can affect handling and stability and cause a crash in which you can be hurt or killed.

Follow all load limits and other loading guidelines in this manual.


Towing a Trailer

Your vehicle is not designed to tow a trailer. Attempting to do so can void your warranties.

Turning on the Power

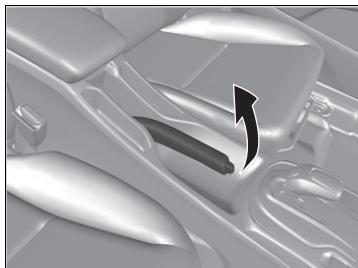

1. Make sure the parking brake is applied.

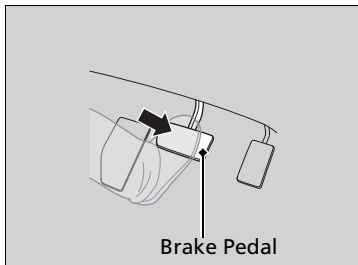

2. Depress the brake pedal.

Turning on the Power

Keep your foot firmly on the brake pedal when starting the power system.

The engine is harder to start in cold weather and in thinner air found at altitudes above 2,400 metres.


When turning on the power in cold weather, turn off all electrical accessories such as the lights, climate control system, and rear demister in order to reduce 12-volt battery drain.

If the exhaust system sounds abnormal or you can smell exhaust gas inside the vehicle, have your vehicle checked by a dealer. There may be a problem with the engine or exhaust system.

The immobilizer system protects your vehicle from theft. If an improperly coded key (or other device) is used, the power system does not activate.

➤ **Immobilizer System** P. 131

When the power mode in ON, you may feel the brake pedal slightly sink down. This is normal.

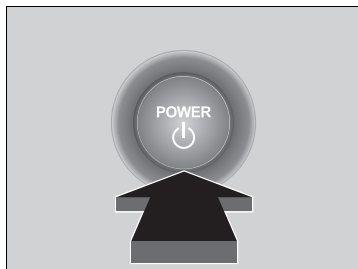

3. Press the **POWER** button without depressing the accelerator pedal.
 - ▶ The Ready To Drive message appears on the multi-information display.
 - ▶ If the High Voltage battery is fully charged, the petrol engine may not start.
 - ▶ If the High Voltage battery charge level is low, the petrol engine starts.

■ Stopping the Power System

You can turn the power system off when the vehicle is completely stopped.

1. Shift to **P**.
2. Press the **POWER** button.

▶▶ Turning on the Power

Bring the keyless remote close to the **POWER** button if the battery in the keyless remote is weak.

❏ **If the Keyless Remote Battery is Weak** P. 281

The power system may not start if the keyless remote is subjected to strong radio waves.

Do not hold the **POWER** button to start the power system.

If the power system does not start, wait at least 30 seconds before trying again.

The engine may not run when the vehicle is ready for driving.

You can start driving with the **READY** indicator on. If you press the **POWER** button while depressing the brake pedal with the **READY** indicator on, the power mode is set to VEHICLE OFF (LOCK) and you cannot start driving.

❏ **Indicators** P. 74

■ Starting to Drive

1. Keeping your right foot on the brake pedal, release the parking brake. Check that the parking brake and brake system indicator has gone off.

➡ **Parking Brake** P. 203

2. Put the shift lever in **[D]**. Select **[R]** when reversing.
3. Gradually release the brake pedal and gently depress the accelerator pedal to pull away.

■ Hill Start Assist System

Hill start assist keeps the brake engaged briefly to help to prevent the vehicle from rolling on inclines as you move your foot from the brake pedal to the accelerator.

Move the shift lever to **[D]** or **[S]** when facing uphill, or **[R]** when facing downhill, then release the brake pedal.

⌘ Hill Start Assist System

Hill start assist may not prevent the vehicle from rolling downhill on a very steep or slippery slope, and does not operate on small inclines.

Hill start assist is not a replacement for the parking brake.

As a hybrid vehicle, the sounds and vibrations from the engine may be absent even though the vehicle is ready for driving. It also makes you fail to recognize that you can start.

Make sure to check if the **READY** indicator is on before you start to drive.

Precautions While Driving

■ In a Fog

Visibility becomes low when it is foggy. When you drive, turn on the low beam headlights even during the daytime. Slow down, using the road line in the centre, guard rails, and the taillights of the vehicle ahead of you as your driving guide.

■ In a Strong Wind

If a strong side wind drifts your vehicle while driving, hold the steering wheel tight. Slowly decelerate your vehicle and keep your vehicle in the middle of the road. Be careful with wind gusts especially when your vehicle is exiting a tunnel, driving on a bridge or river bank, and driving through an open area like a quarry, and when a large truck is passing by.

■ In Rain

The road is slippery when raining. Avoid hard braking, rapid acceleration, and abrupt steering and be more cautious when driving. It is likely to experience hydroplaning phenomenon if you are driving on a rutted road with puddles. Do not drive in deep water and on flooded roads. This can damage the engine or driveline, or cause electrical component failure.

►► Precautions While Driving

CAUTION: Do not drive on the road where water is deep. Driving through deep water will cause damage to the engine and electrical equipment and the vehicle will break down.

NOTICE

Do not operate the shift lever while pressing the accelerator pedal. You could damage the transmission.

NOTICE

If you repeatedly turn the steering wheel at an extremely low speed, or hold the steering wheel in the full left or right position for a while, the electric power steering (EPS) system heats up. The system goes into a protective mode, and limits its performance. The steering wheel becomes harder and harder to operate. Once the system cools down, the EPS system is restored. Repeated operation under these conditions can eventually damage the system.

If the power mode is set to ACCESSORY while driving, the power system will shut down and all steering and brake power assist functions will stop, making it difficult to control the vehicle.

Do not put the shift lever in **[N]**, as you will lose engine braking (and acceleration) performance.

■ Other Precautions

If there is a strong impact with something under the vehicle, stop in a safe location. Check the underside of the vehicle for damage or any fluid leaks.

Dual Clutch Transmission

■ Creeping

As with a conventional petrol-powered vehicle with an automatic transmission, this vehicle will creep.

Keep the brake pedal firmly depressed when stopped.

■ Kickdown

Quickly depressing the accelerator pedal while driving uphill may cause the transmission to drop to a lower gear, unexpectedly increasing vehicle speed. Depress the accelerator pedal carefully, especially on slippery roads and curves.

⌘ Precautions While Driving

During the first 1,000 km of operation, avoid sudden acceleration or full throttle operation so as not to damage the engine or powertrain.

Avoid hard braking for the first 300 km. You should also follow this when the brake pads are replaced.

⌘ In Rain

Be careful when hydroplaning phenomenon occurs. When you drive on a road covered with water at excessive speed, a layer of water builds between the tyres and the road surface. If this occurs, the vehicle cannot respond to control inputs such as steering, and braking.

Slowly decelerate when you shift down. If the road is slippery, sudden engine braking can cause the tyres to skid.

⌘ Creeping

When you are stopped on an upward slope, the vehicle may roll back, as the gravitational force acting on the vehicle may be greater than the forward force acting upon it through the effect known as creeping. Depress the brake pedal and apply the parking brake.

Shifting

Change the shift position in accordance with your driving needs.

■ Shift lever positions

P

Park

Used when parking or turning the power on or off.

R

Reverse

Used when reversing

N

Neutral

Propulsion power is not transmitted to wheels.

D

Drive

Used:

- For normal driving
- When temporarily driving in the sequential mode
- When driving in the sequential mode (when driving in **S** mode)

L

Low

Used:

- To further increase engine braking
- When going up or down hills



►► Shifting

You hear the beep when the shift lever is in **R**.

When the vehicle is in reverse, the speed of the vehicle may be limited to prevent damage to the transmission.

While the High Voltage battery level is full, or the High Voltage battery temperature is low, regenerative braking may become less effective.


To prevent malfunction and unintended engagement:

- Do not spill any liquids on or around shift lever.
- Do not place or drop any objects on or around shift lever.
- Do not let passengers or children operate the shift lever.

You may occasionally find that it takes longer than usual for the vehicle to start moving when you select **R**, release the brake pedal, and/or depress the accelerator pedal. This may occur when the High Voltage battery level is extremely low, and does not indicate a vehicle malfunction.


When shifting positions in extremely low temperatures (-30°C), there may be a short delay before the shift position is displayed. Always confirm you are in the correct shift position before driving.

■ **P** (parking) button

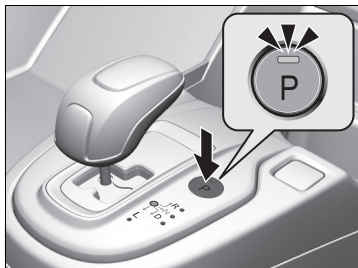

The gear position changes to **P** when you press the **P** button while the vehicle is parked with the power mode in ON. The indicators on the sides of the **P** button come on.

■ Shift Lever Operation

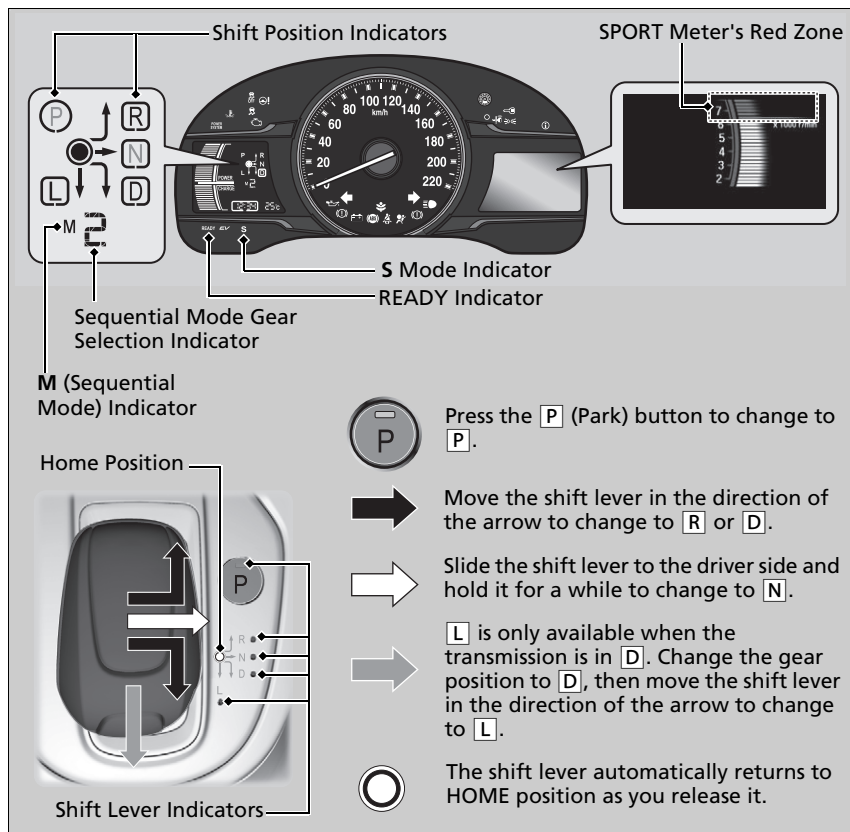

▶▶ Shift Lever Operation

NOTICE

When you change **D** to **R** and vice versa, come to a complete stop and keep the brake pedal depressed. Operating the shift lever before the vehicle has come to a complete standstill can damage the transmission.

Use the shift lever indicators and shift position indicators to check the gear position before moving the shift lever.

If the indicator of the currently selected shift position, or all the shift position indicators are blinking simultaneously, there is a problem with the transmission.

Avoid sudden acceleration and have the transmission checked by a dealer as soon as possible.

The fuel supply may be cut off if you drive at engine speeds in or over the SPORT meter's red zone (engine speed limit). If this happens, you may experience a slight jolt.

■ When opening the driver's door

If you open the driver's door under the following conditions, the gear position automatically changes to **P**.

- The vehicle is in stationary with the power mode in ON, or moving at 2 km/h or slower.
- The transmission is in other than **P**.
- You have unfastened the driver side seat belt.

■ When turning off the power mode

If you turn the power system off while the vehicle is stationary, and the transmission is in other than **P**, the gear position automatically changes to **P**.

■ If you want to keep the **N** position in ACCESSORY

Press the **POWER** button within five seconds after you change to **N**. The power mode changes to ACCESSORY.

- ▶ This puts the vehicle in car wash mode which must be used when your vehicle is pulled through a conveyor type automatic car wash where you or an attendant do not remain in the vehicle.
- ▶ The gear position remains in **N** with the power mode in ACCESSORY for 15 minutes, then, it automatically changes to **P** and the power mode changes to OFF.

⌘ When opening the driver's door

While the system is designed to automatically change the gear position to **P** under the described conditions, in the interest of safety you should always select **P** before opening the driver's door. Make sure to park the vehicle in a safe place.

⚡ When Stopped P. 208

If you want to drive the vehicle after the gear position has automatically changed to **P** under the described conditions, close the door, fasten the seat belt, depress the brake pedal, then change the gear position.

If you leave the vehicle, turn off the power system and lock the doors.

⌘ When turning off the power mode

If you want to start the vehicle after the gear position automatically changes to **P**, close the door first. Manually select the shift lever to start the vehicle.

⌘ If you want to keep the **N** position in ACCESSORY

Manually changing to **P** cancels ACCESSORY mode. The **P** indicator comes on and the power mode changes to OFF.

■ Restriction on selecting a gear position

You cannot select a gear position under certain circumstances that may lead to a crash.

When the transmission is in:	1. Under the circumstances of that:	2. You cannot select:	3. The gear position remains in/changes to:	How to change the gear position		
P	The brake pedal is not depressed.	Other gear position	P	Release the accelerator pedal and depress the brake pedal.		
	The accelerator pedal is depressed.					
N	The vehicle is moving at low speed without the brake pedal depressed.		N		N	Park your vehicle in a safe place.
	The vehicle is moving at low speed with the accelerator pedal depressed.					
N , D or L	R	N		Select D , then L		
R or N	D					
R , N , D or L	The vehicle is moving.	You press the P button.		P or N	Make sure that the READY indicator comes on.	
R	–	L				
P or N	–	A gear position other than P or N	P or N			
	The READY indicator is not on.					

Sequential Mode

Use the paddle shifters to change between 1st and 7th gears without removing your hands from the steering wheel. The transmission will switch to the sequential mode.

■ When the transmission is in **[D]**:

The vehicle will go into the sequential mode momentarily, and the sequential mode gear selection indicator will come on.

Once you start traveling at a constant speed, the sequential mode will automatically switch off, and the sequential mode gear selection indicator will go off.

Hold the **[+]** paddle shifter for two seconds to return to normal drive.

■ When the transmission is in **[D]** with **S** mode:

The vehicle will go into the sequential mode, and the **M** (sequential mode) indicator and sequential mode gear selection indicator will come on.

If the vehicle speed increases and the engine speed reaches near the tachometer's red zone, the transmission automatically shifts up to 7th.

You can cancel this mode by pressing **S** button, or pulling the **[+]** paddle shifter for a few seconds. When the sequential mode is cancelled, the sequential mode indicator and sequential mode gear selection indicator go off.


Sequential Mode

The vehicle is engine operated when **S** mode is on.

In the following cases, the sequential mode may automatically cancel:

- When there is a possibility that the transmission may damage.
- When the High Voltage battery state of charge is low.
- When the tyres lock up on slippery road surfaces in sequential mode.

■ Sequential Shift Mode Operation

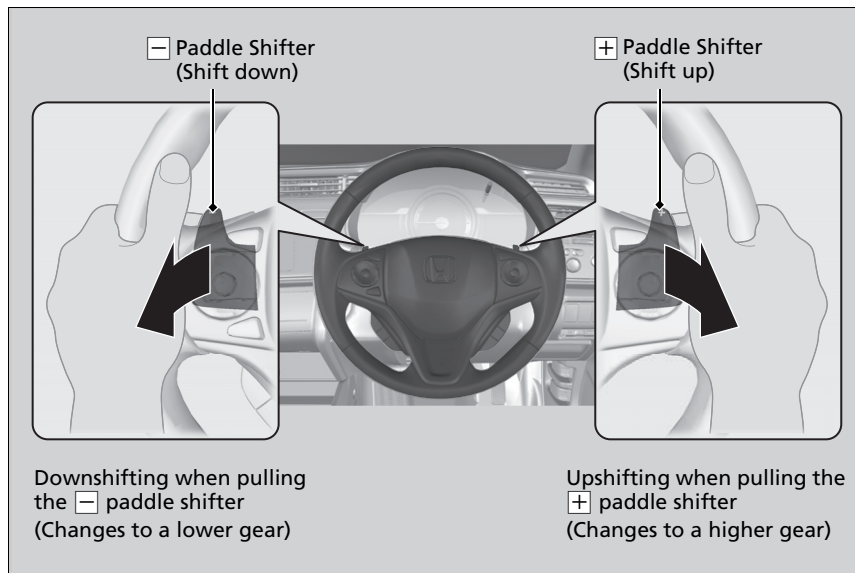

» Sequential Shift Mode Operation

Each paddle shift operation makes a single gear change.

To change gears continuously, release the paddle shifter before pulling it again for the next gear.

If the sequential mode gear selection indicator blinks when you try to shift up or down, this means your vehicle speed is not in its allowable gear shifting range.

Slightly accelerate to shift up and decelerate to shift down while the indicator is blinking.

ECON Button




The **ECON** button turns the ECON mode on and off.
The ECON mode helps you improve your fuel economy by adjusting the performance of the engine, transmission and climate control system.

⌘ ECON Button

While in ECON mode, the climate control system has greater temperature fluctuations.

S Mode

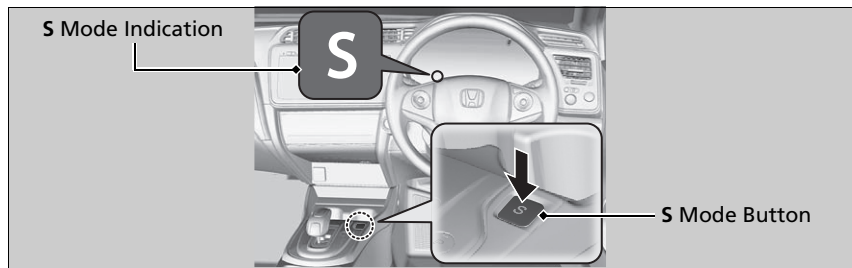

To turn the **S** mode on and off, press the **S** mode button.

The **S** mode increases engine performance.


This mode is suitable for driving on hills or through curves on mountain roads.

The **S** mode is turned off every time you start the power system, even if you turned it on the last time you drove the vehicle.

Acoustic Vehicle Alerting System

Alerts pedestrians when a vehicle is propelled solely by electricity, approaching at speeds around 20 km/h or less.

■ Acoustic Vehicle Alerting System OFF Button

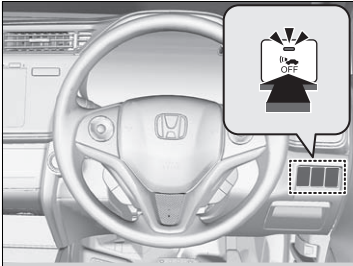

Press the button to turn the system on and off.

- ▶ The indicator in the button comes on when the system is off.

▣ Acoustic Vehicle Alerting System

The system is turned on every time you turn the power system on, even if you turned it off the last time you drove the vehicle.

Do not use the pause function of the Acoustic Vehicle Alerting System unless you are sure that no pedestrians are in the vicinity of your vehicle and you are certain that it is not necessary to emit a warning sound in the surrounding area.

Cruise Control

Maintains a constant vehicle speed without having to keep your foot on the accelerator. Use cruise control on motorways or open roads where you can travel at a constant speed with little acceleration or deceleration.

When to use

- Vehicle speed for cruise control:
Desired speed in a range above
roughly 40 km/h ~


Always keep sufficient distance
between you and the vehicle in
front of you

- Shift positions for cruise control:
In **D** or **S**



How to use

- Press the **CRUISE** button
on the steering wheel.

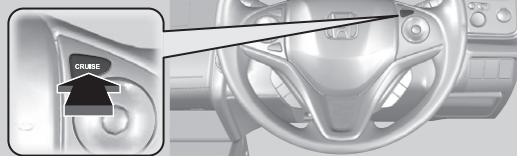

⌘ Cruise Control

⚠ WARNING

Improper use of the cruise control can lead to a crash.


Use the cruise control only when travelling on open motorways in good weather.

It may not be possible to maintain a constant speed when driving uphill or downhill.

When not using cruise control:
Turn off cruise control by pressing the **CRUISE** button.

While in ECON mode, it may take relatively more time to accelerate to maintain the set speed.

■ To Set the Vehicle Speed

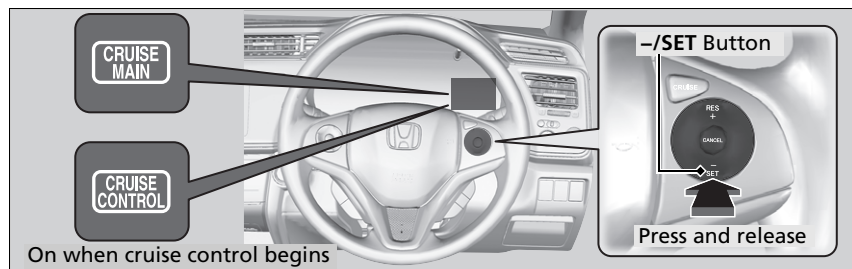


Take your foot off the pedal and press the **-/SET** button when you reach the desired speed.

The moment you release the **-/SET** button, the set speed is fixed, and cruise control begins. **CRUISE CONTROL** appears on the multi-information display.


■ To Adjust the Vehicle Speed

Increase or decrease the vehicle speed using the **RES/+** or **-/SET** button on the steering wheel.

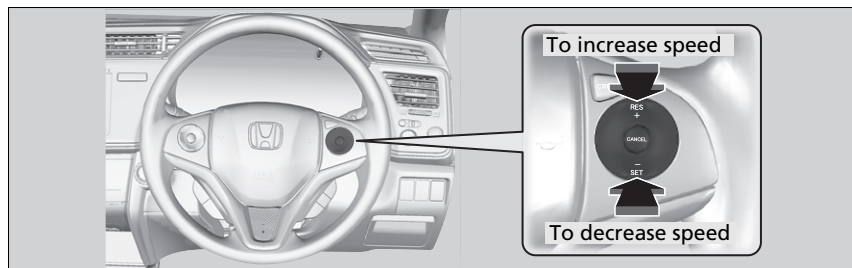

- Each time you press the button, the vehicle speed is increased or decreased by about 1.6 km/h.
- If you keep the button pressed, the vehicle speed increases or decreases until you release it. This speed is then set.

■ To Cancel

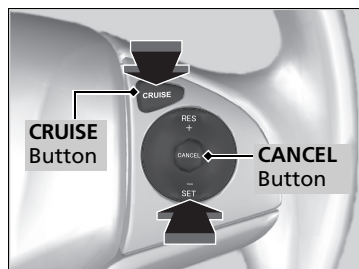

To cancel cruise control, do any of the following:

- Press the **CANCEL** button.
- Press the **CRUISE** button.
- Depress the brake pedal.

The **CRUISE CONTROL** indicator goes off.

▶▶ To Adjust the Vehicle Speed

You can set the vehicle speed using the **-/SET** button on the steering wheel when adjusting the speed with the accelerator and brake pedals.

▶▶ To Cancel

Resuming the prior set speed:

After cruise control has been cancelled, you can still resume the prior set speed by pressing the **RES/+** button while driving at a speed of at least 40 km/h or more.

You cannot set or resume in the following situations:


- When vehicle speed is less than 40 km/h
- When the **CRUISE** button is turned off

At vehicle speeds of 35 km/h or less, cruise control is cancelled automatically.

Vehicle Stability Assist (VSA) System

VSA helps to stabilise the vehicle during cornering if the vehicle turns more or less than what was intended. It also assists in maintaining traction on slippery surfaces. It does so by regulating engine and motor output and selectively applying the brakes.

VSA Operation

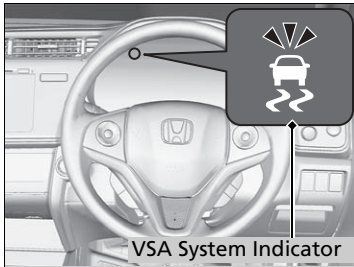

When VSA activates, you may notice that the engine does not respond to the accelerator. You may also notice some noise from the hydraulic system. You will also see the indicator blink.

Vehicle Stability Assist (VSA) System


The VSA may not function properly if tyre type and size are mixed. Make sure to use the same size and type of tyre, and the air pressures as specified.

When the VSA system indicator comes on and stays on while driving, there may be a problem with the system. While this may not interfere with normal driving, have your vehicle checked by a dealer immediately.

VSA cannot enhance stability in all driving situations and does not control the entire braking system. You still need to drive and corner at speeds appropriate for the conditions and always leave a sufficient margin of safety.


The Main function of the VSA system is generally known as Electronic Stability Control (ESC). The system also includes a traction control function.

■ VSA On and Off

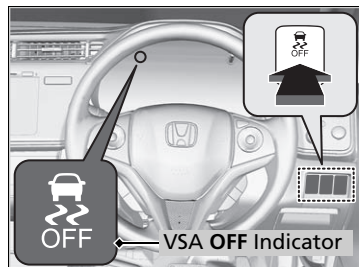

This button is on the driver side control panel. To partially disable VSA functionality/features, press and hold it until you hear a beep.


Your vehicle will have normal braking and cornering ability, but traction control function will be less effective.

To restore VSA functionality/features, press the  (VSA **OFF**) button until you hear a beep.

VSA is turned on every time you turn the power system on, even if you turned it off the last time you drove the vehicle.

► Vehicle Stability Assist (VSA) System

In certain unusual conditions when your vehicle gets stuck in shallow mud or fresh snow, it may be easier to free it with the VSA temporarily switched off.

When the  (VSA **OFF**) button is pressed, the traction control function becomes less effective. This allows for the wheels to spin more freely at low speed. You should only attempt to free your vehicle with the VSA off if you are not able to free it when the VSA is on.

Immediately after freeing your vehicle, be sure to switch VSA on again. We do not recommend driving your vehicle with the VSA system switched off.

You may hear a motor sound coming from the engine compartment while system checks are being performed immediately after turning the power system on or while driving. This is normal.

High Voltage Battery

The High Voltage battery gradually discharges when the vehicle is not in use.

As a result, if your vehicle is parked for an extended period of time, the battery level may get low.


Keeping your vehicle's battery level low can shorten the battery life.

To maintain the battery, drive your vehicle for more than 30 minutes to recharge the battery at least once every three months.

To help to maintain the battery life, when parking under the direct sunlight during summer, try find a shaded area.

Adjusting Headlight Distribution

Driving the right-hand type vehicle in right-hand traffic, or the left-hand type vehicle in left-hand traffic causes headlight glare to oncoming vehicles. You need to alter the headlight beam distribution using masking tape.

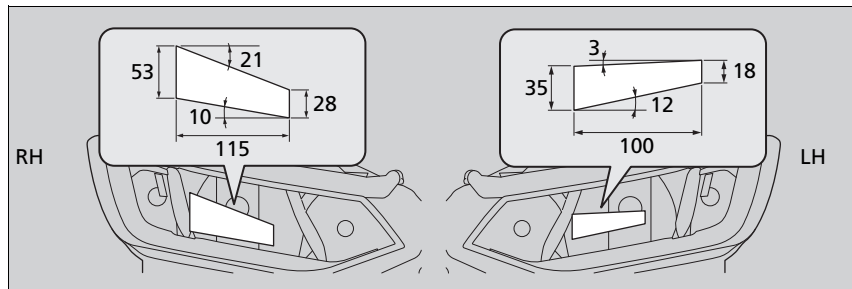

1. Prepare for two pieces of masking tape as shown.
 - Use masking tape that can shut out light, such as seal type waterproof vinyl.
2. Affix the tape to the lens as shown.


Adjusting Headlight Distribution

Be careful not to adhere the tape to an incorrect location. If the headlight beam is distributed incorrectly, it may not comply with your country's legal requirements. Ask your dealer for details.

Brake System


Parking Brake

Use the parking brake to keep the vehicle stationary when parking.

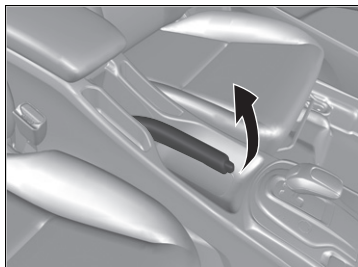

To apply:

Pull the lever fully up without pressing the release button.

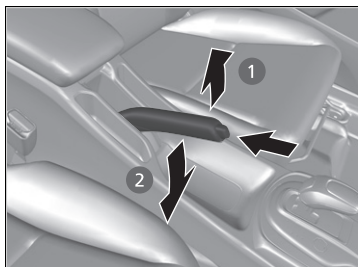

To release:

1. Pull the lever slightly, and press and hold the release button.
2. Lower the lever down all the way, then release the button.

Brake System

When you depress the brake pedal, you may hear a whirling sound from the engine compartment. This is because the brake system is in operation, and it is normal.

Parking Brake

NOTICE

Release the parking brake fully before driving. The rear brakes and axle can be damaged if you drive with the parking brake applied.

If you start driving without fully releasing the parking brake, a buzzer sounds as a warning, and **Release Parking Brake** appears on the multi-information display.

Always apply the parking brake when parking.

■ Foot Brake

Your vehicle is equipped with disc brakes at the front, and drum brakes in the rear wheels. The brake assist system increases the stopping force when you depress the brake pedal hard in an emergency situation. The anti-lock brake system (ABS) helps you retain steering control when braking very hard.

🔧 **Anti-lock Brake System (ABS)** P. 205

🔧 Foot Brake

Check the brakes after driving through deep water, or if there is a buildup of road surface water. If necessary, dry the brakes by lightly depressing the pedal several times.

If you hear a continuous metallic friction sound when applying the brakes, the brake pads need to be replaced. Have the vehicle checked by a dealer.

Constantly using the brake pedal while going down a long hill builds up heat, which reduces the brake effectiveness. Apply engine braking by taking your foot off the accelerator pedal and downshifting to a lower gear. With manual transmission use a lower gear for greater engine braking.

Do not rest your foot on the brake pedal while driving, as it will lightly apply the brakes and cause them to lose effectiveness over time and reduce pad life. It will also confuse drivers behind you.

Anti-lock Brake System (ABS)

■ ABS

Helps to prevent the wheels from locking up, and helps you to retain steering control by pumping the brakes rapidly, much faster than you.

The electronic brake distribution (EBD) system, which is part of the ABS, also balances the front-to-rear braking distribution according to vehicle loading.

You should never pump the brake pedal. Let the ABS work for you by always keeping firm, steady pressure on the brake pedal. This is sometimes referred to as “stomp and steer.”

■ ABS operation

The brake pedal may pulsate slightly when the ABS is working. Keep holding the pedal firmly down. On dry pavement, you will need to press on the brake pedal very hard before the ABS activates. However, you may feel the ABS activate immediately if you are trying to stop on snow or ice.

When the vehicle speed goes under 10 km/h, the ABS stops.

»» Anti-lock Brake System (ABS)

NOTICE

The ABS may not function correctly if you use a tyre of the wrong size or type.

If the **ABS** indicator comes on while driving, there may be a problem with the system. While normal braking will not be affected, there is a possibility that the ABS will not operating. Have your vehicle checked by a dealer immediately.

The ABS is not designed for the purpose of reducing the time or distance it takes for a vehicle to stop: It is designed to limit brake lockup which can lead to skidding and loss of steering control.

In the following cases, your vehicle may need more distance to stop than a vehicle without the ABS: You are driving on rough or uneven road surfaces, such as gravel or snow. The tyres are equipped with tyre chains.

You may hear a motor sound coming from the engine compartment while system checks are being performed immediately after turning the power system on or while driving. This is normal.

Brake Assist System

■ Brake Assist System

Is designed to assist the driver by generating greater braking force when you depress the brake pedal hard during emergency braking.

■ Brake assist system operation


Press the brake pedal firmly for more powerful braking.

When brake assist operates, the pedal may wiggle slightly and an operating noise may be heard. This is normal. Keep holding the brake pedal firmly down.

Emergency Stop Signal

Activates when you brake hard while driving at 60 km/h or above to alert drivers behind you about sudden braking by rapidly flashing hazard warning lights. This may help to alert drivers behind you to take appropriate means to avoid a possible collision with your vehicle.

■ When the system activates:

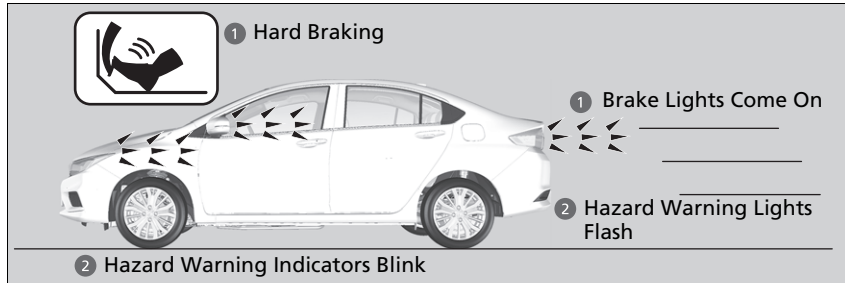

The hazard warning lights stop flashing when:

- You release the brake pedal.
- The ABS is deactivated.
- Your vehicle's decelerating speed becomes moderate.
- You press the hazard warning button.

⚠ Emergency Stop Signal

The emergency stop signal is not a system that can prevent a possible rear-end collision caused by your hard braking. It flashes the hazard warning lights at the time you are braking hard. It is always recommended to avoid hard braking unless it is absolutely necessary.

The emergency stop signal does not activate with the hazard warning button pressed in.

If the ABS stops working for a certain period during braking, the emergency stop signal may not activate at all.

When Stopped

1. Depress the brake pedal firmly.
2. Firmly apply the parking brake.
3. Press the **P** (parking) button to shift to **P**.
4. Turn off the power system.

Always apply the parking brake when parking.

» Parking Your Vehicle

Do not park your vehicle near flammable objects, such as dry grass, oil, or timber. Heat from the exhaust can cause a fire.

» When Stopped

NOTICE

The following can damage the transmission:

- Depressing the accelerator and brake pedals simultaneously.
- Holding the vehicle in place when facing uphill by depressing the accelerator pedal or creeping.

➤ **Creeping** P. 185


- Moving the shift lever into **P** before the vehicle stops completely.

In extremely cold temperatures, the parking brake may freeze up if applied. If such temperatures are expected, do not apply the parking brake but, if parking on a slope, either turn the front wheels so they will contact the curb if the vehicle rolls down the slope or block the wheels to keep the vehicle from moving. If you do not take either precaution, the vehicle may roll unexpectedly, leading to a crash.

Parking Sensor System

The centre sensors monitor obstacles behind your vehicle, and the beeper lets you know the approximate distance between your vehicle and the obstacle.

■ The sensor location and range

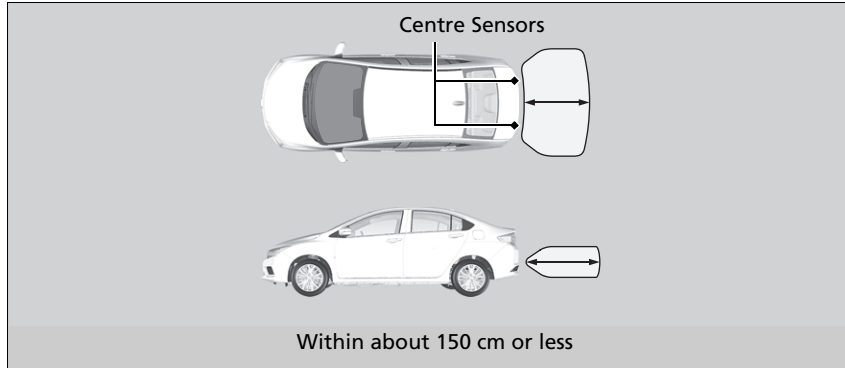

The rear centre sensors start to detect an obstacle when the shift lever is in **R**, and the vehicle speed is less than 8 km/h.

⚠ Parking Sensor System

Even when the system is on, always confirm if there is no obstacle near your vehicle before parking.

The system may not work properly when:

- The sensors are covered with snow, ice mud, or dirt.
- The vehicle is on uneven surface, such as grass, bumps, or a hill.
- The vehicle has been out in hot or cold weather.
- The system is affected by devices that emit ultrasonic waves.
- Driving in bad weather.

The system may not sense:

- Thin or low objects.
- Sonic-absorptive materials, such as snow, cotton, or sponge.
- Objects directly under the bumper.

Do not put any accessories on or around the sensors.

■ When the distance between your vehicle and obstacles behind becomes shorter

Length of the intermittent beep	Distance between the Bumper and Obstacle	
	Centre Sensors	Indicator
Moderate	About 150-100 cm	Blinks
Short	About 100-50 cm	Blinks
Continuous	About 50 cm or less	Blinks

Fuel Information

■ Fuel recommendation

Unleaded petrol, research octane number 91 or higher

Use of a lower octane petrol can cause a persistent, heavy metallic knocking noise that can lead to engine damage.

■ Fuel tank capacity: 40 litres




» Fuel Information

NOTICE

Use of petrol that contains lead presents the following risks:

- Damage to the exhaust system including the catalytic converter
- Damage to the engine and fuel system
- Detrimental effects on the engine and other systems

How to Refuel

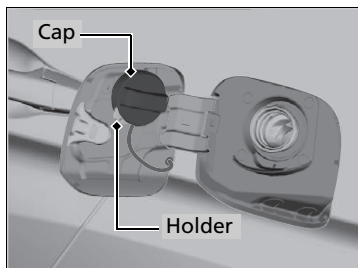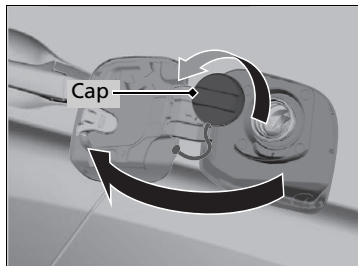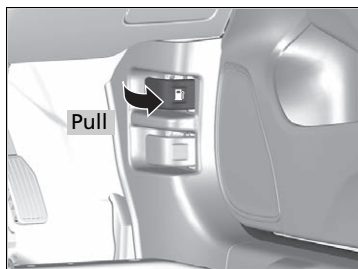

1. Stop your vehicle with the service station pump on the left side of the vehicle in the rear.
2. Turn off the power system.
3. Pull on the fuel fill door release handle under the driver's side lower outside corner of the dashboard.
► The fuel fill door opens.
4. Remove the fuel fill cap slowly. If you hear a release of air, wait until this stops, then turn the knob slowly to open the fuel fill cap.
5. Place the fuel fill cap in the holder.
6. Insert the fuel filler nozzle fully.
► When the tank is full, the filler nozzle will click off automatically. This leaves space in the fuel tank in case the fuel expands with a change in the temperature.
7. After filling, replace the fuel fill cap, tightening it until you hear it click at least once.
► Shut the fuel fill door by hand.

How to Refuel

⚠ WARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Turn the power system off, and keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

The filler nozzle automatically stops to leave space in the fuel tank so that fuel does not overflow as a result of changes in air temperature.

Do not continue to add fuel after the filler nozzle has automatically stopped. Additional fuel can exceed the full tank capacity.

Improving Fuel Economy and Reducing CO₂ Emissions

Achieving fuel economy and reducing CO₂ emissions is dependent on several factors, including driving conditions, load weight, idling time, driving habits, and vehicle condition. Depending on these and other factors, you may not achieve the rated fuel economy of this vehicle.

Maintenance and Fuel Economy

You can optimize your fuel economy with proper maintenance of your vehicle. Follow the maintenance schedule and, if necessary, consult your warranty booklet.

Maintenance Schedule P. 219

- Use engine oil with the viscosity recommended by the API Certification Seal.
- Maintain the specified tyre pressure.
- Do not load the vehicle with excess luggage.
- Keep your vehicle clean. A buildup of snow or mud on your vehicle's underside adds weight and increases wind resistance.

Improving Fuel Economy and Reducing CO₂ Emissions

Direct calculation is the recommended method to determine actual fuel consumed while driving.

100	×	Litres of fuel	÷	Kilometres driven	=	L per 100 km
Kilometres driven	÷	Litres of fuel	=	Kilometres per Litre		

Maintenance

This chapter discusses basic maintenance.



Before Performing Maintenance

Inspection and Maintenance	216
Safety When Performing Maintenance	217
Parts and Fluids Used in Maintenance	
Service	218

Maintenance Schedule

Maintenance Under the Bonnet

Maintenance Items Under the Bonnet ..	224
Opening the Bonnet	225
Recommended Engine Oil	226
Oil Check	227
Adding Engine Oil	228
Engine Coolant	229

Transmission Fluid	231
Brake Fluid	232
Refilling Window Washer Fluid	233
Fuel Filter	233

Replacing Light Bulbs

Checking and Maintaining Wiper Blades

Checking and Maintaining Tyres

Checking Tyres	245
Wear Indicators	247
Tyre Service Life	247
Tyre and Wheel Replacement	248
Tyre Rotation	249

Snow Traction Devices	250
-----------------------------	-----

12-volt Battery

Remote Transmitter Care

Replacing the Button Battery	255
------------------------------------	-----

Climate Control System Maintenance

Cleaning

Interior Care	258
Exterior Care	260

Accessories and Modifications

Inspection and Maintenance

For your safety, perform all listed inspections and maintenance to keep your vehicle in good condition. If you become aware of any abnormality (noise, smell, insufficient brake fluid, oil residue on the ground, etc.), have your vehicle inspected by a dealer. Refer to the Service Book that came with your vehicle/maintenance schedule in this owner's manual for detailed maintenance and inspection information.

🔧 **Maintenance Schedule** P. 219

Types of Inspection and Maintenance

■ Daily inspections

Perform inspections before long distance trips, when washing the vehicle, or when refueling.

■ Periodic inspections

- Check the brake fluid level monthly.
🔧 **Brake Fluid** P. 232
- Check the tyre pressure monthly. Examine the tread for wear and foreign objects.
🔧 **Checking and Maintaining Tyres** P. 245
- Check the operation of the exterior lights monthly.
🔧 **Replacing Light Bulbs** P. 234
- Check the condition of the wiper blades at least every six months.
🔧 **Checking and Maintaining Wiper Blades** P. 243

Safety When Performing Maintenance

Some of the most important safety precautions are given here. However, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether you should perform a given task.

Maintenance Safety

- To reduce the possibility of fire or explosion, keep cigarettes, sparks, and flames away from the 12-volt battery, all High Voltage system, and all fuel related parts.
- Never leave rags, towels, or other flammable objects under the bonnet.
 - Heat from the engine and exhaust can ignite them, causing a fire.
- To clean parts, use a commercially available degreaser or parts cleaner, not petrol.
- Wear eye protection and protective clothing when working with the battery or compressed air.
- Engine exhaust contains carbon monoxide, which is poisonous and can kill you.
 - Only operate the engine if there is sufficient ventilation.

Vehicle Safety

- The vehicle must be in a stationary condition.
 - Make sure your vehicle is parked on level ground, the parking brake is set, and the power system is off.
- Be aware that hot parts can burn you.
 - Make sure to let the power system including the engine and exhaust system cool thoroughly before touching vehicle parts.
- Be aware that moving parts can injure you.
 - Do not activate the power system unless instructed, and keep your hands and limbs away from moving parts. When the power mode is on, the engine can automatically start, or the radiator fan may start operating without the engine running.

⚠ Safety When Performing Maintenance

⚠ WARNING

Improperly maintaining this vehicle or failing to correct a problem before driving can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations and schedules in this owner's manual/Service Book.

⚠ WARNING

Failure to properly follow maintenance instructions and precautions can cause you to be seriously hurt or killed.

Always follow the procedures and precautions in this owner's manual.

Parts and Fluids Used in Maintenance Service

The use of Honda genuine parts and fluids is recommended when maintaining and servicing your vehicle. Honda genuine parts are manufactured according to the same high quality standards used in Honda vehicles.

If your vehicle comes with the service book, the maintenance schedule for your vehicle is available in the book. For vehicles without the service book, refer to the following maintenance schedules.

The maintenance schedule outlines the minimum required maintenance that you should perform to ensure the troublefree operation of your vehicle. Due to regional and climatic differences, some additional servicing may be required. Please consult your warranty booklet for a more detailed description.

Maintenance work should be performed by properly trained and equipped technicians. Your authorised dealer meets all of these requirements.

Service at the indicated distance or time - whichever comes first.	km x 1,000	20	40	60	80	100	120	140	160	180	200
	months	12	24	36	48	60	72	84	96	108	120
Replace engine oil	Normal	Every 10,000 km or 1 year									
	Severe* ⁴	Every 5,000 km or 6 months									
Replace engine oil filter	Normal	Every 20,000 km or 2 years									
	Severe* ⁴	Every 10,000 km or 1 year									
Clean air cleaner element	Dry	Every 10,000km, but No clean at replace									
Replace air cleaner element* ¹		Every 30,000 km									
Inspect valve clearance* ²		Every 120,000 km									
Replace fuel filter* ³							•				

*1: Only severe schedule is required in some countries: refer to the local warranty booklet.

*2: Sensory Method: Adjust the valves during service 120,000 km if they are noisy.

*3: Refer to page 233 for replacement information under severe driving conditions.

*4: Refer to page 222 for replacement information under severe conditions.

Service at the indicated distance or time - whichever comes first.	km x 1,000 months	20	40	60	80	100	120	140	160	180	200
		12	24	36	48	60	72	84	96	108	120
Replace spark plugs	Iridium	Every 100,000 km									
Inspect drive belts			•		•		•		•		•
Replace engine coolant		At 200,000 km or 10 years, thereafter every 100,000 km or 5 years									
Replace transmission fluid	DCT Normal	Every 160,000 km or 8 years									
	Severe* ¹				•				•		
Inspect front and rear brakes		Every 10,000 km or 6 months									
Replace brake fluid		Every 3 years									
Check parking brake adjustment		•	•		•		•		•		•
Replace dust and pollen filter		•	•	•	•	•	•	•	•	•	•
Check expiry date for Tyre Repair Kit bottle		Every year									
Rotate tyres (Check tyre inflation and condition at least once per month)		Every 10,000 km									

*1: Refer to page 222 for replacement information under severe conditions.

Service at the indicated distance or time - whichever comes first.	km x 1,000	20	40	60	80	100	120	140	160	180	200
	months	12	24	36	48	60	72	84	96	108	120

Visually inspect the following items:

Tie rod ends, steering gear box, and boots	Every 10,000 km or 6 months										
Suspension components											
Driveshaft boots											
Brake hoses and lines (including ABS)	•	•	•	•	•	•	•	•	•	•	•
All fluid levels and condition of fluid											
Exhaust system											
Fuel lines and connections											

If you drive your vehicle under severe conditions, you must have the following items served to the maintenance schedule indicated as Severe.

Items	Condition
Engine oil and filter	A, B, C, D and E
Transmission fluid	B and D

►► Maintenance Schedule

- The condition is considered as severe when you drive:
- A. less than 8 km, or less than 16 km in freezing temperatures per trip.
 - B. In extremely hot temperature above 35°C.
 - C. With extensive idling or long periods of stop-and-go.
 - D. With a loaded roof rack, or in mountains.
 - E. On muddy, dusty or de-iced roads.

Maintenance Record (On Vehicles without Service Book)

Have your servicing dealer record all required maintenance below. Keep receipts for all work done on your vehicle.

Km or Month	Date	Sign or Stamp
20,000 km (or 12 Mo.)		
40,000 km (or 24 Mo.)		
60,000 km (or 36 Mo.)		
80,000 km (or 48 Mo.)		
100,000 km (or 60 Mo.)		
120,000 km (or 72 Mo.)		
140,000 km (or 84 Mo.)		
160,000 km (or 96 Mo.)		
180,000 km (or 108 Mo.)		
200,000 km (or 120 Mo.)		

Maintenance Items Under the Bonnet

Brake Fluid (Black Cap)

Engine Oil Fill Cap

Engine Oil Dipstick
(Orange)




Washer Fluid
(Blue Cap)

12-volt Battery

Radiator Cap

Engine Coolant Reserve Tank

Opening the Bonnet

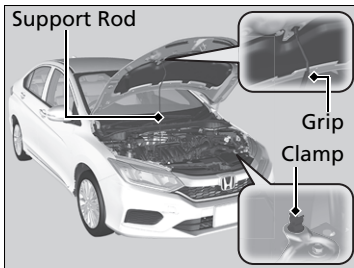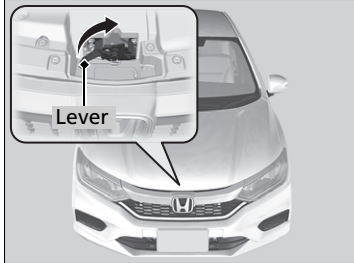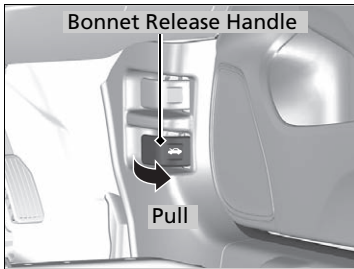

1. Park the vehicle on a level surface, and set the parking brake.
2. Pull the bonnet release handle under the driver's side lower outside corner of the dashboard.
► The bonnet will pop up slightly.
3. Pull up the bonnet latch lever (located under the front edge of the bonnet to the centre) and raise the bonnet. Once you have raised the bonnet slightly, you can release the lever.

4. Remove the support rod from the clamp using the grip. Mount the support rod in the bonnet.

When closing, remove the support rod, and stow it in the clamp, then gently lower the bonnet. Remove your hand at a height of approximately 30 cm and let the bonnet close.

Opening the Bonnet

NOTICE

Do not open the bonnet when the wiper arms are raised.
The bonnet will strike the wipers, resulting in damage to the bonnet and/or the wipers.


When closing the bonnet, check that the bonnet is securely latched.

If the bonnet latch lever moves stiffly, or if you can open the bonnet without lifting the lever, the latch mechanism should be cleaned and lubricated.

Recommended Engine Oil

Oil is a major contributor to your engine's performance and longevity. If you drive the vehicle with insufficient or deteriorated oil, the engine may fail or be damaged.

- **Genuine Honda Motor Oil**
- **API service SM or higher grade fuel-efficient oil**

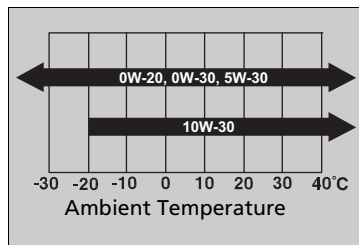

Use a Genuine Honda Motor oil or another commercial engine oil of suitable viscosity for the ambient temperature as shown.

0W-20 oil is formulated to improve fuel economy.

Recommended Engine Oil



Engine Oil Additives

Your vehicle does not require oil additives. In fact, they may adversely affect the engine performance and durability.

Oil Check

We recommend that you check the engine oil level every time you refuel. Park the vehicle on level ground.

Turn off the power system. You can check the oil level without the engine having run beforehand. If the engine has been running, wait approximately three minutes before you check the oil.

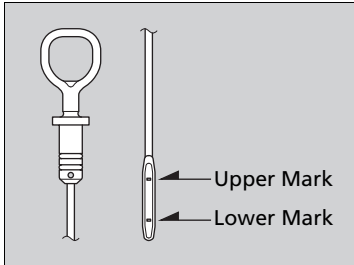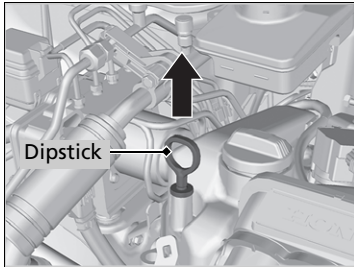


1. Remove the dipstick (orange).
2. Wipe the dipstick with a clean cloth or paper towel.
3. Insert the dipstick back all the way into its hole.
4. Remove the dipstick again, and check the level. It should be between the upper and lower marks. Add oil if necessary.

Oil Check

If the oil level is near or below the lower mark, slowly add oil, being careful not to overfill.

The amount of oil consumed depends on how the vehicle is driven and the climatic and road conditions encountered. The rate of oil consumption can be up to 1 litre per 1,000 km. Consumption is likely to be higher when the engine is new.

Adding Engine Oil

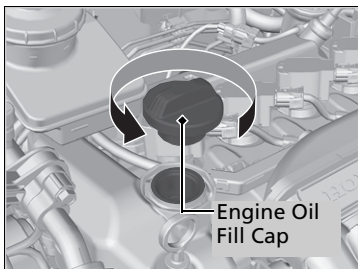

1. Unscrew and remove the engine oil fill cap.
2. Add oil slowly.
3. Reinstall the engine oil fill cap, and tighten it securely.
4. Wait for three minutes and recheck the engine oil dipstick.

►► Adding Engine Oil

NOTICE

Do not fill the engine oil above the upper mark. Overfilling the engine oil can result in leaks and engine damage.

If any oil spills, wipe it away immediately. Spilled oil may damage the engine compartment components.



Engine Coolant

Specified coolant: Honda All Season Antifreeze/Coolant Type 2

This coolant is premixed with 50% antifreeze and 50% water. Do not add any straight antifreeze or water.

We recommend you check the engine coolant level every time you refuel. Check the reserve tank first. If it is completely empty, also check the coolant level in the radiator. Add the engine coolant accordingly.

Reserve Tank

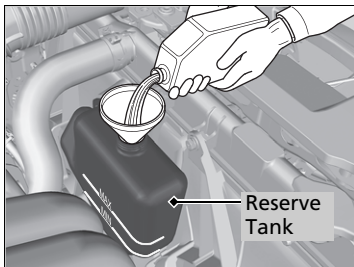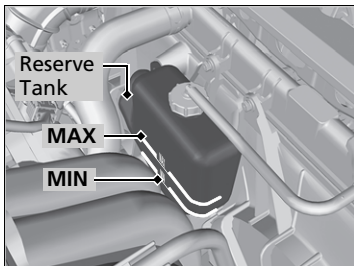

1. Make sure the engine and radiator are cool.

2. Check the amount of coolant in the reserve tank.

► If the coolant level is below the **MIN** mark, add the specified coolant until it reaches the **MAX** mark.

3. Inspect the cooling system for leaks.

Engine Coolant

⚠ WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.


If temperatures consistently below -30°C are expected, the coolant mixture should be changed to a higher concentration. Consult your Honda dealer for details about a suitable coolant mixture.

If Honda antifreeze/coolant is not available, you may use another major brand of non-silicate coolant as a temporary replacement. Check that it is a high quality coolant recommended for aluminium engines. Continued use of any non-Honda coolant can result in corrosion, causing the cooling system to malfunction or fail. Have the cooling system flushed and refilled with Honda antifreeze/coolant as soon as possible.

Do not add rust inhibitors or other additives to your vehicle's cooling system. They may not be compatible with the coolant or with the engine components.

Continued

■ Radiator

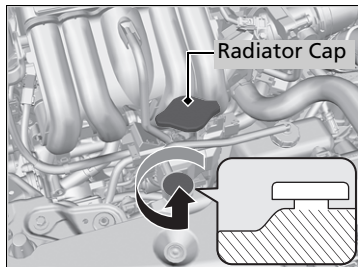

1. Make sure the engine and radiator are cool.
2. Turn the radiator cap 1/8 turn anticlockwise and relieve any pressure in the cooling system.
3. Push down and turn the radiator cap anticlockwise to remove it.
4. The coolant level should be up to the base of the filler neck. Add coolant if it is low.
5. Put the radiator cap back on, and tighten it fully.

» Radiator

NOTICE

Pour the fluid slowly and carefully so you do not spill any. Clean up any spills immediately; they can damage components in the engine compartment.

Transmission Fluid

■ Dual Clutch Transmission Fluid

Specified fluid: Honda ATF DW-1 (automatic transmission fluid)

Have a dealer check the fluid level and replace if necessary.

Follow your vehicle's maintenance service timing of when to change dual clutch transmission fluid.

🔧 **Maintenance Schedule** P. 219

Do not attempt to check or change the dual clutch transmission fluid yourself.

»» Dual Clutch Transmission Fluid

NOTICE

Do not mix Honda ATF DW-1 with other transmission fluids.


Using a transmission fluid other than Honda ATF DW-1 may adversely affect the operation and durability of your vehicle's transmission, and damage the transmission.

Any damage caused by using a transmission fluid that is not equivalent to Honda ATF DW-1 is not covered by Honda's new vehicle limited warranty.

Brake Fluid

Specified fluid: Brake Fluid with DOT 3 or DOT 4

■ Checking the Brake Fluid

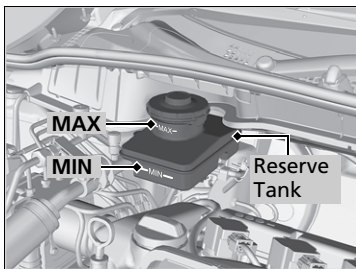

The fluid level should be between the **MIN** and **MAX** marks on the side of the reserve tank.

» Brake Fluid

NOTICE


Brake fluid marked DOT 5 is not compatible with your vehicle's braking system and can cause extensive damage.

We recommend using a genuine product.

If the brake fluid level is at or below the **MIN** mark, have a dealer inspect the vehicle for leaks or worn brake pads as soon as possible.

Refilling Window Washer Fluid

Check the amount of window washer fluid by looking at the reservoir.

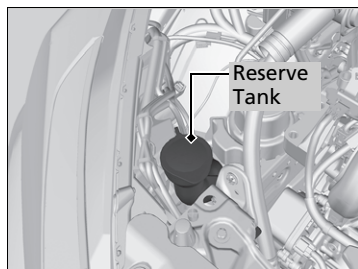

If the level is low, fill the washer reservoir.

Pour the washer fluid carefully. Do not overflow the reservoir.

Fuel Filter

Replace fuel filter according to the time and distance recommendations in the maintenance schedule.

It is recommended to replace the fuel filter every 60,000 km, or 3 years, if you suspect the fuel you are using is contaminated. In a dusty environment, the filter may become clogged sooner.

Have a qualified technician change the fuel filter. Fuel in the system can spray out and create a hazard if all fuel line connections are not handled correctly.

⚠ Refilling Window Washer Fluid

NOTICE

Do not use engine antifreeze or a vinegar/water solution in the windscreen washer reservoir. Antifreeze can damage your vehicle's paint. A vinegar/water solution can damage the windscreen washer pump.

Use only commercially available windscreen washer fluid.

Avoid prolonged use of hard water to prevent lime scale build up.


Headlight Bulbs

When replacing, use the following bulbs.

High beam headlight: 60 W (HB3 for halogen bulb type)


Low beam headlight: 55 W (H11 for halogen bulb type)

High Beam Headlight

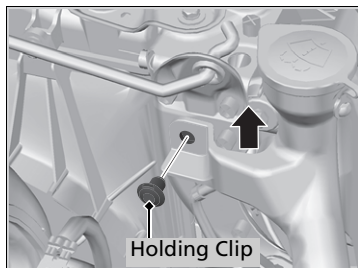

Right side

1. Remove the holding clip using a flat-tip screwdriver, then remove the upper part of the window washer reserve tank.

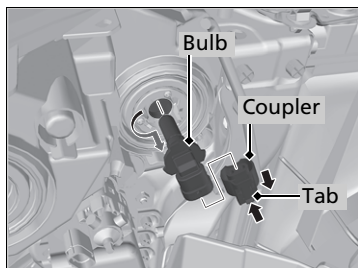

Both sides

2. Push the tab to remove the coupler.
3. Rotate the old bulb to the left to remove.
4. Insert a new bulb into the headlight assembly and turn it to the right.
5. Insert the coupler into the connector of the bulb.

Headlight Bulbs


NOTICE

Halogen bulbs get very hot when lit. Oil, perspiration, or a scratch on the glass can cause the bulb to overheat and shatter.

The headlight aim is set by the factory, and does not need to be adjusted. However, if you regularly carry heavy items in the boot, have the aiming readjusted at a dealer or by a qualified technician.

When replacing a halogen bulb, handle it by its base, and protect the glass from contact with your skin or hard objects. If you touch the glass, clean it with denatured alcohol and a clean cloth.

Low Beam Headlight

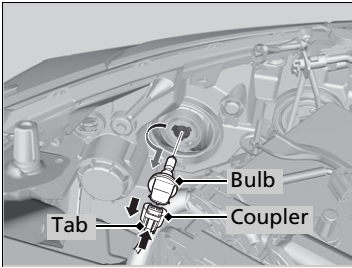


1. Push the tab to remove the coupler.
2. Rotate the old bulb to the left to remove.
3. Insert a new bulb into the headlight assembly and turn it to the right.
4. Insert the coupler into the connector of the bulb.


Headlight Bulbs

Holding clip

Insert a flat-tip screwdriver, lift and remove the centre pin to remove the clip.

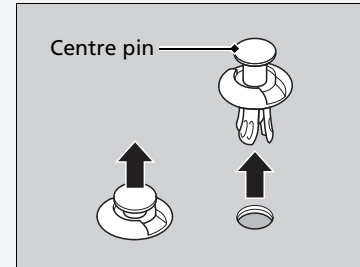


Insert the clip with the centre pin raised, and push until it is flat.

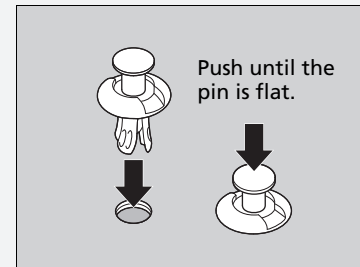

Front Turn Signal Light Bulbs

When replacing, use the following bulbs.

Front Turn Signal Light: 21 W (Amber)

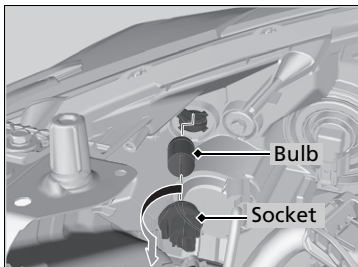

1. Turn the socket to the left and remove it.
2. Remove the old bulb and insert a new bulb.

Daytime Running Lights

Daytime running lights are LED type. Have an authorized Honda dealer inspect and replace the light assembly.

Position Lights

Position lights are LED type. Have an authorized Honda dealer inspect and replace the light assembly.

Side Turn Signal/Emergency Indicator Lights

Side turn signal lights are LED type. Have an authorized Honda dealer inspect and replace the light assembly.


Brake/Taillights and rear side marker lights

Brake/taillights and rear side marker lights are LED type. Have an authorized Honda dealer inspect and replace the light assembly.


Rear Turn Signal Light Bulbs

When replacing, use the following bulbs.

Rear Turn Signal Light: 21W (Amber)

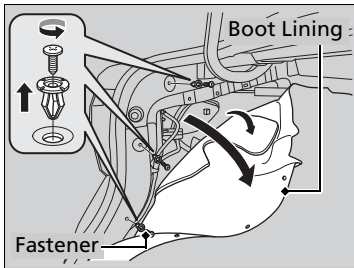

1. Remove the screws from its centre of each fastener using a Phillips-head screwdriver, then pull the lining back.

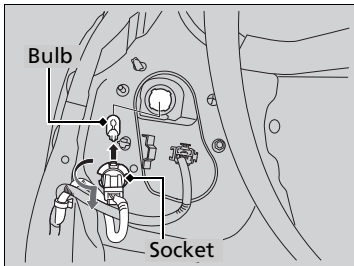

2. Turn the socket to the left and remove it.
3. Remove the old bulb and insert a new bulb.


Taillights

Taillights are LED type. Have an authorized Honda dealer inspect and replace the light assembly.


Back-Up Light Bulbs

When replacing, use the following bulbs.

Back-Up Light: 16 W

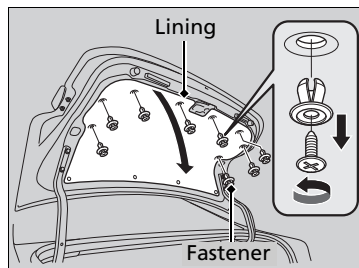

1. Remove each screw from the centre of its fastener using a Phillips-head screwdriver, then pull the lining back.

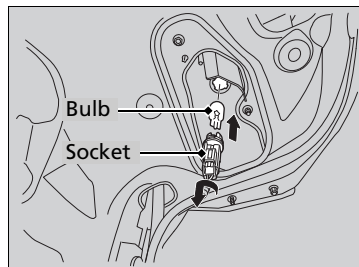


2. Remove the coupler from the socket.
3. Turn the socket to the left and remove it.
4. Remove the old bulb and insert a new bulb.


Rear Licence Plate Light Bulbs

When replacing, use the following bulb.

Rear Licence Plate Light: 5 W

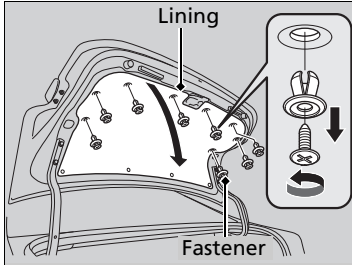

1. Remove each screw from the centre of its fastener using a Phillips-head screwdriver, then pull the lining back.

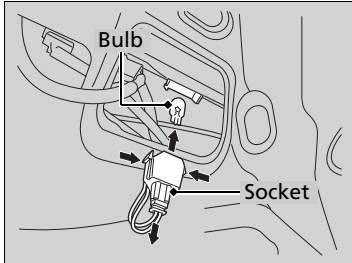


2. Remove the licence plate light assembly by squeezing the tabs on both sides of the socket.
3. Remove the old bulb and insert a new bulb.

High-Mount Brake Light Bulb

When replacing, use the following bulb.

High-Mount Brake Light: 21 W

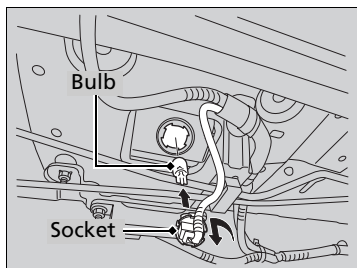


1. Open the boot.
2. Turn the socket to the left and remove it.
3. Remove the old bulb and insert a new bulb.

Other Light Bulbs


■ Ceiling Light Bulb

When replacing, use the following bulb.

Ceiling Light: 8 W

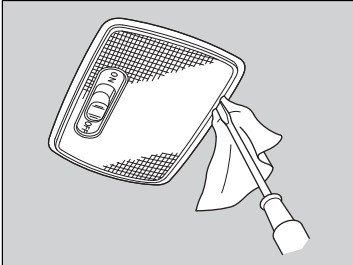

1. Pry on the edge of the cover using a flat-tip screwdriver to remove the cover.
► Wrap the flat-tip screwdriver with a cloth to prevent scratches.

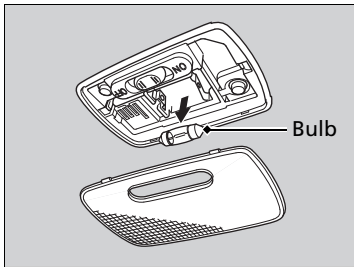

2. Remove the old bulb and insert a new bulb.


■ Map Light Bulbs

When replacing, use the following bulbs.

Map Light: 8 W



1. Push on the lens of the opposite side you are replacing.
2. Pry on the edge between the lenses using a flat-tip screwdriver to remove the cover.
► Wrap the flat-tip screwdriver with a cloth to prevent scratches.

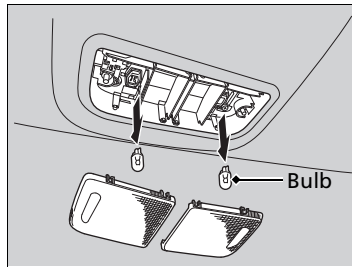


3. Remove the old bulb and insert a new bulb.


■ Boot Light Bulb

When replacing, use the following bulb.

Boot Light: 5 W

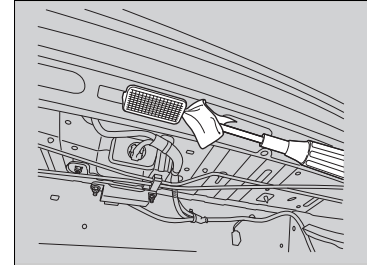

1. Pry on the edge of the cover using a flat-tip screwdriver to remove the cover.
► Wrap the flat-tip screwdriver with a cloth to prevent scratches.

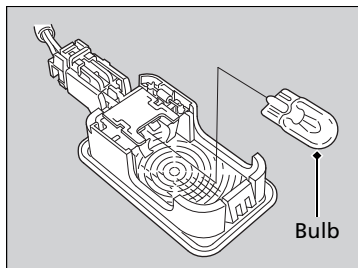


2. Remove the old bulb and insert a new bulb.


Checking Wiper Blades

If the wiper blade rubber has deteriorated, it will leave streaks and the hard surfaces of the blade may scratch the window glass.

Changing the Wiper Blade Rubber

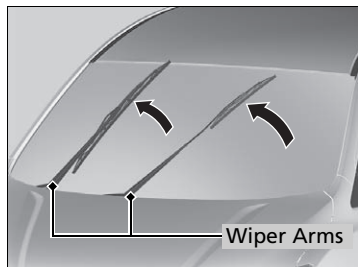

1. Lift the driver side wiper arm first, then the passenger side.

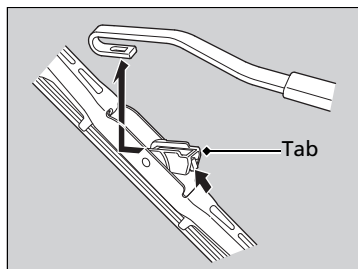


2. Press and hold the tab, then slide the holder off the wiper arm.


Changing the Wiper Blade Rubber

NOTICE

Avoid dropping the wiper arm onto the windscreen, it may damage the wiper arm and/or the windscreen.

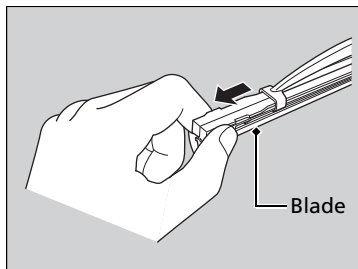

3. Slide the wiper blade out of the holder by pulling the tabbed end out.

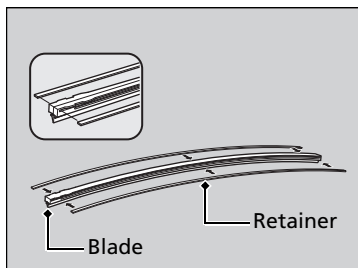

4. Remove the retainers from the wiper blade that has been removed, and mount to a new wiper blade.
 - Correctly align the wiper blade protrusion and the retainer grooves.
5. Slide the new wiper blade onto the holder from the bottom end.
 - The tab on the holder should fit in the indent of the wiper blade.
6. Slide the holder onto the wiper arm securely.
7. Lower the passenger side wiper arm first, then the driver side.

Checking Tyres

To safely operate your vehicle, your tyres must be of the proper type and size, in good condition with adequate tread, and properly inflated.

■ Inflation guidelines

Properly inflated tyres provide the best combination of handling, tread life, and comfort. Refer to the driver's doorjamb label for the specified pressure.

Underinflated tyres wear unevenly, adversely affect handling and fuel economy, and are more likely to fail from overheating.

Overinflated tyres make your vehicle ride harshly, are more prone to road hazards, and wear unevenly.

Every day before you drive, look at each of the tyres. If one looks lower than the others, check the pressure with a tyre gauge.

At least once a month or before long trips, use a gauge to measure the pressure in all tyres. Even tyres in good condition can lose 10-20 kPa (0.1-0.2 kgf/cm², 1-2 psi) per month.

⌘ Checking Tyres

WARNING

Using tyres that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tyre inflation and maintenance.

Measure the air pressure when tyres are cold. This means the vehicle has been parked for at least three hours, or driven less than 1.6 km. If necessary, add or release air until the specified pressure is reached.

If checked when hot, tyre pressure can be as much as 30-40 kPa (0.3-0.4 kgf/cm², 4-6 psi) higher than if checked when cold.

Have a dealer check the tyres if you feel a consistent vibration while driving. New tyres and any that have been removed and reinstalled should be properly balanced.

■ Inspection guidelines

Every time you check inflation, also examine the tyres and valve stems.

Look for:

- Bumps or bulges on the side or in the tread. Replace the tyre if you find any cuts, splits, or cracks in the side of the tyre. Replace it if you see fabric or cord.
- Remove any foreign objects and inspect for air leaks.
- Uneven tread wear. Have a dealer check the wheel alignment.
- Excessive tread wear.

🔍 **Wear Indicators** P. 247

- Cracks or other damage around valve stem.


►► Checking Tyres

High speed driving

We recommend that you do not drive faster than the posted speed limits and conditions allow. If you drive at sustained high speeds (over 160 km/h), adjust the cold tyre pressures as shown below to avoid excessive heat build up and sudden tyre failure.

Tyre Size	185/55R16 83H
Pressure	Front: 240 kPa (2.4 kgf/cm ² , 35 psi) Rear: 230 kPa (2.3 kgf/cm ² , 33 psi)

Wear Indicators

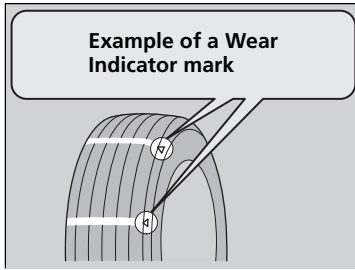

The groove where the wear indicator is located is 1.6 mm shallower than elsewhere on the tyre. If the tread has worn so that the indicator is exposed, replace the tyre. **Worn out tyres have poor traction on wet roads.**

Tyre Service Life

The life of your tyres is dependent on many factors, including driving habits, road conditions, vehicle loading, inflation pressure, maintenance history, speed, and environmental conditions (even when the tyres are not in use).

In addition to regular inspections and inflation pressure maintenance, it is recommended that you have annual inspections performed once the tyres reach five years old. All tyres, should be removed from service after 10 years from the date of manufacture, regardless of their condition or state of wear.

Tyre and Wheel Replacement

Replace your tyres with radials of the same size, load range, speed rating, and maximum cold tyre pressure rating (as shown on the tyre's sidewall). Using tyres of a different size or construction can cause certain vehicle systems such as the ABS and Vehicle Stability Assist (VSA) system to work incorrectly.

It is best to replace all four tyres at the same time. If that isn't possible, replace the front or rear tyres in pairs.

Make sure that the wheel's specifications match those of the original wheels.

► Tyre and Wheel Replacement

WARNING

Installing improper tyres on your vehicle can affect handling and stability. This can cause a crash in which you can be seriously hurt or killed.


Always use the size and type of tyres recommended in the tyre information label on your vehicle.

Tyre Rotation

Rotating tyres according to the maintenance schedule helps to distribute wear more evenly and increase tyre life.


■ Tyres without rotation marks

Rotate the tyres as shown here.

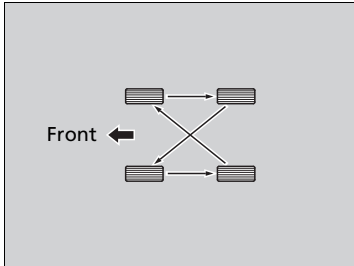


■ Tyres with rotation marks

Rotate the tyres as shown here.

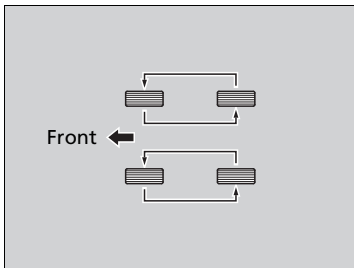

► Tyre Rotation

Tyres with directional tread patterns should only be rotated front to back (not from one side to the other). Directional tyres should be mounted with the rotation indication mark facing forward, as shown below.

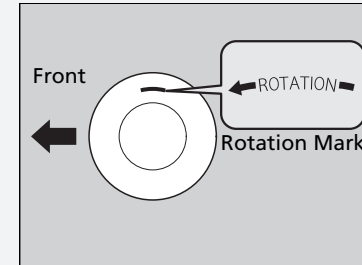

When the tyres are rotated, make sure the air pressures are checked.

Snow Traction Devices

If driving on snowy or frozen roads, mount winter tyres, or tyre chains; reduce speed; and maintain sufficient distance between vehicles when driving.

Be particularly careful when operating the steering wheel or brakes to prevent skidding.

Use tyre chains, winter tyres, or all season tyres when necessary or according to the law.

When mounting, refer to the following points.

For winter tyres:

- Select the size and load ranges that are the same as the original tyres.
- Mount the tyres to all four wheels.

For tyre chains:

- Consult a dealer before purchasing any type of chains for your vehicle.
- Install them on the front tyres only.
- Because your vehicle has limited tyre clearance, we strongly recommend using the chains listed below:

Original Tyre Size*1	Chain Type
185/55R16 83H	RUD-matic classic 48479

*1: Original tyre size is mentioned on the tyre information label on the driver's doorjamb.

► Snow Traction Devices

WARNING

Using the wrong chains, or not properly installing chains, can damage the brake lines and cause a crash in which you can be seriously injured or killed.

Follow all instructions in this owner's manual regarding the selection and use of tyre chains.

NOTICE

Traction devices that are the wrong size or improperly installed can damage your vehicle's brake lines, suspension, body, and wheels. Stop driving if they are hitting any part of the vehicle.

When tyre chains are mounted, follow the chain manufacturer's instructions regarding vehicle operational limits.

Use tyre chains only in an emergency or when they are legally required for driving through a certain area.


Use greater caution when driving with tyre chains on snow or ice. They may have less-predictable handling than good winter tyres without chains.

- Follow the chain manufacturer's instruction when installing. Mount them as tightly as you can.
- Check that the chains do not touch the brake lines or suspension.
- Drive slowly.

❏ Snow Traction Devices

If your vehicle is equipped with summer tyres, be aware that these tyres are not designed for winter driving conditions. For more information, contact a dealer.

Checking the 12-volt Battery

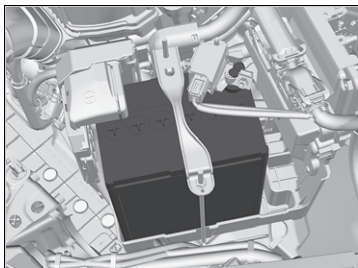

The condition of the 12-volt battery is monitored by a sensor located on the negative terminal of the 12-volt battery. If there is a problem with this sensor, the multi-information display will display a warning message. If this happens, have your vehicle inspected by a dealer.

Check the 12-volt battery terminals for corrosion monthly.

If your vehicle's 12-volt battery is disconnected or goes dead:

- The clock resets.
 - **Clock** P. 116

12-volt Battery

⚠ WARNING

The 12-volt battery gives off explosive hydrogen gas during normal operation.

A spark or open flame can cause the 12-volt battery to explode with enough force to kill or seriously hurt you.

Keep all sparks, open flames, and smoking materials away from the 12-volt battery.

Wear protective clothing and a face shield, or have a skilled technician do any 12-volt battery maintenance.

Charging the 12-volt Battery

Disconnect both 12-volt battery cables to prevent damaging your vehicle's electrical system. Always disconnect the negative (-) cable first, and reconnect it last.

12-volt Battery

⚠ WARNING

The 12-volt battery contains sulfuric acid (electrolyte) which is highly corrosive and poisonous.

Getting electrolyte in your eyes or on your skin can cause serious burns. Wear protective clothing and eye protection when working on or near the 12-volt battery.

Swallowing electrolyte can cause fatal poisoning if immediate action is not taken.

KEEP OUT OF THE REACH OF CHILDREN

Emergency Procedures

Eyes: Flush with water from a cup or other container for at least 15 minutes. (Water under pressure can damage the eye.) Call a physician immediately.

Skin: Remove contaminated clothing. Flush the skin with large quantities of water. Call a physician immediately.

Swallowing: Drink water or milk. Call a physician immediately.

» 12-volt Battery

When you find corrosion, clean the 12-volt battery terminals by applying a baking powder and water solution. Clean the terminals with a damp towel. Cloth/towel dry the 12-volt battery. Coat the terminals with grease to help prevent future corrosion.

When replacing the 12-volt battery, the replacement must be of the same specifications. Consult a dealer for more information.

Replacing the Button Battery


If the indicator does not come on when the button is pressed, replace the battery.

■ Keyless Remote



Battery type: CR2032

1. Remove the built-in key.
2. Remove the upper half by carefully prying on the edge with a coin.
► Wrap a coin with a cloth to prevent scratching the keyless remote.
3. Make sure to replace the battery with the correct polarity.

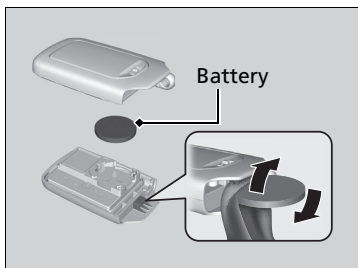

⌘ Replacing the Button Battery

⚠ WARNING

CHEMICAL BURN HAZARD

The battery that powers the remote transmitter can cause severe internal burns and can even lead to death if swallowed. Keep new and used batteries away from children.

If you suspect that a child has swallowed the battery, seek medical attention immediately.

NOTICE

An improperly disposed of battery can damage the environment. Always confirm local regulations for battery disposal.

Replacement batteries are commercially available or at a dealer.


Dust and Pollen Filter

■ When to Replace the Dust and Pollen Filter


Replace the dust and pollen filter according to your vehicle's recommended maintenance schedule. It is recommended to replace the filter even sooner if the vehicle has been driven in a dusty environment.

➤ **Maintenance Schedule** P. 219

■ How to Replace the Dust and Pollen Filter

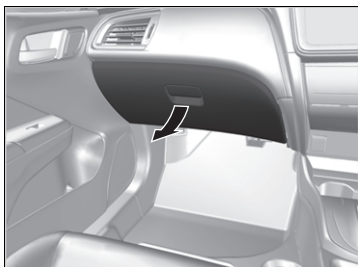

1. Open the glove box.

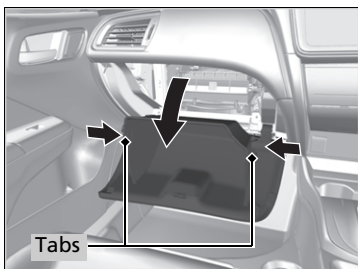


2. Disengage the two tabs by pushing on each side panel.

3. Pivot the glove box out of the way.


» Dust and Pollen Filter

If the airflow from the climate control system deteriorates noticeably, and the windows fog up easily, the filter may need to be replaced.

The dust and pollen filter collects pollen, dust, and other debris in the air.

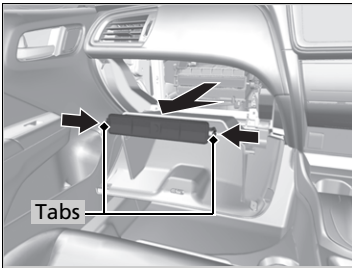

4. Push in the tabs on the corners of the filter case cover, and remove it.

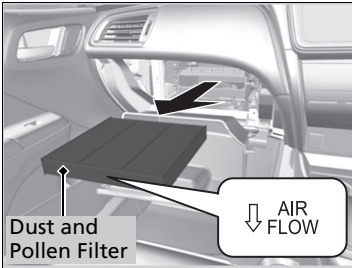

5. Remove the filter.
6. Install a new filter.
 - Put the **AIR FLOW** arrow directed side down.

▣ Dust and Pollen Filter

If you are not sure how to replace the dust and pollen filter, have it replaced by a dealer.

Interior Care

Use a vacuum cleaner to remove dust before using a cloth.


Use a damp cloth with a mixture of mild detergent and warm water to remove dirt.

Use a clean cloth to remove detergent residue.

Cleaning Seat Belts

Use a soft brush with a mixture of mild soap and warm water to clean the seat belts.

Let the belts air dry. Wipe the openings of the seat belt anchors using a clean cloth.

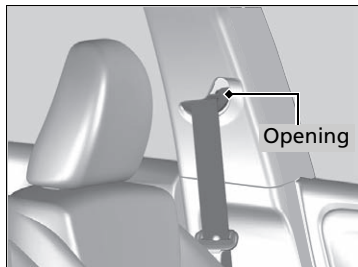

Cleaning the Window

Wipe using a glass cleaner.

Interior Care

Do not spill liquids inside the vehicle.

Electrical devices and systems may malfunction if liquids are splashed on them.

Do not use silicone based sprays on electrical devices such as audio devices and switches.

Doing so may cause the items to malfunction or cause a fire inside the vehicle.

If a silicone based spray is inadvertently used on electrical devices, consult a dealer.

Depending on their composition, chemicals and liquid aromatics may cause discolouration, wrinkles, and cracking to resin-based parts and textiles.

Do not use alkali solvents or organic solvents such as benzene or petrol.

After using chemicals, make sure to gently wipe them away using a dry cloth.

Do not place used cloths on top of resin based parts or textiles for long periods of time without washing.

Be careful not to spill a liquid type air freshener.

Cleaning the Window

Wires are mounted to the inside of the rear window.

Wipe along the same direction as the wires with a soft cloth so as not to damage them.

■ Floor Mats*

The driver's floor mat hooks over floor anchors, which keep it from sliding forward. To remove a mat for cleaning, turn the anchor knobs to the unlock position. When reinstalling the mat after cleaning, turn the knobs to the lock position.

Do not put additional floor mats on top of the anchored mat.

▣ Floor Mats*

If you use any floor mats that were not originally provided with your vehicle, make sure they are designed for your specific vehicle, fit correctly, and are securely anchored by the floor anchors. Position the rear seat floor mats properly. If they are not properly positioned, the floor mats can interfere with the front seat functions.

* Not available on all models

Exterior Care

Dust off the vehicle body after you drive.

Regularly inspect your vehicle for scratches on painted surfaces. A scratch on a painted surface can result in body rust. If you find a scratch, promptly repair it.

■ Washing the Vehicle

Wash the vehicle regularly. Wash more frequently when driving in the following conditions:

- If driving on roads with road salt.
- If driving in coastal areas.
- If tar, soot, bird droppings, insects, or tree sap are stuck to painted surfaces.

■ Using an Automated Car Wash


- Make sure to follow the instructions indicated on the automated car wash.
- Fold in the door mirrors.

■ Using High Pressure Cleaners

- Keep sufficient distance between the cleaning nozzle and the vehicle body.
- Take particular care around the windows. Standing too close may cause water to enter the vehicle interior.
- Do not spray high pressure water directly into the engine compartment. Instead, use low pressure water and a mild detergent.

► Washing the Vehicle

Do not spray water into the air intake vents. It can cause a malfunction.

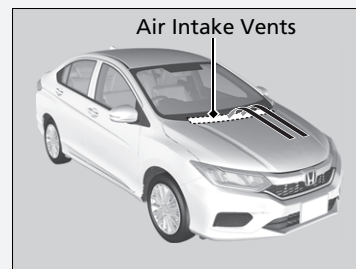

► Using an Automated Car Wash

When using an automated car wash that pulls the vehicle through with a conveyor, make sure vehicle is in car wash mode.

► If you want to keep the **N** position in **ACCESSORY** P. 189

■ Applying Wax

A good coat of automotive body wax helps to protect your vehicle's paint from the elements. Wax will wear off over time and expose your vehicle's paint to the elements, so reapply as necessary.

■ Maintaining the Bumpers and Other Resin Coated Parts

If you get petrol, oil, engine coolant, or battery fluid on resin coated parts, they may be stained or the coating may peel. Promptly wipe it away using a soft cloth and clean water.

■ Cleaning the Window

Wipe using a glass cleaner.

■ Maintaining Aluminium Wheels

Aluminium is susceptible to deterioration caused by salt and other road contaminants. When necessary, as early as possible use a sponge and mild detergent to wipe away these contaminants. Do not use a stiff brush or harsh chemicals (including some commercial wheel cleaners). These can damage the protective finish on aluminium alloy wheels, resulting in corrosion. Depending on the type of finish, the wheels also may lose their luster or appear burnished. To avoid water stains, wipe the wheels dry with a cloth while they are still wet.

▣ Applying Wax

NOTICE

Chemical solvents and strong cleaners can damage the paint, metal, and plastic on your vehicle. Wipe away spills immediately.

▣ Maintaining the Bumpers and Other Resin Coated Parts

Ask a dealer about the correct coating material when you want to repair the painted surface of the parts made of resin.

■ Fogged Exterior Light Lenses


The inside lenses of exterior lights (headlights, brake lights, etc.) may fog temporarily if you have driven in the rain, or after the vehicle has been run through a car wash. Dew condensation also may build up inside the lenses when there is a significant enough difference between the ambient and inside lens temperatures (similar to vehicle windows fogging up in rainy conditions). These conditions are natural processes, not structural design problems in the exterior lights.

Lens design characteristics may result in moisture developing on the light lens frame surfaces. This also is not a malfunction.

However, if you see large amounts of water accumulation, or large water drops building up inside the lenses, have your vehicle inspected by a dealer.

Accessories

When installing accessories, check the following:

- Do not install accessories on the windscreen. They can obstruct your view and delay your reaction to driving conditions.
- Do not install any accessories over areas marked SRS Airbag, on the sides or backs of the front seats, on side pillars.
Accessories installed in these areas may interfere with proper operation of the vehicle's airbags or may be propelled into you or another occupant if the airbags deploy.
- Be sure electronic accessories do not overload electrical circuits or interfere with proper operation of your vehicle.
 **Fuses** P. 290
- Before installing any electronic accessory, have the installer contact a dealer for assistance. If possible, have a dealer inspect the final installation.

Modifications

Do not modify your vehicle in a manner that may affect its handling, stability, or reliability, or install non-genuine Honda parts or accessories that may have a similar effect.

Even minor modifications to vehicle systems can affect overall vehicle performance. Always make sure all equipment is properly installed and maintained, and do not make any modification to your vehicle or its systems that might cause your vehicle to no longer meet your country's and local regulations.

The on-board diagnostic port (OBD-II/J2534 connector) installed on this vehicle is intended to be used with automobile system diagnostic devices or with other devices that Honda has approved. Use of any other type of device may adversely affect the vehicle's electronic systems or allow them to be compromised, possibly resulting in a system malfunction, drained battery, or other unexpected problems.

Continued

Accessories and Modifications

WARNING

Improper accessories or modifications can affect your vehicle's handling, stability, and performance, and cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding accessories and modifications.

WARNING

Use of improperly designed, engineered or manufactured High Voltage battery assemblies could cause a fire in your vehicle.

A vehicle fire could result in a crash or injury.

Only use a genuine Honda High Voltage battery assembly, or its equivalent, in your vehicle.

When properly installed, mobile phones, alarms, two-way radios, radio antennas, and low-powered audio systems should not interfere with your vehicle's computer controlled systems, such as your airbags and anti-lock brakes.

Do not modify or attempt to repair your vehicle's High Voltage hybrid power system or otherwise modify vehicle electrical systems. Disassembling or modifying electrical equipment can result in a crash or a fire.

If you ever need to replace your vehicle's High Voltage battery assembly outside of warranty coverage, we highly recommend that you only use a genuine Honda High Voltage battery assembly. Genuine Honda High Voltage battery assemblies are designed to work with your vehicle's hybrid power system and have been designed, engineered and manufactured to avoid overcharging situations. Non-genuine High Voltage battery assemblies may not have been similarly designed, engineered and manufactured, and installation of such assemblies could result in overcharging, fires, loss of power, or other conditions that may increase the likelihood of a crash or injury.

►► Accessories and Modifications

Honda Genuine accessories are recommended to ensure proper operation on your vehicle.

Handling the Unexpected



This chapter explains how to handle unexpected troubles.

Tools	
Types of Tools.....	266
If a Tyre Goes Flat	
Temporarily Repairing a Flat Tyre.....	267
Handling of the jack.....	277
Power System Won't Start	
Checking the Procedure	280
If the Keyless Remote Battery is Weak ..	281
Emergency Power System Off.....	282
Jump Starting	283
Overheating	
How to Handle Overheating.....	285

Indicator, Coming On/Blinking	
If the Low Oil Pressure Indicator Comes On	287
If the 12-volt battery Charging System Indicator Comes On	287
If the Malfunction Indicator Lamp Comes On or Blinks	288
If the Brake System Indicator (Red) Comes On	288
If the Electric Power Steering (EPS) System Indicator Comes On	289
If the Transmission Indicator Blinks along with the Warning Message	289

Fuses	
Fuse Locations	290
Inspecting and Changing Fuses.....	296
Emergency Towing	297

Types of Tools

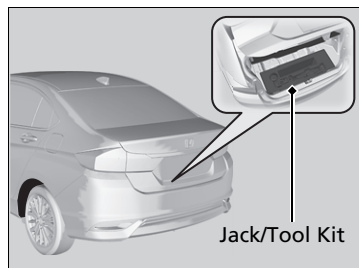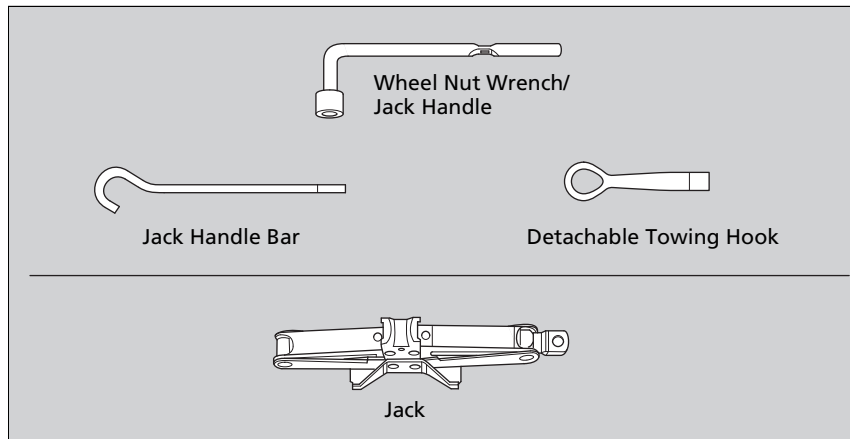

Types of Tools

The tools are stored in the boot.

Temporarily Repairing a Flat Tyre

If the tyre has a large cut or is otherwise severely damaged, you will need to have the vehicle towed. If the tyre only has a small puncture, from a nail for instance, you can use the temporary tyre repair kit so that you can drive to the nearest service station for a permanent repair.


If a tyre goes flat while driving, grasp the steering wheel firmly, and brake gradually to reduce speed. Then stop in a safe place.

- 1. Park the vehicle on firm, level, and non-slippery surface and apply the parking brake.
- 2. Change the gear position to **P**.
- 3. Turn on the hazard warning lights and set the power mode to VEHICLE OFF (LOCK).

Temporarily Repairing a Flat Tyre

The kit should not be used in the following situations. Instead, contact a dealer or roadside assistant to have the vehicle towed.

- The tyre sealant has expired.
- More than one tyre is punctured.
- The puncture or cut is larger than 4 mm.
- The tyre side wall is damaged or the puncture is outside the tyre area.


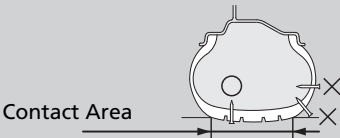


When the puncture is:	Kit Use
Smaller than 4 mm	Yes
Larger than 4 mm	No

- Damage has been caused by driving with the tyres extremely under inflated.
- The tyre bead is no longer seated.
- The rim is damaged.

Do not remove a nail or screw that punctured the tyre. If you remove it from the tyre, you may not be able to repair the puncture using the kit.

■ Getting Ready to Temporarily Repair the Flat Tyre


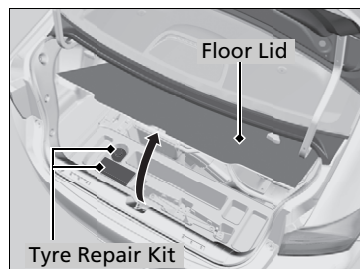
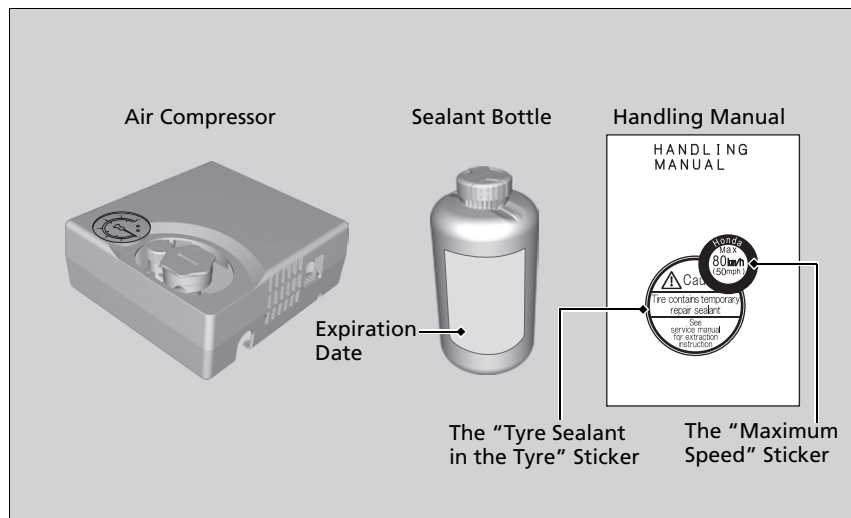


1. Open the boot floor lid.
2. Take the kit out of the tool box.
3. Place the kit, face up, on flat ground near the flat tyre, away from traffic. Do not place the kit on its side.

►► Getting Ready to Temporarily Repair the Flat Tyre

When making a temporary repair, carefully read the instruction manual provided with the kit.

■ Injecting the Sealant and Air in the Tyre

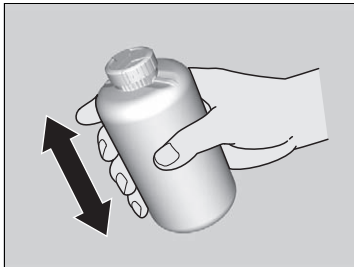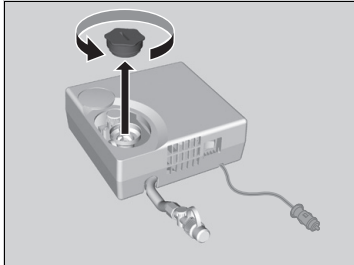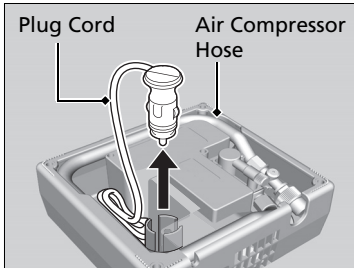

1. Take the air compressor hose and plug cord out of the back of the air compressor.

2. Remove the cap from the air compressor.

3. Shake the bottle well.

► Injecting the Sealant and Air in the Tyre

⚠ WARNING

Tyre sealant contains substances that are harmful and can be fatal if swallowed.


If accidentally swallowed, do not induce vomiting. Drink plenty of water and get medical attention immediately.

For skin or eye contact, flush with cool water and get medical attention if necessary.


Keep the sealant bottle out of the reach of children.

In cold temperatures, the sealant may not flow easily. In this situation, warm it by keeping the bottle in the passenger compartment before using.


The sealant can permanently stain clothing and other materials. Be careful during handling and wipe away any spills immediately.

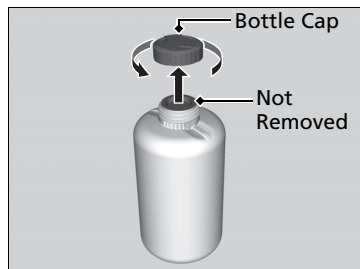

4. Remove the bottle cap.
 - Do not remove the sealed cover.

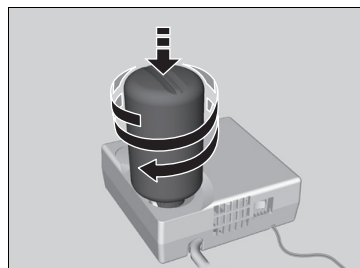

5. Screw the sealed bottle onto the air compressor.
 - Screw the bottle tightly so that it does not become loose.


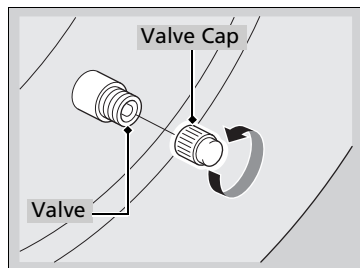


6. Unscrew the valve cap.

►► Injecting the Sealant and Air in the Tyre

Do not remove the empty bottle after injecting the sealant.

See a Honda dealer for a replacement of sealant bottle and proper disposal of the empty bottle.

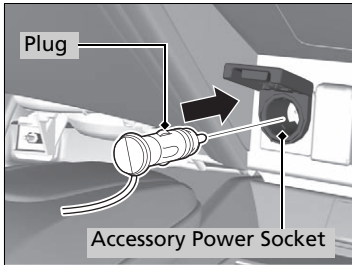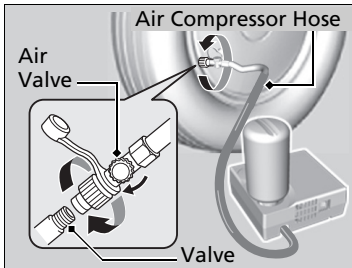

7. Screw the air compressor hose onto the tyre valve.
► Make sure the air valve is closed and the air compressor is turned off.
8. Plug in the compressor to the accessory power socket.
➤ **Accessory Power Sockets** P. 164
9. Turn the power system on.
➤ **Carbon Monoxide Gas** P. 71

Injecting the Sealant and Air in the Tyre

⚠ WARNING

Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid build-up of toxic carbon monoxide.


Breathing this colourless, odourless gas can cause unconsciousness and even death. Only run the engine to power the air compressor with the vehicle outdoors.

Turn the air compressor off when connecting the air compressor hose.

You hear a motor sound coming from the activated air compressor. This is normal.

If the required air pressure is not reached within 10 minutes, the tyre may be too severely damaged for the kit to provide the necessary seal and your vehicle will need to be towed.

If you want to measure the air pressure using a gauge, turn the air compressor off first.

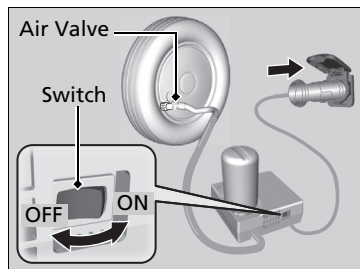

10. Turn on the air compressor and inflate the tyre to the required air pressure.

- The compressor starts injecting sealant and air into the tyre.
- Refer to the driver's doorjamb label for the specified pressure.

11. After the air pressure reaches to specified pressure, turn off the compressor.

- Check the air pressure gauge on the air compressor.
- If overinflated, release the air by turning the air valve. Be careful not to spill any sealant.

12. Unplug the plug from the accessory power socket.

13. Unscrew the air compressor hose from the tyre valve. Install the hose cap.

- Be careful not to spill any sealant when the hose is disconnected. Wipe away any spills.

14. Apply the wheel label to the flat surface of the wheel.

- The wheel surface must be clean to ensure the label adheres properly.

15. Store the tyre repair kit in the boot.


- Do not remove the sealant bottle from the air compressor.

►► Injecting the Sealant and Air in the Tyre


Inform the use of tyre sealant when you ask a Honda dealer or the road assistant service for replacing or repairing the flat tyre.

This air compressor is designed for the automotive tyre. Check the following:

- The power supply of the air compressor is limited to your vehicle's 12-volt DC accessory power socket.
- Do not operate the temporary tyre repair kit compressor for more than 15 minutes. The compressor can overheat and become permanently damaged. Make it cool down when using the compressor continuously.

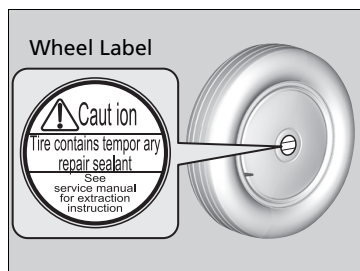

Distributing the Sealant in the Tyre

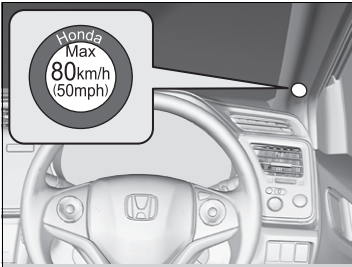


1. Apply the speed limit label to the location as shown.
2. Drive the vehicle for about 10 minutes or 5 km.
► Do not exceed 80 km/h (50 mph).
3. Stop the vehicle at a safe place.
4. Check the air pressure using the gauge on the air compressor.
► Do not turn the air compressor on to check the pressure.

⚠ Distributing the Sealant in the Tyre

⚠ WARNING

Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid build-up of toxic carbon monoxide.

Breathing this colourless, odourless gas can cause unconsciousness and even death. Only run the engine to power the air compressor with the vehicle outdoors.

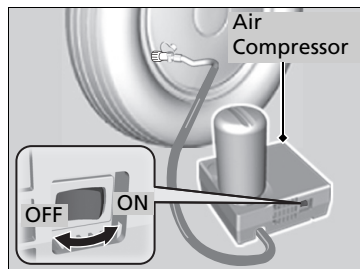

5. If the air pressure is

- Less than 130 kPa (19 psi): Do not add air and continue driving. The leak is too severe. Call for help and have your vehicle towed.

❏ **Emergency Towing** P. 297

- Required air pressure (See the label on driver's doorjamb.) or more: Continue driving until you reach the nearest service station. Do not exceed 80 km/h (50 mph).
- Greater than 130 kPa (19 psi), but less than required air pressure (See the label on driver's doorjamb.): Inflate the tyre to the required air pressure.

❏ **Inflating an Under-inflated Tyre**

P. 275

And repeat steps 2 to 4 until you reach the nearest service station. Do not exceed 80 km/h (50 mph).

6. Repackage and properly stow the kit.



❏ **Distributing the Sealant in the Tyre**

Make sure to store the air compressor with the empty bottle in the boot.

Refer to the driver's doorjamb label for the specified pressure.

■ Inflating an Under-inflated Tyre

You can use the kit to inflate a non-punctured under-inflated tyre.

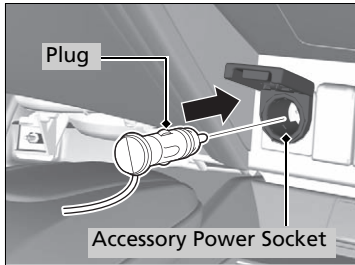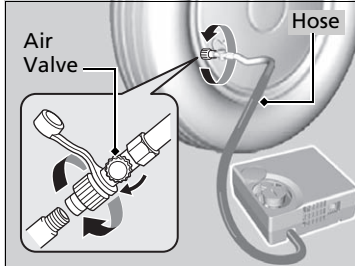

1. Take the air compressor out of the boot.
2. Place the kit, face up, on flat ground near the tyre to inflate, away from traffic. Do not place the kit on its side.
3. Remove the valve cap.
4. Attach the hose onto the tyre valve. Screw it until it is tight.
 - Make sure the air valve is closed.
5. Plug in the compressor to the accessory power socket.
 - Be careful not to pinch the cord in a door or window.
6. Turn the power system on.

► **Accessory Power Sockets** P. 164

► **Carbon Monoxide Gas** P. 71


►► Inflating an Under-inflated Tyre

⚠ WARNING

Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid build-up of toxic carbon monoxide.

Breathing this colourless, odourless gas can cause unconsciousness and even death. Only run the engine to power the air compressor with the vehicle outdoors.

You hear a motor sound coming from the activated air compressor. This is normal.

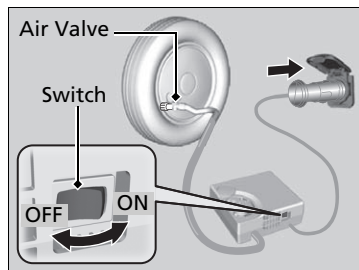

7. Turn on the air compressor and inflate the tyre to the required air pressure (See the label on driver's doorjamb.)
8. Turn off the air compressor.
 - Check the air pressure gauge on the air compressor.
 - If overinflated, turn the air valve to deflate.
9. Turn the power system off, then unplug the air compressor from the accessory power socket.
10. Unscrew the air compressor hose from the tyre valve. Reinstall the valve cap.
11. Store the air compressor in the boot.

►► Inflating an Under-inflated Tyre


This air compressor is designed for the automotive tyre. Check the following:

- The power supply of the air compressor is limited to your vehicle's 12-volt DC accessory power socket.
 - Do not operate the temporary tyre repair kit compressor for more than 15 minutes. The compressor can overheat and become permanently damaged.
- Make it cool down when using the compressor continuously.

If you want to measure the air pressure using a gauge, turn the air compressor off first.

Handling of the jack

How to Set Up the Jack

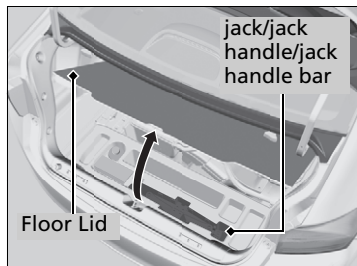

1. Park the vehicle on firm, level, non-slippery surface and apply the parking brake.
2. Change the gear position to **P**.
3. Turn on the hazard warning lights and set the power mode to VEHICLE OFF (LOCK).
4. Open the boot floor lid.
5. Take the jack, jack handle and jack handle bar out of the boot.


How to Set Up the Jack

⚠ WARNING

The vehicle can easily roll off the jack, seriously injuring anyone underneath.

Follow the directions for changing a tyre exactly, and no person should place any portion of their body under a vehicle that is supported by a jack.


WARNING: The jack shall be placed on a flat and stable surface on the same level as the vehicle is parked.

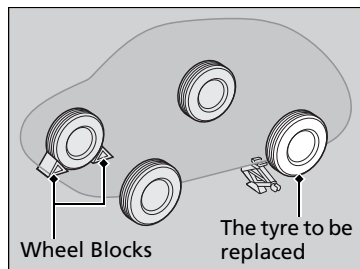

6. Place a wheel block or rock in front and rear of the wheel diagonal to the flat tyre.

►► How to Set Up the Jack

The position to use a jack as follows:


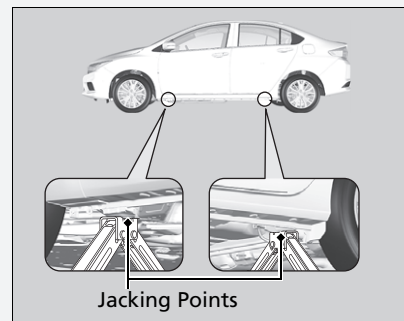


Do not use the jack with people or luggage in the vehicle.

Use the jack provided in your vehicle.
Other jacks may not support the weight ("load") or may not fit the jacking point.

The following instructions must be followed to use the jack safely:

- Do not use while the power system is on.
- Use only where the ground is firm and level.
- Use only at the jacking points.
- Do not get in the vehicle while using the jack.
- Do not put anything on top of or underneath the jack.

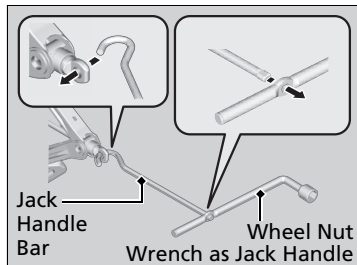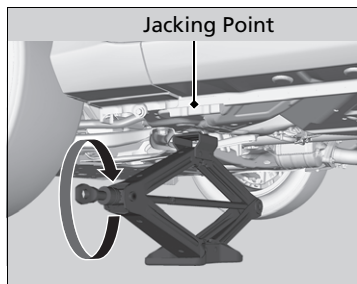

7. Turn the end bracket clockwise as shown in the image until the top of the jack contacts the jacking point.
► Make sure that the jacking point tab is resting in the jack notch.
8. Raise the vehicle, using the jack handle bar and the jack handle, until the tyre is off the ground.

Checking the Procedure

When the **READY** indicator does not come on and the **Ready to Drive** message does not appear on the multi-information display, check the following items and take appropriate action.

☞ Checking the Procedure

If you must start the vehicle immediately, use an assisting vehicle or booster battery to jump start it.

☞ **Jump Starting** P. 283


Checklist	Condition	What to Do
Check if the related indicator or multi-information display messages come on.	The To Start, Hold Remote Near Start Button message appears. ▶ Make sure the keyless access remote is in its operating range. ☞ POWER Button Operating Range P. 137	☞ If the Keyless Remote Battery is Weak P. 281
	The POWER SYSTEM indicator comes on.	Have your vehicle checked by a dealer.
	The transmission indicator blinks and Check System. Apply Parking Brake When Parked. message appears.	The power system can be activated as a temporary measure. ☞ If the Transmission Indicator Blinks along with the Warning Message P. 289
Check the brightness of the interior lights.	The interior lights are dim or do not come on at all.	Have the 12-volt battery checked by a dealer.
	The interior lights come on normally.	Check all fuses, or have your vehicle checked by a dealer. ☞ Inspecting and Changing Fuses P. 296
Check the gear position.	The transmission is not in P .	Press the P button.
Check the power system starting procedure. Follow the instructions, and try to start the power system again.		☞ Turning on the Power P. 181
Check the immobilizer system indicator.	When the immobilizer system indicator is blinking, the power system cannot be turned on.	☞ Immobilizer System Indicator P. 86

If you cannot turn on the power system after checking all the items in the list above, have your vehicle checked by a dealer.


If the Keyless Remote Battery is Weak

If the beeper sounds, the **To Start, Hold Remote Near Start Button** message appears on the multi-information display, and the **POWER** button flashes, the **READY** indicator does not come on.

Turn on the power system as follows:

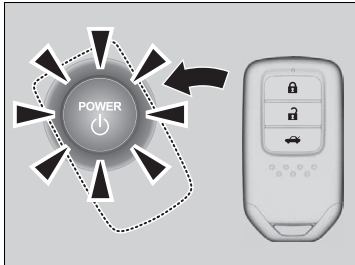

1. Touch the centre of the **POWER** button with the **H** logo on the keyless remote while the **POWER** button is flashing. The buttons on the keyless remote should be facing you.
 - ▶ The **POWER** button flashes for about 30 seconds.

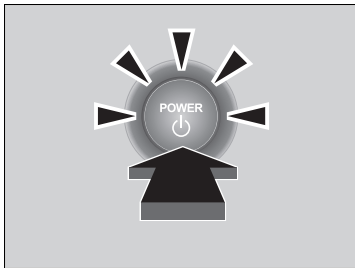

2. Depress the brake pedal and press the **POWER** button within 10 seconds after the beeper sounds and the **POWER** button changes from flashing to on.
 - ▶ The **READY** indicator comes on.
 - ▶ If you don't depress the pedal, the mode will change to ACCESSORY.

Emergency Power System Off

The **POWER** button may be used to turn the power system off due to an emergency situation even while driving. If you must turn the power system off, do either of the following operations:

- Press and hold the **POWER** button for two seconds.
- Firmly press the **POWER** button three times.

The steering wheel will not lock.



The gear position automatically changes to **P** after the vehicle comes to a complete stop. Then, the power mode changes to VEHICLE OFF.

Emergency Power System Off

Do not press the button while driving unless it is absolutely necessary for the power system to be turned off.

Jump Starting Procedure

Turn off the power to electric devices, such as audio and lights. Turn off the power system, then open the bonnet.

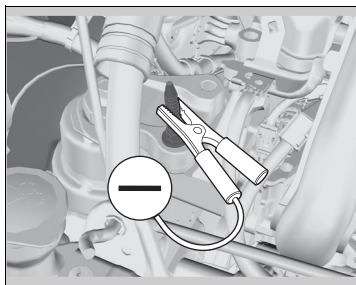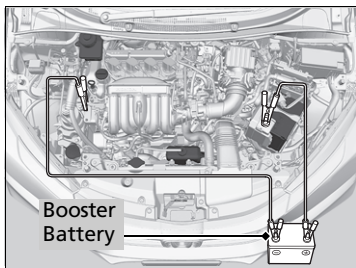

1. Connect the first jumper cable to your vehicle's 12-volt battery \oplus terminal.
2. Connect the other end of the first jumper cable to the booster battery \oplus terminal.
► Use a 12-volt booster battery only.
When using a vehicle charger, set the voltage to 15 volt or less.
3. Connect the second jumper cable to the booster battery \ominus terminal.
4. Connect the other end of the second jumper cable to the engine mounting bolt as shown. Do not connect this jumper cable to any other part.
5. If your vehicle is connected to another vehicle, start the assisting vehicle's engine and increase its rpm slightly.
6. Attempt to start your vehicle's engine. If it turns over slowly, check that the jumper cables have good metal-to-metal contact.

Jump Starting

⚠ WARNING

A 12-volt battery can explode if you do not follow the correct procedure, seriously injuring anyone nearby.

Keep all sparks, open flames, and smoking materials away from the 12-volt battery.

NOTICE

If a 12-volt battery sits in extreme cold, the electrolyte inside can freeze. Attempting to jump start with a frozen 12-volt battery can cause it to rupture.

Securely attach the jumper cables clips so that they do not come off when the engine vibrates. Also be careful not to tangle the jumper cables or allow the cable ends to touch each other while attaching or detaching the jumper cables.

12-volt battery performance degrades in cold conditions and may prevent the engine from starting.

■ What to Do After the Engine Starts

Once your vehicle's engine has started, remove the jumper cables in the following order.

1. Disconnect the jumper cable from your vehicle's ground.
2. Disconnect the other end of the jumper cable from the booster battery \ominus terminal.
3. Disconnect the jumper cable from your vehicle's 12-volt battery \oplus terminal.
4. Disconnect the other end of the jumper cable from the booster battery \oplus terminal.

Have your vehicle inspected by a nearby service station or a dealer.

How to Handle Overheating

Overheating symptoms are as follows:

- The high temperature indicator comes on or the engine suddenly loses power.
- **Avoid Acceleration and High Speed. Engine Temperature Near Limit** message appears on the multi-information display.
- **Stop Driving When Safe. Engine Temperature Too Hot** message appears on the multi-information display.
- Steam or spray comes out of the engine compartment.

■ First thing to do

1. Immediately park the vehicle in a safe place.
2. Turn off all accessories and turn on the hazard warning lights.
 - ▶ **No steam or spray present:**
Keep the power system on and open the bonnet.
 - ▶ **Steam or spray is present:**
Turn off the power system and wait until it subsides. Then, open the bonnet.

How to Handle Overheating

WARNING


Steam and spray from an overheated engine can seriously scald you.

Do not open the bonnet if steam is coming out.

NOTICE

Continuing to drive with the high temperature indicator on may damage the engine.

■ Next thing to do

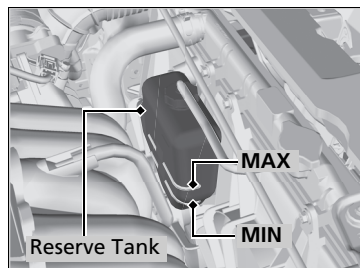

1. Check that the cooling fan is operating and turn the power system off once high temperature indicator goes off.
 - If the cooling fan is not operating, immediately turn the power system off.
2. Once the engine has cooled down, inspect the coolant level and check the cooling system components for leaks.
 - If the coolant level in the reserve tank is low, add coolant until it reaches the **MAX** mark.
 - If there is no coolant in the reserve tank, check that the radiator is cool. Cover the radiator cap with a heavy cloth and open the cap. If necessary, add coolant up to the base of the filler neck, and put the cap back on.

■ Last thing to do

Once the engine has cooled sufficiently, restart it and check the high temperature indicator.

If the high temperature indicator is off, resume driving. If it stays on, contact a dealer for repairs.

►► How to Handle Overheating

⚠ WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

If the coolant is leaking, contact a dealer for repairs.

Use water as an emergency/temporary measure only. Have a dealer flush the system with proper antifreeze as soon as possible.

If the Low Oil Pressure Indicator Comes On



■ Reasons for the indicator to come on

Comes on when the engine oil pressure is low.

■ What to do as soon as the indicator comes on

1. Immediately park the vehicle on level ground in a safe place.
2. If necessary, turn the hazard warning lights on.

■ What to do after parking the vehicle

1. Turn the power system off and let it sit for about three minutes.
2. Open the bonnet and check the oil level.
 - 🔧 **Oil Check** P. 227
3. Turn the power system on and check the low oil pressure indicator.
 - ▶ The indicator goes off: Start driving again.
 - ▶ The indicator does not go off within 10 seconds: Turn the power system off and contact a dealer for repairs immediately.

If the 12-volt battery Charging System Indicator Comes On



■ Reasons for the indicator to come on

Comes on when the 12-volt battery is not being charged.

■ What to do when the indicator comes on

Turn off the climate control system, rear demister, and other electrical systems, and immediately contact a dealer for repairs.

⚠ If the Low Oil Pressure Indicator Comes On

NOTICE

Running the engine with low oil pressure can cause serious mechanical damage almost immediately.

If the Malfunction Indicator Lamp Comes On or Blinks



■ Reasons for the indicator lamp to come on or blink

- Comes on when there is a problem with the engine emissions control system.
- Blinks when engine misfiring is detected.

■ What to do when the indicator lamp comes on

Avoid high speeds and immediately get your vehicle inspected at a dealer.

■ What to do when the indicator lamp blinks

Park the vehicle in a safe place with no flammable items and wait at least 10 minutes or more with the engine stopped until it cools.

►► If the Malfunction Indicator Lamp Comes On or Blinks

NOTICE

If you drive with the malfunction indicator lamp on, the emissions control system and the engine could be damaged.

If the malfunction indicator lamp blinks again next time the engine starts, drive to the nearest dealer at 50 km/h or less. Have your vehicle inspected.

If the Brake System Indicator (Red) Comes On



■ Reasons for the indicator to come on

- The brake fluid is low.
- There is a malfunction in the brake system.

■ What to do when the indicator comes on while driving

Depress the brake pedal lightly to check pedal pressure.

- If normal, check the brake fluid level the next time you stop.
- If abnormal, take immediate action. If necessary, downshift the transmission to slow the vehicle using engine braking.

►► If the Brake System Indicator (Red) Comes On

Have your vehicle repaired immediately. It is dangerous to drive with low brake fluid. If there is no resistance from the brake pedal, stop immediately in a safe place. If necessary downshift the gears.

If the brake system indicator and **ABS** indicator come on simultaneously, the electronic brake distribution system is not working. This can result in vehicle instability under sudden braking. Have your vehicle inspected by a dealer immediately.

If both red and amber brake system indicators come on, stop the vehicle in a safe place and have it inspected by a dealer immediately.

If the Electric Power Steering (EPS) System Indicator Comes On



■ Reasons for the indicator to come on

- Comes on when there is a problem with the EPS system.
- If you depress the accelerator pedal repeatedly to increase the engine speed while the engine is idling, the indicator comes on, and sometimes the steering wheel becomes harder to operate.

■ What to do when the indicator comes on

Stop the vehicle in a safe place and turn on the power system again.

If the indicator comes on and stays on, immediately have your vehicle inspected by a dealer.

If the Transmission Indicator Blinks along with the Warning Message



■ Reasons for the indicator to blink

The transmission is malfunctioned.

■ What to do when the indicator blinks

- Immediately have your vehicle inspected by a dealer.
- Change to **[N]** when you turn the power system on.
 - Check if the **[N]** position in the instrument panel and the indicator on the **[N]** button light/blink.
 - The power system cannot be turned on unless the parking brake is set.

➡ **Turning on the Power** P. 181

☒ If the Transmission Indicator Blinks along with the Warning Message

You may not be able to turn on the power system.

Make sure to set the parking brake when parking your vehicle.

Call a professional towing service if you need to tow your vehicle.

➡ **Emergency Towing** P. 297


Fuse Locations

If any electrical devices are not working, set the power mode to VEHICLE OFF (LOCK) and check to see if any applicable fuse is blown.

There are two fuse boxes in the engine compartment.


Engine Compartment Fuse Box (Type A)

Located near the ⊕ terminal on the 12-volt battery.

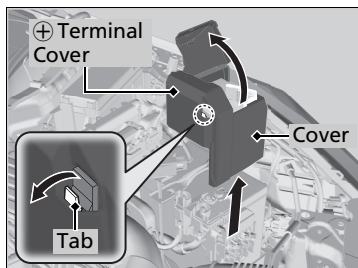

1. Open the ⊕ terminal cover.
2. Remove the cover by pulling the tab as shown.

Replacement of engine compartment fuses should be done by a dealer.

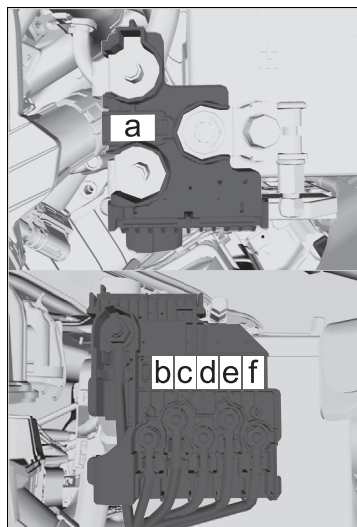


■ Circuit protected and fuse rating

		Circuit Protected	Amps
a		MAIN	170 A
b		RB MAIN 1	60 A
c		RB MAIN 2	80 A
d		DCD	60 A
e		EPS	70 A
f		ESB	40 A

■ Engine Compartment Fuse Box (Type B)

Located in the back of the engine compartment on the left side. Push the tabs to open the box.

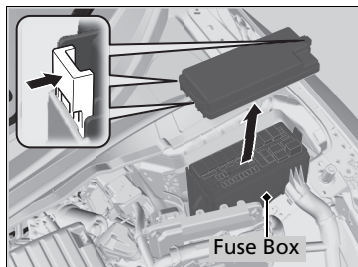

Fuse locations are shown on the fuse box cover.

Locate the fuse in question by the fuse number and box cover mark.


■ Circuit protected and fuse rating

	Circuit Protected	Amps
1	Headlight Low Beam Main	20 A
2	HCA 2	20 A
3	Hazard	10 A
4	DBW	15 A
5	Wiper	(30 A)
6	Stop	10 A
7	IGP	15 A
8	IG COIL	15 A
9	HCA 1	20 A
10	–	(20 A)
11	TCU	30 A
12	Main Fan Motor	30 A
13	ST MAGNETIC SW	(30 A)
14	ENG WATER PUMP	30 A
15	BATT SNSR	(7.5 A)
16	SUB FAN	(20 A)
17	Washer	(15 A)
18	Horn	10 A
19	–	(20 A)
20	DRL	7.5 A

	Circuit Protected	Amps
21	BACKUP MAIN	15 A
22	Interior Lights	(7.5 A)
23 –	–	–
24	–	(40 A)
25	START DIAG	(7.5 A)
26	–	(7.5 A)
27 –	–	–
28	–	(7.5 A)
29	BACK UP	(10 A)
30	IGP LAF	(10 A)
31	IGP2 SUB	(7.5 A)
32	Right Headlight Low Beam	10 A
33	Left Headlight Low Beam	10 A

■ Interior Fuse Box (Type A)

Located under the dashboard.

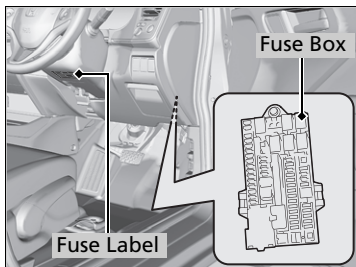





























Fuse locations are shown on the label. Locate the fuse in question by the fuse number and label number.

■ Circuit protected and fuse rating

		Circuit Protected	Amps
a		FR FOG LT RLY OUT	(7.5 A)
b	—	—	—
1	DR	Driver's Power Window	20 A
2		Headlight Hi Beam Right	20 A
3		ABS/VSA FSR	30 A
4		Auto Retra Mirror	(7.5 A)
5		Small Light	10 A
6		Door Lock	20 A
7		Accessory Power Socket (Console Compartment)	(20 A)
8	—	—	—
9		—	(20 A)
10	—	—	—
11	—	—	—
12	—	—	—
13		Accessory Power Socket (Console Compartment)	(20 A)
14		—	(10 A)
15	—	—	—
16	—	—	—


	Circuit Protected		Amps
17	—	—	—
18	—	—	—
19	—	—	—
20	—	—	—
21	—	—	—
22	—	—	—
23		RR DEF	30 A

		Circuit Protected	Amps
24		ABS/VSA MTR	40 A
25	—	—	—
26		Power Window Main	40 A
27		HTR MTR	40 A
28		Front Wiper Lo	7.5 A
29	—	—	—
30		IG Main 2	(7.5 A)
31		—	(7.5 A)
32		Left Headlight High Beam	10 A
33		Right Headlight High Beam	10 A
34		Right Side Door Lock	10 A
35		Left Side Door Lock	10 A
36		Right Side Door Unlock	10 A
37		Left Side Door Unlock	10 A
38		ACC	7.5 A
39		Accessory Power Socket (Front)	20 A
40		Rear Left Power Window	20 A

		Circuit Protected	Amps
41		Rear Right Power Window	20 A
42	AS 	Front Passenger's Power Window	20 A
43		—	(10 A)
44		—	(10 A)
45		MISS SOL	(7.5 A)
46		Meter	7.5 A
47		WIPER/WASHER (RLY)	7.5 A
48		SRS	(10 A)
49	—	—	—
50	—	—	—
51		ST CUT RLY	(7.5 A)
52		IG1 OPTION	(10 A)
53		VSA/ABS	(7.5 A)
54		ACG	(10 A)
55		Fuel Pump	(15 A)


Interior Fuse Box (Type B)

Located of the Dust and Pollen Filter left side inside the glove box.
When you remove the glove box, use the following procedure.

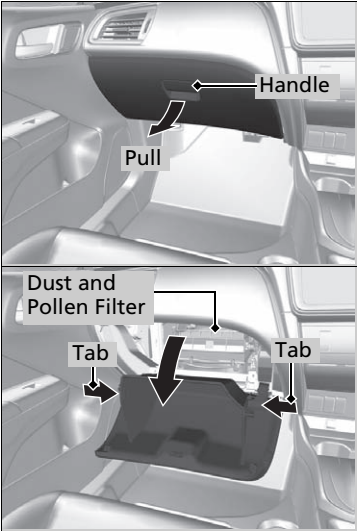

- 1. Open the glove box.
- 2. Disengage the two tabs by pushing on each side panel.




Fuse locations are shown on the label.
Locate the fuse in question by the fuse number and label number.

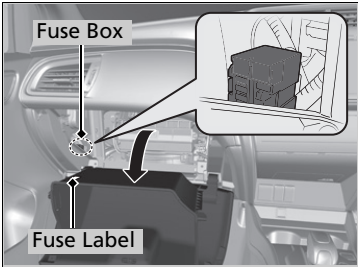

■ Circuit protected and fuse rating

		Circuit Protected	Amps
1		IG MAIN	(30 A)
2		SBW	10 A
3		SMART	(10 A)
4		IMA 1	10 A
5	—	—	—
6		IG MAIN 2	(30 A)
7		IMA 2	15 A
8	—	—	—

Inspecting and Changing Fuses

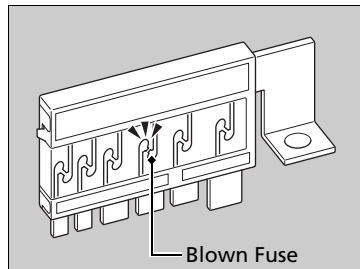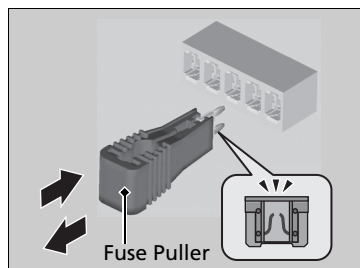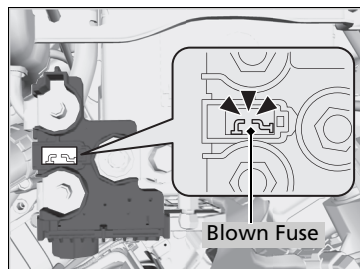

1. Set the power mode to VEHICLE OFF (LOCK). Turn headlights and all accessories off.
2. Remove the fuse box cover.
3. Check the large fuse in the engine compartment.
 - If the fuse is blown, use a Phillips-head screwdriver to remove the screw and replace it with a new one.
4. Inspect the small fuses in the engine compartment.
 - If there is a blown fuse, remove it with the fuse puller and replace it with a new one.
5. Check the large fuse in the vehicle interior.
 - If the fuse is blown, use a phillips-head screwdriver to remove the screw and replace it with a new one.
6. Inspect the small fuses in the vehicle interior.
 - If there is a blown fuse, remove it with the fuse puller and replace it with a new one.

Inspecting and Changing Fuses

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chances of damaging the electrical system.

Replace fuse with a spare fuse of the same specified amperage.

Use the charts to locate the fuse in question and confirm the specified amperage.

► **Fuse Locations** P. 290, 292, 293, 295

There is a fuse puller on the back of the type B engine compartment fuse box cover.

Call a professional towing service if you need to tow your vehicle.

■ Flat bed equipment

The operator loads your vehicle on the back of a truck.

This is the best way to transport your vehicle.

■ Wheel lift equipment

The tow truck uses two pivoting arms that go under the front tyres and lift them off the ground. The rear tyres remain on the ground. **This is an acceptable way to tow your vehicle.**

🚚 Emergency Towing

NOTICE

Trying to lift or tow your vehicle by the bumpers will cause serious damage. The bumpers are not designed to support the vehicle's weight.

Never tow your vehicle with just a rope or chain. It is very dangerous, since ropes or chains may shift from side to side or break.



Information

This chapter includes your vehicle's specifications, locations of identification numbers, and other information required by regulation.

Specifications 300

Identification Numbers

Vehicle Identification Number (VIN),
Engine Number, Motor Number and
Transmission Number 302

■ Vehicle Specifications

Model	CITY
Curb Weight	1,118 kg
Maximum Permissible Weight	1,580 kg

■ Engine Specifications

Type	Water cooled 4-stroke DOHC i-VTEC in line, 4-cylinder petrol engine	
Bore x Stroke	73.0 x 89.4 mm	
Displacement	1,496 cm ³	
Compression ratio	13.5 : 1	
Spark Plugs	NGK	DILZKAR7C11S
	DENSO	DXE22HCR11S

■ Fuel

Fuel:	Unleaded petrol, Research octane number
Type	of 91 or higher
Fuel Tank Capacity	40 L

■ 12-volt Battery

Capacity	28AH(5)/35AH(20)
----------	------------------

■ Washer Fluid

Tank Capacity	1.8 L
---------------	-------

■ Light Bulbs

Headlights	High beam	60 W (HB3)
	Low beam	55 W (H11)
Front Turn Signal Lights	21 W (Amber)	
Position Lights	LED	
Daytime Running Lights	LED	
Side Turn Signal Lights (on Door Mirrors)	LED	
Brake/Taillights	LED	
Taillights	LED	
Rear Side Marker Lights	LED	
Rear Turn Signal Lights	21 W (Amber)	
Back-Up Lights	16 W	
High-Mount Brake Light	21 W	
Rear Licence Plate Lights	5 W	
Interior Lights	Map Light	8 W
	Ceiling Light	8 W
	Boot Light	5 W

■ Brake Fluid

Specified	Brake Fluid with DOT 3 or DOT 4
-----------	---------------------------------

■ Dual Clutch Transmission Fluid

Specified	Honda ATF DW-1 (automatic transmission fluid)
Capacity	Change 1.3 L

■ Engine Coolant

Specified	Honda All Season Antifreeze/Coolant Type2
Ratio	50/50 with distilled water
Capacity	3.69 L (change including the remaining 0.44 L in the reserve tank)

■ Engine Oil

Recommended	Genuine Honda Motor Oil API service SM or higher grade 0W-20, 0W-30, 5W-30, 10W-30
	Change 3.1 L
Capacity	Change including filter 3.3 L

■ Tyre

	Size	185/55R16 83H
Regular	Pressure	See the label on driver's doorjamb.
Wheel Size	Regular	16 x 6J

■ Brake

Type	Power assisted
Front	Ventilated disc
Rear	Drum
Parking	Mechanical

■ Air Conditioning

Refrigerant Type	HFC-134a (R-134a)
Charge Quantity	405-455 g


■ Vehicle Dimensions

Length	4,442 mm
Width	1,694 mm
Height	1,477 mm
Wheelbase	2,600 mm
Track	Front 1,476 mm Rear 1,465 mm

Vehicle Identification Number (VIN), Engine Number, Motor Number and Transmission Number


Your vehicle has a 17-digit vehicle identification number (VIN) used to register your vehicle for warranty purposes, and for licensing and insuring your vehicle.

The locations of your vehicle's VIN, engine number, motor number and transmission number are shown as follows.

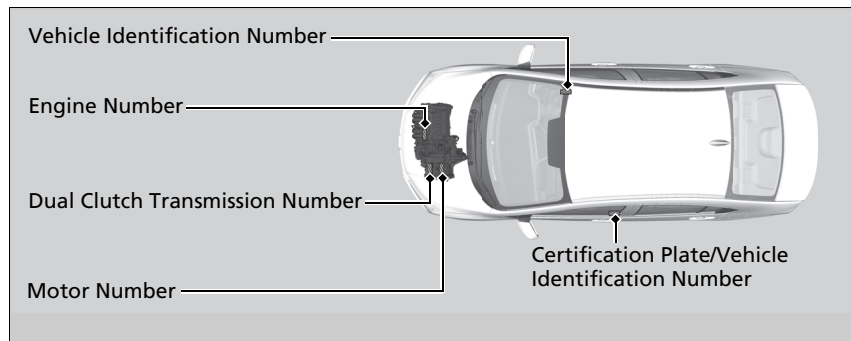

Vehicle Identification Number (VIN), Engine Number, Motor Number and Transmission Number

The interior vehicle identification number (VIN) is located under the cover.

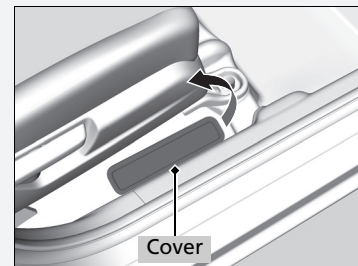

A

ABS (Anti-lock Brake System)	205
Accessories and Modifications	263
Accessory Power Sockets	164
Acoustic Vehicle Alerting System	195
Adding	
Coolant	229
Engine Oil	228
Washer	233
Additives, Engine Oil	226
Adjusting	
Armrest	158
Front Seats	151
Headlights	143
Mirrors	148
Rear Seats	157
Steering Wheel	147
Temperature	99
Air Conditioning System (Climate Control System)	166
Changing the Mode	166
Defrosting the Windscreen and Windows	168
Dust and Pollen Filter	256
Recirculation/Fresh Air Mode	166, 167
Sensors	171
Using Automatic Climate Control	166
Air Conditioning System (Heating and Cooling System)	
Dust and Pollen Filter	256
Air Pressure	301

Airbags	43
After a Collision	46
Airbag Care	51
Event Data Recorder	1
Front Airbags (SRS)	45
Indicator	50, 81
Sensors	43
Side Airbag	48
Anti-lock Brake System (ABS)	205
Indicator	81
Armrest	158
Automatic Climate Control Sensors	171
Average Fuel Economy	102
Average Fuel Economy Records	104
Average Speed	103

B

Battery	252
Charging System Indicator	77, 287
Jump Starting	283
Maintenance (Checking the 12-volt Battery)	252
Belts (Seat)	34
Beverage Holders	162
Booster Seats (For Children)	69
Boot	129
Lid	129
Light Bulb	241
Brake System	203
Anti-lock Brake System (ABS)	205

Brake Assist System	206
Fluid	232
Foot Brake	204
Indicator	74, 75, 288
Parking Brake	203
Brake System Indicator (Amber)	75
Brake System Indicator (Red)	74
Brightness Control (Instrument Panel)	145
Bulb Replacement	234
Back-Up Lights	238
Boot Light	241
Brake/Taillight and Rear Side Marker Lights	237
Ceiling Light	241
Daytime Running Lights	236
Front Turn Signal Lights	236
Headlights	234
High-Mount Brake Light	240
Interior Lights	241
Map Light	241
Position Lights	236
Rear Licence Plate Lights	239
Rear Turn Signal Lights	237
Side Turn Signal Lights	236
Taillights	238
Bulb Specifications	300

C

Carbon Monoxide Gas	71
Carrying Luggage	177, 179

Certification Label	302
Changing Bulbs	234
Charging System Indicator	77, 287
Child Restraint System	52
Booster Seats	69
Child Restraint System for Infants	56
Child Restraint System for Small Children	58
Installing a Child Restraint System with a Lap/Shoulder Seat Belt	65
Larger Children	68
Rearward Facing Child Restraint System	56
Selecting a Child Restraint System	59
Using Tether	67
Child Safety	52
Childproof Door Locks	128
Cleaning the Exterior	260
Cleaning the Interior	258
Climate Control System	166
Changing the Mode	166
Defrosting the Windscreen and Windows	168
Dust and Pollen Filter	256
Recirculation/Fresh Air Mode	166, 167
Sensors	171
Using Automatic Climate Control	166
Clock	116
Console Compartment	161
Controls	115
Coolant (Engine)	229
Adding to the Radiator	230
Adding to the Reserve Tank	229

Overheating	285
Creeping (Dual Clutch Transmission)	185
Cruise Control	196
Cup Holders	162
Customized Features	108

D

Daytime Running Lights	142
Dead Battery	283
Defrosting the Windscreen and Windows	168
Dimming	
Headlights.....	141
Dipstick (Engine Oil)	227
Directional Signals (Turn Signals)	140
Door Mirrors	149
Doors	118
Door/Boot Open Indicator	33
Keys.....	118
Locking/Unlocking the Doors from the Inside	126
Locking/Unlocking the Doors from the Outside	121
Lockout Prevention System	125
Drive Cycle Score/Lifetime Points	107
Driving	175
Braking	203
Cruise Control.....	196
Dual Clutch Transmission	185
Shifting	186

Turning on the Power	181
Dual Clutch Transmission	185
Creeping.....	185
Fluid	231
Kickdown	185
Operating the Shift Lever	188
Sequential Mode.....	191
Shifting.....	186
Dust and Pollen Filter	256

E

Eco Assist System	12
Eco Drive Display	106
ECON Button	193
Elapsed Time	102
Electric Power Steering (EPS) System	
Indicator	84, 289
Emergency	297
Emergency Stop Signal	207
Engine	
Coolant	229
Jump Starting	283
Number	302
Oil	226
Starting	181
Switch Buzzer	137
Engine Coolant	229
Adding to the Radiator	230
Adding to the Reserve Tank	229
Overheating	285

Engine Oil	226
Adding	228
Checking	227
Low Oil Pressure Indicator	76, 287
Recommended Engine Oil	226
EPS (Electric Power Steering) System	289
Indicator	84
EV Indicator	76
Exhaust Hazard (Carbon Monoxide)	71
Exterior Care (Cleaning)	260
Exterior Mirrors	149

F

Features	173
Filter	
Dust and Pollen.....	256
Flat Tyre	267
Fluids	
Brake	232
Dual Clutch Transmission	231
Engine Coolant	229
Windscreen Washer	233
Folding Down the Rear Seats	157
Foot Brake	204
Front Airbags (SRS)	45
Front Seats	151
Adjusting.....	151
Fuel	23, 211
Fuel Economy and CO ₂ Emissions.....	213
Gauge	103

Instant Fuel Economy.....	103
Range.....	102
Recommendation	211
Refueling.....	211
Fuel Economy and CO₂ Emissions	213
Fuel Fill Cap	23, 212
Fuel Fill Door	23, 212
Fuses	290
Inspecting and Changing.....	296
Locations.....	290, 292, 293, 295

G

Gasoline (Fuel)	
Instant Fuel Economy.....	103
Gauges	99
Glass (care)	258, 261
Glove Box	161

H

Halogen Bulbs	234
Hazard Warning Button	4
Headlights	141
Adjuster	143
Aiming	234
Dimming	141
Operating.....	141
Heating and Cooling System	
Dust and Pollen Filter.....	256
High Temperature Indicator (Red)	83

High Voltage Battery	201
High-Beam Indicator	85
Hybrid Vehicle	
SPORTS HYBRID i-DCD (intelligent Dual Clutch Drive)	9

I

Identification Numbers	302
Engine, Motor and Transmission.....	302
Vehicle Identification	302
Illumination Control	
Knob.....	145
Immobilizer System	131
Indicator.....	86
Indicators	74
Anti-lock Brake System (ABS).....	81
Brake System (Amber)	75
Brake System (Red).....	74
Charging System	77
Cruise Control.....	86, 197
Cruise Main.....	86, 196, 197
ECON Mode.....	87
Electric Power Steering (EPS) System.....	84
EV	76
Hazard Warning	85
High Temperature (Red)	83
High-Beam	85
Immobilizer System	86
Keyless Access System	87
Lights On	85

Low Oil Pressure	76	Keyless Access System		Lubricant Specifications Chart	301
Low Temperature (Blue).....	83	Indicator.....	87	Luggage (Load Limit).....	179
Malfunction Indicator Lamp	77	Keys	118		
Parking Brake and Brake System	74	Lockout Prevention.....	125	M	
POWER SYSTEM	75	Number Tag	119	Maintain a Proper Sitting Position	156
READY.....	76	Rear Door Won't Open.....	128	Maintenance	215
S Mode.....	76, 194	Remote Transmitter	121	Battery.....	252
Seat Belt Reminder	78	Types and Functions	118	Brake Fluid	232
Security System Alarm	86	Kickdown (Dual Clutch Transmission)	185	Cleaning	258
Shift Position	79			Climate Control	256
Supplemental Restraint System	81	L		Coolant	229
System Message	84	Light Switches.....	141	Heating and Cooling System	256
Transmission.....	79, 80	Lights.....	141, 234	Oil	227
Turn Signal	85	Bulb Replacement	234	Precautions	216
Vehicle Stability Assist (VSA) OFF.....	82, 200	High-Beam Indicator.....	85	Radiator	230
Vehicle Stability Assist (VSA) System...	82, 199	Interior.....	159	Remote Transmitter	255
Instant Fuel Economy	103	Lights On Indicator	85	Replacing Light Bulbs	234
Instrument Panel	73	Turn Signals	140	Safety	217
Brightness Control	145	Load Limits.....	179	Transmission Fluid	231
Interior Convenience Items	161	Locking/Unlocking.....	118	Tyres.....	245
Interior Lights	159	Childproof Door Locks.....	128	Under the Bonnet	224
Interior Rearview Mirror	148	From Inside	126	Malfunction Indicator Lamp	77, 288
		From Outside	121	Map Lights.....	160
J		Keys	118	Maximum Permissible Weight	179
Jack (Wheel Nut Wrench).....	277	Using a Key	124	Meters, Gauges	99
Jump Starting.....	283	Lockout Prevention System	125	Mirrors	148
		Low Battery Charge	287	Adjusting	148
K		Low Oil Pressure Indicator	76, 287	Door	149
Key Number Tag	119	Low Temperature Indicator (Blue)	83	Exterior	149
		Lower Anchorages	62	Interior Rear View	148

Modifications (and Accessories)	263
Multi-Information Display	100

N

Numbers (Identification)	302
--------------------------------	-----

O

Odometer	102
Oil (Engine)	226
Adding	228
Checking	227
Low Oil Pressure Indicator	76, 287
Recommended Engine Oil	226
Viscosity	226

Opening/Closing

Bonnet	225
Boot	129
Power Windows	134

Outside Temperature Display	99
-----------------------------------	----

Overheating	285
-------------------	-----

P

Paddle Shifters (Sequential Mode) ...	21, 191
Parking Brake	203
Parking Brake and Brake System Indicator	288
Parking Brake and Brake System Indicator	74
Parking Sensor System	209

Passing Indicators	141
Petrol	23, 211
Fuel Economy and CO ₂ Emissions	213
Gauge	103
Information	211
Refueling	211

POWER Button	137
Power Door Mirrors	149
POWER SYSTEM Indicator	75

POWER/CHARGE Gauge	99
Precautions While Driving	184
Rain	184
Pregnant Women	40
Puncture (Tyre)	267

R

Radiator	230
Range	102
READY Indicator	76
Rear Demister Button/Icon	146
Rear Seats (Folding Down)	157
Rear View Mirror	148
Refueling	211
Fuel Gauge	103
Petrol	211, 300
POWER/CHARGE Gauge	99
Remote Transmitter	121
Replacement Battery	252

Bulbs	234
Fuses	290, 292, 293, 295
Tyres	267
Wiper Blade Rubber	243
Resetting a Trip Meter	102

S

S Mode	194
S Mode Indicator	194
Safe Driving	29
Safety Check	33
Safety Labels	72
Safety Message	0
Seat Belt Reminder Indicator	78
Seat Belts	34
Checking	41
Fastening	38
Installing a Child Restraint System with a Lap/Shoulder Seat Belt	65
Pregnant Women	40
Reminder	36
Warning Indicator	36, 78
Seats	151
Adjusting	151
Front Seats	151
Rear Seats	157
Security System	131
Immobilizer System Indicator	86
Security System Alarm Indicator	86
SEL/RESET Button	101

Selecting a Child Restraint System.....	59
Sequential Mode	191
Setting the Clock	116
Shift Lever	186
Operation	188
Shift Lever Positions	
Dual Clutch Transmission	186
Shift Position	
Indicator	79, 188
Shifting (Dual Clutch Transmission).....	186
Side Airbags	48
Spark Plugs.....	300
Specifications	300
Specified Fuel	211
Speedometer.....	99
SRS Airbags (Airbags)	45
Starting the Power System.....	181
Does Not Start	280
Engine Switch Buzzer.....	137
Jump Starting	283
Steering Wheel	147
Adjusting	147
Stopping.....	208
Supplemental Restraint System (SRS)	45
Indicator.....	81
Switches (Around the Steering	
Wheel)	4, 5, 137
System Message Indicator	84

T

Temperature

Outside Temperature Display	99
Temperature Sensor	99, 171
Temporarily Repairing a Flat Tyre	267
Time (Setting)	116
Tools.....	266
Towing a Trailer	180
Towing Your Vehicle	
Emergency	297
Transmission	186
Dual Clutch Transmission	186
Fluid	231
Number.....	302
Sequential Mode	191
Shift Position Indicator.....	79, 188
Transmission Indicator	79, 80
Trip Meter	102
Troubleshooting.....	265
Blown Fuse.....	290, 292, 293, 295
Brake Pedal Vibrates.....	26
Buzzer Sounds When Opening Door.....	26
Emergency Towing.....	297
Noise When Braking.....	27
Overheating	285
Power System Won't Start.....	280
Puncture/Flat Tyre.....	267
Rear Door Won't Open.....	26
Warning Indicators	74
Turn Signals	140
Indicators (Instrument Panel)	85

Tyres.....	245
Air Pressure.....	301
Checking and Maintaining	245
Inspection	246
Puncture (Flat Tyre)	267
Rotation.....	249
Tyre Chains.....	250
Wear Indicators.....	247
Winter	250

U

Unlocking the Doors.....	121
Unlocking the Front Doors from the	
Inside.....	126
Utility Pocket.....	165

V

Vanity Mirrors	7
Vehicle Identification Number	302
Vehicle Stability Assist (VSA)	199
Off Button	200
Off Indicator	82
System Indicator	82
Ventilation	166
Viscosity (Oil).....	226, 301
VSA (Vehicle Stability Assist)	199

W

Warning and Information

Messages.....	88
Warning Indicator On/Blinking	287
Warning Labels	72
Watts	300
Wear Indicators (Tyre)	247
Wheel Nut Wrench (Jack Handle)	277
Window Washers	
Adding/Refilling Fluid	233
Switch	144
Windows (Opening and Closing)	134
Windscreen	
Cleaning	258, 261
Defrosting/Defogging	168
Washer Fluid.....	233
Wiper Blades.....	243
Wipers and Washers	144
Winter Tyres	250
Tyre Chains.....	250
Wipers and Washers	144
Checking and Replacing Wiper Blades.....	243
Worn Tyres	245

