As you read this manual, you will find Information that is preceded by a symbol NOTICE. This information is intended to help you avoid damage to your vehicle, other property, or the environment.

Symbols ⚠ 🕮 or ⚠⚠🕮 on labels attached to your vehicle are to remind you to read this owner's manual for proper and safe operation of your vehicle.

⚠ or ⚠⚠ is colour-coded to indicate "danger" (red), "warning" (orange), or "caution" (amber).

➲ **Safety Labels** P. 120

A Few Words About Safety

Your safety, and the safety of others, is very important. And operating this vehicle safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all the hazards associated with operating or maintaining your vehicle. You must use your own good judgement.

You will find this important safety information in a variety of forms, including:

- **Safety Labels** - on the vehicle.
- **Safety Messages** - preceded by a safety alert symbol ⚠ and one of three signal words: **DANGER**, **WARNING**, or **CAUTION**. These signal words mean:

⚠DANGER	You WILL be KILLED or SERIOUSLY HURT if you don't follow instructions.
⚠WARNING	You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.
⚠⚠WARNING	You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.
⚠CAUTION	You CAN be HURT if you don't follow instructions.

- **Safety Headings** - such as Important Safety Precautions.
- **Safety Section** - such as Safe Driving.
- **Instructions** - how to use this vehicle correctly and safely.

This entire book is filled with important safety information - please read it carefully.

Event Data Recorders

Your vehicle is equipped with several devices commonly referred to as Event Data Recorders. They record various types of real time vehicle data such as SRS airbag deployment and SRS system components failure.
This data belongs to the vehicle owner and may not be accessed by anyone else except as legally required or with the permission of the vehicle owner.
However this data may be accessed by Honda, its authorised dealers and authorised repairers, employees, representatives and contractors only for the purpose of the technical diagnosis, research and development of the vehicle.

Service Diagnostic Recorders

Your vehicle is equipped with service-related devices that record information about powertrain performance and driving conditions. The data can be used to help technicians diagnose, repair and maintain the vehicle. This data may not be accessed by anyone else except as legally required or with the permission of the vehicle owner.
However this data may be accessed by Honda, its authorised dealers and authorised repairers, employees, representatives and contractors only for the purpose of the technical diagnosis, research and development of the vehicle.

Vehicle Data Recordings*

This vehicle records the following information as data when the Collision Mitigation Braking System (CMBS) is operated.

- Operational status of each function of the CMBS
- Accelerator / brake pedal operation
- Vehicle speed
- Information such as distance and relative speed of the target identified by the CMBS activated

Honda may obtain and use the recorded data for the purpose of technical diagnosis and research and development of Honda vehicles.
The CMBS does not record images or audio inside the vehicle.
Special tools are required to review or remove data recorded by CMBS.
Disclosure of data
Honda will not disclose or provide the acquired data to third parties with data recorded by CMBS except in the following cases:

- When the owner of the vehicle consents
- When required by law, court order, or similar legally enforceable request
- When the data has been processed to de-identify/anonymise the vehicles/users, such as when aggregate data is provided to research institutions

* Not available on all models

System Updates Terms & Conditions

General

Your vehicle has an application that allows your Display Audio to automatically search for Honda software updates that are specific to your Display Audio and its connected devices (initially every week via Wi-Fi or every four (4) weeks via Telematics Control Unit (TCU)*, queries may occur more or less frequently due to internet outages, retries, direct user action, WAP push from the server, or a change in query policy on the Honda servers). This application periodically transmits to our servers a limited amount of vehicle and device information (Vehicle Identification Number (VIN), the Model Type (MT) Identification Number, Hardware and Software Part Number, Serial Number, Software Version, preferred language, Internet Protocol (IP) address, Transaction Log (alert or update viewing, update download and installation, software status), etc.). When the application finds an update from the server, the application initially asks permission to download and install the update. Where available, in your settings menu you may elect to automatically download and install these updates or you may elect to manually update the system.

When your Display Audio searches our servers for updates or alerts, we will automatically provide you with the opportunity to update your devices or transmit the update or alert directly to your Display Audio. We will also maintain on our servers a log of the updates or alerts that are installed.

Your Personal Data

Should the aforementioned information transmitted to Honda constitute personal information in your region, please note that this information will be treated in strict accordance with the rules and regulations outlined in this notice as well as applicable data protection law.

The terms of our privacy notice are incorporated into these terms by reference and your use of system updates will be subject to the privacy notice. Our privacy notice sets out information about how we and any named third-parties will process any personal data we collect from you or that you provide to us via the application. See the Honda website for further details.

Honda collects, users, and stores your personal data for the reasons set out below:

- to deliver system updates and related services
- to allow us to improve and optimize system updates products and services
- to respond to user questions and complaints
- for internal record keeping
- where necessary for Honda's legitimate interests, as listed below, and where our interests are not overridden by your data protection rights
- as otherwise described in Honda's Privacy Notice and Vehicle Data Privacy Notice

Protecting our legitimate business interests and legal rights includes, but is not limited to, use in connection with compliance, regulatory, auditing, legal claims (including disclosure of such information in connection with legal process or litigation), and other ethics and compliance reporting requirements.

Honda will also convert personal data into anonymous data and use it (normally on an aggregated statistical basis) for uses such as market research and analysis, to improve the system updates, to analyze trends, and to assess the success of software update releases. Aggregated personal information does not personally identify you or any other use of system updates.

Honda may share this data with Honda's worldwide support organization or affiliated Honda companies or other third-parties engaged by Honda for the purposes of rendering support services in connection with system support.

* Not available on all models

This owner's manual should be considered a permanent part of the vehicle and should remain with the vehicle when it is sold.

This owner's manual covers all models of your vehicle. You may find descriptions of equipment and features that are not on your particular model.

The images throughout this owner's manual (including the front cover) that depict features, equipment, Audio/Information screen details, and Meter screens are only examples and may not be representative of your particular model.

The information and specifications included in this publication were in effect at the time of approval for printing. Honda Motor Co., Ltd. reserves the right, however, to discontinue or change specifications or design at any time without notice and without incurring any obligation.

Although this manual is applicable to both right-hand and left-hand drive models, the illustrations contained in this manual mainly refer to the right-hand drive models.

Safe Driving P. 45

For Safe Driving P. 46 Seat Belts P. 51 Airbags P. 65
Safety Labels P. 120

Instrument Panel P. 121

Indicators P. 122 Gauges and Displays P. 146

Controls P. 195

Clock P. 196 Locking and Unlocking the Doors P. 197
Operating the Switches Around the Steering Wheel P. 235
Interior Convenience Items P. 277

Features P. 305

Audio System P. 306 Display Audio P. 308
General Information on the Audio System P. 506

Driving P. 521

Before Driving P. 522 Towing a Trailer P. 526 Off-road Guidelines P. 533
Parking Your Vehicle P. 701 Multi-View Rear Camera* P. 713

Maintenance P. 735

Before Performing Maintenance P. 736
Checking and Maintaining Wiper Blades P. 760
Climate Control System Maintenance P. 775 Cleaning P. 778

Handling the Unexpected P. 787

If a Tyre Goes Flat P. 788 Handling of the Jack P. 804
Shift Lever Does Not Move P. 813 Overheating P. 815
If You Cannot Unlock the Fuel Fill Door P. 835

Information P. 837

Specifications P. 838 Identification Numbers P. 841

Contents

Post-Collision Braking System P. 83 Child Safety P. 84 Exhaust Gas Hazard P. 119

Tailgate P. 214 Security System P. 225 Windows P. 227 Panoramic Roof* P. 231
Mirrors P. 260 Seats P. 264
Climate Control System P. 298

Display Audio with Google built-in P. 407 Audio Error Messages P. 504

When Driving P. 535 Honda SENSING P. 603 Braking P. 691
Multi-View Camera* P. 715 Refueling P. 729 Fuel Economy and CO_2 Emissions P. 733

Maintenance Schedule P. 739 Maintenance Under the Bonnet P. 744 Replacing Light Bulbs P. 757
Checking and Maintaining Tyres P. 764 12-Volt Battery P. 769 Remote Transmitter Care P. 772
Accessories and Modifications P. 785


Power System Won't Start P. 805 If the 12-Volt Battery Is Dead P. 810
Indicator Coming On/Blinking P. 817 Fuses P. 827 Emergency Towing P. 834
If You Cannot Open the Tailgate P. 836

Utility Compliance* P. 842 Devices that Emit Radio Waves* P. 843 Open Source Licence P. 854

Quick Reference Guide P. 6
Safe Driving P. 45
Instrument Panel P. 121
Controls P. 195
Features P. 305
Driving P. 521
Maintenance P. 735
Handling the Unexpected P. 787
Information P. 837
Index P. 856

Visual Index

Left-hand Drive Type

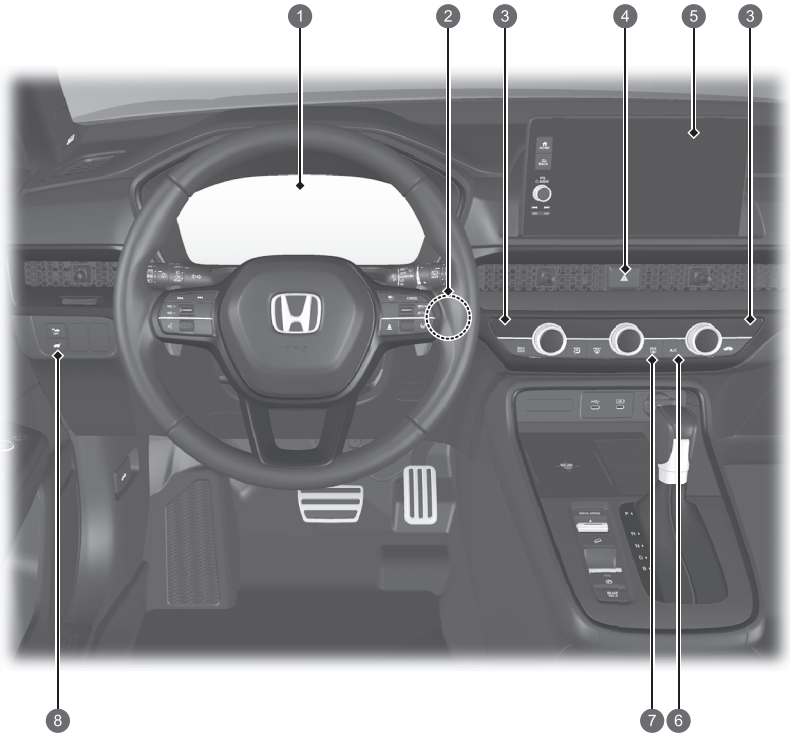

❶ **System Indicators** P. 122
Gauges P. 146
Driver Information Interface P. 166, 169

❷ **POWER Button** P. 235

❸ **Front Seat Heater Buttons*** P. 295
Front Seat Ventilator Buttons* P. 295

❹ **Hazard Warning Button**


❺ **Audio System** P. 306
Navigation System*
See the Navigation System Manual

❻ **Climate Control System** P. 298

❼ **Rear Demister** P. 256

❽ **Acoustic Vehicle Alerting System OFF Button*** P. 557
Power Tailgate Button P. 220


Right-hand Drive Type

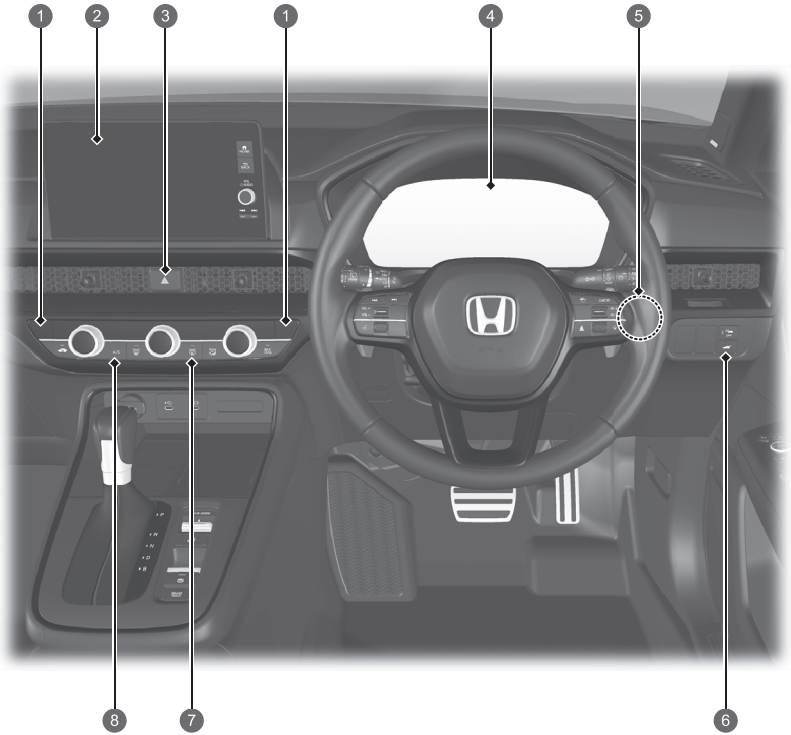

1. **Front Seat Heater Buttons*** P. 295
   Front Seat Ventilator Buttons* P. 295
2. **Audio System** P. 306
   Navigation System*
   See the Navigation System Manual
3. **Hazard Warning Button**
4. **System Indicators** P. 122
   Gauges P. 146
   Driver Information Interface P. 166, 169
5. **POWER Button** P. 235
6. **Acoustic Vehicle Alerting System OFF Button*** P. 557
   Power Tailgate Button P. 220
7. **Rear Demister** P. 256
8. **Climate Control System** P. 298

* Not available on all models

Visual Index

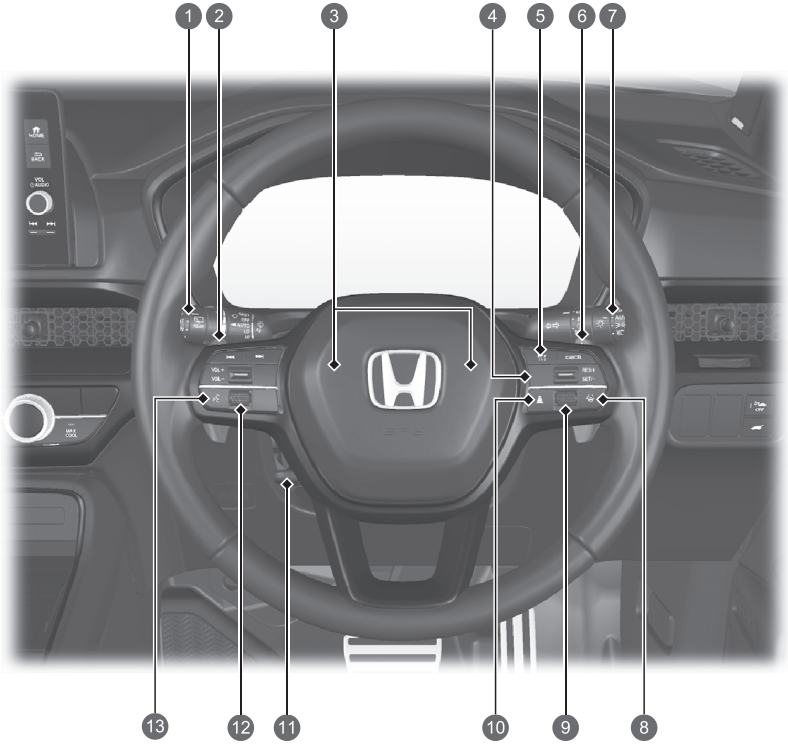

❶ Wipers/Washers* P. 253
Headlights/Turn Signals* P. 239, 238
Front Fog Lights P. 242
Rear Fog Light* P. 242
LaneWatch* P. 598
CAMERA Button* P. 716

❷ Deceleration Paddle Selector − P. 554

❸ Horn (Press the area around .)

❹ LIM Button* P. 571

❺ Adaptive Cruise Control (ACC) with Low Speed Follow Buttons P. 637

❻ Deceleration Paddle Selector + P. 554

❼ Headlights/Turn Signals* P. 239, 238
Wipers/Washers* P. 253
Front Fog Lights P. 242
Rear Fog Light* P. 242
LaneWatch* P. 598
CAMERA Button* P. 716

❽ Lane Keeping Assist System (LKAS) Button P. 659

❾ Right Selector Wheel* P. 169


❿ Interval Button P. 650

⓫ Steering Wheel Adjustments P. 259

⓬ Left Selector Wheel P. 167, 312

⓭ Audio Remote Controls P. 312
(Home) Button* P. 150, 158, 309, 312, 386, 412
(Talk) Button P. 331, 358, 362, 386, 450, 454, 458

Left-hand Drive Type

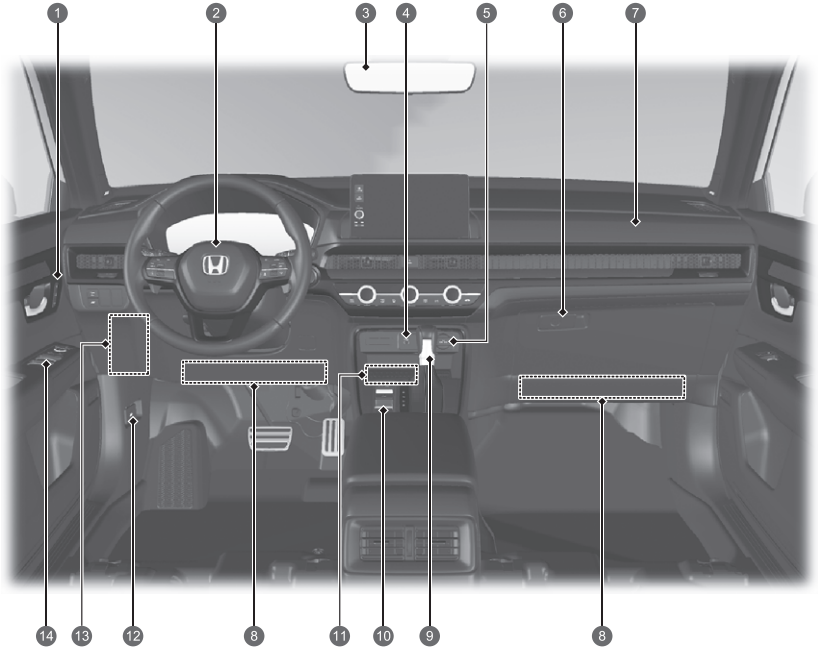


❶ **Memory Buttons** P. 258
SET Button P. 258
❷ **Driver's Front Airbag** P. 67
❸ **Rearview Mirror** P. 260
❹ **USB Ports** P. 311
❺ **Accessory Power Socket** P. 289
❻ **Glove Box** P. 280
❼ **Passenger's Front Airbag** P. 67
❽ **Knee Airbags** P. 70
❾ **Shift Lever*** P. 545
Shift Button* P. 547
❿ **Drive Mode Switch** P. 559
(Hill Descent Control) Button P. 570
Electric Parking Brake Switch P. 691
Automatic Brake Hold Button P. 695
⓫ **Wireless Charger** P. 290
⓬ **Bonnet Release Handle** P. 745
⓭ **Interior Fuse Box** P. 829
⓮ **Door Mirror Controls** P. 262
Master Door Lock Switch P. 211
Power Window Switches P. 227


* Not available on all models

Visual Index

Right-hand Drive Type

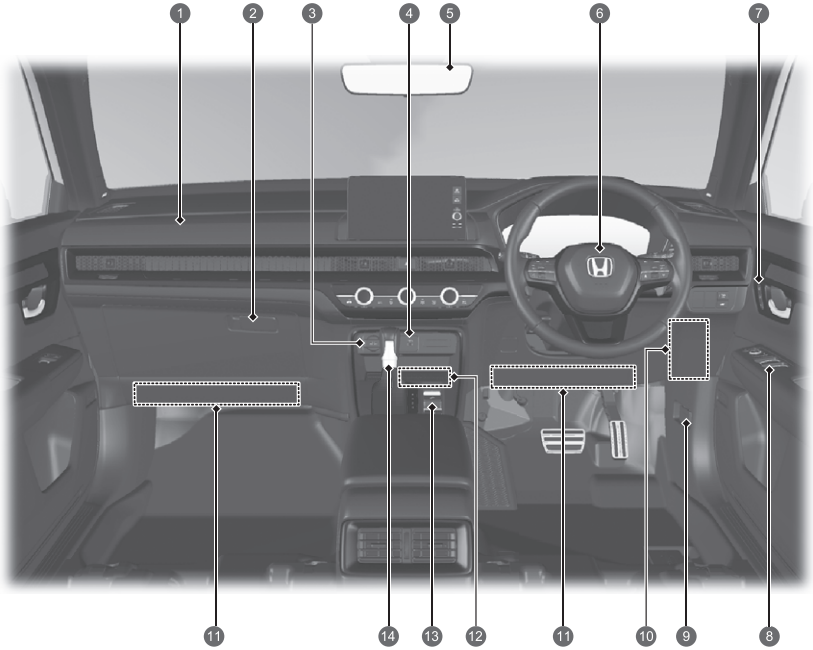


❶ Passenger's Front Airbag P. 67
❷ Glove Box P. 280
❸ Accessory Power Socket P. 289
❹ USB Ports P. 311
❺ Rearview Mirror P. 260
❻ Driver's Front Airbag P. 67
❼ Memory Buttons P. 258
SET Button P. 258
❽ Door Mirror Controls P. 262
Master Door Lock Switch P. 211
Power Window Switches P. 227
❾ Bonnet Release Handle P. 745
❿ Interior Fuse Box P. 829
⓫ Knee Airbags P. 70
⓬ Wireless Charger P. 290
⓭ Drive Mode Switch P. 559
(Hill Descent Control) Button P. 570
Electric Parking Brake Switch P. 691
Automatic Brake Hold Button P. 695
⓮ Shift Lever* P. 545
Shift Button* P. 547

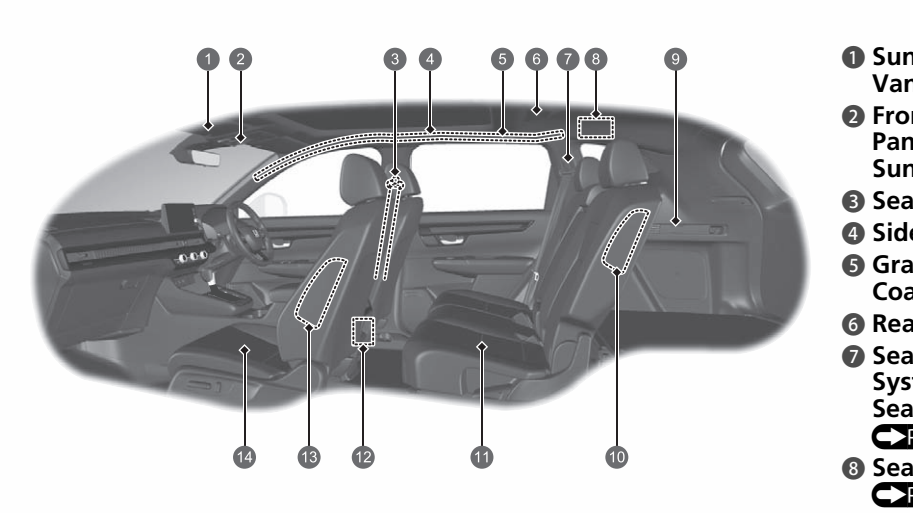


❶ **Sun Visors** P. 297
Vanity Mirrors
❷ **Front Map Lights** P. 278
Panoramic Roof Switch* P. 233
Sunglasses Holder P. 285
❸ **Seat Belts** P. 51
❹ **Side Curtain Airbags** P. 79
❺ **Grab Handle**
Coat Hook P. 283
❻ **Rear Map Lights** P. 278
❼ **Seat Belt (Installing a Child Restraint System)** P. 111
Seat Belt to Secure a Child Restraint System P. 111
❽ **Seat Belt with Detachable Anchorage** P. 60
❾ **Luggage Area Lights** P. 279
❿ **Rear Side Airbags*** P. 76
⓫ **Rear Seat** P. 269
Lower Anchorage Points to Secure a Child Restraint Systems P. 106
⓬ **USB Ports** P. 311
⓭ **Front Side Airbags** P. 76
⓮ **Front Seat** P. 264

* Not available on all models

Visual Index

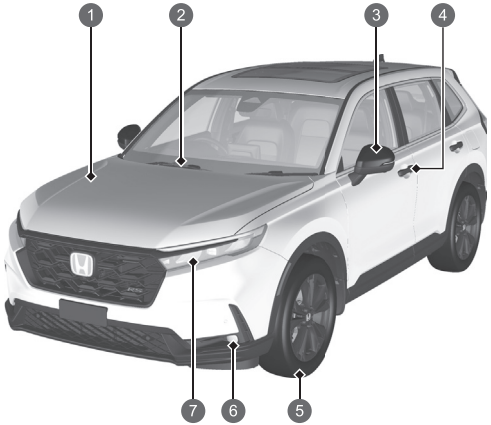

1. Maintenance Under the Bonnet P. 744
2. Windscreen Wipers P. 253, 760
3. Power Door Mirrors P. 262
   Side Turn Signal Lights P. 238, 757
4. Door Lock/Unlock Control P. 201
5. Tyres P. 764, 788
6. Front Fog Lights P. 242, 757
7. Headlights P. 239, 757
   Position/Daytime Running Lights P. 239, 243, 757
   Front Turn Signal Lights P. 238, 757

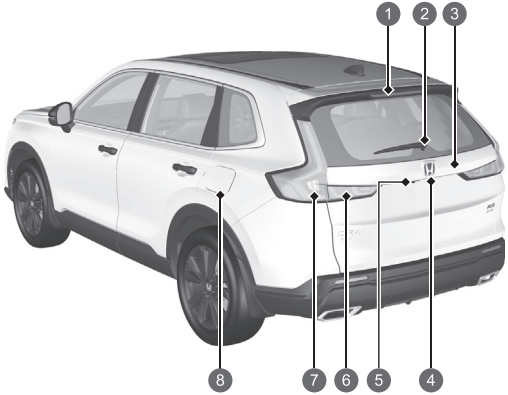

1. High-Mount Brake Light P. 758
2. Rear Wiper P. 255
3. Opening/Closing the Tailgate P. 215
4. Rear Licence Plate Light P. 239, 758
5. Multi-View Rear Camera* P. 713
   Multi-View Camera* P. 715
6. Taillights P. 239, 758
   Back-Up Lights P. 758
   Rear Fog Light* P. 242, 758
7. Taillights P. 239, 758
   Brake Lights P. 758
   Rear Turn Signal Lights P. 238, 758
8. How to Refuel P. 731

e:HEV

Your e:HEV vehicle uses both an electric motor and a petrol engine as propulsion sources, with the electric motor receiving electricity from an internal High Voltage battery and/or internal generator. The High Voltage battery is charged from the generator driven by the engine or regenerative braking.

When driving, your vehicle is propelled exclusively by the electric motor, exclusively by the petrol engine, or by a combination of the two. The system selects which propulsion source is most appropriate and automatically switches to it.

● **Energy efficiency**
As with a petrol-powered vehicle, hybrid vehicle fuel efficiency and driving range is most impacted by your driving style. Aggressive acceleration and high-speed driving can easily trigger the system to switch the propulsion source to the petrol-powered engine.
In addition, heavy climate control system use negatively affects vehicle range and efficiency. Either of these use patterns will more quickly reduce the High Voltage battery's state of charge.

● **Battery types**
There are two types of batteries used in this vehicle; a standard 12-volt battery that powers the airbags, the interior and exterior lights, and other standard 12-volt systems; and a High Voltage battery that is used to power the propulsion motor and recharge the 12-volt battery.

e:HEV MAIN COMPONENTS

Petrol Engine– Runs the generator and under certain conditions, drives the wheels directly.

Generator– Starts the engine and generates electric power when driven by the petrol engine to supply electricity to power the electric motor and/or to charge the High Voltage battery.

Electric Motor– Provides propulsion to drive the wheels in conjunction with the petrol engine in certain conditions and provides electricity to the High Voltage battery through regenerative braking.





High Voltage Battery– Provides electrical storage and serves as a power source for the electric motor.
Learning about the High Voltage battery's characteristics will help you get the best handling and maximize the range of your electric vehicle. P. 597



1. Petrol Engine
2. Generator & Electric Motor
3. High Voltage Battery

2WD models

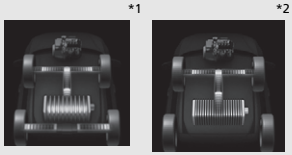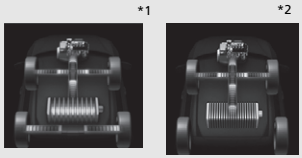
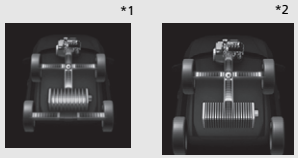
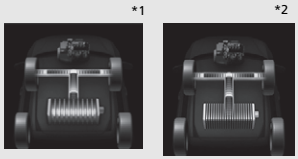


Operating mode	Electric Vehicle (EV)	Hybrid (HV)	Engine (Direct Drive)	Regeneration
Driving state	Stopped or driven at low speeds: • Only the electric motor provides propulsion to the wheels.	Driven in high-load conditions (e.g., when accelerating, going uphill): • The Electric Motor provides propulsion to the wheels. • The petrol engine drives the generator, supplying electricity to the electric motor for added propulsion or to the High Voltage battery for charging.	Driven in high-speed, low-load conditions: • The petrol engine provides propulsion to the wheels. • The High Voltage battery supplies electricity to the electric motor for added propulsion. • The electric motor provides electricity to the High Voltage battery through regenerative braking.	The accelerator pedal is released and the vehicle is decelerating. • The electric motor provides electricity to the High Voltage battery through regenerative braking.
Power Flow Monitor	 *1 *2	 *1 *2	 *1 *2	 *1 *2
Electric motor	Stopped/Running	Running	Generating/Running	Regenerating
Generator	Stopped	Generating	No Output	Stopped/No Output
Engine	Stopped	Running	Running	Stopped/No Output
High Voltage battery	Discharge	Charging/Discharge	Charging/Discharge	Charging

*1:Models with A-type meter
*2:Models with B-type meter


AWD models

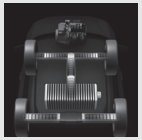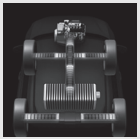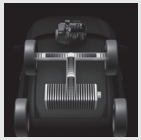

Operating mode	Electric Vehicle (EV)	Hybrid (HV)	Engine (Direct Drive)	Regeneration
Driving state	Stopped or driven at low speeds: • Only the electric motor provides propulsion to the wheels.	Driven in high-load conditions (e.g., when accelerating, going uphill): • The Electric Motor provides propulsion to the wheels. • The petrol engine drives the generator, supplying electricity to the electric motor for added propulsion or to the High Voltage battery for charging.	Driven in high-speed, low-load conditions: • The petrol engine provides propulsion to the wheels. • The High Voltage battery supplies electricity to the electric motor for added propulsion. • The electric motor provides electricity to the High Voltage battery through regenerative braking.	The accelerator pedal is released and the vehicle is decelerating. • The electric motor provides electricity to the High Voltage battery through regenerative braking.
Power Flow Monitor				
Electric motor	Stopped/Running	Running	Generating/Running	Regenerating
Generator	Stopped	Generating	No Output	Stopped/No Output
Engine	Stopped	Running	Running	Stopped/No Output
High Voltage battery	Discharge	Charging/Discharge	Charging/Discharge	Charging

● **Regenerative Energy and Regenerative Braking**

When regenerative braking is in operation

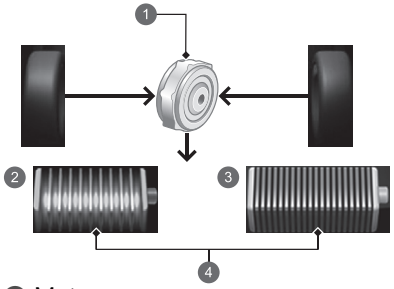

1. Motor
2. Models with A-type meter
3. Models with B-type meter
4. High Voltage Battery

When decelerating without the accelerator being depressed or the brake pedal being applied, or while driving downhill, the electric motor acts as a generator that recovers a portion of the electrical energy that was used to accelerate the vehicle. This regenerative braking slows the vehicle in a manner similar to engine braking in a petrol-powered vehicle. You can control the rate of deceleration by using the deceleration paddle selector.

● **Auto Engine Stop/Start**

Your vehicle's petrol engine automatically stops running during vehicle operation or restarts while the vehicle is stationary when it is appropriate. In the following cases, however, auto engine stop may not activate.

- The vehicle momentarily needs additional power for aggressive acceleration, or driving uphill or at high speed.
- The climate control system is in heavy use.
- The High Voltage battery temperature is high or low.
- The High Voltage battery is too low on charge.


● **Sounds Unique to the e:HEV**

When you first start driving this vehicle, you will likely hear some unfamiliar sounds, particularly when you turn on the power system, or while you are driving or accelerating from a stop. Some of these sounds are unique to this vehicle's powertrain, fuel, and climate control systems; others are similar to sounds generated by conventional automobiles that typically are masked by louder noises absent from a vehicle of this design. These sounds are not a cause for concern, and you will soon recognise them as normal and thus be able to detect any new or unusual noise should one develop.

Safety Precautions



Do not cover the air intake.

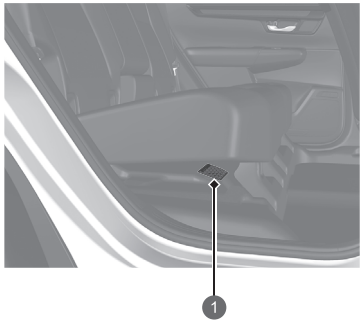

1 Air Intake

If the air intake is obstructed during vehicle operation, the High Voltage battery can become too hot. To protect the battery, the system may start to limit the battery's output and cause the power system and 12-volt battery charging system indicators to come on.

Do not touch the High Voltage system

Attempting to take a High Voltage system component apart or disconnect one of its wires can cause severe electrical shock. Make sure that any maintenance or repairs to the High Voltage system are performed by a Honda dealer.

If a crash occurs

● Be careful of electric shock hazard.

▶If a severe crash damages your vehicle's High Voltage system, there is a possibility of electrical shock due to exposed High Voltage components or wires. If this happens, do not touch any of the High Voltage system components or any of its orange wires.

● Avoid contact with High Voltage battery fluid.

▶The High Voltage battery contains a flammable electrolyte that could leak as a result of a severe crash. Avoid skin or eye contact with the electrolyte as it is corrosive. If you accidentally come into contact with the electrolyte, rinse the exposed skin or flush your eyes with copious amounts of water for at least five minutes, and seek medical attention immediately.

● Use a fire extinguisher for an electrical fire.

▶Attempting to extinguish an electrical fire with even a small quantity of water, from a garden hose for instance, can be dangerous.

● Any time the vehicle is damaged in a crash, have it repaired by a dealer.

Emergency Shutdown System for the High Voltage System

If the vehicle is involved in a crash, the emergency shutdown system will activate depending on the severity of the impact. When the system activates, the High Voltage system automatically shuts down, and the vehicle can no longer move under its own power. To return the High Voltage system back to normal operation, consult a dealer.


When the vehicle is disposed

● The High Voltage battery is a Lithium ion battery. Honda collects and recycles used High Voltage batteries – consult with your dealer for proper battery disposal in the event your vehicle is not repairable.

Safe Driving P. 45

Before Driving Checklist P. 50

- Before driving, check that the front seats, head restraints, steering wheel, and mirrors have been properly adjusted.

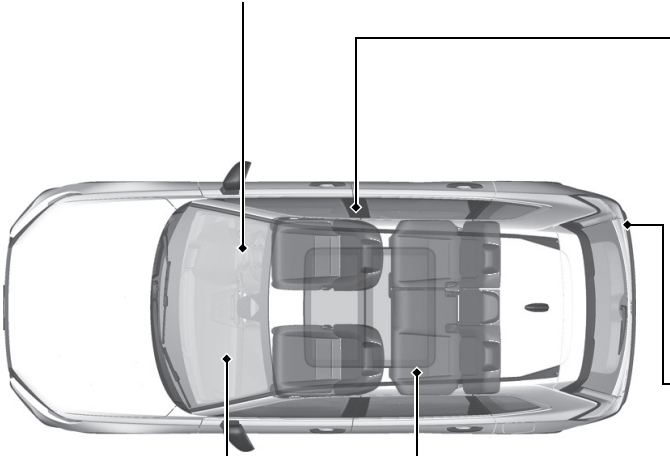

Seat Belts P. 51

- Fasten your seat belt and sit upright well back in the seat.
- Check that your passengers are wearing their seat belts correctly.



Fasten your lap belt as low as possible.

Exhaust Gas Hazard P. 119

- Your vehicle emits dangerous exhaust gases that contain carbon monoxide. Do not run the engine in confined spaces where carbon monoxide gas can accumulate.

Child Safety P. 84

- All children 12 and younger should be seated in the rear seat.
- Small children should be properly restrained in a front-facing child restraint system.
- Infants must be properly restrained in a rear-facing child restraint system on a rear seat.


Airbags P. 65

- Your vehicle is fitted with airbags to help to protect you and your passengers during a moderate-to-severe collision.

Instrument Panel P. 121

Indicators P. 122/Gauges P. 146/Driver Information Interface P. 150, 166, 169 / Head-Up Display* P. 189

Models with A-type meter

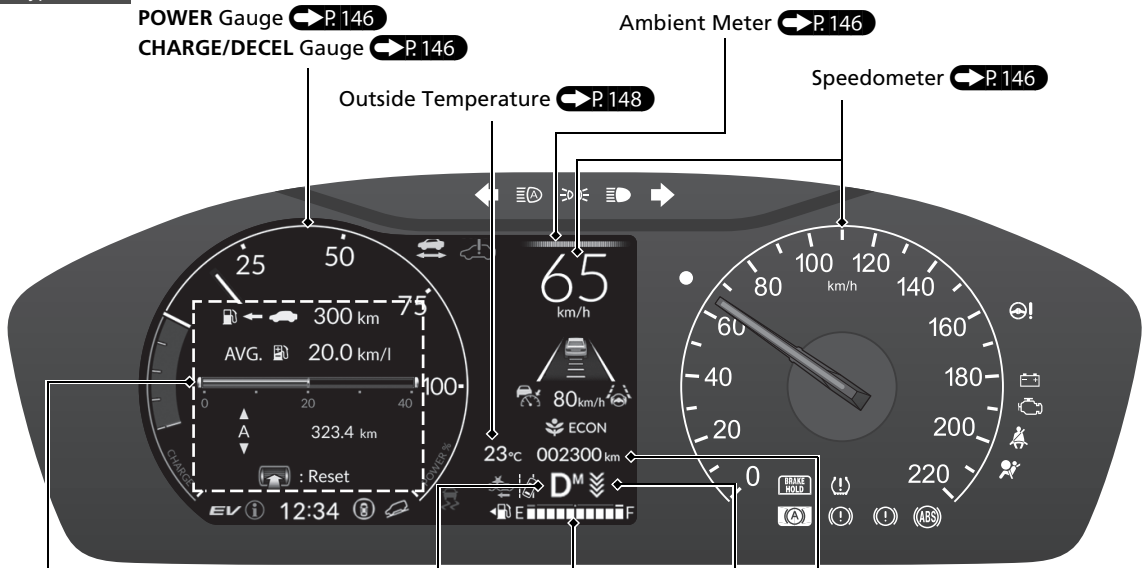

Models with B-type meter

● You can change the gauge design.
Change gauge design P. 167



Head-Up Display* P. 189

POWER Gauge P. 146
CHARGE/DECEL Gauge P. 146

Traffic Sign Recognition System* P. 148


Ambient Meter P. 146

Speedometer P. 146

Ambient Meter P. 146

High Voltage Battery Charge Level Gauge P. 147

Fuel Gauge P. 146

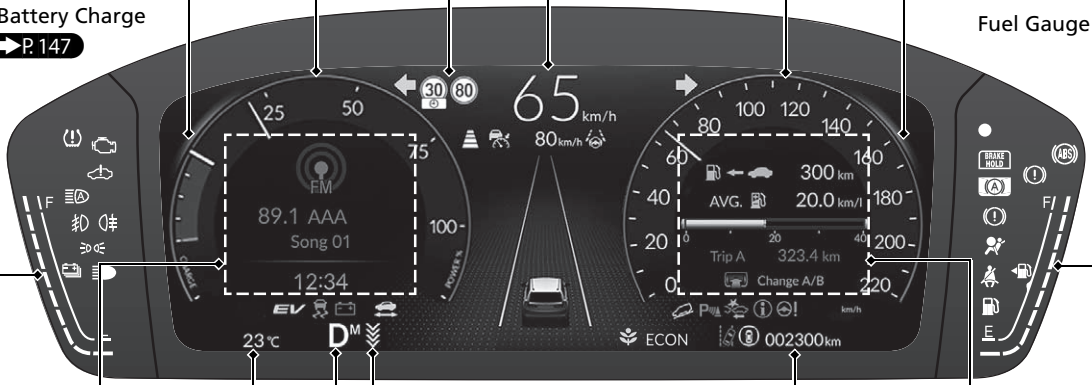

Driver Information Interface (Left Side Area) P. 166

Outside Temperature P. 148

Deceleration Paddle Selector Indicator P. 128

Shift Position Indicator P. 127/Transmission System Indicator P. 127

Odometer P. 146

Driver Information Interface (Right Side Area) P. 169

* Not available on all models

Controls P. 195

Clock P. 196

You can adjust the clock and customize the clock display.

Models with Display Audio without Google built-in

P. 322

Models with Display Audio with Google built-in

P. 422

POWER Button P. 235

Press the button to change the vehicle's power mode.




Turn Signals P. 238

Turn Signal Control Lever



Lights P. 239


Light Control Switches

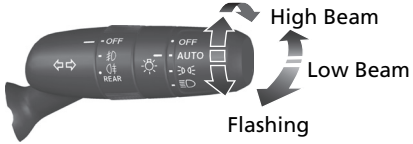

Wipers and Washers P. 253

Wiper/Washer Control Lever

Adjustment Ring
−: Low sensitivity*1
: Lower speed, fewer sweeps*2
+: High sensitivity*1
: Higher speed, more sweeps*2

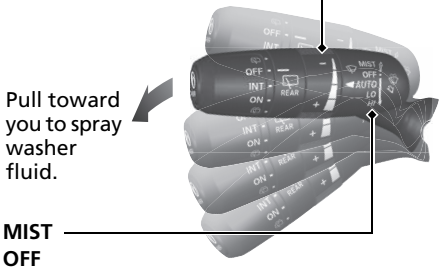

AUTO*1: Wiper speed varies automatically
INT*2: Low speed with intermittent
LO: Low speed wipe
HI: High speed wipe


*1:Models with automatic intermittent wipers
*2:Models with manual intermittent operation

Models with automatic intermittent wipers

AUTO should always be turned **OFF** before the following situations in order to prevent severe damage to the wiper system:
- Cleaning the windshield
- Driving through a car wash
- No rain present

Steering Wheel P. 259


- To adjust, push the adjustment lever down, adjust to the desired position, then lock the lever back in place.

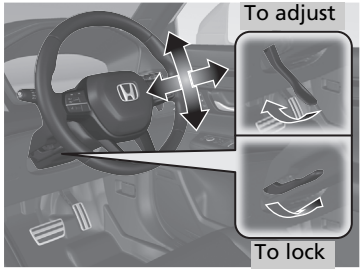

Unlocking the Driver's Door from the Inside


P. 211

- Pull the driver's door inner handle to unlock and open it at the same time.

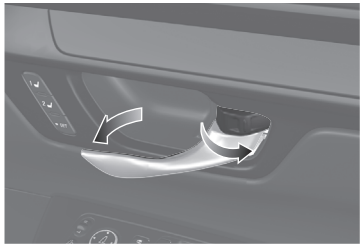


Tailgate P. 214


- Press the tailgate outer handle to unlock and open the tailgate when you carry the keyless remote on you.
- Press the power tailgate button on the driver side control panel.
- Press the power tailgate button on the keyless remote.

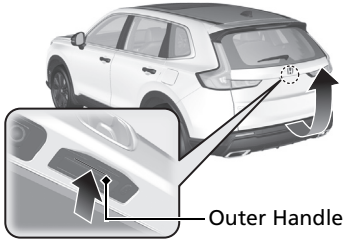

Models with hands free access

With the keyless remote on you, raise and lower your foot (in a kicking motion) under the centre of the rear bumper to open or close the tailgate.

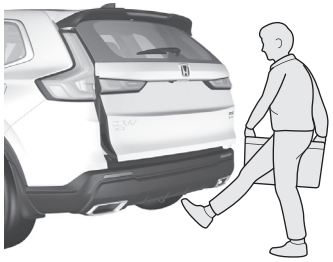


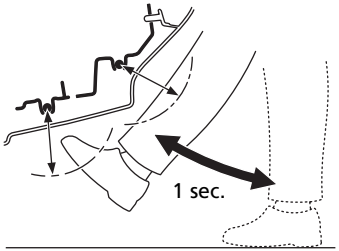

Power Door Mirrors


P. 262

- With the power mode in ON, move the selector switch to **L** or **R**.
- Push the appropriate edge of the adjustment switch to adjust the mirror.
- Press the folding button to fold in and out the door mirrors.

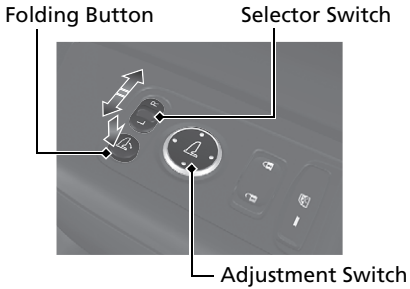

Power Windows P. 227


- With the power mode in ON, open and close the power windows.
- If the power window lock button is in the off position, each passenger's window can be opened and closed with its own switch.
- If the power window lock button is in the ON position (indicator on), each passenger's window switch is disabled.

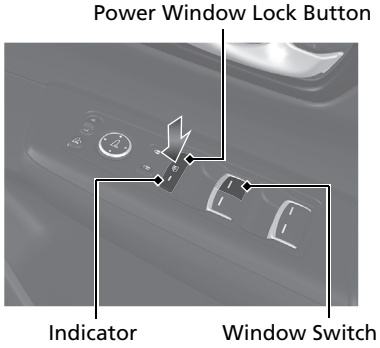

Climate Control System P. 298


- Press the **AUTO** button to activate the climate control system.
- Press the ON/OFF button to turn the system on or off.
- Press the FRONT button to defrost the windscreen.

Models with MAX COOL button

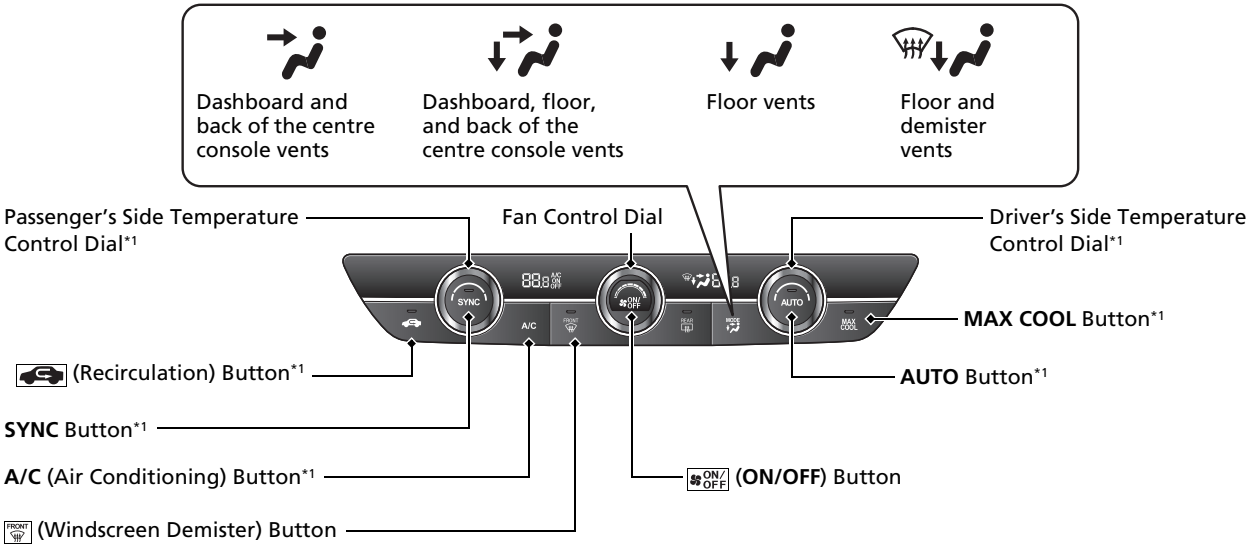

*1:Right-hand drive types shown. For the left-hand drive types, these buttons are located at the symmetrically opposite to the right-hand drive type.

Models without MAX COOL button

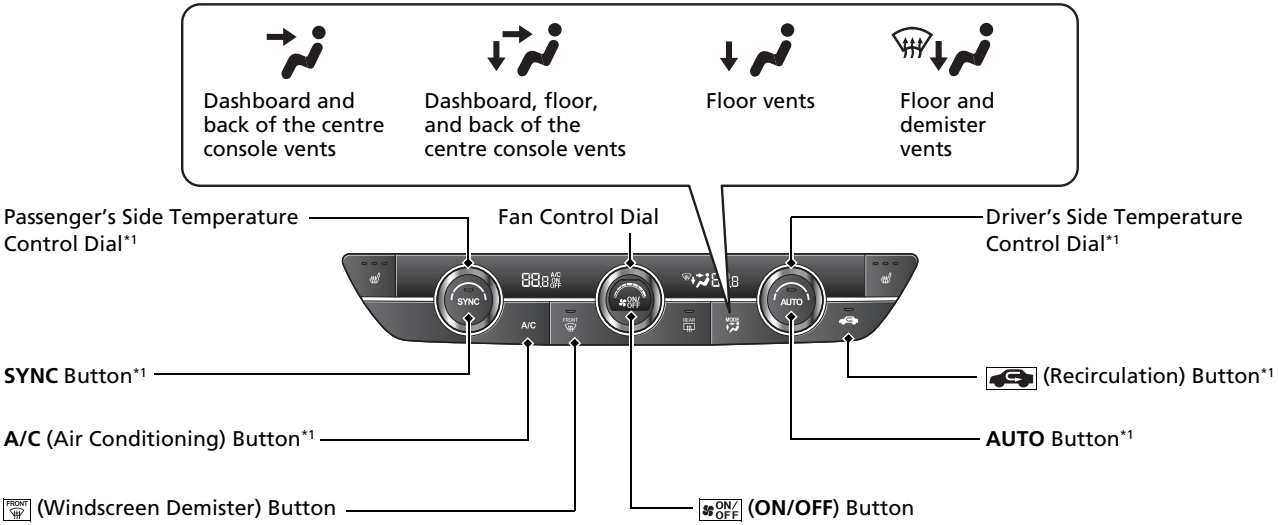


*1:Right-hand drive types shown. For the left-hand drive types, these buttons are located at the symmetrically opposite to the right-hand drive type.

Features P. 305


Audio System P. 306

Models with Display Audio

For navigation system operation See the Navigation System Manual

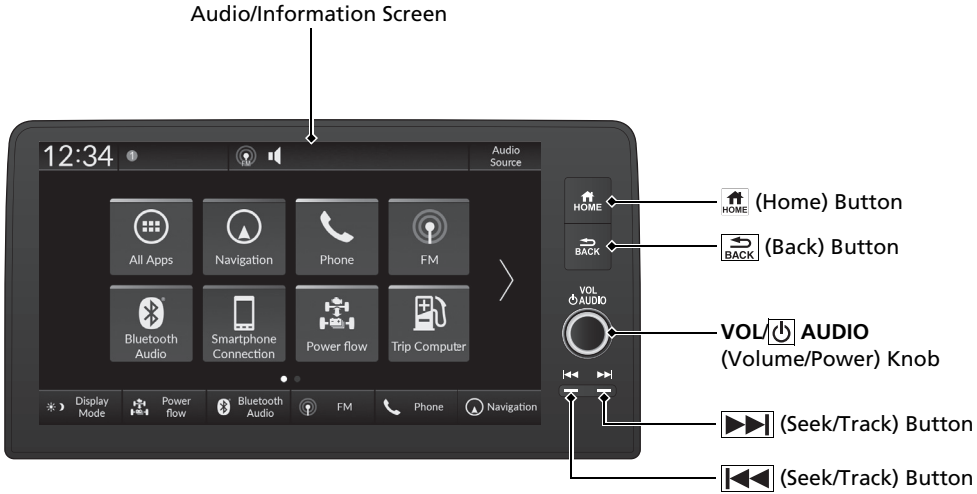


Models with Display Audio with Google built-in P. 407

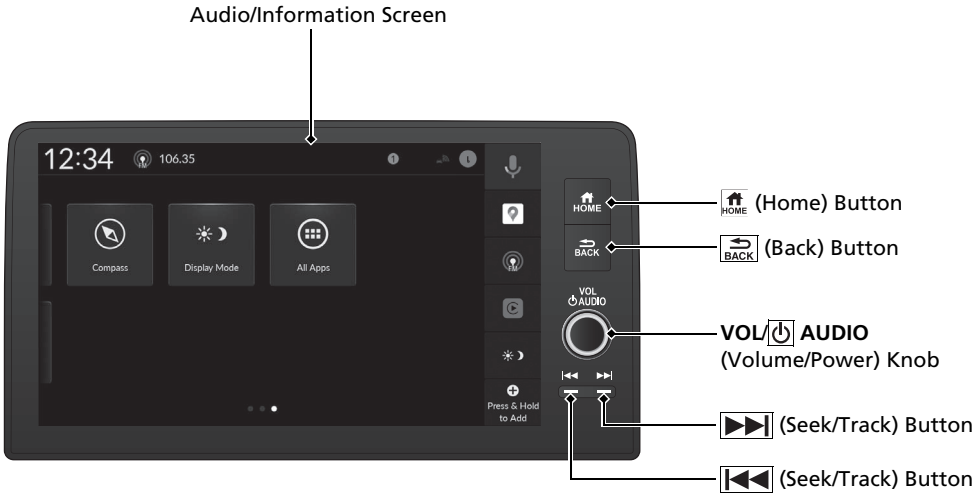


Audio Remote Controls

P. 312, 412

Models with A-type meter

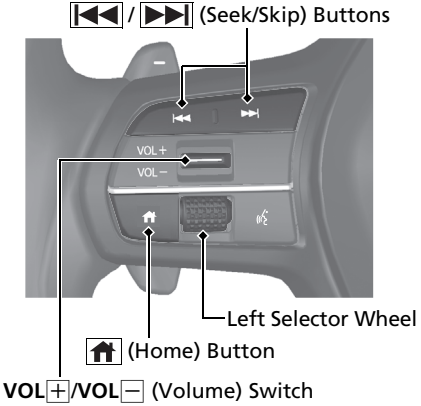

Models with B-type meter

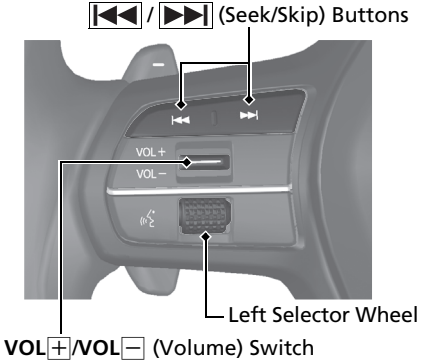

- **VOL+ / VOL−** (Volume) Switch
  Press to adjust the volume up/down.
- |◀◀ / ▶▶| (Seek/Skip) Buttons
  Radio:
  Press |◀◀ / ▶▶| to change the preset radio station. Press and hold |◀◀ / ▶▶| to change the strong station.
  When listening to the wired connection, USB flash drive, *Bluetooth*® Audio, or Smartphone Connection:
  Press |◀◀ / ▶▶| to skip to the beginning of the next song or return to the beginning of the current song.
  USB flash drive:
  Press and hold |◀◀ / ▶▶| to change a folder.

Models with A-type meter

- Left Selector Wheel
  When selecting the audio mode
  Press the (home) button, then roll up or down to select **Audio** on the driver information interface, and then press the left selector wheel.
  Roll up or down:
  To cycle through the audio modes, roll up or down and then press the left selector wheel.

Models with B-type meter

- Left Selector Wheel
  Roll up or down:
  To cycle through the audio modes, roll up or down and then press the left selector wheel.

About System Updates

When a software update is available for your vehicle, a notification will be displayed on the audio/information screen.
Instructions for performing updates via the audio/information screen are included in this manual.
For details on other methods of performing an update, please refer to the Honda Connect manual*, or ask a dealer.
System updates that change specifications may result in some discrepancies with the information in this owner's manual.

■ **Instructions**

System Updates P. 327

Remote Immobilizer*

The remote immobilizer system remotely prevents the vehicle from starting if the vehicle is stolen.
For more detailed information on this system, please refer to the Honda Connect manual.


Driving P. 521

Transmission P. 544

Except Australian, Bangladeshi, Bhutanese, New Zealand, and Vietnamese models

● Shift to P and depress the brake pedal when turning on the power.


Shift selection

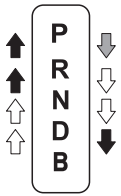

Depress the brake pedal and press the shift lever release button to shift.

Shift without pressing the shift lever release button.

Press the shift lever release button and shift.

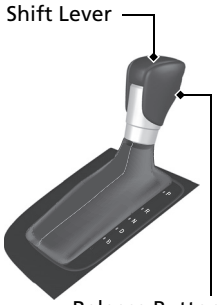


P **Park**
Used when parking or turning the power on or off.

R **Reverse**
Used when reversing.

N **Neutral**
Transmission is not locked.

D **Drive**
Used for normal driving.
- The deceleration paddle selector can be used temporarily.
- The deceleration paddle selector can be used when **SPORT** mode is on.

B **Drive (B)**
- Used when driving down a long hill and to increase regenerative braking.
- The deceleration paddle selector can be used.

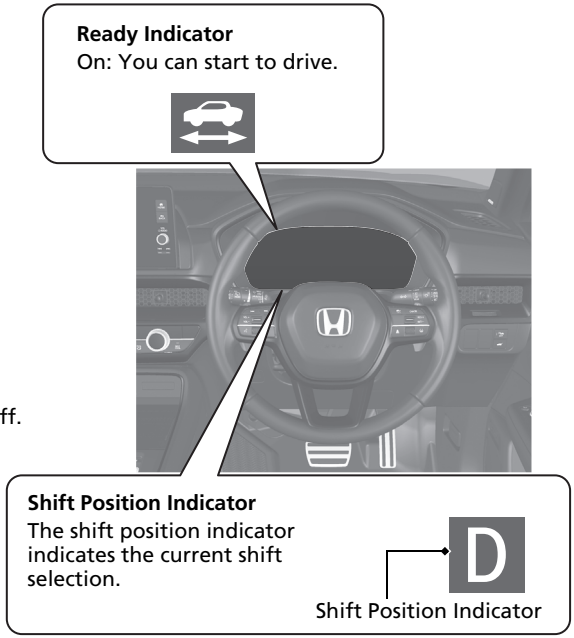

Australian, Bangladeshi, Bhutanese, New Zealand, and Vietnamese models

● Select P and depress the brake pedal when turning on the power.

Shift Operation





P Park
Press the P button.
Used when parking or turning the power on or off.

R Reverse
Press back the R button.
Used when reversing.

N Neutral
Press the N button.
Transcription is not locked.

D/B Drive/B Position
Each time you press the D/B button, the mode switches between Drive and **B** Position mode.

Drive

- Used for normal driving.
- The deceleration paddle selector can be used temporarily.
- The deceleration paddle selector can be used when **SPORT** mode is ON.


B Position

- Used when driving down a long hill and to increase regenerative braking.
- The deceleration paddle selector can be used.

Deceleration Paddle Selector P. 554

When you release the accelerator pedal, you can control the rate of deceleration without releasing your hands from the steering wheel. Using the deceleration paddle selector situated on the steering wheel, you can sequentially shift through four stages of deceleration.

- **When shift position is in D**
  If you pull back the paddle selector, the rate of deceleration will change temporarily, and the stage will appear on the gauge.
- **When shift position is in D and SPORT mode is ON or when shift position is in B**
  If you pull back the paddle selector, the rate of deceleration will change and the stage along with **M** will appear on the gauge.

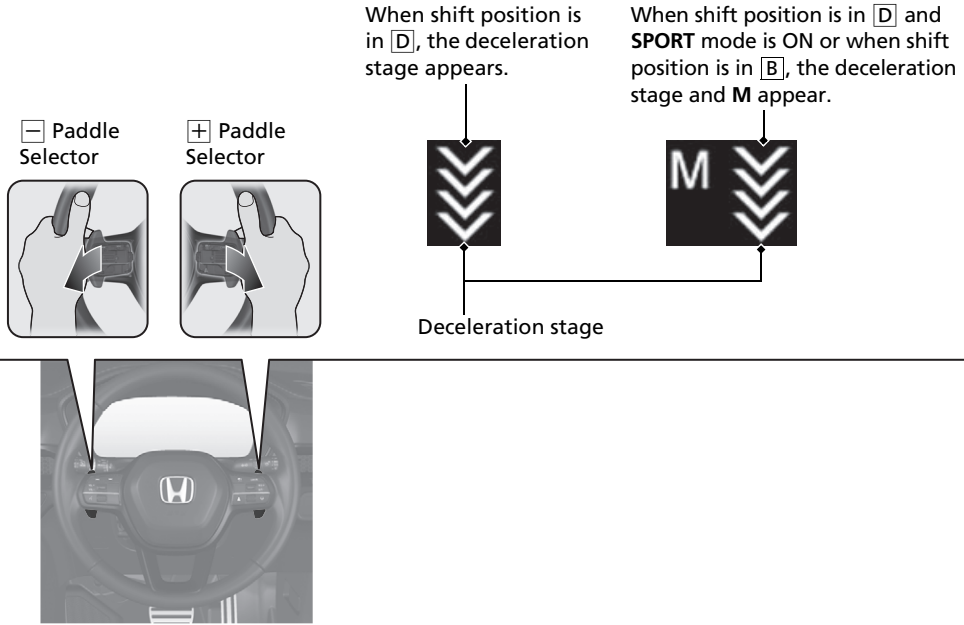

CMBS On and Off P. 611

- When a possible frontal collision is likely unavoidable, the CMBS can reduce the vehicle speed and the severity of the collision.
- The CMBS is turned on every time you turn the power system on.
- To turn the CMBS on or off, use the safety support of the driver information interface.

VSA On and Off P. 584

- The Vehicle Stability Assist (VSA) system helps to stabilise the vehicle during cornering and helps to maintain traction while accelerating on loose or slippery road surfaces.
- VSA comes on automatically every time you turn the power system on.
- The VSA function can be partially disabled or fully restored in VSA settings using the driver information interface.

  Vehicle Stability Assist Mode P. 186

Taiwanese models

Tyre Pressure Monitoring System (TPMS) P. 587

- Detects a change in tyre conditions and overall dimensions due to decrease in tyre pressures.
- The TPMS is turned on automatically every time you turn the power system on.
- A calibration procedure must be performed when certain conditions arise.

Except Taiwanese models

Deflation Warning System* P. 590

- Detects a change in tyre conditions and overall dimensions due to decrease in tyre pressures.
- The Deflation Warning System is turned on automatically every time you turn the power system on.
- A calibration procedure must be performed when certain conditions arise.

Adjustable Speed Limiter* P. 571


This system enables you to set a maximum speed that cannot be exceeded even if you are depressing the accelerator pedal.

- To use the adjustable speed limiter, press the button. Select the adjustable speed limiter by pressing the **LIM** button, then press the **RES/+/SET/–** switch up or down when your vehicle reaches the desired speed.
- The vehicle speed limit can be set from 30 km/h to 250 km/h.

Refueling P. 729

Fuel recommendation:	Indonesian models **Unleaded petrol, research octane number 90 or higher** Taiwanese models **Unleaded petrol, research octane number 92 or higher** Thai models **Unleaded petrol/gasohol up to E20 (80% petrol and 20% ethanol), research octane number 91 or higher** Except Indonesian, Taiwanese and Thai models **Unleaded petrol, research octane number 91 or higher**
Fuel tank capacity:	**57 L**

1. Unlock the driver's door. P. 210
2. Press and release the area indicated by the arrow to release the fuel fill door. You will hear a click and the lid will open slightly.
3. Turn the fuel fill cap slowly to remove the cap.
4. Place the cap in the holder on the fuel fill door.
5. After refueling, screw the cap back on until it clicks at least once.

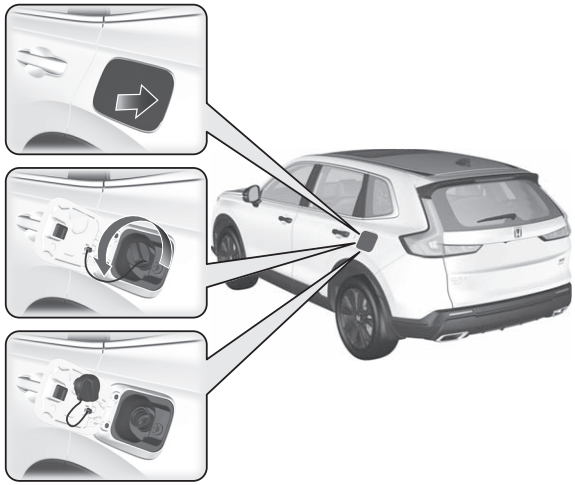

Honda SENSING P. 603

Assists with functions such as acceleration, braking, and steering in order to reduce the burden on the driver, as well as help to avoid or reduce the severity of collisions.

Honda Sensing has the following functions.

Collision Mitigation Braking System (CMBS)

P. 606

The system can assist you when it determines there is a possibility of your vehicle colliding with a vehicle (including motorcycles) ahead from behind, an oncoming vehicle in front, a vehicle approaching from the side, a pedestrian, or someone riding a bicycle (moving bicycle). The CMBS is designed to alert you when the potential for a collision is determined, as well as assist in reducing speed, avoiding collisions, and reducing collision severity.

Low Speed Braking Control* P. 620

The Low Speed Braking Control system has three functions: Low Speed Brake, Collision Mitigation Throttle Control, and Rear Collision Mitigation Throttle Control. Using sonar sensors located on the front and rear bumpers, the vehicle detects if there danger of collision with a wall or other obstacle when the accelerator is depressed with too much force, and the system assists in avoiding collisions and reducing damage from impact by limiting power system output.

Road Departure Mitigation System P. 626

Australian, Bangladeshi, Bhutanese, and New Zealand models

Alerts and helps to assist you when the system detects a possibility of your vehicle crossing over detected lane markings, or approaching the outer edge of the pavement (into grass or gravel road shoulder) or a detected oncoming vehicle.

Except Australian, Bangladeshi, Bhutanese, and New Zealand models

Alerts and helps to assist you when the system detects a possibility of your vehicle unintentionally crossing over detected lane markings and/or leaving the roadway altogether.

Adaptive Cruise Control (ACC) with Low Speed Follow P. 636

Helps to maintain a constant vehicle speed and a set following-interval behind a vehicle detected ahead of yours and, if the detected vehicle comes to a stop, can decelerate and stop your vehicle, without you having to keep your foot on the brake or the accelerator.

Intelligent Speed Limiter* P. 577

Automatically sets the speed limit that the traffic sign recognition system detects. And the speed limit cannot be exceeded even if you are depressing the accelerator pedal. If you fully depress the accelerator the speed limit can be exceeded.

Lane Keeping Assist System (LKAS) P. 655

Provides steering input to help to keep the vehicle in the middle of a detected lane and provides tactile, audible and visual alerts if the vehicle is detected drifting out of its lane.

Australian, Bangladeshi, Bhutanese, and New Zealand models

Traffic Jam Assist P. 668

The Traffic Jam Assist system uses a camera mounted to the upper portion of the windscreen to detect and monitor left and right white (or yellow) traffic lane lines. Based on inputs from the camera, the system can apply steering torque to keep your vehicle in the centre of the detected lane.

Lead Car Departure Notification System* P. 677

Informs you with visual and audible alerts when your vehicle is stopped even though the vehicle ahead of you has started moving.

Traffic Sign Recognition System* P. 681

Reminds you of road sign information, such as the current speed limit your vehicle has just passed through, showing it on the gauge.

Auto High-Beam* P. 247

The front sensor camera detects the light sources ahead of the vehicle such as the lights of a preceding or oncoming vehicle, or street lights. When you are driving at night, the system automatically switches the headlights between low beam and high beam depending on the situation.

Adaptive Driving Beam*

P. 250

When driving at night, the front sensor camera detects light sources such as street lights or the lights of an oncoming or preceding vehicle. The system automatically switches the headlights between low and high beam depending on the situation.
In addition, the system automatically adjusts the light distribution of the high beams in order to reduce glare for preceding and oncoming vehicles.

Blind Spot Information System* P. 593

When the system detects vehicles approaching from behind in adjacent lanes, the appropriate indicator comes on, providing assistance when you change lanes.

Cross Traffic Monitor*

P. 709

Monitors the rear corner areas using the radar sensors when reversing, and alerts you if a vehicle approaching from a rear corner is detected.
The system is convenient when you are backing out of a parking space.

Parking Sensor System

P. 703

The corner and centre sensors monitor obstacles around your vehicle, and the beeper, driver information interface and audio/information screen let you know the approximate distance between your vehicle and the obstacle.

Driver Attention Monitor

P. 179


The Driver Attention Monitor analyses steering inputs to determine if the vehicle is being driven in a manner consistent with drowsy or inattentive driving.
If it determines that the vehicle is being driven in such a manner, it will display the degree of the driver's attention on the driver information interface.

Maintenance P. 735

Under the Bonnet P. 744

- Check engine oil, engine coolant, and windscreen washer fluid. Add when necessary.
- Check brake fluid and high voltage system coolant.
- Check the 12-volt battery condition monthly.

1. Pull the bonnet release handle under the driver's side lower outside corner of the dashboard.

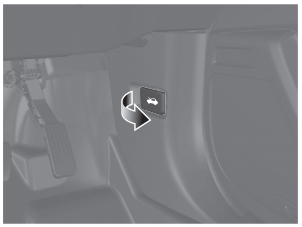


2. Locate the bonnet latch lever, push it to the side, and then raise the bonnet. Once you have raised the bonnet slightly, you can release the lever.



3. When finished, close the bonnet and make sure it is firmly locked in place.

Wiper Blades P. 760

- When lifting the front wiper arms, move them into the maintenance position before lifting them.
- Replace blades if they leave streaks across the windscreen or become noisy.

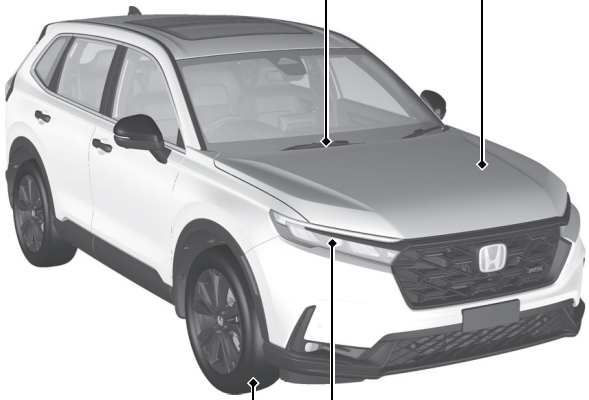

Tyres P. 764

- Inspect tyres and wheels regularly.
- Check tyre pressures regularly.
- Install winter tyres for winter driving.

Lights P. 757

- Inspect all lights regularly.

* Not available on all models

Handling the Unexpected P. 787

Flat Tyre P. 789, 801


- Park in a safe location and repair the flat tyre using the tyre repair kit in the luggage area.



Indicators Come On


P. 817

- Identify the indicator and consult the owner's manual.

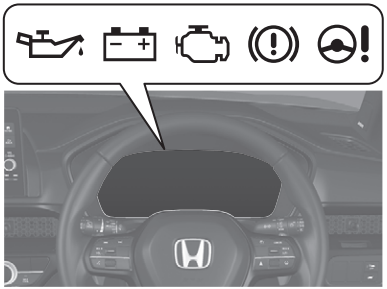


Power System Won't Start P. 805

- If the 12-volt battery is dead, jump start using a booster battery.

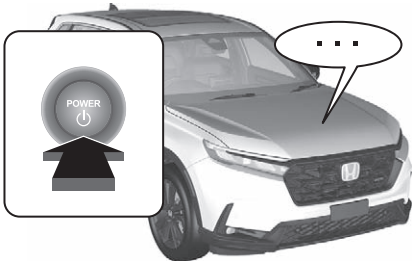

Blown Fuse P. 827

- Check for a blown fuse if an electrical device does not operate.

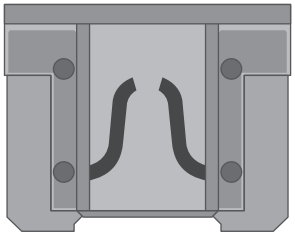

Overheating P. 815

- Park in a safe location. If you do not see steam under the bonnet, open the bonnet, and let the power system cool down.



Emergency Towing

P. 834

- Call a professional towing service if you need to tow your vehicle.



What to Do If

Q Models with shift lever
The power mode does not change from VEHICLE OFF (LOCK) to ACCESSORY. Why?

A
- The steering wheel may be locked.
- Move the steering wheel left and right after pressing the **POWER** button.



Q Models with shift lever
The power mode does not change from ACCESSORY to VEHICLE OFF (LOCK). Why?

A The shift lever should be moved to P.




Q **Why does the brake pedal pulsate slightly when applying the brakes?**

A This can occur when the ABS activates and does not indicate a problem. Apply firm, steady pressure on the brake pedal. Never pump the brake pedal.
➔ **Anti-lock Brake System (ABS)** P. 698

Q **The rear door cannot be opened from inside the vehicle. Why?**

A Check if the childproof lock is in the lock position. If so, open the rear door with the outside door handle.
To cancel this function, slide the lever up to the unlock position.

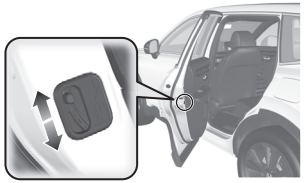

Q **Why do the doors lock after I unlocked the doors?**

A If you do not open the doors within 30 seconds, the doors are relocked automatically for security.

Q **Why does the beeper sound when I open the driver's door?**

A The beeper sounds when:
- The power mode is in ACCESSORY.
- The exterior lights are left on.

Q **Why does a beeper sound when I walk away from the vehicle after I close the door?**

A The beeper sounds if the keyless remote or card key* has moved outside the walk away auto lock operating range before all doors completely close.

➔ **Locking the doors and tailgate (Walk away auto lock)** P. 204

Q **Why does the beeper sound when I start driving?**

A The beeper sounds when the driver, the front passenger, and/or the rear passenger are not wearing their seat belts.

Q **Pressing the electric parking brake switch does not release the parking brake. Why?**

A Press the electric parking brake switch with the brake pedal depressed.

Q Models with deflation warning system

I'm seeing an amber indicator of a tyre with an exclamation point. What is that?

A The deflation warning system needs attention. If you recently inflated or changed a tyre, you have to recalibrate the system.


➔ **Deflation Warning System*** P. 590

Q **Depressing the accelerator pedal does not release the parking brake automatically. Why?**

A
- Fasten the driver's seat belt.
- Check if the transmission is in P or N. If so, select any other position.

Q **Why do I hear a screeching sound when I apply the brake pedal?**

A The brake pads may need to be replaced. Have your vehicle inspected by a dealer.

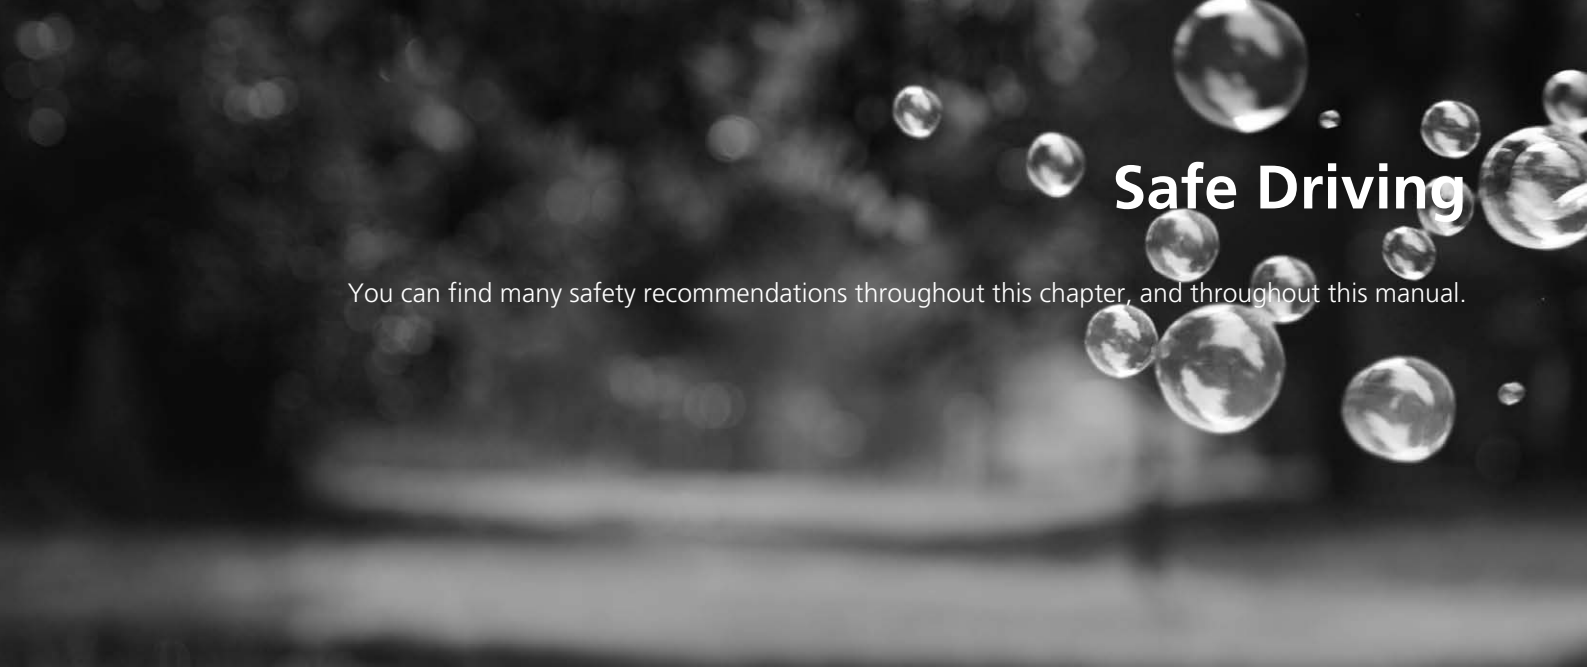

Safe Driving

You can find many safety recommendations throughout this chapter, and throughout this manual.

For Safe Driving
- Important Safety Precautions 46
- Important Handling Information 48
- Your Vehicle's Safety Features 49
- Safety Checklist 50

Seat Belts
- About Your Seat Belts 51
- Fastening a Seat Belt 57
- Seat Belt Inspection 63
- Anchorage Points 64

Airbags
- Airbag System Components 65
- Types of Airbags 67
- Front Airbags (SRS) 67
- Knee Airbags 70
- Centre Airbag* 74
- Side Airbags 76
- Side Curtain Airbags 79
- Airbag System Indicators 81
- Airbag Care 82

Post-Collision Braking System
- About the Post-Collision Braking System 83

Child Safety
- Protecting Child Passengers 84
- Safety of Infants and Small Children 87
- Safety of Larger Children 116

Exhaust Gas Hazard
- Carbon Monoxide Gas 119

Safety Labels
- Label Locations 120

* Not available on all models

The following pages explain your vehicle's safety features and how to use them properly. The safety precautions below are ones that we consider to be among the most important.

Important Safety Precautions

■ Always wear your seat belt
A seat belt is your best protection in all types of collisions. Airbags are designed to supplement seat belts, not replace them. So even though your vehicle is equipped with airbags, make sure you and your passengers always wear your seat belts, and wear them properly.

■ Restrain all children
Children aged 12 and under should ride properly restrained in a back seat, not the front seat. Infants and small children should be restrained in a child restraint system. Larger children should use a booster seat and a lap/shoulder seat belt until they can use the belt properly without a booster seat.

■ Be aware of airbag hazards
While airbags can save lives, they can cause serious or fatal injuries to occupants who sit too close to them, or are not properly restrained. Infants, young children, and short adults are at the greatest risk. Be sure to follow all instructions and warnings in this manual.

■ Don't drink and drive
Alcohol and driving don't mix. Even one drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. So don't drink and drive, and don't let your friends drink and drive, either.

Important Safety Precautions

Some countries prohibit the use of mobile phones other than hands-free devices by the driver while driving.

■ **Pay appropriate attention to the task of driving safely**

Engaging in mobile phone conversation or other activities that keep you from paying close attention to the road, other vehicles, and pedestrians could lead to a crash. Remember, situations can change quickly, and only you can decide when it is safe to divert some attention away from driving.

■ **Control your speed**

Excessive speed is a major factor in crash injuries and deaths. Generally, the higher the speed, the greater the risk, but serious injuries can also occur at lower speeds. Never drive faster than is safe for current conditions, regardless of the maximum speed posted.

■ **Keep your vehicle in safe condition**

Having a tyre blowout or a mechanical failure can be extremely hazardous. To reduce the possibility of such problems, check your tyre pressures and condition frequently, and perform all regularly scheduled maintenance.

■ **Do not leave children unattended in the vehicle**

Children, pets, and people needing assistance left unattended in the vehicle may be injured if they activate one or more of the vehicle controls. They may also cause the vehicle to move, resulting in a crash in which they and/or another person(s) can be injured or killed. Also, depending on the ambient temperature, the temperature of the interior may reach extreme levels, which can result in harm or death. Even if the climate control system is on, never leave them in the vehicle unattended as the climate control system can shut off at any time.

Important Handling Information

Your vehicle has higher ground clearance than a passenger vehicle designed for use only on pavement. Higher ground clearance has many advantages for off-road driving. It allows you to travel over bumps, obstacles, and rough terrain. It also provides good visibility so you can anticipate problems earlier.

These advantages come at some cost. Because your vehicle is taller and rides higher off the ground, it has a higher centre gravity making it more susceptible to tipping or rollover if you make abrupt turns. Utility vehicles have a significantly higher rollover rate than other types of vehicles. In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt. As a reminder, make sure you and your passengers always wear seat belts.

Important Handling Information


For information on how to reduce the risk of rollover, read:

➔ **Precautions While Driving** P. 542
➔ **Off-road Guidelines** P. 533

Failure to operate your vehicle correctly might result in a crash or a rollover.

In many countries, the law prohibits off-road driving, e.g., driving in forests, trailblazing, etc. Please check your local laws and regulations before commencing any off-road driving activity.

Your Vehicle's Safety Features

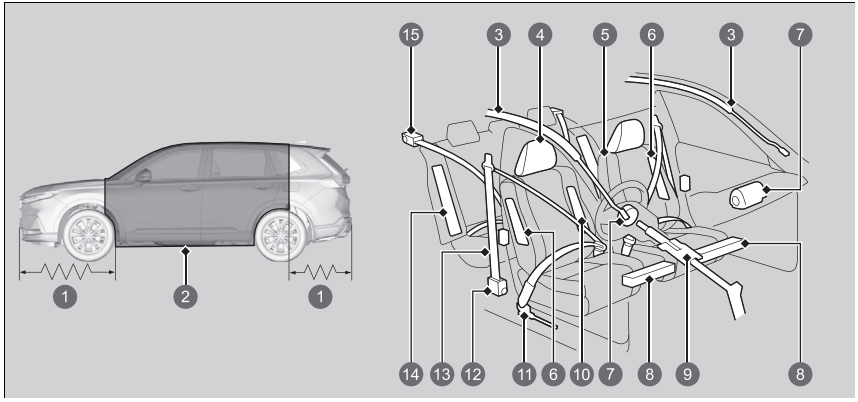

❶ Crush Zones
❷ Safety Cage
❸ Side Curtain Airbags
❹ Head Restraints
❺ Seats and Seat-Backs
❻ Front Side Airbags
❼ Front Airbags
❽ Knee Airbag
❾ Collapsible Steering Column
❿ Centre Airbag*
⓫ Outer Lap Pretensioners
⓬ Front Seat Belt Tensioners
⓭ Seat Belts
⓮ Rear Side Airbags*
⓯ Rear Seat Belt Tensioners*

The following checklist will help you take an active role in protecting yourself and your passengers.

Your Vehicle's Safety Features

Your vehicle is equipped with many features that work together to help to protect you and your passengers during a crash.

Some features do not require any action on your part. These include a strong steel framework that forms a safety cage around the passenger compartment, front and rear crush zones, a collapsible steering column, and tensioners that tighten the front and rear outer* seat belts in a sufficient crash.

However, you and your passengers cannot take full advantage of these features unless you remain seated in the correct position and always wear your seat belts. In fact, some safety features can contribute to injuries if they are not used properly.

* Not available on all models

Safety Checklist

For the safety of you and your passengers, make a habit of checking these items each time before you drive.

- Adjust your seat to a position suitable for driving. Be sure the front seats are adjusted as far to the rear as possible while allowing the driver to control the vehicle. Sitting too close to a front airbag can result in serious or fatal injury in a crash.
  ➡ **Seats** P. 264
- Adjust head restraints to the proper position. Head restraints are most effective when the centre of the head restraint aligns with the centre of your head. Taller persons should adjust their head restraint to the highest position.
  ➡ **Adjusting the Front Head Restraint Positions** P. 273
- Always wear your seat belt, and make sure you wear it properly. Confirm that any passengers are properly belted as well.
  ➡ **Fastening a Seat Belt** P. 57
- Protect children by using seat belts or child restraint systems according to a child's age, height, and weight.
  ➡ **Child Safety** P. 84

Safety Checklist

If the door and/or tailgate open message appears on the driver information interface, a door and/or the tailgate is not completely closed. Close all doors and the tailgate tightly until the message disappears.



About Your Seat Belts

Seat belts are the single most effective safety device because they keep you connected to the vehicle so that you can take advantage of many built-in safety features. They also help to keep you from being thrown against the inside of the vehicle, against any passengers, or out of the vehicle. When worn properly, seat belts also keep your body properly positioned in a crash so that you can take full advantage of the additional protection provided by the airbags.

In addition, seat belts help to protect you in almost every type of crash, including:
- frontal impacts
- side impacts
- rear impacts
- rollovers

About Your Seat Belts

⚠WARNING

Not wearing a seat belt properly increases the chance of serious injury or death in a crash, even though your vehicle has airbags.

Be sure you and your passengers always wear seat belts and wear them properly.

WARNING: Seat belts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders, as applicable; wearing the lap section of the belt across the abdominal area must be avoided.

WARNING: Seat belts should be adjusted as firmly as possible, consistent with comfort, to provide the protection for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer.

WARNING: Belts should not be worn with straps twisted.

WARNING: Each belt assembly must only be used by one occupant; it is dangerous to put a belt around a child being carried on the occupant's lap.

Continued

■ Lap/shoulder seat belts

All five seating positions are equipped with lap/shoulder seat belts with emergency locking retractors. In normal driving, the retractor lets you move freely while keeping some tension on the belt. During a collision or sudden stop, the retractor locks to restrain your body.

The seat belt must be properly secured when using a front-facing child restraint system.

➲ **Installing a Child Restraint System with a Lap/Shoulder Seat Belt** P. 111

About Your Seat Belts

If you extend the seat belt too quickly, it will lock in place. If this happens, slightly retract the seat belt, then extend it slowly.

Seat belts cannot completely protect you in every crash. But in most cases, seat belts can reduce your risk of serious injury.

Most countries require you to wear seat belts. Take time to familiarise with the legal requirements of the countries in which you will drive.

■ **Proper use of seat belts**

Follow these guidelines for proper use:

- All occupants should sit upright, well back in the seat, and remain in that position for the duration of the trip. Slouching and leaning reduce the effectiveness of the belt and can increase the chance of serious injury in a crash.
- Never place the shoulder part of a lap/shoulder seat belt under your arm or behind your back. This could cause very serious injuries in a crash.
- Two people should never use the same seat belt. If they do, they could be very seriously injured in a crash.
- Do not put any accessories on the seat belts. Devices intended to improve comfort or reposition the shoulder part of a seat belt can reduce the protective capability and increase the chance of serious injury in a crash.

Continued

■ Seat Belt Reminder



■ Front seats

The seat belt system includes an indicator on the instrument panel to remind the driver or a front passenger or both to fasten their seat belts.

If you set the power mode to ON and a seat belt is not fastened, the indicator will come on. If the driver or front passenger does not fasten the belt, the indicator will remain on.

The beeper will periodically sound and the indicator will blink while the vehicle is moving until the seat belt is fastened.

Seat Belt Reminder

The indicator will also come on if a front passenger does not fasten their seat belt within six seconds after the power mode is set to ON.

When no one is sitting in the front passenger's seat, the indicator will not come on and the beeper will not sound.


If the indicator comes on or the beeper sounds with no one sitting in the front passenger's seat. Check if:

- There is nothing heavy placed on the front passenger seat.
- The driver's seat belt is fastened.

If the indicator does not light when the passenger is seated and is not fastened, something may be interfering with the occupant detection sensor. Check if:

- A cushion is placed on the seat.
- The front passenger is not sitting properly.

If none of these conditions exist, have your vehicle checked by a dealer.

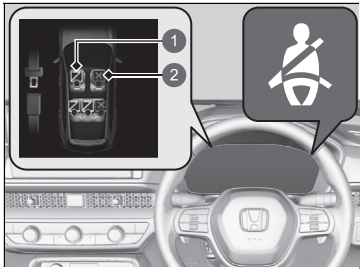

❶ Fastened
❷ Unfastened

■ Rear seats

Your vehicle monitors rear seat belt use.

The driver information interface notifies you about the status of the rear seat belts use.

The display appears when:

- Any of the rear passenger seat belts are unfastened when the power mode is set to ON.
- Any of the rear passengers fasten or unfasten their seat belt.


The seat belt reminder indicator blinks and the beeper sounds if any rear passenger seat belts has been unfastened while driving.


Continued

■ Automatic Seat Belt Tensioners

The front seats and the outer rear seats* are equipped with automatic seat belt tensioners to enhance safety.

The tensioners automatically tighten the front seat belts and the outer rear seat belts* during a moderate-to-severe frontal collision, sometimes even if the collision is not severe enough to inflate the front airbags or the front knee airbags.

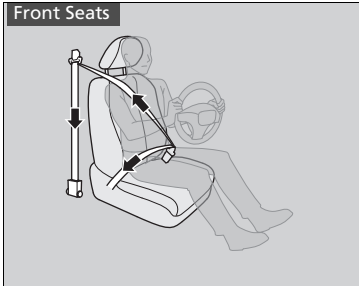

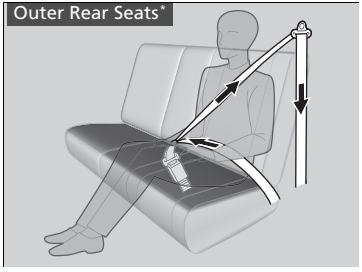

Automatic Seat Belt Tensioners

The seat belt tensioners can only operate once. If a tensioner is activated, the SRS indicator will come on. Have a dealer replace the tensioner and thoroughly inspect the seat belt system as it may not offer protection in a subsequent crash.

During a moderate-to-severe side impact, the tensioners on both sides of the vehicle also activate.

* Not available on all models


Fastening a Seat Belt

After adjusting a front seat to the proper position, and while sitting upright and well back in the seat (see illustrations for correct seating posture):

➡ **Seats** P. 264



1. Pull the seat belt out slowly.

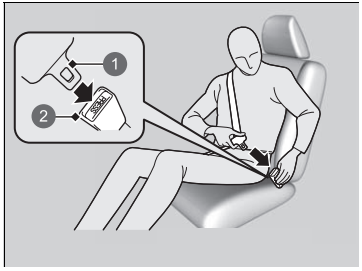

2. Insert the latch plate into the buckle, then tug on the belt to make sure the buckle is secure.

▶ Make sure that the belt is not twisted or caught on anything.

❶ Latch Plate
❷ Buckle

Fastening a Seat Belt

No one should sit in a seat with an inoperative seat belt or one that does not appear to be working correctly. Using a seat belt that is not working properly may not protect the occupant in a crash. Have a dealer check the belt as soon as possible.

If the seat belt appears to be locked in a fully retracted position, firmly pull out on the shoulder belt once, then push it back in.
Then, smoothly pull it out of the retractor and fasten.
If you are unable to release the seat belt from a fully retracted position, do not allow anyone to sit in the seat, and take your vehicle to a dealer for repair.

➡ **About Your Seat Belts** P. 51
➡ **Seat Belt Inspection** P. 63

Continued



3. Position the lap part of the belt as low as possible across your hips (see illustration), then pull up on the shoulder part of the belt so the lap part fits snugly. This lets your strong pelvic bones take the force of a crash and reduces the chance of internal injuries.

4. If necessary, pull up on the belt again to remove any slack, then check that the belt rests across the centre of your chest and over your shoulder. This spreads the forces of a crash over the strongest bones in your upper body.

Fastening a Seat Belt

⚠WARNING

Improperly positioning the seat belts can cause serious injury or death in a crash.


Make sure all seat belts are properly positioned before driving.

To release the belt, push the red **PRESS** button and then guide the belt by hand until it has retracted completely.
When exiting the vehicle, be sure the belt is properly stowed so that it will not get caught in the closing door.

Never insert any foreign objects into the buckle or retractor mechanism.

Adjusting the Shoulder Anchorage

The front seats and rear seats have adjustable shoulder anchorages to accommodate taller and shorter occupants.

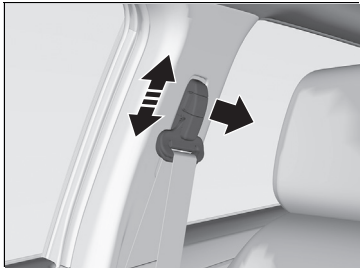

1. Move the anchorage up and down while pulling the shoulder anchorage outward.
2. Position the anchorage so that the belt rests across the centre of your chest and over your shoulder.


Adjusting the Shoulder Anchorage

After an adjustment, make sure that the shoulder anchorage position is secure.

The shoulder anchorage height can be adjusted to four levels. If the belt contacts your neck, lower the height one level at a time.


Continued

■ Seat Belt with Detachable Anchorage

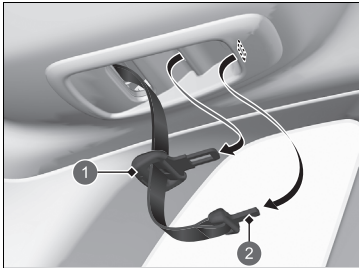

1 Latch Plate
2 Small Latch Plate

1. Pull out the seat belt's small latch plate and the latch plate from each holding slot in the ceiling.

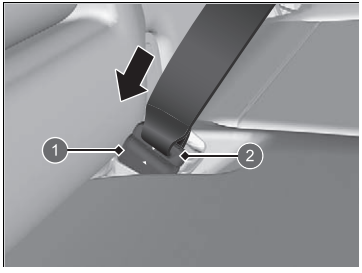

1 Anchorage Buckle
2 Small Latch Plate

2. Line up the triangle marks on the small latch plate and anchorage buckle. Make sure the seat belt is not twisted. Attach the belt to the anchorage buckle.


Seat Belt with Detachable Anchorage

⚠WARNING


Using the seat belt with the detachable anchorage unfastened increases the chance of serious injury or death in a crash.

Before using the seat belt, make sure the detachable anchorage is correctly latched.

To unlatch the detachable anchorage, insert the latch plate into the slot on the side of the anchorage buckle.

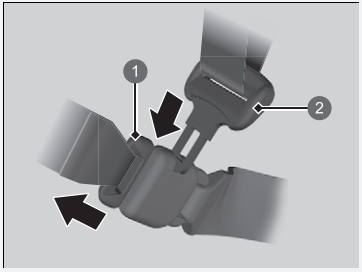

1 Small Latch Plate
2 Latch Plate

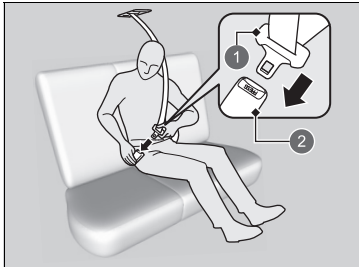

❶ Latch Plate
❷ Buckle

3. Insert the latch plate into the buckle. Properly fasten the seat belt the same way you fasten the lap/shoulder seat belt.

Seat Belt with Detachable Anchorage

Taiwanese models

When fastening a seatbelt in the centre seat, the seatbelt should pass over the bar.




Continued

■ Advice for Pregnant Women

Consider alternative:

If you are pregnant, the best way to protect yourself and your unborn child when driving or riding in a vehicle is to always wear a seat belt. When positioning the seat belt, wear the shoulder belt section across the chest, avoiding the abdomen, and keep the lap belt portion as low as possible across the hips. (See illustration.)

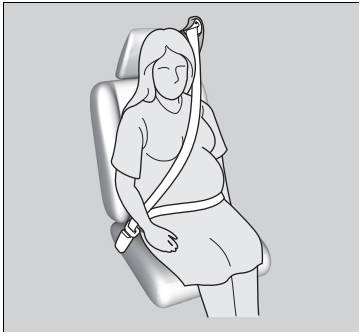

Advice for Pregnant Women

Each time you have a checkup, ask your doctor if it is okay for you to drive.

To reduce the risk of injuries to both you and your unborn child that can be caused by an inflating front airbag:

- When driving, sit upright and adjust the seat as far back as possible while allowing full control of the vehicle.
- When sitting in the front passenger's seat, adjust the seat as far back as possible.

Seat Belt Inspection

Regularly check the condition of your seat belts as follows:

- Pull each belt out fully, and look for frays, cuts, burns, and wear.
- Check that the latch plates and buckles work smoothly and the belts retract easily.
  ▶ If a belt does not retract easily, cleaning the belt may correct the problem. Only use a mild soap and warm water. Do not use bleach or cleaning solvents. Make sure the belt is completely dry before allowing it to retract.

Any belt that is not in good condition or working properly will not provide proper protection and should be replaced as soon as possible.
A belt that has been worn during a crash may not provide the same level of protection in a subsequent crash. Have your seat belts inspected by a dealer after any collision.

Seat Belt Inspection

⚠WARNING

Not checking or maintaining seat belts can result in serious injury or death if the seat belts do not work properly when needed.

Check your seat belts regularly and have any problem corrected as soon as possible.


WARNING: No modifications or additions should be made by the user which will either prevent the seat belt adjusting devices from operating to remove slack, or prevent the seat belt assembly from being adjusted to remove slack.

WARNING: It is essential to replace the entire assembly after it has been worn in a severe impact even if damage to the assembly is not obvious.

WARNING: Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water. The belt should be replaced if webbing becomes frayed, contaminated or damaged.


Anchorage Points

Front Seats

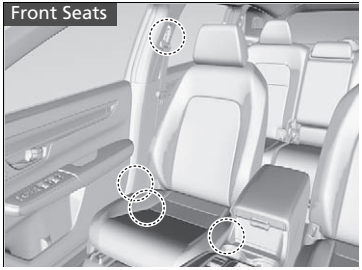

When replacing the seat belts, use the anchorage points shown in the images. The front seat has a lap/shoulder belt.

Rear Seats

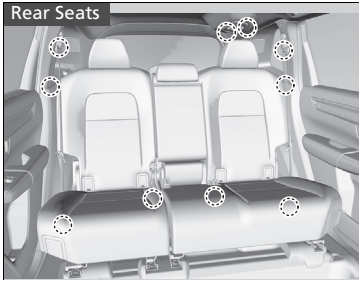

The rear seat has three lap/shoulder belts.

Airbag System Components

The front, driver's knee, front passenger's knee, front side, rear side*, front centre* and side curtain airbags are deployed according to the direction and severity of impact. The airbag system includes:

- Two SRS (Supplemental Restraint System) front airbags. The driver's airbag is stored in the centre of the steering wheel; the front passenger's airbag is stored in the dashboard. Both are marked **SRS AIRBAG**.
- Two knee airbags. The driver's knee airbag is stored under the steering column; the front passenger's knee airbag is stored under the glove box. Both are marked **SRS AIRBAG**.
- Four side airbags. One for the driver, one for the front passenger, and two for the rear outboard* seating positions. The airbags are stored in the outer edges of the seat-backs. All are marked **SIDE AIRBAG**.
- Two side curtain airbags, one for each side of the vehicle. The airbags are stored in the ceiling, above the side windows. The front and rear pillars are marked **SIDE CURTAIN AIRBAG**.

Australian, Bangladeshi, Bhutanese, and New Zealand models

- One centre airbag. The airbag is stored in the centre side of driver's seat-back. It is marked **CENTER AIRBAG**.
- An electronic control unit that, when the power mode is in ON, continually monitors information about the various impact sensors, seat and buckle sensors, airbag activators, seat belt tensioners, and other vehicle information. During a crash event, the unit can record such information.
- Seat belt tensioners for the front seats and outer rear seats*.
- Impact sensors that can detect a moderate-to-severe front or side impact.
- An indicator on the instrument panel that alerts you to a possible problem with your airbag system or seat belt tensioners.

Australian, Bangladeshi, Bhutanese, and New Zealand models

- Pressure sensors that can detect a moderate-to-severe side impact.

* Not available on all models

Continued

■ Important Facts About Your Airbags

Airbags can pose serious hazards. To do their job, airbags must inflate with tremendous force. So, while airbags help to save lives, they can cause burns, bruises, and other minor injuries, sometimes even fatal ones if occupants are not wearing their seat belts properly and sitting correctly.

What you should do: Always wear your seat belt properly and sit upright and as far back from the steering wheel as possible while allowing full control of the vehicle. A front passenger should move their seat as far back from the dashboard as possible.

Remember, however, that no safety system can prevent all injuries or deaths that can occur in a severe crash, even when seat belts are properly worn and the airbags deploy.

Do not place hard or sharp objects between yourself and a front airbag. Carrying hard or sharp objects on your lap, or driving with a pipe or other sharp object in your mouth, can result in injuries if your front airbag inflates.

Do not attach or place objects on the front, driver's knee, and front passenger's knee airbag covers. Objects on the covers marked **SRS AIRBAG** could interfere with the proper operation of the airbags or be propelled inside the vehicle and hurt someone if the airbags inflate.

Important Facts About Your Airbags

Do not attempt to deactivate your airbags. Together, airbags and seat belts provide the best protection.

When driving, keep hands and arms out of the deployment path of the front airbag by holding each side of the steering wheel. Do not cross an arm over the airbag cover.

Types of Airbags

Your vehicle is equipped with five types of airbags:

- **Front airbags:** Airbags in front of the driver's and front passenger's seats.
- **Knee airbags:** Airbags under the steering column and under the glove box.
- **Centre airbags*:** Airbag in the centre side of driver's seat-back.
- **Side airbags:** Airbags in the driver's, front passenger's, and rear outer passenger's* seat-backs.
- **Side curtain airbags:** Airbags above the side windows.

Each is discussed in the following pages.

Types of Airbags

The airbags can inflate whenever the power mode is in ON.

After an airbag inflates in a crash, you may see a small amount of smoke. This is from the combustion process of the inflator material and is not harmful. People with respiratory problems may experience some temporary discomfort. If this occurs, get out of the vehicle as soon as it is safe to do so.

Front Airbags (SRS)

The front SRS airbags inflate in a moderate-to-severe frontal collision to help to protect the head and chest of the driver and/or front passenger.

SRS (Supplemental Restraint System) indicates that the airbags are designed to supplement seat belts, not replace them. Seat belts are the occupant's primary restraint system.

■ Housing Locations

The front airbags are housed in the centre of the steering wheel for the driver, and in the dashboard for the front passenger. Both airbags are marked **SRS AIRBAG**.

* Not available on all models


Continued

■ Operation

Front airbags are designed to inflate during moderate-to-severe frontal collisions. When the vehicle decelerates suddenly, the sensors send information to the control unit which signals one or both front airbags to inflate.

A frontal collision can be either head-on or angled between two vehicles, or when a vehicle crashes into a stationary object, such as a concrete wall.

■ How the Front Airbags Work

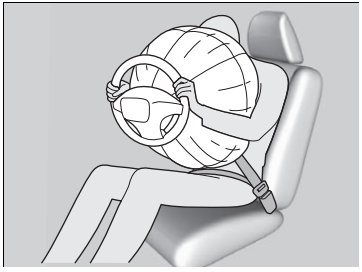

While your seat belt restrains your torso, the front airbag provides supplemental protection for your head and chest.
The front airbags deflate immediately so that they won't interfere with the driver's visibility or the ability to steer or operate other controls.

The total time for inflation and deflation is so fast that most occupants are not aware that the airbags deployed until they see them lying in front of them.

■ **When front airbags should not deploy**

Minor frontal crashes: Front airbags were designed to supplement seat belts and help to save lives, not to prevent minor scrapes, or even broken bones that might occur during a less than moderate-to-severe frontal crash.

Side impacts: Front airbags can provide protection when a sudden deceleration causes a driver or front passenger to move towards the front of the vehicle. Side airbags and side curtain airbags have been specifically designed to help to reduce the severity of injuries that can occur during a moderate-to-severe side impact which can cause the driver or passenger to move towards the side of the vehicle.

Rear impacts: Head restraints and seat belts are your best protection during a rear impact. Front airbags cannot provide any significant protection and are not designed to deploy in such collisions.

Rollovers: Seat belts and side curtain airbags offer the best protection in a rollover. Because front airbags could provide little if any protection, they are not designed to deploy during a rollover.

■ **When front airbags deploy with little or no visible damage**

Because the airbag system senses sudden deceleration, a strong impact to the vehicle framework or suspension might cause one or more of the airbags to deploy. Examples include running into a curb, the edge of a hole, or other low fixed object that causes a sudden deceleration in the vehicle chassis. Since the impact is underneath the vehicle, damage may not be readily apparent.

■ **When front airbags may not deploy, even though exterior damage appears severe**


Since crushable body parts absorb crash energy during an impact, the amount of visible damage does not always indicate proper airbag operation. In fact, some collisions can result in severe damage but no airbag deployment because the airbags would not have been needed or would not have provided protection even if they had deployed.

Knee Airbags

The knee SRS airbags inflate in a moderate-to-severe frontal collision to help to keep the driver and/or front passenger in the proper position and to help to maximise the benefit provided by the vehicle's other safety features.

SRS (Supplemental Restraint System) indicates that the airbags are designed to supplement seat belts, not replace them. Seat belts are the occupant's primary restraint system.

■ Housing Locations

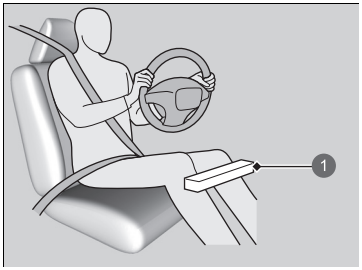

The knee airbag for the driver and the one for the front passenger are housed under the steering column and the glove box respectively.


Both are marked **SRS AIRBAG**.

1 Driver's Knee Airbag Location

Knee Airbags


Do not attach accessories on or near a knee airbag as they can interfere with the proper operation of the airbag, or even hurt someone if the airbag inflates.

The driver and front passenger should not store any items under the seat or behind their feet. The items can interfere with proper airbag deployment in the event of a moderate to severe frontal collision and may result in inadequate protection.

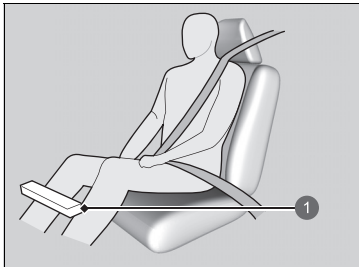

1 Passenger's Knee Airbag Location

Operation

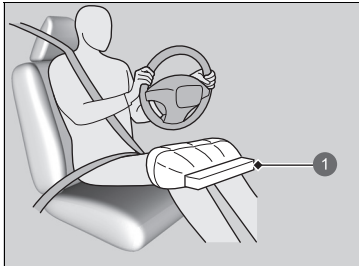


1 Deployed Driver's Knee Airbag

The driver's and front passenger's knee airbag deploy at the same time as the driver's and front passenger's airbag respectively.

Even if the collision is not severe enough to deploy the front airbag, the knee airbag may inflate alone.

Continued

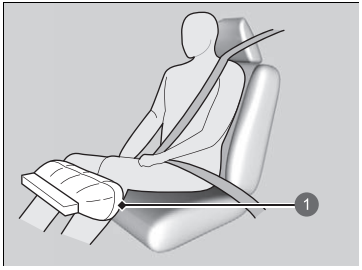

❶ Deployed Passenger's Knee Airbag

■ When knee airbags deploy with little or no visible damage

Because the airbag system senses sudden deceleration, a strong impact to the vehicle framework or suspension might cause one or more of the airbags to deploy. Examples include running into a curb, the edge of a hole, or other low fixed objects that cause a sudden deceleration in the vehicle chassis. Since the impact is underneath the vehicle, damage may not be readily apparent.


■ When knee airbags may not deploy, even though exterior damage appears severe

Since crushable body parts absorb crash energy during an impact, the amount of visible damage does not always indicate proper airbag operation. In fact, some collisions can result in severe damage but no airbag deployment because the airbags would not have been needed or would not have provided protection even if they had deployed.

Centre Airbag*

The centre airbag is designed to help to protect the heads of the driver and front passenger during a moderate-to-severe side impact.

■ Housing Location

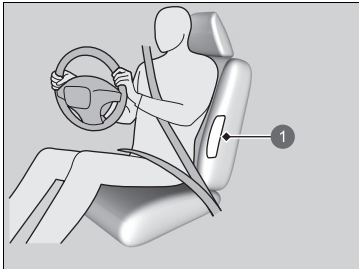


The centre airbag is housed in the centre side of the driver's seat-back.

It is marked **CENTER AIRBAG**.

1 Centre Airbag Location

■ Operation

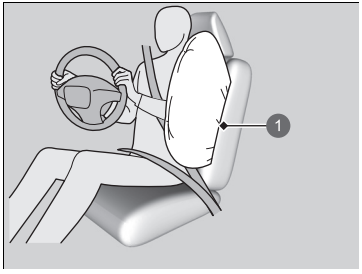

When the sensors detect a moderate-to-severe side impact, the control unit signals the centre airbag to deploy.

1 Centre Airbag

Centre Airbag*

Make sure you and any front seat passenger always sit upright. Leaning into the path of the centre airbag can prevent the airbag from deploying properly and increases your risk of serious injury.

Do not attach accessories on or near the centre airbag. They can interfere with the proper operation of the airbag, or hurt someone if an airbag inflate.

Do not open the lid of the console compartment while driving.

Do not cover or replace the driver's seat-back cover without consulting a dealer.
Improperly replacing or covering driver's seat-back covers can prevent your centre airbag from properly deploying during a side impact.

* Not available on all models

■ **When the centre airbag deploy with little or no visible damage**

Because the airbag system senses sudden acceleration, a strong impact to the side of the vehicle's framework can cause the centre airbag to deploy. In such cases, there may be little or no damage, but the side impact sensors detected a severe enough impact to deploy the airbag.


■ **When the centre airbag may not deploy, even though visible damage appears severe**

It is possible for the centre airbag to not deploy during an impact that results in apparently severe damage. This can occur when the point of impact was towards the far front or rear of the vehicle, or when the vehicle's crushable body parts absorbed most of the crash energy. In either case, the centre airbag would not have been needed nor provided protection even if it had deployed.

Side Airbags

The side airbags help to protect the torso and pelvis of the driver, front passenger, or an outer rear seat occupant* during a moderate-to-severe side impact.

■ Housing Locations

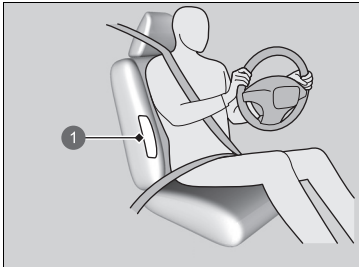


The side airbags are housed in the outside edge of the driver's, passenger's, and rear outer passenger's* seat-backs.

Each is marked **SIDE AIRBAG**.

❶ Side Airbag Location

Models with rear side airbags

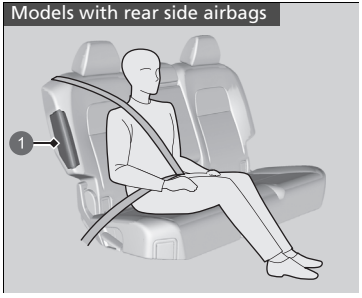


❶ Side Airbag Location

Side Airbags

Do not attach accessories on or near the side airbags. They can interfere with the proper operation of the airbags, or hurt someone if an airbag inflates.

* Not available on all models


Operation

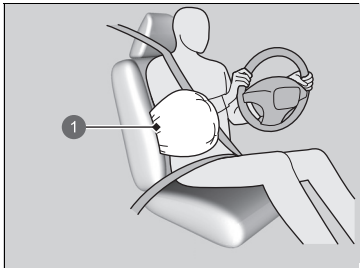

When the sensors detect a moderate-to-severe side impact, the control unit signals the side airbag on the impact side to immediately inflate.

❶ Deployed Side Airbag

Models with rear side airbags

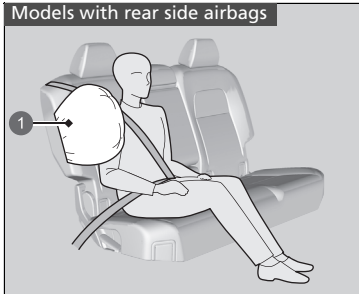

❶ Deployed Side Airbag

Side Airbags

Do not cover or replace the front and rear* seat-back covers without consulting a dealer.
Improperly replacing or covering front and rear* seat-back covers can prevent your side airbags from properly deploying during a side impact.

Do not let the front and rear passengers lean sideways with their head in the deployment path of the side airbag. An inflating side airbag can strike with strong force and seriously injure the passenger.

Australian, Bangladeshi, Bhutanese, and New Zealand models

Side airbag deployment is controlled by a pressure sensor inside each front door. Damage or changes to the inside or outside of the doors may negatively affect side airbag deployment. Contact an authorized dealer before changing or repairing a front door.

* Not available on all models

Continued

■ When a side airbag deploys with little or no visible damage

Because the airbag system senses sudden acceleration, a strong impact to the side of the vehicle's framework can cause a side airbag to deploy. In such cases, there may be little or no damage, but the side impact sensors detected a severe enough impact to deploy the airbag.


■ When a side airbag may not deploy, even though visible damage appears severe

It is possible for a side airbag not to deploy during an impact that results in apparently severe damage. This can occur when the point of impact was towards the far front or rear of the vehicle, or when the vehicle's crushable body parts absorbed most of the crash energy. In either case, the side airbag would not have been needed nor provided protection even if it had deployed.

Side Curtain Airbags

The side curtain airbags help to protect the heads of the driver and passengers in outer seating positions during a moderate-to-severe side impact.

■ Housing Locations

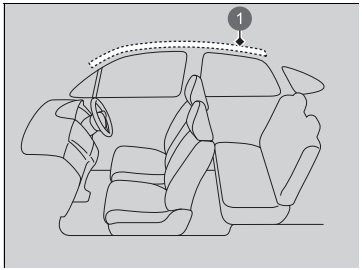

The side curtain airbags are located in the ceiling above the side windows on both sides of the vehicle.

1 Side Curtain Airbag Location

Side Curtain Airbags


The side curtain airbags are most effective when an occupant is wearing their seat belt properly and sitting upright, well back in their seat.

Do not attach any objects to the side windows or roof pillars as they can interfere with the proper operation of the side curtain airbags.

Do not put a coat hanger or hard objects on a coat hook. This could result in injuries if your side curtain airbag inflates.

Continued

■ Operation

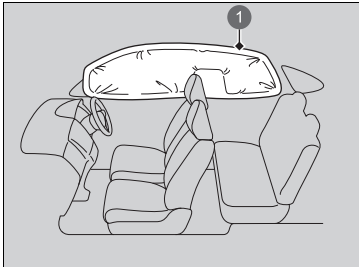

The side curtain airbag is designed to deploy in a moderate-to-severe side impact.

1 Deployed Side Curtain Airbag

■ When side curtain airbags deploy in a frontal collision

One or both side curtain airbags may also inflate in a moderate-to-severe angled frontal collision.

Airbag System Indicators

If a problem occurs in the airbag system, the SRS indicator will come on and a message appears on the driver information interface.

■ Supplemental Restraint System (SRS) Indicator



■ When the power mode is set to ON
The indicator comes on for a few seconds, then goes off. This tells you the system is working properly.

If the indicator comes on at any other time, or does not come on at all, have the system checked by a dealer as soon as possible. If you don't, your airbags and seat belt tensioners may not work properly when they are needed.

Supplemental Restraint System (SRS) Indicator

⚠WARNING

Ignoring the SRS indicator can result in serious injury or death if the airbag systems or tensioners do not work properly.

Have your vehicle checked by a dealer as soon as possible if the SRS indicator alerts you to a possible problem.

Airbag Care

You do not need to, and should not, perform any maintenance on or replace any airbag system components yourself. However, you should have your vehicle inspected by a dealer in the following situations:

■ When the airbags have deployed

If an airbag has inflated, the control unit and other related parts must be replaced. Similarly, once an automatic seat belt tensioner has been activated, it must be replaced.

■ When the vehicle has been in a moderate-to-severe collision

Even if the airbags did not inflate, have your dealer inspect the following: the seat belt tensioners for the front seats and outer rear seats*, and each seat belt that was worn during the crash.

Airbag Care

The removal of airbag components from the vehicle is prohibited.

In case of malfunction, or shutdown, or after the airbag inflation/seat belt tensioner operation, ask a qualified personnel for handling.

We recommend against the use of salvaged airbag system components, including the airbag, tensioners, sensors, and control unit.

* Not available on all models

About the Post-Collision Braking System

When the airbag system is activated after a collision is detected, this system simultaneously applies the brakes and limits propulsion to reduce damage from a secondary collision.

■ Conditions for activation

The Post-Collision Braking System activates when the airbag system or automatic seat belt tensioners activate due to a frontal collision or side impact.
However, it will not activate if components of the system are damaged.

■ Conditions for cancellation

After the Post-Collision Braking System is activated, the system will be cancelled if either of the following conditions is met.

- The vehicle is stopped.
- You depress the accelerator pedal after releasing it.

Post-Collision Braking System

This system may not be able to reduce damage from secondary collisions in all situations.
Its effectiveness depends on the circumstances of the collision.

When a collision occurs, confirm your surroundings, and carefully operate your vehicle as needed to park in a safe place.


When the system activates, the engine may stop automatically.
Start the engine by normal operation if the engine stops.

Turning on the Power P. 535

Protecting Child Passengers

Each year, many children are injured or killed in vehicle crashes because they are either unrestrained or not properly restrained. In fact, vehicle crashes are the number one cause of death of children aged 12 and under.

To reduce the number of child deaths and injuries, infants and children should be properly restrained when they ride in a vehicle.

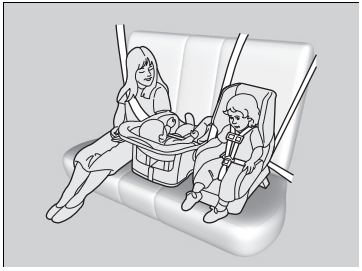

Children should sit properly restrained in a rear seat. This is because:

- An inflating front airbag can injure or kill a child sitting in the front seat.
- A child in the front seat is more likely to interfere with the driver's ability to safely control the vehicle.
- Statistics show that children of all sizes and ages are safer when they are properly restrained in a rear seat.

Protecting Child Passengers

Front Passenger's Sun Visor

⚠WARNING



NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

⚠WARNING

Children who are unrestrained or improperly restrained can be seriously injured or killed in a crash.

Any child too small for a seat belt should be properly restrained in an approved child restraint system. A larger child should be properly restrained with a seat belt, using a booster seat if necessary.

- Never hold a child on your lap because it is impossible to protect them in the event of a collision.
- Never put a seat belt over yourself and a child. During a crash, the belt would likely press deep into the child and cause serious or fatal injuries.
- Never let two children use the same seat belt. Both children could be very seriously injured in a crash.
- Any child who is too small to wear a seat belt must be properly restrained in an approved child restraint system that is properly secured to the vehicle using the seat belt or the child restraint anchorage system.

Protecting Child Passengers

In many countries, the law requires all children aged 12 and under, and whose height are shorter than 150 cm be properly restrained in a rear seat.

In many countries, it is required to use an officially approved and suitable child restraint system for transporting a child on any passenger seat. Check your local legal requirement.

We recommend a child restraint system compliant with UN Regulation No. 44 or No. 129, or the regulations of the subject countries.

Selecting a Child Restraint System P. 90

Continued

- Do not allow children to operate the doors, windows, or seat adjustments.
- Do not leave children in the vehicle unattended, especially in hot weather when the inside of the vehicle can get hot enough to kill them. They could also activate vehicle controls causing it to move unexpectedly.

Protecting Child Passengers

WARNING: Use the power window lock button to prevent children from opening the windows. Using this feature will prevent children from playing with the windows, which could expose them to hazards or distract the driver.

➡ **Opening/Closing the Power Windows** P. 227

WARNING: Always take the ignition key with you whenever you leave the vehicle alone or with other occupants.


To remind you of the passenger's front airbag hazard and child safety, your vehicle has the warning label on the passenger's side sun visor.
Please read and follow the instructions on this label.

➡ **Safety Labels** P. 120

Safety of Infants and Small Children

■ Protecting Infants

An infant must be properly restrained in a rear-facing child restraint system until the infant reaches the child restraint system manufacturer's weight or height limit for the seat.

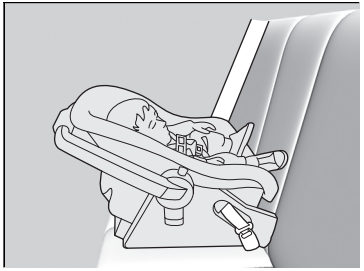

■ Positioning a rear-facing child restraint system

Child restraint system must be placed and secured in a rear seating position.

- ▶ We recommend that you install the child restraint system directly behind the front passenger's seat, move the seat as far forward as needed, and leave it unoccupied.
- ▶ Make sure that there is no contact between the child restraint system and the seat in front of it.
  If there is, you may wish to get a smaller rear-facing child restraint system.

Protecting Infants

⚠WARNING

Placing a rear-facing child restraint system in the front seat can result in serious injury or death if the passenger's front airbag inflates.

Always place a rear-facing child restraint system in the back seat, not the front.

Continued

When properly installed, a rear-facing child restraint system may prevent the driver or a front passenger from moving their seat all the way back, or from locking their seat-back in the desired position.

Protecting Infants

Many experts recommend use of a rear-facing child restraint system for a child up to two years old if the child's height and weight are appropriate for a rear-facing child restraint system.


Rear-facing child restraint systems should never be installed in a front-facing position.

Always refer to the child restraint system manufacturer's instructions before installation.

If the passenger's front airbag inflates, it can hit the rear-facing child restraint system with great force, which can dislodge or strike the system, and seriously injure the child.

■ Protecting Smaller Children

If a child has exceeded the weight and height limitations of a rear-facing child restraint system, the child should be properly restrained in a firmly secured front-facing child restraint system until they exceed the weight and height limitations for the front-facing child restraint system.

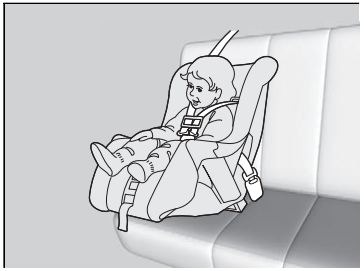

■ Front-facing child restraint system placement

We strongly recommend placing a front-facing child restraint system in a rear seating position.

Placing a front-facing child restraint system in the front seat can be hazardous. A rear seat is the safest place for a child.

Protecting Smaller Children

⚠WARNING

Placing a front-facing child restraint system in the front seat can result in serious injury or death if the front airbag inflates.

If you must place a front-facing child restraint system in front, move the vehicle seat as far back as possible, and properly restrain the child.

Educate yourself about the laws and regulations regarding child restraint system use where you are driving, and follow the child restraint system manufacturer's instructions.

Continued

■ Selecting a Child Restraint System

Some child restraint systems are lower anchorage compatible. Some have a rigid-type connector while others have a flexible-type connector. Both are equally easy to use. Some existing and previously owned child restraint systems can only be installed using the seat belt. Whichever type you choose, follow the child restraint system manufacturer's use and care instructions including recommended expiration dates as well as the instructions in this manual. Proper installation is key to maximising your child's safety.

The flexible type may not be available in your country.

In seating positions and vehicles not equipped with lower anchorages, install a child restraint system using the seat belt and a top tether for added security. This is because all child restraint systems must be secured with the seat belt when the lower anchorage system is not in use. In addition, the child restraint system manufacturer may advise that a seat belt be used to attach an ISOFIX restraint system once a child reaches a specified weight. Please read the child restraint system owner's manual for proper installation instructions.

■ Important consideration when selecting a child restraint system

Make sure the child restraint system meets the following three requirements:

- The child restraint system is the correct type and size for the child.
- The child restraint system is the correct type for the seating position.
- The child restraint system is compliant with safety standards. We recommend a child restraint system compliant with UN Regulation No. 44 or No. 129, or the regulations of the subject countries. Look for the approval mark on the system and the manufacturer's statement of compliance on the box.

Selecting a Child Restraint System

Installation of a lower anchorage-compatible child restraint system is simple.

Lower anchorage-compatible child restraint systems have been developed to simplify the installation process and reduce the likelihood of injuries caused by incorrect installation.


We recommend a rear-facing or a front-facing Honda genuine ISOFIX child restraint system for infants or small children, respectively. Ask your dealer.

■ Child Restraint Systems Standards

If a child restraint system (whether an i-Size/ISOFIX type or one that is fitted with a seat belt) meets the relevant UN Regulation, it will be affixed with an approval label as shown in the adjacent table. Before purchasing or using any child restraint system, make sure to check the approval label and ensure that it is compatible with your vehicle and the child, and that it complies with the relevant UN Regulation.

Selecting a Child Restraint System

Example of UN Regulation No. 44 approval label

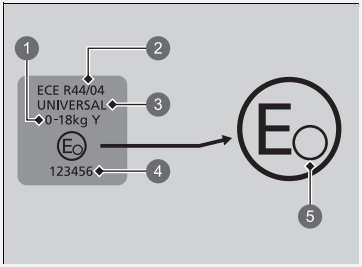


1. "Mass group"
2. Regulation number
3. Category
4. Approval number
5. Country code

Continued

Selecting a Child Restraint System


Example of UN Regulation No. 129 approval label

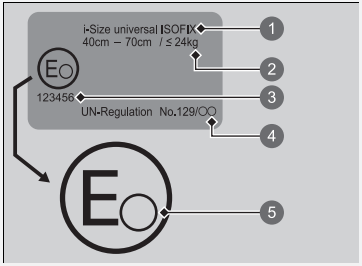

❶ Category
❷ Size and weight indication
❸ Approval number
❹ Regulation number
❺ Country code

Australian, Bangladeshi, Bhutanese, and New Zealand models

■ Locations for Child Restraint System Installation

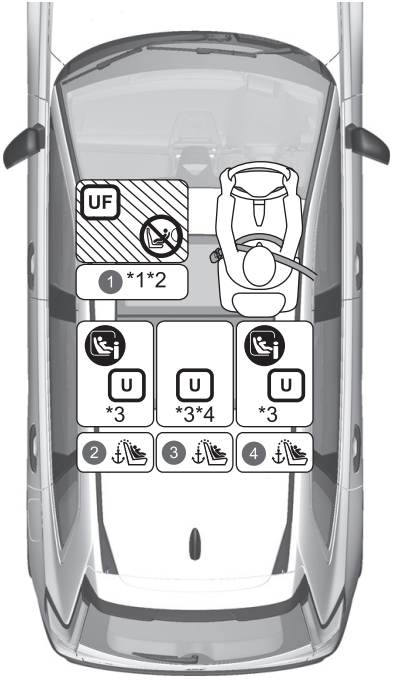

U	Suitable for universal restraint systems installed with vehicle safety belts.
UF	Suitable for forward facing universal restraint systems installed with vehicle safety belts.
	Suitable for i-Size and ISOFIX child restraints systems.
	Suitable for forward facing restraint systems only.
	Never use a rearward facing child restraint system.
	Seat position equipped with Top Tether anchorages.

Continued

*1:Adjust the seat slide to the most rear position.
*2:For installing the universal belted type, adjust the seat back to the most front lock position.
*3:Adjust the 2nd row seat slide to the rearmost position.
*4:If you attach a child restraint system to the rear centre seat may make the left side seat belt unusable.

- If the child restraint system interferes with the head restraint and cannot be installed stably, raise the head restraint to the highest position. If this interference is unavoidable even after raising, remove the head restraint. Please note that the removed head restraint should be stored in the luggage compartment so that it will not fly during sudden braking or collision.
  Also, if you remove the child restraint system, attach the head restraint to the original seat and make sure it is locked.
  However, when using the booster cushion only, do not remove the head restraint.
- If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- Child restraint systems with support leg can be installed in seating position where i-Size cannot be installed.

Detail information for CRS installation

	Seating position and Seat position number					
	Size groups Weight Stature		❶	❷	❸	❹
			Front passenger[*1]	2nd row[*3]		
				Left	Centre[*4]	Right
Seating position suitable for universal belted (yes/no)	Group 0	Up to 10kg	No	Yes	Yes	Yes
	Group 0+	Up to 13kg				
	Group I	9-18kg	Yes[*2]	Yes	Yes	Yes
	Group II	15-25kg				
	Group III	22-36kg				
i-Size seating position (yes/no)	≤ 150cm		No	Yes	No	Yes
Seating position suitable for recommended genuine CRS	Refer to genuine CRS list		No	No	No	No
Seating position suitable for lateral fixture (L1/L2)	—		No	No	No	No
Largest suitable rearward facing fixture (R1/R2X/R2/R3)	Group 0	Up to 10kg	No	R3	No	R3
	Group 0+	Up to 13kg				
	Group I	9-18kg				
Largest suitable forward facing fixture (F2X/F2/F3)	Group I	9-18kg	No	F3	No	F3
Largest suitable booster fixture (B2/B3)	≤ 150cm		B3	B3	B3	B3

Locations for Child Restraint System Installation

When purchasing a child restraint systems, make sure to check the ISOFIX size class or the fixture to ensure that the seat is compatible with your vehicle.

Fixture (CRF)	Description
ISO/L1	Left lateral-facing (carrycot) infant seat
ISO/L2	Right lateral-facing (carrycot) infant seat
ISO/R1	Rearward-facing infant seat
ISO/R2X	Reduced-size rearward-facing child restraint systems
ISO/R2	Reduced-size rearward-facing child restraint systems
ISO/R3	Full-size rearward-facing child restraint systems
ISO/F2X	Reduced-height forward-facing child restraint systems
ISO/F2	Reduced-height forward-facing child restraint systems
ISO/F3	Full-height, forward-facing child restraint systems
ISO/B2	Reduced width forward-facing booster seat
ISO/B3	Full width forward-facing booster seat

Continued

*1:Adjust the seat slide to the most rear position. Forward facing only.
*2:For installing the universal belted type, adjust the seat back to the most front lock position.
*3:Adjust the 2nd row seat slide to the rearmost position.
*4:If you attach a child restraint system to the rear centre seat may make the left side seat belt unusable.

- If the child restraint system interferes with the head restraint and cannot be installed stably, raise the head restraint to the highest position. If this interference is unavoidable even after raising, remove the head restraint. Please note that the removed head restraint should be stored in the luggage compartment so that it will not fly during sudden braking or collision.
  Also, if you remove the child restraint system, attach the head restraint to the original seat and make sure it is locked.
  However, when using the booster cushion only, do not remove the head restraint.
- If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- Child restraint systems with support leg can be installed in seating position where i-Size cannot be installed.


Asian models

■ Locations for Child Restraint System Installation

Left-hand Drive Type



Right-hand Drive Type

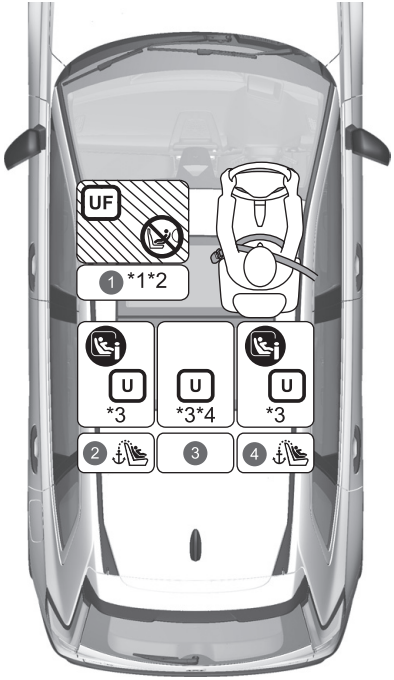

U	Suitable for universal restraint systems installed with vehicle safety belts.
UF	Suitable for forward facing universal restraint systems installed with vehicle safety belts.
	Suitable for i-Size and ISOFIX child restraints systems.
	Suitable for forward facing restraint systems only.
	Never use a rearward facing child restraint system.
	Seat position equipped with Top Tether anchorages.

Continued

*1:Adjust the seat slide to the most rear position.
*2:For installing the universal belted type, adjust the seat back to the most front lock position.
*3:Adjust the 2nd row seat slide to the rearmost position.
*4:If you attach a child restraint system to the rear centre seat may make the left side seat belt unusable.

- If the child restraint system interferes with the head restraint and cannot be installed stably, raise the head restraint to the highest position. If this interference is unavoidable even after raising, remove the head restraint. Please note that the removed head restraint should be stored in the luggage compartment so that it will not fly during sudden braking or collision.
  Also, if you remove the child restraint system, attach the head restraint to the original seat and make sure it is locked.
  However, when using the booster cushion only, do not remove the head restraint.
- If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- Child restraint systems with support leg can be installed in seating position where i-Size cannot be installed.

Detail information for CRS installation

	Seating position and Seat position number					
	Size groups Weight Stature		❶	❷	❸	❹
			Front passenger[*1]	2nd row[*3]		
				Left	Centre[*4]	Right
Seating position suitable for universal belted (yes/no)	Group 0	Up to 10kg	No	Yes	Yes	Yes
	Group 0+	Up to 13kg				
	Group I	9-18kg	Yes[*2]	Yes	Yes	Yes
	Group II	15-25kg				
	Group III	22-36kg				
i-Size seating position (yes/no)	≤ 150cm		No	Yes	No	Yes
Seating position suitable for recommended genuine CRS[*5]	Refer to genuine CRS list		No	Yes	No	Yes
Seating position suitable for lateral fixture (L1/L2)	—		No	No	No	No
Largest suitable rearward facing fixture (R1/R2X/R2/R3)	Group 0	Up to 10kg	No	R3	No	R3
	Group 0+	Up to 13kg				
	Group I	9-18kg				
Largest suitable forward facing fixture (F2X/F2/F3)	Group I	9-18kg	No	F3	No	F3
Largest suitable booster fixture (B2/B3)	≤ 150cm		B3	B3	B3	B3

Continued

*1:Adjust the seat slide to the most rear position. Forward facing only.
*2:For installing the universal belted type, adjust the seat back to the most front lock position.
*3:Adjust the 2nd row seat slide to the rearmost position.
*4:If you attach a child restraint system to the rear centre seat may make the left side seat belt unusable.
*5:The named Child Restraint Systems (CRS) reflect Honda's recommendations at the date of publication. You should speak to an authorised dealer for up to date details relating to our recommended CRSs. Other CRS may also be suitable - please consult CRS manufacturers for recommended vehicle lists.

- If the child restraint system interferes with the head restraint and cannot be installed stably, raise the head restraint to the highest position. If this interference is unavoidable even after raising, remove the head restraint. Please note that the removed head restraint should be stored in the luggage compartment so that it will not fly during sudden braking or collision.
  Also, if you remove the child restraint system, attach the head restraint to the original seat and make sure it is locked.

  Except Cambodian and Malaysian models

  However, when using the booster cushion only, do not remove the head restraint.

All models

- If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- Child restraint systems with support leg can be installed in seating position where i-Size cannot be installed.

African models and Middle Eastern models

■ Locations for Child Restraint System Installation



U	Suitable for universal restraint systems installed with vehicle safety belts.
UF	Suitable for forward facing universal restraint systems installed with vehicle safety belts.
	Suitable for i-Size and ISOFIX child restraints systems.
	Suitable for forward facing restraint systems only.
	Never use a rearward facing child restraint system.
	Seat position equipped with Top Tether anchorages.

Continued

*1:Adjust the seat slide to the most rear position.
*2:For installing the universal belted type, adjust the seat back to the most front lock position.
*3:Adjust the 2nd row seat slide to the rearmost position.
*4:If you attach a child restraint system to the rear centre seat may make the left side seat belt unusable.

- If the child restraint system interferes with the head restraint and cannot be installed stably, raise the head restraint to the highest position. If this interference is unavoidable even after raising, remove the head restraint. Please note that the removed head restraint should be stored in the luggage compartment so that it will not fly during sudden braking or collision.
  Also, if you remove the child restraint system, attach the head restraint to the original seat and make sure it is locked.
  However, when using the booster cushion only, do not remove the head restraint.
- If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- Child restraint systems with support leg can be installed in seating position where i-Size cannot be installed.

Detail information for CRS installation

	Seating position and Seat position number					
	Size groups Weight Stature		❶	❷	❸	❹
			Front passenger[*1]	2nd row[*3]		
				Left	Centre[*4]	Right
Seating position suitable for universal belted (yes/no)	Group 0	Up to 10kg	No	Yes	Yes	Yes
	Group 0+	Up to 13kg				
	Group I	9-18kg	Yes[*2]	Yes	Yes	Yes
	Group II	15-25kg				
	Group III	22-36kg				
i-Size seating position (yes/no)	≤ 150cm		No	Yes	No	Yes
Seating position suitable for recommended genuine CRS	Refer to genuine CRS list		No	No	No	No
Seating position suitable for lateral fixture (L1/L2)	—		No	No	No	No
Largest suitable rearward facing fixture (R1/R2X/R2/R3)	Group 0	Up to 10kg	No	R3	No	R3
	Group 0+	Up to 13kg				
	Group I	9-18kg				
Largest suitable forward facing fixture (F2X/F2/F3)	Group I	9-18kg	No	F3	No	F3
Largest suitable booster fixture (B2/B3)	≤ 150cm		B3	B3	B3	B3

Continued

*1:Adjust the seat slide to the most rear position. Forward facing only.
*2:For installing the universal belted type, adjust the seat back to the most front lock position.
*3:Adjust the 2nd row seat slide to the rearmost position.
*4:If you attach a child restraint system to the rear centre seat may make the left side seat belt unusable.

- If the child restraint system interferes with the head restraint and cannot be installed stably, raise the head restraint to the highest position. If this interference is unavoidable even after raising, remove the head restraint. Please note that the removed head restraint should be stored in the luggage compartment so that it will not fly during sudden braking or collision.
  Also, if you remove the child restraint system, attach the head restraint to the original seat and make sure it is locked.
- If you cannot fix the booster child restraint system stably, adjust the seat-back angle to be parallel with the back still keeping it forward of the seat belt shoulder anchorage.
- Child restraint systems with support leg can be installed in seating position where i-Size cannot be installed.

Cambodian, Filipino, Indonesian, Laos, Malaysian, Thai, and Vietnamese models


■ Genuine CRS List

Range of application	Child Restraint System	Category
Under 100cm	Honda Baby & Kids i-Size	i-Size Universal ISOFIX (Rearward facing)
Over 71cm and 15 months to 100cm	Honda Baby & Kids i-Size	i-Size Universal ISOFIX

Continued


Installing a Lower Anchorage-Compatible Child Restraint System

A lower anchorage-compatible child restraint system can be installed in either of the two outer rear seats. A child restraint system is attached to the lower anchorages with either the rigid or flexible type of connectors (see illustrations).

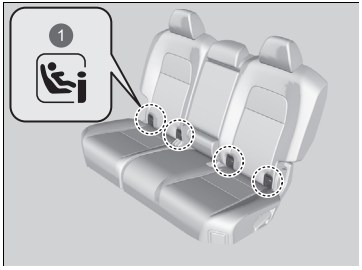

1. Locate the lower anchorages under the cover.
2. Move the seat to the most rear position.

❶ Marks

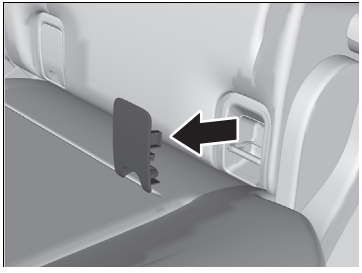


3. Remove the anchorage covers with the marks to expose the lower anchorages.

Installing a Lower Anchorage-Compatible Child Restraint System


⚠WARNING

Never attach two child restraint systems to the same anchorage. In a collision, one anchorage may not be strong enough to hold two child restraint system attachments and may break, causing serious injury or death.


Some child restraint systems come with optional guide-cups, which avoid possible damage to the seat surface. Follow the manufacturer's instructions when using the guide-cups, and attach them to the lower anchorages as shown in the image.

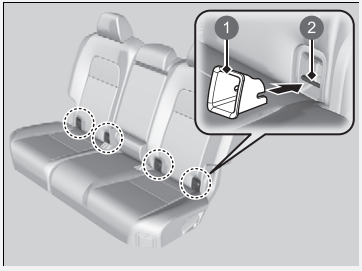

❶ Guide-cup
❷ Lower Anchorage

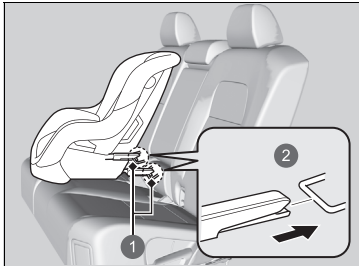


❶ Lower Anchorages
❷ Rigid Type

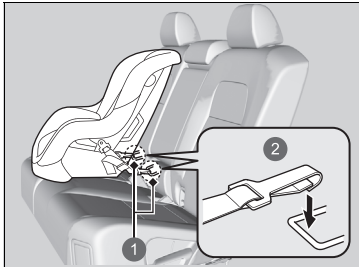

❶ Lower Anchorages
❷ Flexible Type

4. Place the child restraint system on the vehicle seat, then attach the child restraint system to the lower anchorages according to the instructions that came with the child restraint system.
▶ When installing the child restraint system, make sure that the lower anchorages are not obstructed by the seat belt or any other object.
▶ Install the child restraint system so that the gap between it and the seat back is as small as possible.

Continued

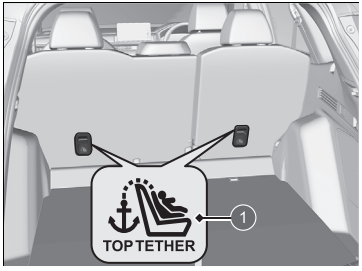

❶ Top Tether Anchorage Symbol


Installing a Lower Anchorage-Compatible Child Restraint System

WARNING: Never use a hook that does not come with a Top Tether Anchorage Symbol when securing an installed child restraint system.

For your child's safety, when using a child restraint system installed using the lower anchorage system, make sure that the child restraint system is properly secured to the vehicle.
A child restraint system that is not properly secured will not adequately protect a child in a crash and may cause injury to the child or other vehicle occupants.


The flexible type may not be available in your country.

Straight Top Tether Type

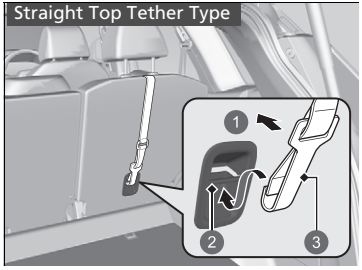

❶ Ahead of the Vehicle
❷ Anchorage
❸ Tether Strap Hook

Other Top Tether Type

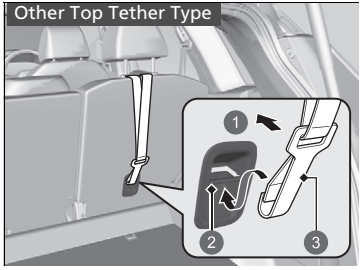


❶ Ahead of the Vehicle
❷ Anchorage
❸ Tether Strap Hook

Child restraint system with tether strap

5. Raise the head restraint to its highest position.
▶ Retract the luggage area cover*.
➡ **Luggage Area Cover*** P. 287
6. Route the tether strap through the head restraint legs.
Make sure the strap is not twisted.
7. Secure the tether strap hook to the anchorage.
8. Tighten the tether strap as instructed by the child restraint system manufacturer.
9. Make sure the child restraint system is firmly secured by rocking it forward and back, and side to side; little movement should be felt.
10. Make sure any unused seat belt that a child can reach is buckled.

* Not available on all models

Continued

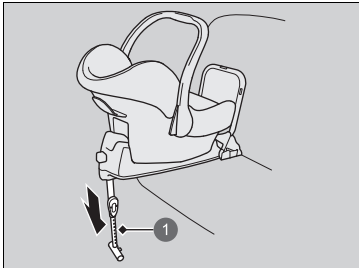


❶ Support Leg


Child restraint system with support leg

5. Extend the support leg until it touches the floor as instructed by the child restraint system manufacturer.
- ▶ Confirm that the section of the floor on which the support leg rests is level. If the section is not level, the support leg will not provide adequate support. If this is the case, move the seat forward or back so that the support leg is resting on a level section.
- ▶ Make sure that the support leg is not resting on the slide rail or cover.
- ▶ Make sure that there is no contact between the child restraint system and the seat in front of it.

6. Make sure the child restraint system is firmly secured by rocking it forward and back, and side to side; little movement should be felt.

Installing a Child Restraint System with a Lap/Shoulder Seat Belt

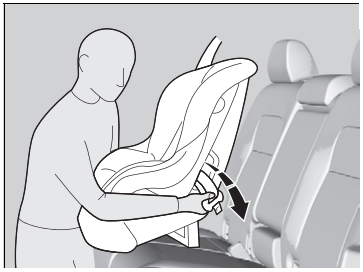

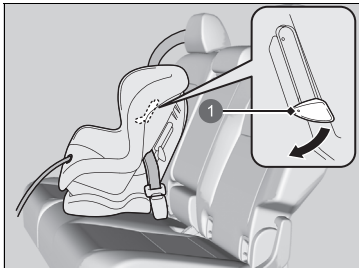


❶ Tab

1. Move the seat to the most rear position.
2. Place the child restraint system on the vehicle seat.
3. Route the seat belt through the child restraint system according to the child restraint system manufacturer's instructions, and insert the latch plate into the buckle.
▶ Insert the latch plate fully until it clicks.
4. Push down the tab. Route the shoulder part of the belt into the slit at the side of the restraint.
5. Grab the shoulder part of the belt near the buckle, and pull up to remove any slack from the lap part of the belt.
▶ When doing this, place your weight on the child restraint system and push it into the vehicle seat.
6. Position the belt properly and push up the tab. Make sure the belt is not twisted.
▶ When pushing up the tab, pull up the upper shoulder part of the belt to remove any slack from the belt.


Installing a Child Restraint System with a Lap/Shoulder Seat Belt

A child restraint system that is not properly secured will not adequately protect a child in a crash and may cause injury to the child or other vehicle occupants.

Continued

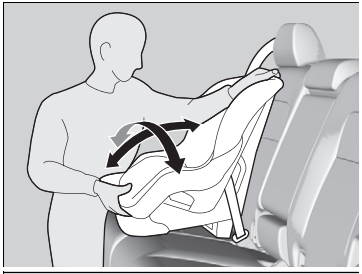

7. Make sure the child restraint system is firmly secured by rocking it forward and back, and side to side; little movement should be felt.
8. Make sure any unused seat belt that a child can reach is buckled.

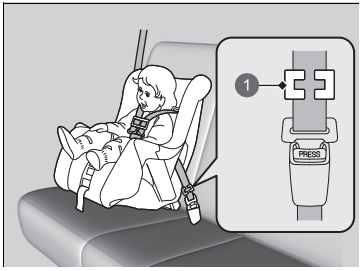


❶ Locking Clip

If your child restraint system does not come with a mechanism that secures the belt, install a locking clip on the seat belt.

After going through the step 1 - 3, pull up the shoulder part of the belt and make sure there is no slack in the lap portion.


4. Tightly grasp the belt near the latch plate. Pinch both parts of the belt together so they do not slip through the latch plate. Unbuckle the seat belt.
5. Install the locking clip as shown in the image. Position the clip as close as possible to the latch plate.
6. Insert the latch plate into the buckle. Go to step 7 and 8.

■ Adding Security with a Tether

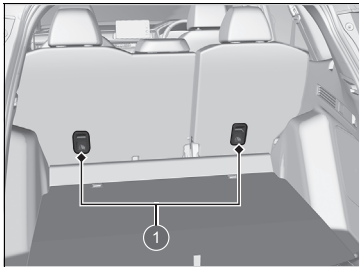

❶ Tether Anchorage Points

A tether anchorage point is provided behind each rear outer seating position and in the ceiling for the rear centre*.
If you have a child restraint system that comes with a tether but can be installed with a seat belt, the tether may be used for additional security.

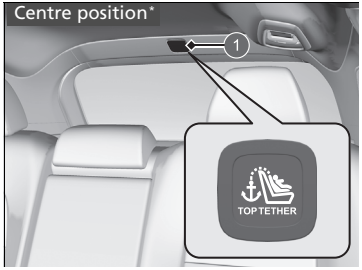

❶ Tether Anchorage Points

Adding Security with a Tether


WARNING: Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts, harnesses or for attaching other items or equipment to the vehicle.

Always use a tether for front-facing child restraint system whether using the seat belt or lower anchorages.

* Not available on all models


Continued

Straight Top Tether Type

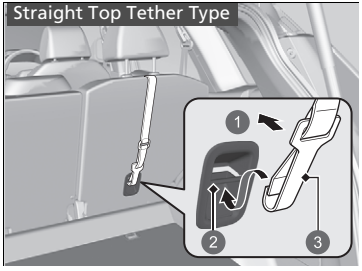

❶ Ahead of the Vehicle
❷ Anchorage
❸ Tether Strap Hook

Other Top Tether Type

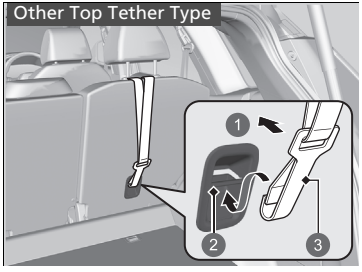

❶ Ahead of the Vehicle
❷ Anchorage
❸ Tether Strap Hook

■ **Using an outer anchorage**

1. Raise the head restraint to its highest position.
▶ Retract the luggage area cover*.
➡ **Luggage Area Cover*** P. 287


2. Route the tether strap through the head restraint legs.
Make sure the strap is not twisted.

3. Secure the tether strap hook to the anchorage.

4. Tighten the tether strap as instructed by the child restraint system manufacturer.


 * Not available on all models

Straight Top Tether Type

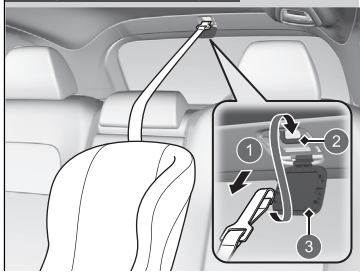

❶ Ahead of the Vehicle
❷ Anchorage
❸ Anchorage Cover

Other Top Tether Type

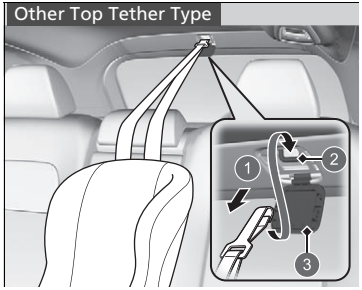

❶ Ahead of the Vehicle
❷ Anchorage
❸ Anchorage Cover

■ **Using the centre anchorage***

1. Lower the head restraint to its lowest position.
2. Open the anchorage cover.
3. Route the tether strap over the head restraint.
Make sure the strap is not twisted.
4. Secure the tether strap hook to the anchorage.
5. Tighten the tether strap as instructed by the child restraint system manufacturer.

* Not available on all models


Safety of Larger Children

■ Protecting Larger Children

The following pages give instructions on how to check proper seat belt fit, what kind of booster seat to use if one is needed, and important precautions for a child who must sit in front.

■ Checking Seat Belt Fit

When a child is too big for a child restraint system, secure the child in a rear seat using the lap/shoulder seat belt. Have the child sit upright and all the way back, then answer the following questions.

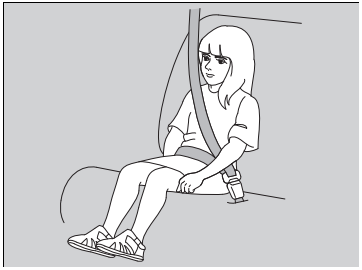

■ Checklist

- Do the child's knees bend comfortably over the edge of the seat?
- Does the shoulder belt cross between the child's neck and arm?
- Is the lap part of the seat belt as low as possible, touching the child's thighs?
- Will the child be able to stay seated like this for the whole trip?

If you answer yes to all these questions, the child is ready to wear the lap/shoulder seat belt correctly. If you answer no to any question, the child needs to ride on a booster seat until the seat belt fits properly without a booster seat.

Safety of Larger Children

⚠WARNING


Allowing a child aged 12 or under to sit in front can result in injury or death if the passenger's front airbag inflates.

If a larger child must ride in front, move the vehicle seat as far to the rear as possible, have the child sit up properly and wear the seat belt properly, and use a booster seat if needed.

Booster Seats



If a lap/shoulder seat belt cannot be used properly, position the child in a booster seat in the rear seat. For the child's safety, check that the child meets the booster seat manufacturer's recommendations.

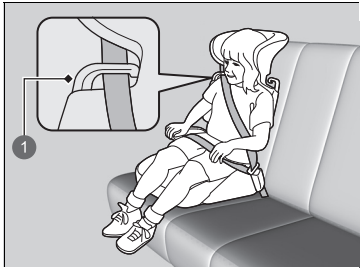

A backrest is available for a specific booster seat. Install the backrest to the booster seat and adjust it to the vehicle seat according to the booster seat manufacturer's instructions. Make sure the seat belt is properly routed through the guide at the shoulder of the backrest and the belt does not touch and cross the child's neck.

1 Guide

Booster Seats

When installing a booster seat, make sure to read the instructions that came with it, and install the seat accordingly.
There are high- and low-type booster seats. Choose a booster seat that allows the child to wear the seat belt correctly.

We recommend a booster seat with a backrest as it is easier to adjust the shoulder belt.

Continued

■ Protecting Larger Children - Final Checks

Your vehicle has a rear seat where children can be properly restrained. If you ever have to carry a group of children, and a child must ride in front:

- Make sure you read and fully understand the instructions and safety information in this manual.
- Move the front passenger seat as far back as possible.
- Have the child sit upright and well back in the seat.
- Check that the seat belt is properly positioned so that the child is secure in the seat.

■ Monitoring child passengers

We strongly recommend that you keep an eye on child passengers. Even older, more mature children sometimes need to be reminded to fasten their seat belts and sit up properly.

Carbon Monoxide Gas

The engine exhaust from this vehicle contains carbon monoxide, a colourless, odourless, and highly toxic gas. As long as you properly maintain your vehicle, carbon monoxide gas will not get into the interior.

■ **Have the exhaust system inspected for leaks whenever**

- The exhaust system is making an unusual noise.
- The exhaust system may have been damaged.
- The vehicle is raised for an oil change.

When you operate a vehicle with the tailgate open, airflow can pull exhaust gas into the interior and create a hazardous condition. If you must drive with the tailgate open, open all the windows and set the climate control system as shown below.

1. Select the fresh air mode.
2. Select the mode.
3. Set the fan speed to high.
4. Set the temperature control to a comfortable setting.

Adjust the climate control system in the same manner if you sit in your parked vehicle with the engine running.

Carbon Monoxide Gas

⚠WARNING

Carbon monoxide gas is toxic.

Breathing it can cause unconsciousness and even kill you.


Avoid any enclosed areas or activities that expose you to carbon monoxide.

An enclosed area such as a garage can quickly fill up with carbon monoxide gas.
Do not run the engine with the garage door closed. Even when the garage door is open, drive out of the garage immediately after starting the engine.

Label Locations

These labels are in the locations shown. They warn you of potential hazards that can cause serious injury or death. Read these labels carefully.

If a label comes off or becomes hard to read, contact a dealer for a replacement.

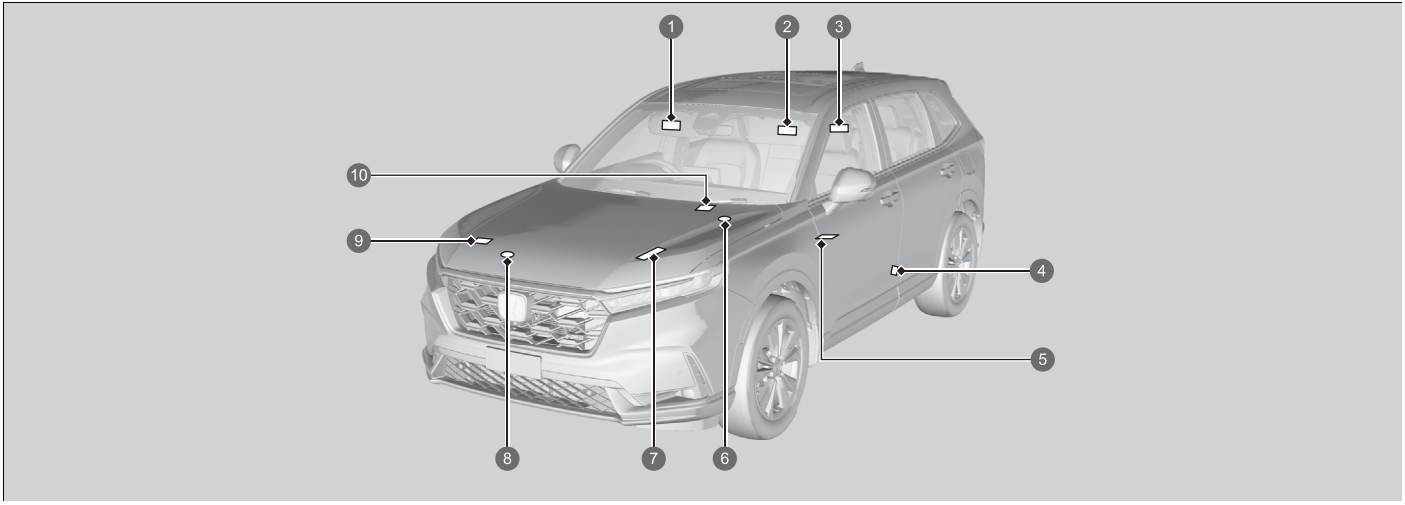

1. Protecting Child Passenger (Left-hand drive type) ➔ P. 84
2. Protecting Child Passenger (Right-hand drive type) ➔ P. 84
3. Rear Centre Head Restraint ➔ P. 275
4. Information for Painting ➔ P. 784
5. High Voltage Battery System
6. Inverter Coolant Reserve Tank Cap
7. 12-Volt Battery
8. Radiator Cap
9. Battery information*
10. Wireless Charger* ➔ P. 290

* Not available on all models

Instrument Panel

This chapter describes the buttons, indicators, and gauges that are used while driving.

Indicators 122
Gauges and Displays
Gauges 146
Driver Information Interface (A-type Meter) 150
Driver Information Interface Left Side Area (B-type Meter) 166
Driver Information Interface Right Side Area (B-type Meter) 169
Head-Up Display* 189

* Not available on all models

Indicators come on/blink depending on the condition of the vehicle. Messages may display on the Driver Information Interface at the same time. Please take the appropriate action outlined in the message, such as contacting a dealer.

African models with Right-hand Drive Type

Display messages by setting **Warning message** to ON via the audio/information screen.
You can also change the message language.

Customized Features P. 366

*1	Parking Brake and Brake System Indicator (Red)	→ P. 124
*1	Parking Brake and Brake System Indicator (Amber)	→ P. 126
*1	Automatic Brake Hold System Indicator	→ P. 126
*1	Automatic Brake Hold Indicator	→ P. 126
*1	Malfunction Indicator Lamp	→ P. 127
*1	12-Volt Battery Charging System Indicator	→ P. 127
	Shift Position Indicator	→ P. 127
	Transmission System Indicator	→ P. 127
	Deceleration Paddle Selector Indicator	→ P. 128
*1	Power System Indicator	→ P. 128
	Ready Indicator	→ P. 128
*1	**EV** Indicator	→ P. 128
	Seat Belt Reminder Indicator	→ P. 129
	Low Fuel Indicator (Amber)	→ P. 129
*1	Anti-lock Brake System (**ABS**) Indicator	→ P. 130
*1	Supplemental Restraint System Indicator	→ P. 130
*1	Electric Power Steering (EPS) System Indicator	→ P. 130
*1	Vehicle Stability Assist (VSA) System Indicator	→ P. 131
	Vehicle Stability Assist (VSA) **OFF** Indicator	→ P. 131

Taiwanese models

*1	Low Tyre Pressure/TPMS Indicator	→ P. 132

Except Indonesian and Taiwanese models

*1	Low Tyre Pressure/ Deflation Warning System Indicator	→ P. 133
	Turn Signal and Hazard Warning Indicators	→ P. 134

*1: When you set the power mode to ON, these indicators come on to indicate that system checks are being performed. They go off a few seconds later or after the power system has started. If an indicator does not come on or turn off, there may be a malfunction in the corresponding system. To resolve the issue, follow the instructions in the owner's manual.

	Lights On Indicator	→ P. 134
	High Beam Indicator	→ P. 134
 *1	Auto High-Beam*/ Adaptive Driving Beam* Indicator	→ P. 134
	Front Fog Light Indicator	→ P. 134
	Rear Fog Light Indicator*	→ P. 134
	**INDIVIDUAL** Mode Indicator*	→ P. 137
	**SPORT** Mode Indicator	→ P. 137
	**NORMAL** Mode Indicator	→ P. 137
	**ECON** Mode Indicator	→ P. 137
 *1	Hill Descent Control System Indicator (White/Green)	→ P. 138

	System Message Indicator	→ P. 138
	Parking Sensor Indicator*	→ P. 138
	Adjustable Speed Limiter Indicator (White/Green)*	→ P. 139
	Intelligent Speed Limiter Indicator (White/Green)*	→ P. 139
	Adaptive Cruise Control (ACC) with Low Speed Follow Interval Indicator*	→ P. 140
	Immobilizer System Indicator	→ P. 135
	Security System Alarm Indicator	→ P. 136
 *1	Adaptive Cruise Control (ACC) with Low Speed Follow Indicator (Amber)	→ P. 139
	Adaptive Cruise Control (ACC) with Low Speed Follow Indicator (White/ Green)	→ P. 139

 *1	Lane Keeping Assist System (LKAS) Indicator (Amber)	→ P. 140
	Lane Keeping Assist System (LKAS) Indicator (White/Green)	→ P. 140
 *1	Collision Mitigation Braking System (CMBS) Indicator (Amber)	→ P. 141
	Collision Mitigation Braking System (CMBS) Indicator (Grey)	→ P. 141
 *1	Road Departure Mitigation Indicator (Amber)	→ P. 141
	Road Departure Mitigation System Steering Assist Auto OFF Indicator	→ P. 141
	Road Departure Mitigation Indicator (Grey)	→ P. 141
 *1	Safety Support Indicator (Amber)	→ P. 142
	Safety Support Indicator (Green/Grey)	→ P. 145

*1: When you set the power mode to ON, these indicators come on to indicate that system checks are being performed. They go off a few seconds later or after the power system has started. If an indicator does not come on or turn off, there may be a malfunction in the corresponding system. To resolve the issue, follow the instructions in the owner's manual.

* Not available on all models



Continued

Indicator	Name	On/Blinking	Explanation
 (Red)	Parking Brake and Brake System Indicator (Red)	• Comes on when the parking brake is applied, and goes off when it is released.	• The beeper sounds and the indicator comes on if you drive with the parking brake applied. • Comes on for about 30 seconds when you apply the electric parking brake while the power mode is in ACCESSORY or VEHICLE OFF, then goes off. • Stays on for about 30 seconds when you set the power mode to VEHICLE OFF while the electric parking brake is applied, then goes off.
		• Comes on when the brake fluid level is low.	• **Comes on while driving** - Make sure the parking brake is released. Stop in a safe place and check the brake fluid level. ➡ **What to do when the indicator comes on while driving** P. 821

Indicator	Name	On/Blinking	Explanation
 (Red)	Parking Brake and Brake System Indicator (Red)	• Comes on if there is a problem with the brake system.	• **Comes on along with the Parking Brake and Brake System Indicator (amber)** - Immediately stop in a safe place. Contact a dealer for repair. The brake pedal becomes harder to operate. Depress the pedal further than you normally do. ➡ **If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On** P. 822 • **Comes on along with the ABS indicator** - Have your vehicle checked by a dealer. ➡ **If the Brake System Indicator (Red) Comes On or Blinks** P. 821 • **Blinks and the Parking Brake and Brake System Indicator (amber) comes on at the same time** - There is a problem with the electric parking brake system. The parking brake may not be set. Avoid using the parking brake and have your vehicle checked by a dealer immediately. ➡ **If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On** P. 822

Continued

Indicator	Name	On/Blinking	Explanation
 (Amber)	Parking Brake and Brake System Indicator (Amber)	• Comes on if there is a problem with a system related to braking other than the conventional brake system.	• **Comes on while driving** - Avoid high speeds and sudden braking. Take the vehicle to a dealer immediately.
		• Comes on if there is a problem with the electric parking brake system and/or the automatic brake hold system.	• **Stays on constantly** - Avoid using the parking brake and have your vehicle checked by a dealer immediately.
		• Comes on if the brake system is deactivated temporarily after the 12-volt battery has been disconnected, then reconnected.	• Drive a short distance at more than 20 km/h. The indicator should go off. If it does not, have your vehicle checked by a dealer.
		• Comes on if there is a problem with the radar sensor. • Indicator may come on temporarily when the maximum permissible weight is exceeded.	• Make sure the total load is within the maximum permissible weight. ➡ **Load Limit** P. 525 • **Stays on constantly** - Have your vehicle checked by a dealer.
	Automatic Brake Hold System Indicator	• Comes on when the automatic brake hold system is on.	➡ **Automatic Brake Hold** P. 695
	Automatic Brake Hold Indicator	• Comes on when the automatic brake hold is activated.	➡ **Automatic Brake Hold** P. 695

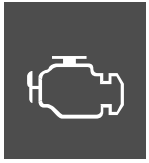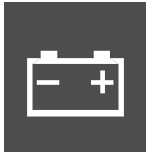Indicator	Name	On/Blinking	Explanation
	Malfunction Indicator Lamp	• Comes on if there is a problem with the emissions control systems or electric vehicle system*1. • Blinks when a misfire in the engine's cylinders is detected.	➡ **If the Malfunction Indicator Lamp Comes On or Blinks** P. 820
	12-Volt Battery Charging System Indicator	• Comes on when there is a problem with the charging system.	• Stop in a safe place and contact a dealer immediately. ➡ **Checking the 12-Volt Battery** P. 769 ➡ **If the 12-Volt Battery Charging System Indicator Comes On** P. 818
	Shift Position Indicator	• Indicates the current shift position.	➡ **Shifting** P. 545
	Transmission System Indicator	• Blinks if the transmission system has a problem.	• Have your vehicle checked by a dealer immediately. • **Do not drive displays on the driver information interface** - Immediately stop in a safe place and contact a dealer.
		Oceanian and Vietnamese models • Blinks if you cannot select P due to a transmission system failure.	• Set the parking brake when parking. • Have your vehicle checked by a dealer immediately.

*1:Oceanian, Bangladeshi, Bhutanese, Malaysian, Moroccan and Thai models

Continued

Indicator	Name	On/Blinking	Explanation
	Deceleration Paddle Selector Indicator	• Comes on when the paddle selector is pulled. • Blinks when deceleration does not occur while pulling the paddle selector. • Comes on with **M** when **SPORT** mode is selected or the shift position is in B, and the paddle selector is pulled.	➡ **Deceleration Paddle Selector** P. 553
	Power System Indicator	• Comes on if there is a problem with the electric vehicle system.	Oceanian, Bangladeshi, Bhutanese, Malaysian, Moroccan and Thai models • **Stays on constantly** - Have your vehicle checked by a dealer immediately. Except Oceanian, Bangladeshi, Bhutanese, Malaysian, Moroccan and Thai models • Have your vehicle checked by a dealer. All models • **Do not drive displays on the driver information interface** - Immediately stop in a safe place and contact a dealer.
	Ready Indicator	• Comes on when the vehicle is ready to drive.	➡ **Turning on the Power** P. 535
	**EV** Indicator	• Comes on when the vehicle is moved by the motor, and the engine is not operating.	—

Indicator	Name	On/Blinking	Explanation
	Seat Belt Reminder Indicator	• Comes on if you are not wearing a seat belt when you set the power mode to ON. • If the front passenger is not wearing a seat belt, the indicator comes on a few seconds later. • Comes on for a while when the rear seat belt is unfastened while the power mode in ON. • Blinks while driving if you and/or any passenger has not fastened a seat belt. The beeper sounds and the indicator blinks at regular intervals.	• The beeper stops and the indicator goes off when you and the passengers fasten their seat belts. • **Stays on after you and/or the passengers have fastened the seat belt(s)** - A detection error may have occurred in the sensor. Have your vehicle checked by a dealer. ➡ **Seat Belt Reminder** P. 54
	Low Fuel Indicator (Amber)	• Comes on when the fuel reserve is running low (approximately 8.0 Liters left).	• Refuel your vehicle as soon as possible.
		• Blinks if there is a problem with the fuel gauge.	• Have your vehicle checked by a dealer.

Indicator	Name	On/Blinking	Explanation
	Anti-lock Brake System (**ABS**) Indicator	• Comes on if there is a problem with the ABS.	• **Stays on constantly** - Have your vehicle checked by a dealer. With this indicator on, your vehicle still has normal braking ability but no anti-lock function. ➡ **Anti-lock Brake System (ABS)** P. 698
	Supplemental Restraint System Indicator	• Comes on if a problem with any of the following is detected: - Supplemental Restraint System - Side airbag system - Side curtain airbag system - Seat belt tensioner	• **Stays on constantly** - Have your vehicle checked by a dealer.
	Electric Power Steering (EPS) System Indicator	• Comes on if there is a problem with the EPS system or Driver Attention Monitor System.	• **Stays on constantly** - Have your vehicle checked by a dealer. • **Do not drive displays on the driver information interface** - Immediately stop in a safe place and contact a dealer. ➡ **If the Electric Power Steering (EPS) System Indicator Comes On** P. 823


Indicator	Name	On/Blinking	Explanation
	Vehicle Stability Assist (VSA) System Indicator	• Blinks when VSA, or trailer stability assist* is active.	—
		• Comes on if there is a problem with the VSA system, hill start assist system, agile handling assist, or trailer stability assist*.	• **Stays on constantly** - Have your vehicle checked by a dealer. ➡ **Vehicle Stability Assist (VSA) System** P. 583 ➡ **Hill start assist system** P. 541 ➡ **Agile Handling Assist** P. 585 ➡ **Trailer Stability Assist*** P. 530 Models with trailer stability assist • When **Trailer stability assist system problem** is displayed on the driver information interface, the VSA does not activate.
		• Comes on if the VSA system is deactivated temporarily after the 12-volt battery has been disconnected, then reconnected.	• Drive a short distance at more than 20 km/h. The indicator should go off. If it does not, have your vehicle checked by a dealer.
	Vehicle Stability Assist (VSA) **OFF** Indicator	• Comes on when you partially disable VSA.	➡ **VSA On and Off** P. 584

* Not available on all models

Continued

Indicator	Name	On/Blinking	Explanation
Taiwanese models 	Low Tyre Pressure/ TPMS Indicator	• May come on briefly if the power mode is set to ON and the vehicle is not moved within 45 seconds, to indicate the calibration process is not yet complete. • Comes on and stays on when: - One or more tyres' pressures are determined to be significantly low. - The system has not been calibrated.	• **Comes on while driving** - Stop in a safe place, check tyre pressures, and inflate the tyre(s) if necessary. • **Stays on after the tyres are inflated to the recommended pressures** - The system needs to be calibrated. ➡ **TPMS Calibration** P. 588
		• Blinks for about one minute, and then stays on if there is a problem with the TPMS.	• **Blinks and remains on** - Have your vehicle checked by a dealer.
		• Comes on if the TPMS is deactivated temporarily after the 12-volt battery has been disconnected, then reconnected.	• Drive a short distance at more than 20 km/h. The indicator should go off. If it does not, have your vehicle checked by a dealer.

Indicator	Name	On/Blinking	Explanation
Except Indonesian and Taiwanese models 	Low Tyre Pressure/ Deflation Warning System Indicator	• May come on briefly if the power mode is set to ON and the vehicle is not moved within 45 seconds, to indicate the calibration process is not yet complete. • Comes on and stays on when: - One or more tyres' pressures are determined to be significantly low. - The system has not been calibrated.	• **Comes on while driving** - Stop in a safe place, check tyre pressures, and inflate the tyre(s) if necessary. • **Stays on after the tyres are inflated to the recommended pressures** - The system needs to be calibrated. ➡ **Deflation Warning System Calibration** P. 590
		• Blinks for about one minute, and then stays on if there is a problem with the deflation warning system.	• **Blinks and remains on** - Have your vehicle checked by a dealer.
		• Comes on if the deflation warning system is deactivated temporarily after the 12-volt battery has been disconnected, then reconnected.	• Drive a short distance at more than 20 km/h. The indicator should go off. If it does not, have your vehicle checked by a dealer.

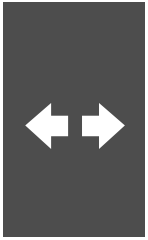Indicator	Name	On/Blinking	Explanation
	Turn Signal and Hazard Warning Indicators	• Blinks when you operate the turn signal lever. • Blinks along with all turn signals when you press the hazard warning button.	• **Does not blink or blinks rapidly** - Have your vehicle checked by a dealer.
		• Blinks along with all turn signals when you depress the brake pedal while the high speed driving.	➔ **Emergency Stop Signal** P. 700
	Lights On Indicator	• Comes on when the position, tail, and other external lights are on.	➔ **Lights** P. 239
	High Beam Indicator	• Comes on when the high beam headlights are on. • Comes on when the adaptive driving beam* is active.	➔ **Adaptive Driving Beam*** P. 250
	Auto High-Beam*/ Adaptive Driving Beam* Indicator	• Comes on when all the operating conditions of the auto high-beam*/adaptive driving beam* are met.	➔ **Auto High-Beam*** P. 247 ➔ **Adaptive Driving Beam*** P. 250
	Front Fog Light Indicator	• Comes on when the front fog lights are on.	➔ **Fog Lights** P. 242
	Rear Fog Light Indicator*	• Comes on when the rear fog light is on.	➔ **Fog Lights** P. 242

 * Not available on all models

Indicator	Name	On/Blinking	Explanation
Models with A-type meter  Indicator Models with B-type meter  Indicator	Immobilizer System Indicator	• Blinks if the immobilizer system cannot recognise the key information.	• **Blinks** - You cannot start the power system. Set the power mode to VEHICLE OFF, then select the ON mode again. • **Repeatedly blinks** - The system may be malfunctioning. Have your vehicle checked by a dealer. • Do not attempt to alter this system or add other devices to it. Electrical problems can occur.

Continued

Indicator	Name	On/Blinking	Explanation
Models with A-type meter  Indicator Models with B-type meter  Indicator	Security System Alarm Indicator	• Blinks when the security system alarm has been set.	➡ **Security System Alarm** P. 226

Indicator	Name	On/Blinking	Explanation
	**INDIVIDUAL** Mode Indicator*	• Comes on when you set the drive mode to **INDIVIDUAL**.	➔ **Drive Mode Switch** P. 562
	**SPORT** Mode Indicator	• Comes on when you set the drive mode to **SPORT**.	Models with A-type meter • The ambient meter remains lit up in red as long as **SPORT** mode is selected. Models with B-type meter • The ambient meter and the gauges in the instrument panel light up in red as long as **SPORT** mode is selected. Models without INDIVIDUAL mode ➔ **Drive Mode Switch** P. 558 Models with INDIVIDUAL mode ➔ **Drive Mode Switch** P. 562
	**NORMAL** Mode Indicator	• Comes on when you set the drive mode to **NORMAL**.	Models without INDIVIDUAL mode ➔ **Drive Mode Switch** P. 558 Models with INDIVIDUAL mode ➔ **Drive Mode Switch** P. 562
	**ECON** Mode Indicator	• Comes on when you set the drive mode to **ECON**.	Models without INDIVIDUAL mode ➔ **Drive Mode Switch** P. 558 Models with INDIVIDUAL mode ➔ **Drive Mode Switch** P. 562

* Not available on all models

Indicator	Name	On/Blinking	Explanation
	Hill Descent Control System Indicator (White/ Green)	• Lights up in white when the Hill Descent Control System is on and ready to use. • Lights up in green when the Hill Descent Control System is in operation.	➡ **Hill Descent Control System** P. 569
	System Message Indicator	• Comes on along with a beep when a problem is detected. A system message on the driver information interface appears at the same time.	• Refer to the Indicators information in this chapter when a system message appears on the driver information interface. Take the appropriate action for the message. Models with A-type meter • While the indicator is on, press the (home) button, and select **Warnings** to see the message again. ➡ **Switching the Display** P. 150 • The driver information interface will not return to the normal screen unless the warning is cancelled, or the (home) button is pressed. Models with B-type meter • While the indicator is on, roll the right selector wheel to see the message again. ➡ **Switching the Display** P. 169 • The driver information interface will not return to the normal screen unless the warning is cancelled, or the right selector wheel is rolled.
	Parking Sensor Indicator*	• Blinks if there are obstacles around the sensors.	➡ **Parking Sensor System** P. 703

* Not available on all models

Indicator	Name	On/Blinking	Explanation
	Adaptive Cruise Control (ACC) with Low Speed Follow Indicator (Amber)	• Comes on if there is a problem with ACC with Low Speed Follow.	• **Comes on while driving** - Have your vehicle checked by a dealer.
		• Comes on if the ACC with Low Speed Follow is deactivated temporarily after the 12-volt battery has been disconnected, then reconnected.	• Drive a short distance at more than 20 km/h. The indicator should go off. If it does not, have your vehicle checked by a dealer.
		• Indicator may come on temporarily when the maximum permissible weight is exceeded. • ACC with Low Speed Follow has been automatically cancelled.	• Make sure the total load is within the maximum permissible weight. ➡ **Load Limit** P. 525 • **Stays on constantly** - Have your vehicle checked by a dealer.
	Adaptive Cruise Control (ACC) with Low Speed Follow Indicator (White/Green)	• Lights up in white when you press the button. Oceanian, Bangladeshi, and Bhutanese models You can switch between indicators by pressing the **LIM** button. • Lights up in green while the system is in operation.	➡ **Adaptive Cruise Control (ACC) with Low Speed Follow** P. 636
	Adjustable Speed Limiter Indicator (White/Green)*		➡ **Adjustable Speed Limiter*** P. 571
	Intelligent Speed Limiter Indicator (White/Green)*		➡ **Intelligent Speed Limiter*** P. 577

* Not available on all models

Continued

Indicator	Name	On/Blinking	Explanation
	Adaptive Cruise Control (ACC) with Low Speed Follow Interval Indicator*	• Comes on when Adaptive Cruise Control (ACC) with Low Speed Follow indicator comes on.	➡ **To Set or Change Following-interval** P. 650
	Lane Keeping Assist System (LKAS) Indicator (Amber)	• Comes on if there is a problem with the LKAS.	• **Stays on constantly** - Have your vehicle checked by a dealer.
		• Indicator may come on temporarily when the maximum permissible weight is exceeded.	• Make sure the total load is within the maximum permissible weight. ➡ **Load Limit** P. 525 • **Stays on constantly** - Have your vehicle checked by a dealer.
	Lane Keeping Assist System (LKAS) Indicator (White/Green)	• Lights up in white when you press the LKAS button. • Lights up in green when the LKAS is in operation.	➡ **Lane Keeping Assist System (LKAS)** P. 655 Oceanian, Bangladeshi, and Bhutanese models ➡ **Traffic Jam Assist** P. 668

 * Not available on all models

Indicator	Name	On/Blinking	Explanation
	Collision Mitigation Braking System (CMBS) Indicator (Amber)	• Comes on if there is a problem with the CMBS or it cannot be used temporarily due to issues such as dirt on the windscreen near the camera.	• The Safety Support Indicator (Amber) comes on at the same time. ➡ **Safety Support Indicator (Amber)** P. 142
	Collision Mitigation Braking System (CMBS) Indicator (Grey)	• Comes on when the CMBS is off.	➡ **Safety Support** P. 184
	Road Departure Mitigation Indicator (Amber)	• Comes on if there is a problem with the Road Departure Mitigation System or it cannot be used temporarily due to issues such as dirt on the windscreen near the camera.	• The Safety Support Indicator (Amber) comes on at the same time. ➡ **Safety Support Indicator (Amber)** P. 142
	Road Departure Mitigation System Steering Assist Auto OFF Indicator	• Comes on when the Road Departure Mitigation System steering assist is automatically turned off.	➡ **Road Departure Mitigation System** P. 626
	Road Departure Mitigation Indicator (Grey)	• Comes on when the Road Departure Mitigation System is off.	➡ **Safety Support** P. 184

Indicator	Name	On/Blinking	Explanation
	Safety Support Indicator (Amber)	• Comes on if there is a problem with the Road Departure Mitigation system, CMBS, Low Speed Braking Control* or blind spot information system*.	• **Stays on constantly** - Have your vehicle checked by a dealer.
		• Comes on if there is a problem with the parking sensor.	• Check if the area around the sensor(s) is covered with mud, ice, snow, etc. If the indicator stays on even after you clean the area, have the system checked by a dealer.
		• Indicator may come on temporarily when the maximum permissible weight is exceeded.	• Make sure the total load is within the maximum permissible weight. ➡ **Load Limit** P. 525 • **Stays on constantly** - Have your vehicle checked by a dealer.
		• Comes on if the Road Departure Mitigation system, CMBS and Low Speed Braking Control* are deactivated temporarily after the 12-volt battery has been disconnected and then reconnected.	• Drive a short distance at more than 20 km/h. The indicator should go off. If it does not, have your vehicle checked by a dealer.

 * Not available on all models

Indicator	Name	On/Blinking	Explanation
	Safety Support Indicator (Amber)	• Comes on when the Road Departure Mitigation system and/or CMBS shuts itself off.	• Indicator may come on temporarily if the radar sensor cannot detect any objects when passing through an enclosed space such as a tunnel, or driving on an open road without any structures nearby. • The area around the radar sensor is blocked by dirt, mud, etc. Stop your vehicle in a safe place and wipe the debris off with a soft cloth. Indicator may take some time to go off after the radar sensor is cleaned. • Have your vehicle checked by a dealer if the indicator does not go off even after you have cleaned the radar sensor. ➡ **Radar Sensor** P. 689
			• **Stays on** - The temperature inside the camera is too high. Use the climate control system to cool down the camera. The system activates when the temperature inside the camera cools down. ➡ **Front Sensor Camera** P. 687

Continued

Indicator	Name	On/Blinking	Explanation
	Safety Support Indicator (Amber)	• Comes on when the Road Departure Mitigation system and/or CMBS shuts itself off.	• **Stays on** - The area around the camera is blocked by dirt, mud, etc. Stop your vehicle in a safe place and wipe the debris off with a soft cloth. • Have your vehicle checked by a dealer if the indicator and message are still displayed even after you have cleaned the area around the camera. ➡ **Front Sensor Camera** P. 687 • It may come on when the ambient conditions are dark, such as when driving in a tunnel, or at night, dawn, or dusk.
		Models with blind spot information system • Comes on when mud, snow, or ice accumulates in the vicinity of the blind spot information system sensor. • Comes on when the temperature of the blind spot information system sensor is high.	• **Comes on while driving** - Something may be interfering with the blind spot information system sensor. Check the vicinity of the blind spot information system sensor and remove any obstacles. • The system will return to normal when the temperature cools down. ➡ **Blind Spot Information System*** P. 593
		Models with Low Speed Braking Control • Comes on when mud, snow, or ice accumulates in the vicinity of the sonar sensor.	• Remove the obstacle in the vicinity of the sonar sensor. ➡ **Low Speed Braking Control*** P. 620

 * Not available on all models

Indicator	Name	On/Blinking	Explanation
	Safety Support Indicator (Green/ Grey)	• Lights up in green when the Road Departure Mitigation system, CMBS, Low Speed Braking Control*, blind spot information system* and parking sensor system*/parking sensor warning* are on. • Lights up in green and grey when one or more of the systems above are off. • Lights up in grey when all systems above are off.	**Collision Mitigation Braking System (CMBS)** P. 606 **Road Departure Mitigation System** P. 626 **Parking Sensor System** P. 703 **Blind Spot Information System*** P. 593 **Low Speed Braking Control*** P. 620

* Not available on all models

Gauges

Gauges include the speedometer, fuel gauge, and other related indicators. They are displayed when the power mode is in ON.

■ Speedometer

Displays your driving speed in km/h.

■ Fuel Gauge

Displays the amount of fuel left in the fuel tank.

■ Odometer

Shows the total number of kilometres that your vehicle has accumulated.

■ Ambient Meter

Changes to green* to indicate that the vehicle is being driven in a fuel-efficient manner with **SPORT** mode off.
Changes to red to indicate that **SPORT** mode is selected.

■ POWER Gauge

Shows the output of the electric motor.

■ CHARGE/DECEL Gauge

Shows the degree to which the High Voltage battery is being charged.
When the deceleration paddle selector is being used, it shows the strength of deceleration.

Fuel Gauge

NOTICE

You should refuel when the reading approaches E* or 0*.
Running out of fuel can cause the engine to misfire, damaging the catalytic converter.

After lightly refueling, or depending on your vehicle's condition, the actual amount of remaining fuel may differ from the fuel gauge reading.

* Not available on all models

Models with B-type meter

■ High Voltage Battery Charge Level Gauge

Shows the remaining High Voltage battery charge level.

High Voltage Battery Charge Level Gauge

The High Voltage battery charge level may decrease under the following conditions:

- When the 12-volt battery has been replaced.
- When the 12-volt battery has been disconnected.
- When the High Voltage battery control system corrects its reading.

The charge level reading will be corrected automatically while driving.

Changes in the temperature of the High Voltage battery can cause the number of indicators in the battery charge level gauge to change.

Continued


■ Outside Temperature

Shows the outside temperature in Celsius.
If the outside temperature has been below 3°C at the time you set the power mode to ON, the **Outside temperature low** message appears on the driver information interface.

■ Adjusting the outside temperature display

Adjust the temperature reading by up to ±3°C if the temperature reading seems incorrect.

■ Traffic Sign Recognition System*

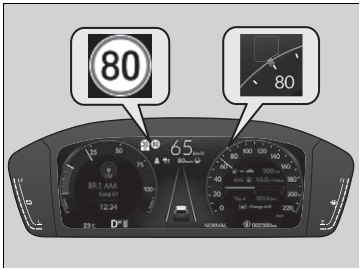

Shows certain detected traffic signs while driving.
If speed limit warning is activated, the sign icon blinks when the maximum speed of the detected traffic sign is exceeded.

➔ **Traffic Sign Recognition System*** P. 681

Outside Temperature

The temperature sensor is in the front bumper. Road heat and exhaust from another vehicle can affect the temperature reading when your vehicle speed is less than 30 km/h.

It may take several minutes for the display to be updated after the temperature reading has stabilised.

You can adjust the temperature reading.

Models with Display Audio without Google built-in

➔ **Customized Features** P. 366

Models with Display Audio with Google built-in

➔ **Customized Features** P. 465

 * Not available on all models

■ Current Mode for ACC with Low Speed Follow, the LKAS and Traffic Jam Assist*1

Shows the current mode for ACC with Low Speed Follow, LKAS and Traffic Jam Assist*1.

➔ **Adaptive Cruise Control (ACC) with Low Speed Follow** P. 636
➔ **Lane Keeping Assist System (LKAS)** P. 655

Oceanian, Bangladeshi, and Bhutanese models

➔ **Traffic Jam Assist** P. 668

Models with A-type meter

■ Clock


Shows the clock.

*1: Oceanian, Bangladeshi, and Bhutanese models

Current Mode for ACC with Low Speed Follow, the LKAS and Traffic Jam Assist*1

Models with B-type meter

When you set speed for ACC with Low Speed Follow, a set speed mark will be displayed on the speedometer.

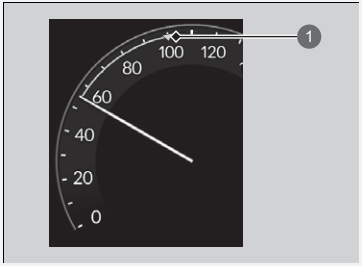

❶ Set Speed

Clock

You can adjust the time manually and change the clock display to show the 12 hour clock or 24 hour clock.

Models with Display Audio without Google built-in

➔ **Clock Setup** P. 322

Models with Display Audio with Google built-in

➔ **Clock Setup** P. 422

Driver Information Interface (A-type Meter)

The driver information interface shows information such as the estimated travelable distance and fuel economy of the vehicle. It also displays messages such as warnings and other helpful information.

When a warning message displays, please check the message and contact a dealer to have the vehicle inspected if necessary. Please refer to the pages below if the **Engine oil pressure low**, **Engine temperature too hot**, or **Reduced stopping power** message is displayed.

- **If the Engine oil pressure low Warning Appears** P. 817
- **Overheating** P. 815
- **If the Reduced stopping power Warning Appears** P. 819


■ Switching the Display

Press the (home) button, then roll the left selector wheel to scroll to the content you want to see. Press the left selector wheel to see detailed information.

Switching the Display

You can add or delete the meter contents.

Instrument Display Settings P. 165

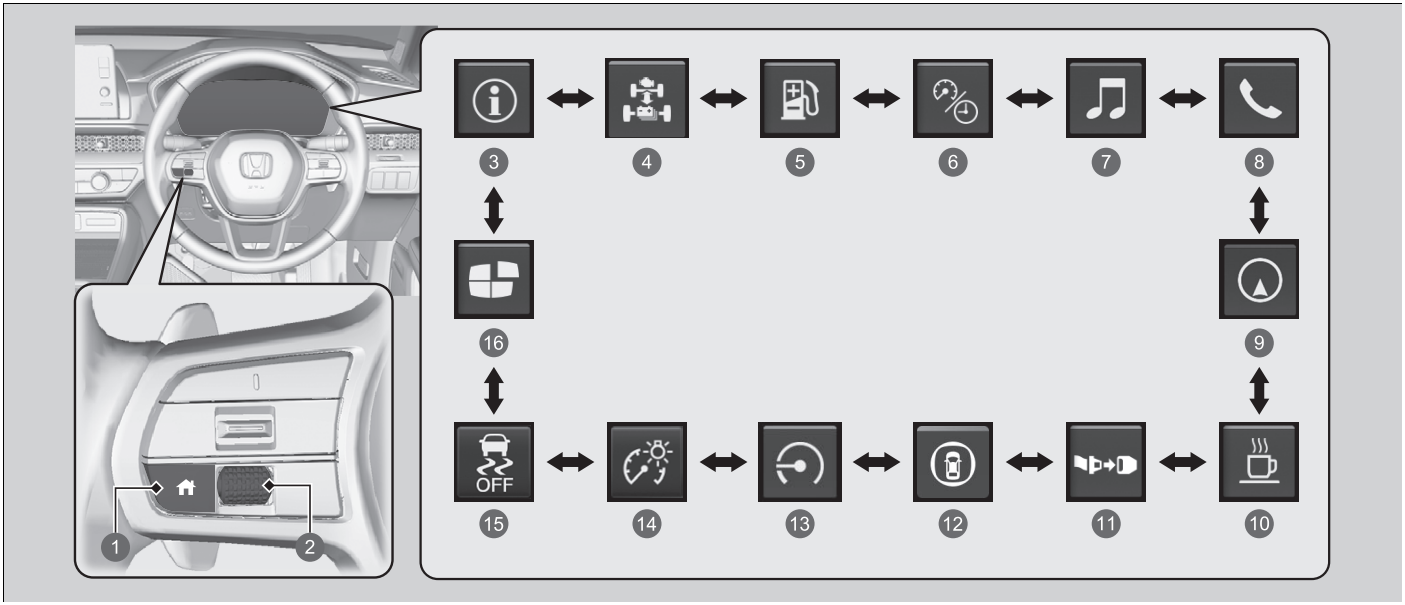


❶ (home) Button ➡ P. 158
❷ Left Selector Wheel ➡ P. 158
❸ **Information** ➡ P. 165
❹ **Power flow** ➡ P. 152
❺ **Range & fuel** ➡ P. 153
❻ **Speed & time** ➡ P. 155
❼ **Audio** ➡ P. 156
❽ **Phone** ➡ P. 156
❾ **Navigation** ➡ P. 157
❿ **Driver attention** ➡ P. 158
⓫ **Seat belts** ➡ P. 161
⓬ **Safety support** ➡ P. 162
⓭ **No content**
⓮ **Brightness** ➡ P. 164
⓯ **VSA mode** ➡ P. 164
⓰ **Instrument display settings** ➡ P. 165

Continued

■ Power Flow/Engine Status Display/High Voltage Battery Charge Level Gauge

Displays the power flow of the motor and engine, indicating the vehicle's power source, remaining battery level, and whether the battery is being charged.

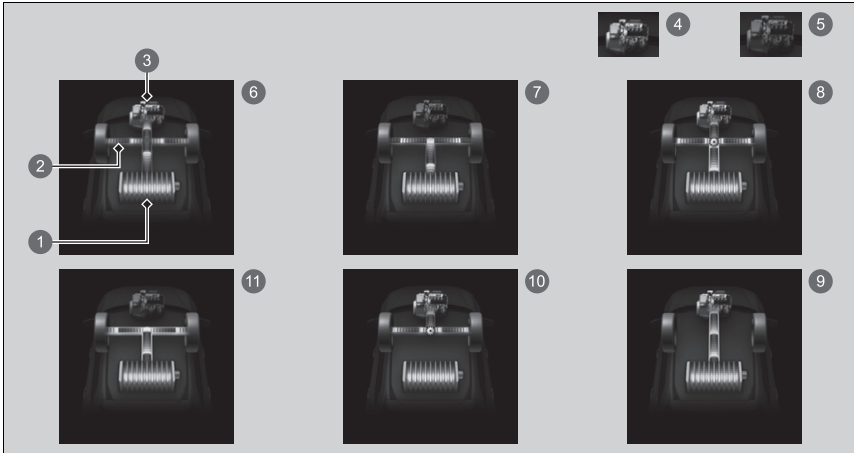

❶ High Voltage Battery Charge Level Gauge
❷ Power Flow ❸ Engine ❹ Engine ON ❺ Engine OFF
❻ **Hybrid (HV)**: Power is supplied by the motor and the engine.
❼ **Electric Vehicle (EV)**: Power is supplied by the motor.
❽ **Engine (Direct Drive)**: The engine is running and the motor is charging the High Voltage battery.
❾ The engine is running and the motor is charging the High Voltage battery.
❿ Power is being supplied by the engine only.
⓫ **Regeneration**: The motor is charging the High Voltage battery.


Power Flow/Engine Status Display/High Voltage Battery Charge Level Gauge

The High Voltage battery charge level may decrease under the following conditions:
- When the 12-volt battery has been replaced.
- When the 12-volt battery has been disconnected.
- When the High Voltage battery control system corrects its reading.

The charge level reading will be corrected automatically while driving.


Changes in the temperature of the High Voltage battery can cause the number of indicators in the battery charge level gauge to change.

While the vehicle is stationary with the engine running, the following may appear on the driver information interface.

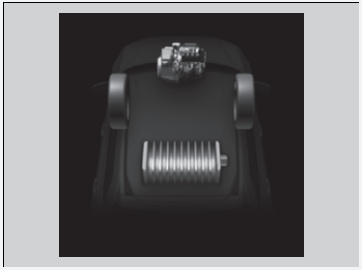

■ Range/Fuel/Trip Meter

Roll the left selector wheel to switch between trip meter A and trip meter B.

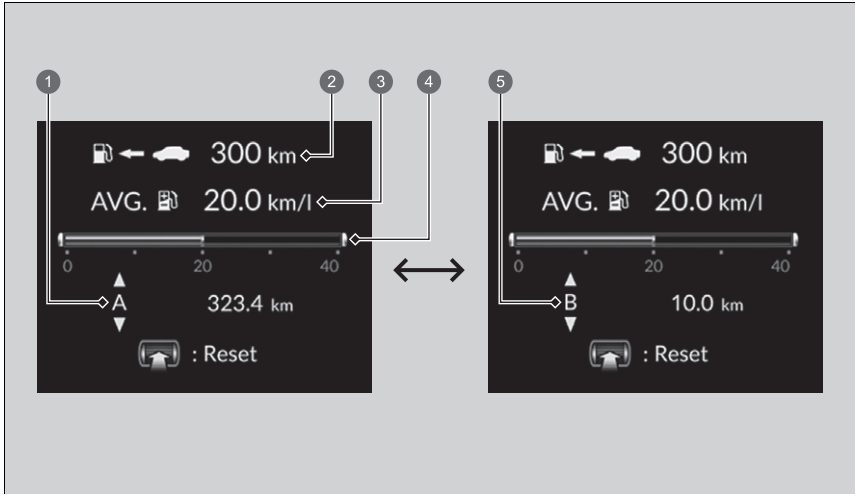

❶ Trip Meter A
❷ Range
❸ Average Fuel Economy
❹ Instant Fuel Economy
❺ Trip Meter B

Continued

■ Trip meter

Shows the total number of kilometres driven since the last reset. Meters A and B can be used to measure two separate trips.

Resetting a trip meter

To reset the trip meter, display it, press the left selector wheel, and then select **Reset**.

▶ The trip meter is reset to 0.0.

■ Average fuel economy

Shows the estimated average fuel economy of each trip meter in km/l or l/100 km. The display is updated at set intervals. When a trip meter is reset, the average fuel economy is also reset.

■ Instant fuel economy

Shows the instant fuel economy as a bar graph in km/l or l/100 km.

■ Range

Shows the estimated distance you can travel on the remaining fuel. This estimated distance is based on the vehicle's current fuel economy.

Range/Fuel/Trip Meter

You can change the unit of fuel consumption in either km/l and l/100km.

Models with Display Audio without Google built-in

Customized Features P. 366

Models with Display Audio with Google built-in

Customized Features P. 465

Average fuel economy

You can change when to reset the average fuel economy.

Models with Display Audio without Google built-in

Customized Features P. 366

Models with Display Audio with Google built-in


Customized Features P. 465

Range

The driving range displayed is only an estimate and may differ to the actual distance the vehicle can travel.

■ Speed/Time/Trip Meter

Roll the left selector wheel to switch between trip meter A and trip meter B.

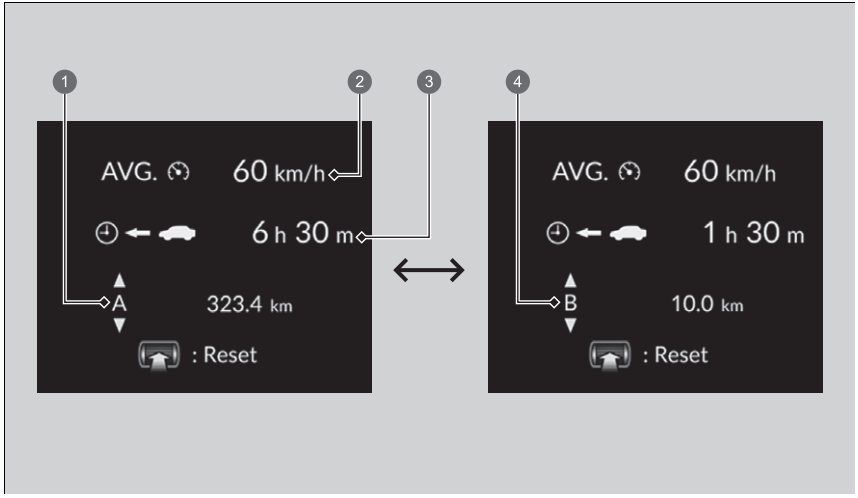

❶ Trip Meter A
❷ Average Speed
❸ Elapsed Time
❹ Trip Meter B

Continued

■ Trip meter

➔ **Trip meter** P. 154

■ Elapsed time

Shows the time elapsed since Trip A or Trip B was reset.

Elapsed time

You can change when to reset the elapsed time.

Models with Display Audio without Google built-in

➔ **Customized Features** P. 366

Models with Display Audio with Google built-in

➔ **Customized Features** P. 465

■ Average speed

Shows the average speed in km/h since Trip A or Trip B was reset.

Average speed

You can change when to reset the average speed.

Models with Display Audio without Google built-in

➔ **Customized Features** P. 366

Models with Display Audio with Google built-in

➔ **Customized Features** P. 465

■ Audio

Shows the current audio information.

Models with Display Audio without Google built-in

➔ **Basic Operation** P. 309

Models with Display Audio with Google built-in

➔ **Basic Operation** P. 409

■ Phone

Shows the current phone information.

Models with Display Audio without Google built-in

➔ **Hands-Free Telephone (HFT) System** P. 386

Models with Display Audio with Google built-in

➔ **Hands-Free Telephone (HFT) System** P. 487

■ Navigation

■ Compass

Shows the compass screen.

■ Turn-by-Turn Directions

When driving guidance is provided by the navigation system*, Google Maps*, Android Auto or Apple CarPlay, turn-by-turn directions to your destination appear.

Models with Display Audio without Google built-in

- **Refer to the Navigation System Manual**
- **Android Auto™** P. 359
- **Apple CarPlay** P. 353

Models with Display Audio with Google built-in

- **Android Auto™** P. 451
- **Apple CarPlay** P. 447
- **Google built-in** P. 458

Navigation

You can select whether to have the turn-by-turn display come on or not during the route guidance.

Models with Display Audio without Google built-in

- **Customized Features** P. 366

Models with Display Audio with Google built-in

- **Customized Features** P. 465

Navigation features may not be available for all apps.

Models with navigation system

You can control some navigation system functions on the driver information interface by rolling the left selector wheel.


- **Refer to the Navigation System Manual**

* Not available on all models

Continued

■ Driver Attention Monitor

The Driver Attention Monitor analyses steering inputs to determine if the vehicle is being driven in a manner consistent with drowsy or inattentive driving. If it determines that the vehicle is being driven in such a manner, it will display the degree of the driver's attention on the driver information interface.

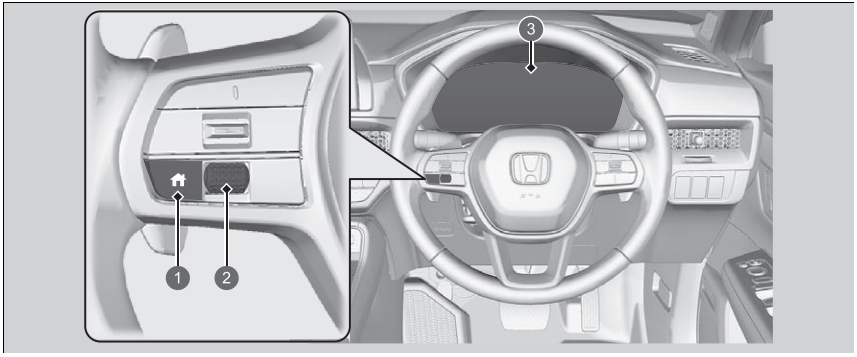

❶ (home) Button
❷ Left Selector Wheel
❸ Driver Information Interface

Driver Attention Monitor

The Driver Attention Monitor cannot always detect if the driver is tired or inattentive.
Regardless of the system's feedback, if you are feeling tired, stop in a safe location and rest for as long as needed.



When you select **Driver attention** on the driver information interface, bars on it light up in white to indicate the degree of the driver's attention.

➡ **Switching the Display** P. 150

❶ Level



If two bars light up, the **Driver attention level low** message will appear.

Continued



If one bar lights up, the **Driver attention level low. Take a rest** message will appear, a beep will sound, and the steering wheel will vibrate.
If this message appears, stop in a safe location and rest for as long as needed.
The message will disappear when the (home) button is pressed or when the system has determined that the driver is driving normally.

If the driver does not take a break and the monitor continues to detect that the driver is very tired, the message will appear again after approximately 15 minutes, accompanied by a beep and steering wheel vibrations.

The message does not appear when the travelling time is 30 minutes or less.

■ **The Driver Attention Monitor resets when:**
- The power system is turned off.
- The driver unfastens the seat belt and opens the door while the vehicle is stopped.

■ **For the Driver Attention Monitor to function:**
- The vehicle must be travelling above 40 km/h.
- The electric power steering (EPS) system indicator must be off.

■ **Depending on driving conditions or other factors, the Driver Attention Monitor may not function in the following circumstances:**
- The steering assist function of the Lane Keeping Assist System (LKAS) is active.
  ➡ **Lane Keeping Assist System (LKAS)** P. 655
- The condition of the road is poor; e.g., the surface is unpaved or bumpy.
- It is windy.
- The driver is frequently operating the vehicle in an assertive manner, such as changing lanes or accelerating.

■ **Customizing**

You can change the Driver Attention Monitor settings. Select **Tactile and audible alert**, **Tactile alert only** or **OFF**.

Models with Display Audio without Google built-in

➡ **Customized Features** P. 366

Models with Display Audio with Google built-in

➡ **Customized Features** P. 465

■ Seat Belts

Occurs, under specified conditions, when seat belts are latched or unlatched.

➡ **Seat Belt Reminder** P. 54

For the Driver Attention Monitor to function:

The bars on the driver information interface remain greyed-out unless the Driver Attention Monitor is functioning.

Continued

■ Safety Support

Indicates the status of the Road Departure Mitigation system, CMBS, blind spot information system*, and parking sensor system, such as On, Off, or Failure, by colour and letters.

The following colours indicate the status of any of the above-mentioned systems:
- Green: The system is on.
- Grey: The system is off.
- Amber: There is a problem with the system.

Safety Support

If a system is indicated by the colour amber, have your vehicle checked by a dealer immediately.


To turn each system on or off, first rotate the left selector wheel to switch displays. From the next display, you can select which system to turn on or off.

- **Collision Mitigation Braking System (CMBS)** P. 606
- **Road Departure Mitigation System** P. 626
- **Low Speed Braking Control*** P. 620
- **Parking Sensor System** P. 703
- **Blind Spot Information System*** P. 593

You can also confirm the status of each function by the colour of the indicator.

- **Safety Support Indicator (Amber)** P. 142
- **Safety Support Indicator (Green/Grey)** P. 145
- **Collision Mitigation Braking System (CMBS) Indicator (Amber)** P. 141
- **Collision Mitigation Braking System (CMBS) Indicator (Grey)** P. 141
- **Road Departure Mitigation Indicator (Amber)** P. 141
- **Road Departure Mitigation System Steering Assist Auto OFF Indicator** P. 141
- **Road Departure Mitigation Indicator (Grey)** P. 141

 * Not available on all models

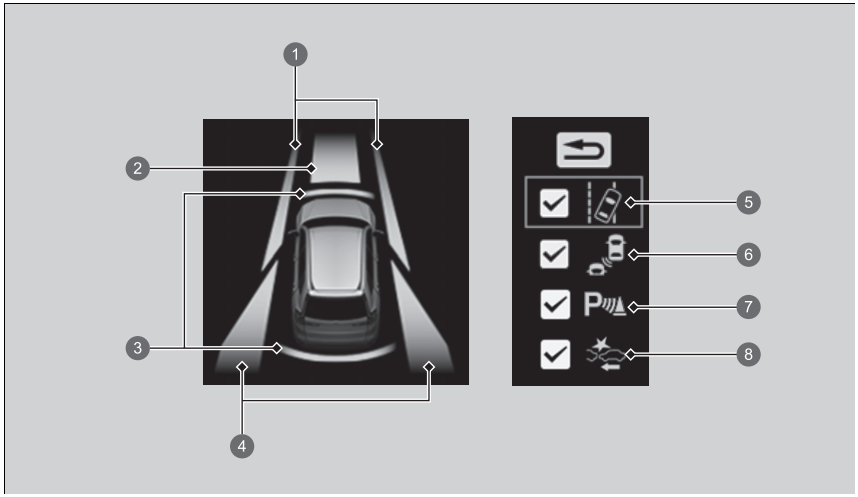

❶ Area Info for Road Departure Mitigation System
❷ Area Info for CMBS
❸ Area Info for Parking Sensor System
❹ Area Info for Blind Spot Information System*
❺ Road Departure Mitigation System Icon and Status Info
❻ Blind Spot Information System Icon and Status Info*
❼ Parking Sensor System Icon and Status Info
❽ CMBS Icon and Status Info

Safety Support

Even when the Parking Sensor System icon is green, if the **Rear Sensor Setting** is turned off, the rear parking sensor will not operate when reversing.

Customized Features P. 465

* Not available on all models

Continued

■ Brightness


Press the left selector wheel when the **Brightness** screen is displayed.

When the power mode is in ON, you can use the left selector wheel to adjust instrument panel brightness.
Brighten: Roll the left selector wheel up.
Dim: Roll the left selector wheel down.

Press the left selector wheel to exit.

■ VSA Mode

You can turn the VSA on or off.

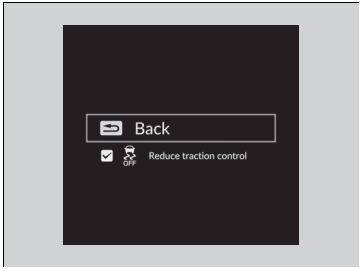

Roll the left selector wheel to scroll to select **Reduce traction control**, then press the left selector wheel to check or uncheck it.

Vehicle Stability Assist (VSA) System
P. 583

Brightness


The brightness of the gauge is automatically adjusted depending on the ambient brightness.

- The brightness decreases when the ambient light is dark.
- The brightness increases when the ambient light is bright.


You can change the setting even when the ambient lighting is bright, but the brightness of the gauge won't change.

Instrument Display Settings

You can choose which icons to display on the home screen.

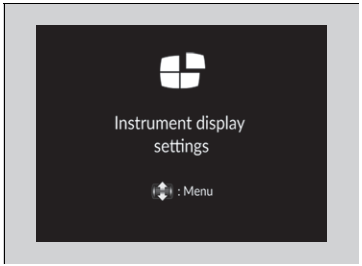

1. Roll the left selector wheel until **Instrument display settings** is selected, then press the left selector wheel.
2. Roll the left selector wheel.

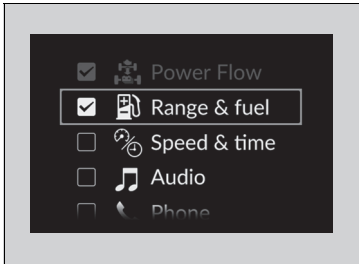

3. Roll the left selector wheel to scroll between icons, then press the left selector wheel to check or uncheck them.

Instrument Display Settings

Icons that are grey cannot be removed from the home screen.

When you customize settings, shift to P.

Information

You can check if there are any active warning messages.

Information

If there are multiple warnings or informations, you can roll the left selector wheel to see other warnings.

Driver Information Interface Left Side Area (B-type Meter)

Shows the current mode for audio and phone information, etc.

Audio Remote Controls P. 312

Models with Display Audio without Google built-in

Hands-Free Telephone (HFT) System P. 386

Models with Display Audio with Google built-in

Hands-Free Telephone (HFT) System P. 487

■ Clock

Shows the clock.

Clock

You can adjust the time manually and change the clock display to show the 12 hour clock or 24 hour clock.

Models with Display Audio without Google built-in

Clock Setup P. 322

Models with Display Audio with Google built-in

Clock Setup P. 422

You can choose whether the clock is displayed on the driver information interface.

Customize Display P. 167


■ Customize Display

■ Arrange audio source on the left side area


You can choose which sources to display on the audio source screen.



1. Roll the left selector wheel until **Customize display** is selected, then press the left selector wheel.

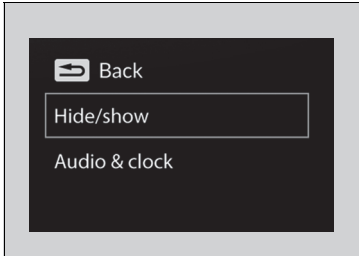

2. Roll the left selector wheel to scroll to select **Hide/show**, then press the left selector wheel.

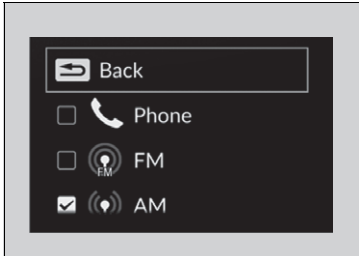

3. Roll the left selector wheel to scroll between audio sources, then press the left selector wheel to check or uncheck them.

Continued

Customize Display


When you customize settings, shift to P.

■ Turn the displaying on the left side area on and off


You can select whether the current audio information and clock appear on the left side area.



1. Roll the left selector wheel until **Customize display** is selected, then press the left selector wheel.

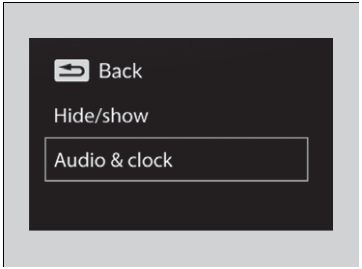

2. Roll the left selector wheel to scroll to select **Audio & clock**, then press the left selector wheel.

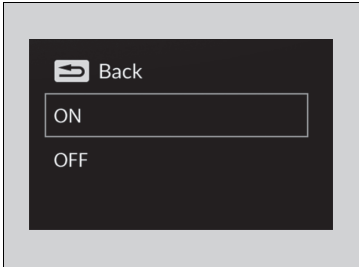

3. Roll the left selector wheel to scroll to select your desired settings, then press the left selector wheel.

Driver Information Interface Right Side Area (B-type Meter)

The driver information interface shows information such as the estimated travelable distance and fuel economy of the vehicle. It also displays messages such as warnings and other helpful information.

When a warning message displays, please check the message and contact a dealer to have the vehicle inspected if necessary. Please refer to the pages below if the **Engine oil pressure low**, **Engine temperature too hot** or **Reduced stopping power** message is displayed.

- **If the Engine oil pressure low Warning Appears** P. 817
- **Overheating** P. 815
- **If the Reduced stopping power Warning Appears** P. 819

■ Switching the Display

Roll the right selector wheel to view different types of content.

Driver Information Interface Right Side Area (B-type Meter)

African models with Right-hand Drive Type

Display messages by setting Warning message to ON. You can also change the message language.


Customized Features P. 465

Switching the Display

You can add or delete the meter contents.

Instrument Display Settings P. 187

Continued

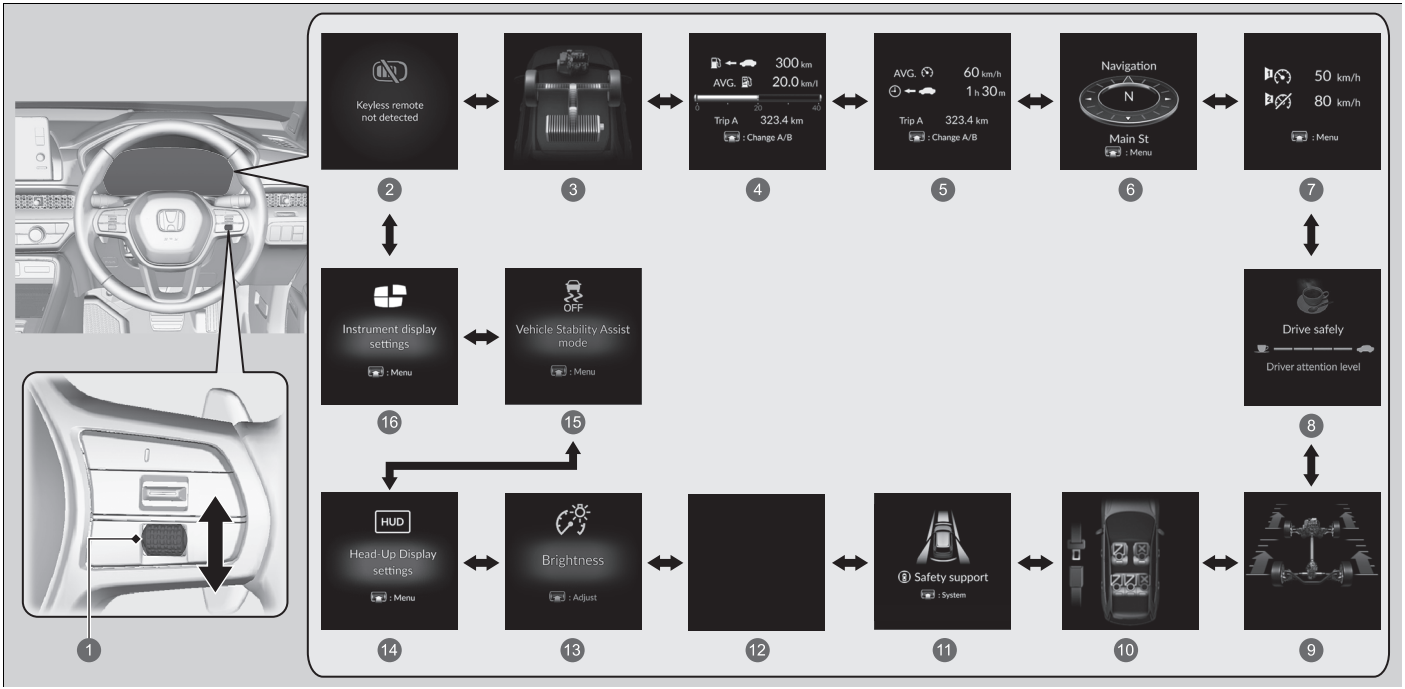


1. Right Selector Wheel
2. Information ➔ P. 188
3. Power Flow ➔ P. 171
4. Range/Fuel/Trip Meter ➔ P. 173
5. Speed/Time/Trip Meter ➔ P. 175
6. Navigation/Compass ➔ P. 177
7. Speed Alarm* ➔ P. 178
8. Driver Attention Monitor ➔ P. 179
9. AWD Torque Distribution* ➔ P. 183
10. Seat Belts ➔ P. 183
11. Safety Support ➔ P. 184
12. No Content
13. Brightness ➔ P. 186
14. Head-Up Display Settings* ➔ P. 191
15. Vehicle Stability Assist Mode ➔ P. 186
16. Instrument Display Settings ➔ P. 187

* Not available on all models

■ Power Flow Monitor

Displays the power flow of the motor and engine, indicating the vehicle's power source and whether the battery is being charged.

2WD models

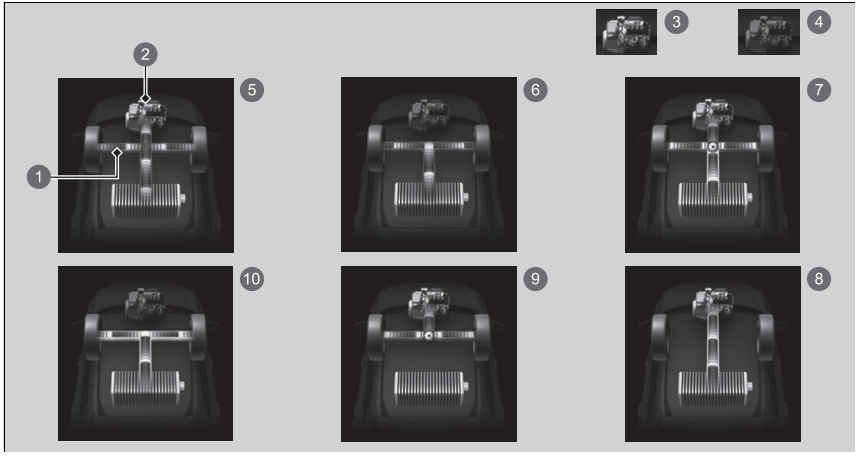


1. Power Flow
2. Engine
3. Engine ON
4. Engine OFF
5. **Hybrid (HV)**: Power is supplied by the motor and the engine.
6. **Electric Vehicle (EV)**: Power is supplied by the motor.
7. **Engine (Direct Drive)**: The engine is running and the motor is charging the High Voltage battery.
8. The engine is running and the motor is charging the High Voltage battery.
9. Power is being supplied by the engine only.
10. **Regeneration**: The motor is charging the High Voltage battery.

Continued


Power Flow Monitor

While the vehicle is stationary with the engine running, the following may appear on the driver information interface.

2WD models

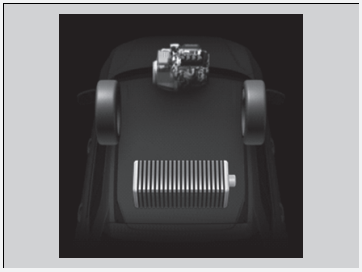


AWD models

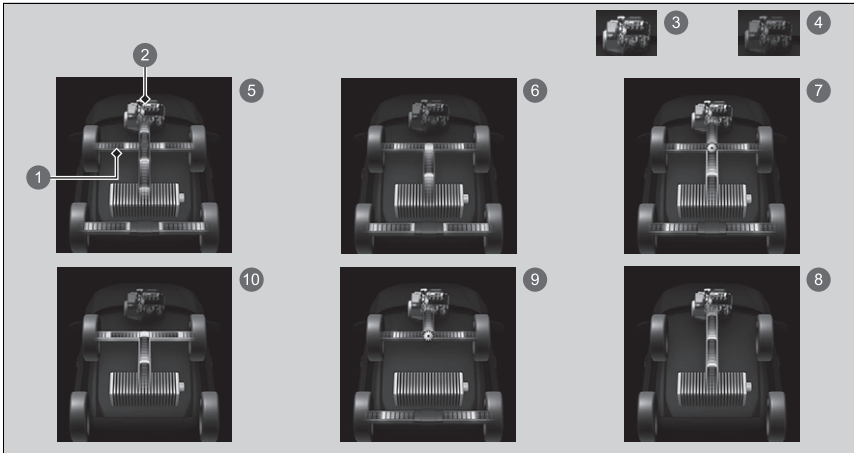

1. Power Flow
2. Engine
3. Engine ON
4. Engine OFF
5. **Hybrid (HV)**: Power is supplied by the motor and the engine.
6. **Electric Vehicle (EV)**: Power is supplied by the motor.
7. **Engine (Direct Drive)**: The engine is running and the motor is charging the High Voltage battery.
8. The engine is running and the motor is charging the High Voltage battery.
9. Power is being supplied by the engine only.
10. **Regeneration**: The motor is charging the High Voltage battery.


Power Flow Monitor

AWD models

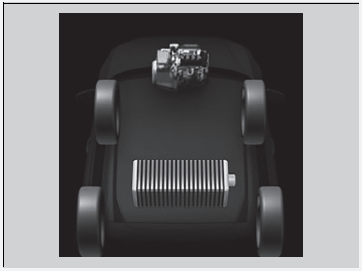

■ Range/Fuel/Trip Meter

Press the right selector wheel to switch between trip meter A and trip meter B.

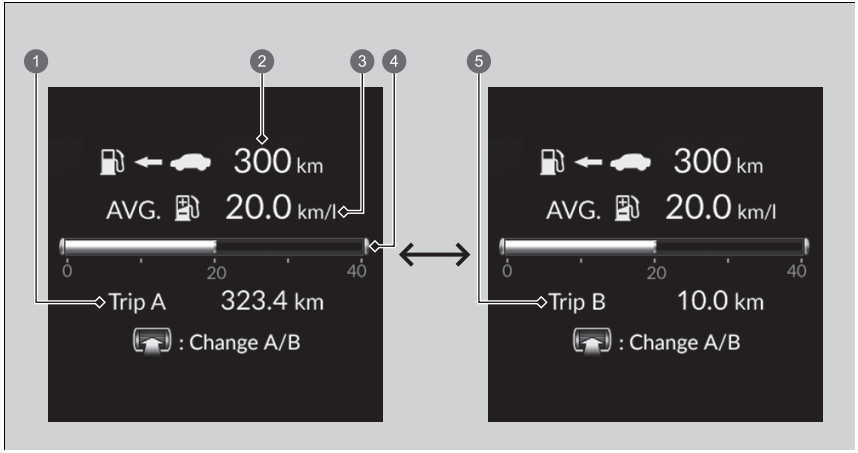

❶ Trip Meter A
❷ Range
❸ Average Fuel Economy
❹ Instant Fuel Economy
❺ Trip Meter B

Continued

■ Trip meter

Shows the total number of kilometres driven since the last reset. Meters A and B can be used to measure two separate trips.

Resetting a trip meter

To reset the trip meter, display it, press and hold the right selector wheel, and then select **Reset**.

▶ The trip meter is reset to 0.0.

■ Average fuel economy

Shows the estimated average fuel economy of each trip meter in km/l* or l/100 km. The display is updated at set intervals. When a trip meter is reset, the average fuel economy is also reset.

■ Instant fuel economy

Shows the instant fuel economy as a bar graph in km/l* or l/100 km.

■ Range

Shows the estimated distance you can travel on the remaining power and fuel. This estimated distance is based on the vehicle's current fuel economy.

Range/Fuel/Trip Meter

Except African, Middle Eastern, Oceanian, Bangladeshi, and Bhutanese models

You can change the unit of fuel consumption in either km/l and l/100km.

Models with Display Audio without Google built-in

Customized Features P. 366

Models with Display Audio with Google built-in

Customized Features P. 465

Average fuel economy

You can change when to reset the average fuel economy.

Models with Display Audio without Google built-in

Customized Features P. 366

Models with Display Audio with Google built-in

Customized Features P. 465

Range

The driving range displayed is only an estimate and may differ to the actual distance the vehicle can travel.

* Not available on all models

■ Speed/Time/Trip Meter

Press the right selector wheel to switch between trip meter A and trip meter B.



❶ Trip Meter A
❷ Average Speed
❸ Elapsed Time
❹ Trip Meter B

Continued

■ Trip meter

➔ **Trip meter** P. 174

■ Elapsed time

Shows the time elapsed since Trip A or Trip B was reset.

Elapsed time

You can change when to reset the elapsed time.

Models with Display Audio without Google built-in

➔ **Customized Features** P. 366

Models with Display Audio with Google built-in

➔ **Customized Features** P. 465

■ Average speed

Shows the average speed in km/h since Trip A or Trip B was reset.

Average speed

You can change when to reset the average speed.

Models with Display Audio without Google built-in

➔ **Customized Features** P. 366

Models with Display Audio with Google built-in

➔ **Customized Features** P. 465

■ Navigation

■ Compass

Shows the compass screen.

■ Turn-by-Turn Directions

When driving guidance is provided by the navigation system*, Google Maps*, Android Auto or Apple CarPlay, turn-by-turn directions to your destination appear.

Models with Display Audio without Google built-in

- **Refer to the Navigation System Manual**
- **Android Auto™** P. 359
- **Apple CarPlay** P. 353

Models with Display Audio with Google built-in

- **Android Auto™** P. 451
- **Apple CarPlay** P. 447
- **Google built-in** P. 458

Navigation

You can select whether to have the turn-by-turn display come on or not during the route guidance.

Models with Display Audio without Google built-in

- **Customized Features** P. 366

Models with Display Audio with Google built-in

- **Customized Features** P. 465

Navigation features may not be available for all apps.

Models with navigation system

You can control some navigation system functions on the driver information interface by pressing the right selector wheel.

- **Refer to the Navigation System Manual**


* Not available on all models

Continued

■ Speed Alarm*

Sets the speed alarm on and changes the speed alarm setting.

Press the right selector wheel to display the setting screen, then roll it, the speed alarm setting changes as follows:

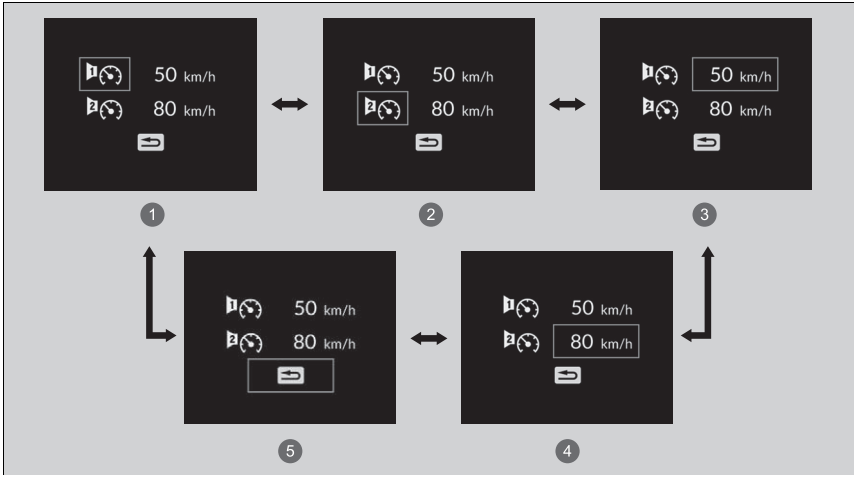


❶ Speed Alarm 1 On/Off*1
❷ Speed Alarm 2 On/Off*1
❸ Speed Alarm 1 Speed Setting (50 km/h*1)
❹ Speed Alarm 2 Speed Setting (80 km/h*1)
❺ Back

*1:Default Setting

* Not available on all models

■ Driver Attention Monitor

The Driver Attention Monitor analyses steering inputs to determine if the vehicle is being driven in a manner consistent with drowsy or inattentive driving. If it determines that the vehicle is being driven in such a manner, it will display the degree of the driver's attention on the driver information interface.

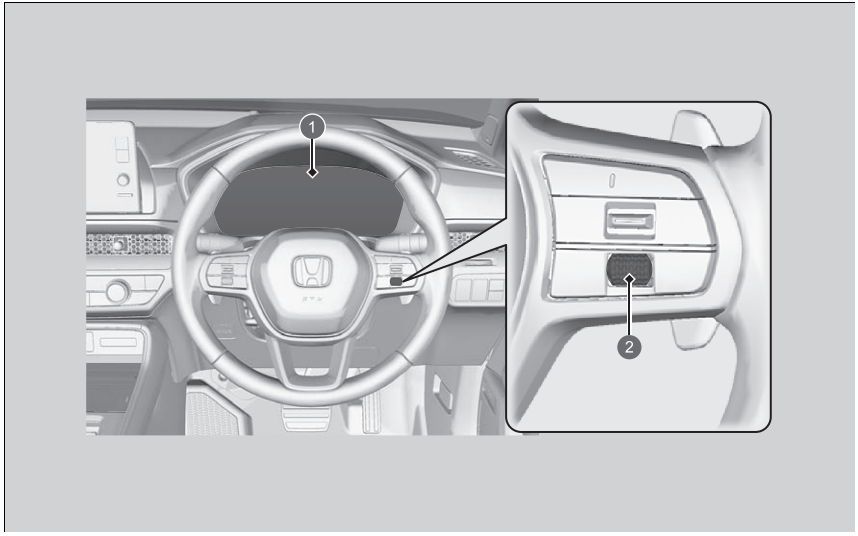

❶ Driver Information Interface
❷ Right Selector Wheel

Driver Attention Monitor

The Driver Attention Monitor cannot always detect if the driver is tired or inattentive.
Regardless of the system's feedback, if you are feeling tired, stop in a safe location and rest for as long as needed.

Continued



When you select Driver Attention Monitor on the driver information interface, bars on it light up in white to indicate the degree of the driver's attention.

➢ **Switching the Display** P. 169

❶ Level



If two bars light up, the **Driver attention level low** message will appear.



If one bar lights up, the **Driver attention level low. Take a rest** message will appear, a beep will sound, and the steering wheel will vibrate.
If this message appears, stop in a safe location and rest for as long as needed.

Except Oceanian, Bangladeshi, and Bhutanese models

If the driver does not take a break and the monitor continues to detect that the driver is very tired, the message will appear again after approximately 15 minutes, accompanied by a beep and steering wheel vibrations.

Oceanian, Bangladeshi, and Bhutanese models

Make sure to reset the system after you take a break.

➡ **The Driver Attention Monitor resets when:** P. 182

Driver Attention Monitor

The message does not appear when the travelling time is 30 minutes or less.

Except Oceanian, Bangladeshi, and Bhutanese models

The message will disappear when the right selector wheel is rolled or when the system has determined that the driver is driving normally.

Oceanian, Bangladeshi, and Bhutanese models

The message will disappear when the right selector wheel is rolled.

If one bar lights up, the distance at which CMBS alerts may be set to Far, and the Road Departure Mitigation system may be set to Early.

➡ **Collision Mitigation Braking System (CMBS)** P. 606
➡ **Road Departure Mitigation System** P. 626

If the system is not reset, the Driver Attention Monitor will continue to light up only one bar.

Continued

■ **The Driver Attention Monitor resets when:**
- The power system is turned off.
- The driver unfastens the seat belt and opens the door while the vehicle is stopped.

■ **For the Driver Attention Monitor to function:**
- The vehicle must be travelling above 40 km/h.
- The electric power steering (EPS) system indicator must be off.

■ **Depending on driving conditions or other factors, the Driver Attention Monitor may not function in the following circumstances:**
- The steering assist function of the Lane Keeping Assist System (LKAS) is active.
  ➡ **Lane Keeping Assist System (LKAS)** P. 655
- The condition of the road is poor; e.g., the surface is unpaved or bumpy.
- It is windy.
- The driver is frequently operating the vehicle in an assertive manner, such as changing lanes or accelerating.

■ **Customizing**

You can change the Driver Attention Monitor settings. Select **Tactile and audible alert**, **Tactile alert only**, or **OFF**.

Models with Display Audio without Google built-in

➡ **Customized Features** P. 366

Models with Display Audio with Google built-in

➡ **Customized Features** P. 465

Oceanian, Bangladeshi, and Bhutanese models

Tactile and audible alert is selected every time you set the power mode to ON, even if you changed the Driver Attention Monitor settings the last time you drove the vehicle.

For the Driver Attention Monitor to function:

The bars on the driver information interface remain greyed-out unless the Driver Attention Monitor is functioning.

■ AWD Torque Distribution Monitor*

The indicators on the display show the amount of torque being transferred to the right front, left front, right rear, and left rear wheels.

➡ **Real Time AWD with Intelligent Control System*** P. 586

■ Seat Belts

Occurs, under specified conditions, when seat belts are latched or unlatched.

➡ **Seat Belt Reminder** P. 54

* Not available on all models

Continued

■ Safety Support

Indicates the status of the Road Departure Mitigation system, CMBS, Low Speed Braking Control*, blind spot information system*, and parking sensor system*/ parking sensor warning*, such as On, Off, or Failure, by colour and letters.

The following colours indicate the status of any of the above-mentioned systems:
- Green: The system is on.
- Grey: The system is off.
- Amber: There is a problem with the system.

Safety Support

If a system is indicated by the colour amber, have your vehicle checked by a dealer immediately.


To turn each system on or off, first press the right selector wheel to switch displays. From the next display, you can select which system to turn on or off.

- **Collision Mitigation Braking System (CMBS)** P. 606
- **Road Departure Mitigation System** P. 626
- **Low Speed Braking Control*** P. 620
- **Parking Sensor System** P. 703
- **Blind Spot Information System*** P. 593

You can also confirm the status of each function by the colour of the indicator.

- **Collision Mitigation Braking System (CMBS) Indicator (Amber)** P. 141
- **Collision Mitigation Braking System (CMBS) Indicator (Grey)** P. 141
- **Road Departure Mitigation Indicator (Amber)** P. 141
- **Road Departure Mitigation Indicator (Grey)** P. 141
- **Road Departure Mitigation System Steering Assist Auto OFF Indicator** P. 141
- **Safety Support Indicator (Amber)** P. 142
- **Safety Support Indicator (Green/Grey)** P. 145

 * Not available on all models

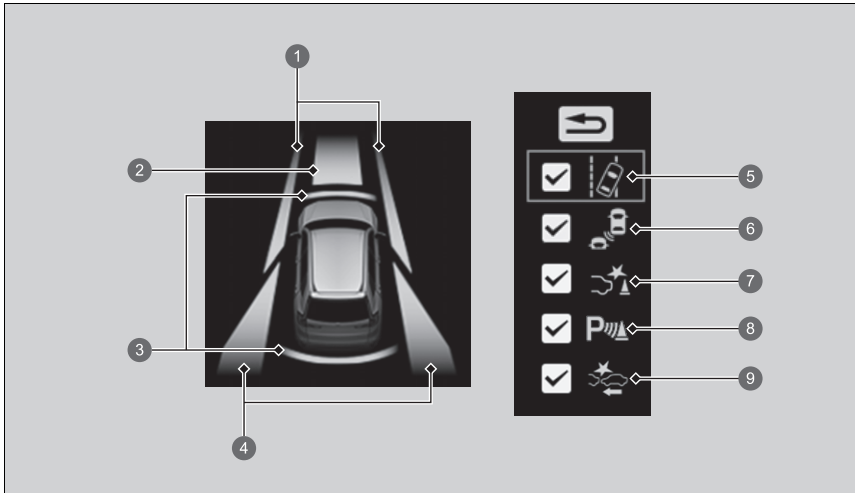

❶ Area Info for Road Departure Mitigation System
❷ Area Info for CMBS
❸ Area Info for Low Speed Braking Control* and Parking Sensor System*/Parking Sensor Warning*
❹ Area Info for Blind Spot Information System*
❺ Road Departure Mitigation System Icon and Status Info
❻ Blind Spot Information System Icon and Status Info*
❼ Low Speed Braking Control Icon and Status Info*
❽ Parking Sensor System*/Parking Sensor Warning* Icon and Status Info
❾ CMBS Icon and Status Info

Safety Support

Models with Low Speed Braking Control

Even when the Low Speed Braking Control icon is green, if the **Rear sensor setting** is turned off, the brake assist will not operate when reversing.

Models with Display Audio without Google built-in

Customized Features P. 366

Models with Display Audio with Google built-in

Customized Features P. 465

Models with Front Parking Sensor System

Even when the Parking Sensor System*/Parking Sensor Warning* icon is green, if the **Rear Sensor Setting** is turned off, the rear parking sensor will not operate when reversing.

Models with Display Audio without Google built-in

Customized Features P. 366

Models with Display Audio with Google built-in

Customized Features P. 465

* Not available on all models

Continued

■ Brightness


Press the right selector wheel when the **Brightness** screen is displayed.

When the power mode is in ON, you can use the right selector wheel to adjust instrument panel brightness.
Brighten: Roll the right selector wheel up.
Dim: Roll the right selector wheel down.

Press the right selector wheel to exit.

■ Vehicle Stability Assist Mode

You can turn the VSA on or off.

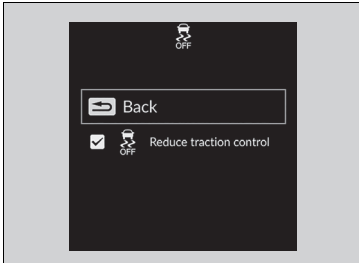

Roll the right selector wheel to scroll to select **Reduce traction control**, then press the right selector wheel to check or uncheck it.

Vehicle Stability Assist (VSA) System
P. 583

Brightness

The brightness of the gauge is automatically adjusted depending on the ambient brightness.


- The brightness decreases when the ambient light is dark.
- The brightness increases when the ambient light is bright.

You can change the setting even when the ambient lighting is bright, but the brightness of the gauge won't change.


■ Instrument Display Settings

■ Arrange content on the right side area

You can choose which contents to display on the right side area.

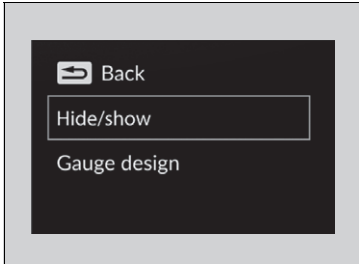

1. Press the right selector wheel when you select the **Instrument display settings** on the driver information interface.
2. Roll the right selector wheel to scroll to select **Hide/show**, then press the right selector wheel.

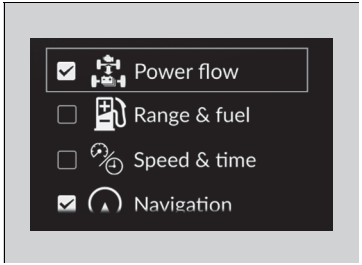

3. Roll the right selector wheel to scroll between contents, then press the right selector wheel to check or uncheck them.

Arrange content on the right side area


Contents that are grey cannot be removed from the right side area.

When you customize settings, shift to P.


Continued

■ Change gauge design

You can change the gauge design.

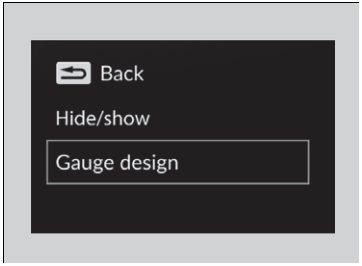

1. Press the right selector wheel when you select the **Instrument display settings** on the driver information interface.
2. Roll the right selector wheel to scroll to select **Gauge design**, then press the right selector wheel.

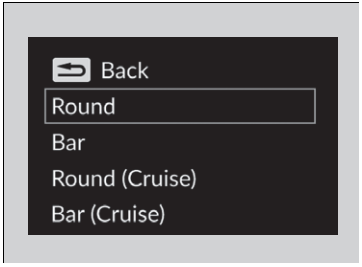

3. Roll the right selector wheel to scroll to select your desired settings, then press the right selector wheel.

Change gauge design

When using the **Round (Cruise)** or **Bar (Cruise)** gauge design, a simplified display is used when ACC with Low Speed Follow is in operation.

■ Information

You can check if there are any active warning messages.


Information

If there are multiple warnings or informations, you can roll the right selector wheel to see other warnings.

Head-Up Display*

Shows the current mode for ACC with Low Speed Follow and LKAS; compass, or turn-by-turn directions; and the vehicle speed. You can choose which item to be displayed using the driver information interface. They are displayed when the power mode is in ON.

The display also shows the following messages.

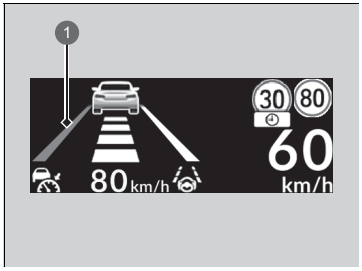


1 Lane Departure Warning

- **Lane Departure Warning:** When your vehicle is too close to the traffic lane lines, the lane departure warning appears.
  - **Road Departure Mitigation System** P. 626
  - **Lane Keeping Assist System (LKAS)** P. 655

Oceanian, Bangladeshi, and Bhutanese models


  - **Traffic Jam Assist** P. 668

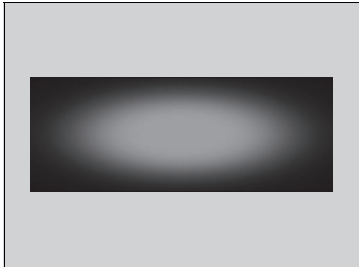

- **Head-up Warning Lights:** Flash when the message appears on the driver information interface.
  - **Collision Mitigation Braking System (CMBS)** P. 606
  - **Adaptive Cruise Control (ACC) with Low Speed Follow** P. 636

* Not available on all models

Continued

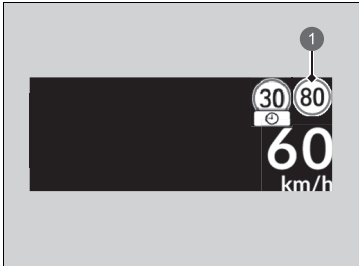

1 Traffic Sign

- **Traffic Sign Recognition System*:**
  Shows certain detected traffic signs while driving.
  If speed limit warning is activated, the sign icon blinks when the maximum speed of the detected traffic sign is exceeded.
  Traffic Sign Recognition System* P. 681

 * Not available on all models

■ Head-Up Display Settings

Shows the display for changing the head-up display settings on the driver information interface.

Roll the right selector wheel to scroll to select **Head-Up Display settings**, then press the right selector wheel.

➡ **Switching the Display** P. 169

■ To change head-up display content

1. Roll the right selector wheel to scroll to select **HUD content**, then press the right selector wheel.
2. Roll the right selector wheel to scroll to select desired item, then press the right selector wheel.
   - **Speedometer**
     ➡ **Speedometer** P. 193
   - **Navigation**
     ➡ **Navigation** P. 194
   - **Driver assist**
     ➡ **Current Mode for ACC with Low Speed Follow, the LKAS, and Traffic Jam Assist*1** P. 194
   - **OFF**


Head-Up Display Settings

HUD content
➡ **To change head-up display content** P. 191

HUD brightness
➡ **Adjusting the head-up display brightness** P. 193

HUD height
➡ **Adjusting the head-up display height** P. 193

Continued

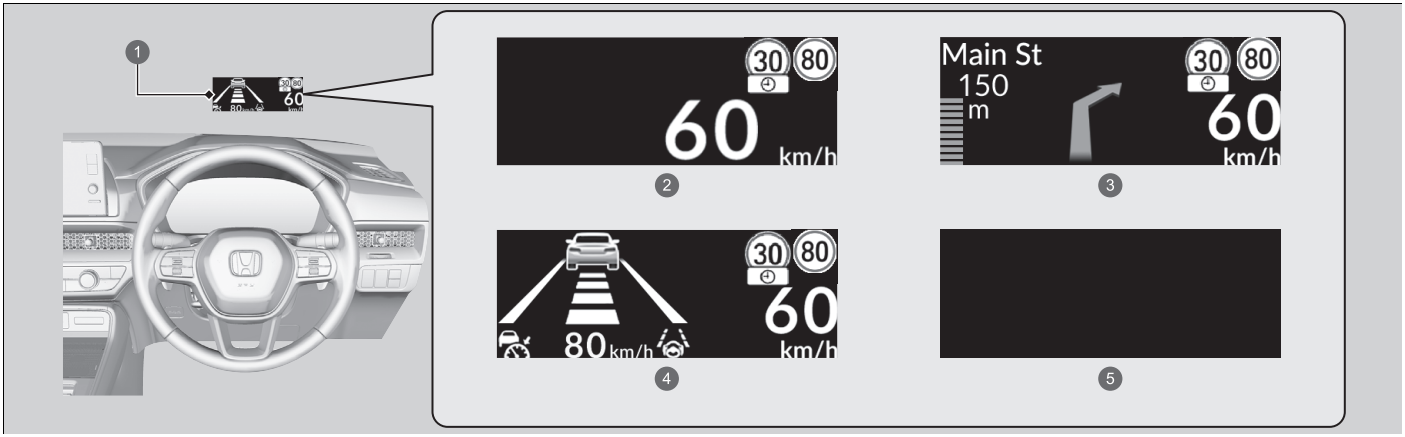

1 Head-Up Display
2 **Speedometer**
3 **Navigation**
4 **Driver assist**
5 **OFF**

■ **Adjusting the head-up display brightness**
Roll the right selector wheel to scroll to select **HUD brightness**, then press the right selector wheel.

Brighten: Roll the right selector wheel up.
Dim: Roll the right selector wheel down.

Press the right selector wheel to exit.

■ **Adjusting the head-up display height**
Roll the right selector wheel to scroll to select **HUD height**, then press the right selector wheel.

Raise the head-up display: Roll the right selector wheel up.
Lower the head-up display: Roll the right selector wheel down.

Press the right selector wheel to exit.

■ Speedometer

Shows your driving speed in km/h.

Adjusting the head-up display height

When you unlock and open the driver's door with a remote transmitter or keyless access system, the head-up display adjusts automatically to one of the two preset positions.

Continued

■ Current Mode for ACC with Low Speed Follow, the LKAS, and Traffic Jam Assist*1

Shows the current mode for ACC with Low Speed Follow, LKAS, and Traffic Jam Assist*1

Adaptive Cruise Control (ACC) with Low Speed Follow P. 636

Lane Keeping Assist System (LKAS) P. 655

Oceanian, Bangladeshi, and Bhutanese models

Traffic Jam Assist P. 668

■ Navigation

■ Compass

Shows the compass screen.

■ Turn-by-Turn Directions

When driving guidance is provided by the navigation system*, Google Maps*, Android Auto or Apple CarPlay, turn-by-turn directions to your destination appear.

Models with Display Audio without Google built-in

Refer to the Navigation System Manual

Android Auto™ P. 359

Apple CarPlay P. 353

Models with Display Audio with Google built-in

Android Auto™ P. 451

Apple CarPlay P. 447

Google built-in P. 458

Navigation

You can select whether the turn-by-turn display comes on during the route guidance.

Models with Display Audio without Google built-in

Customized Features P. 366

Models with Display Audio with Google built-in

Customized Features P. 465


Navigation features may not be available for all apps.

*1: Oceanian, Bangladeshi, and Bhutanese models

* Not available on all models

Controls

This chapter explains how to operate the various controls necessary for driving.

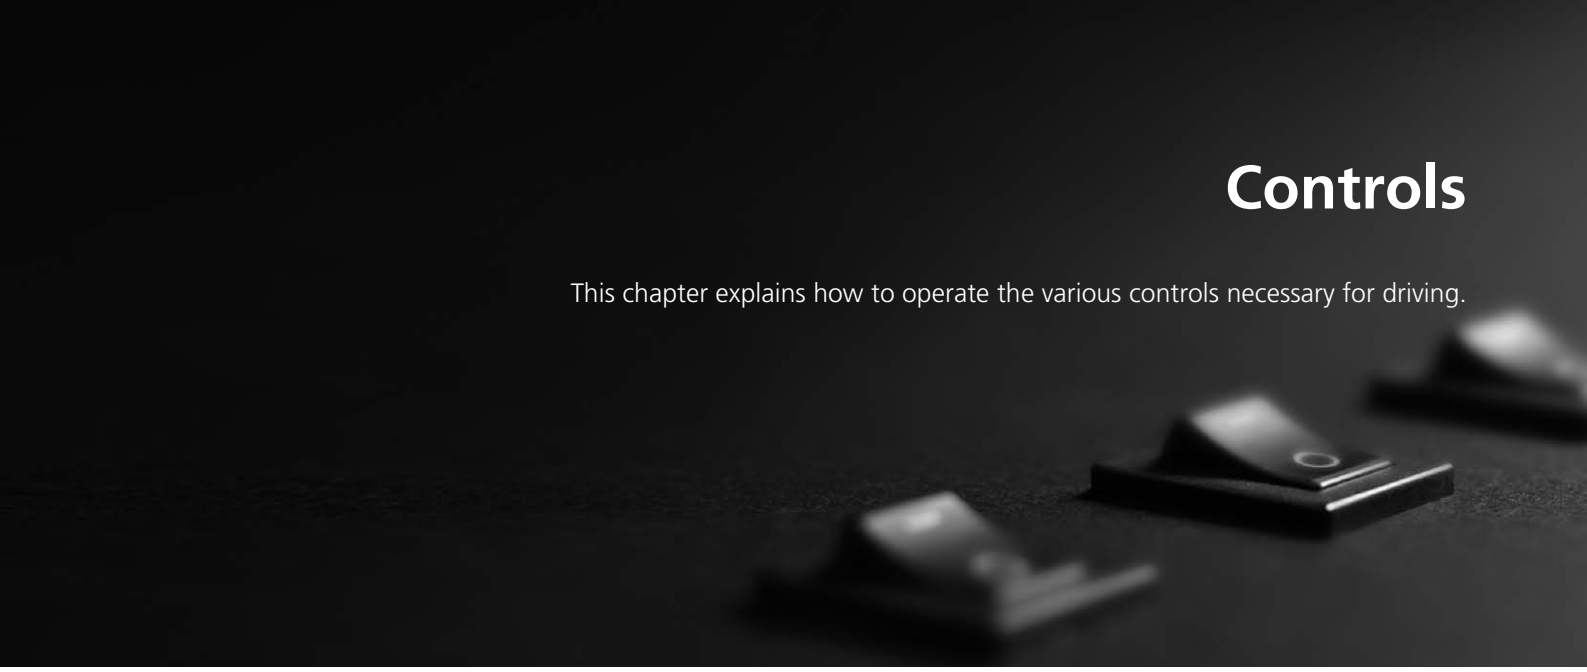

Clock 196
Locking and Unlocking the Doors
Key 197
Low Keyless Remote/Card Key* Signal Strength 200
Locking/Unlocking the Doors from the Outside 201
Locking/Unlocking the Doors from the Inside 210
Childproof Door Locks 212
Auto Door Locking/Unlocking* 213
Tailgate 214
Security System
Immobilizer System 225
Security System Alarm 226
Windows 227
Panoramic Roof* 231
Operating the Switches Around the Steering Wheel
POWER Button 235
Turn Signals 238
Lights 239
Active Cornering Lights* 244
Headlight Adjuster* 246
Auto High-Beam* 247
Adaptive Driving Beam* 250
Wipers and Washers 253
Rear Demister Button 256
Driving Position Memory System* 257
Adjusting the Steering Wheel 259
Mirrors
Interior Rearview Mirror 260
Power Door Mirrors 262
Seats 264
Interior Convenience Items 277
Climate Control System 298

* Not available on all models

Adjusting the Clock

You can adjust the clock and customize the clock display.

Models with Display Audio without Google built-in


Clock Setup P. 322

Models with Display Audio with Google built-in

Clock Setup P. 422

Key

This vehicle comes with the following keys:

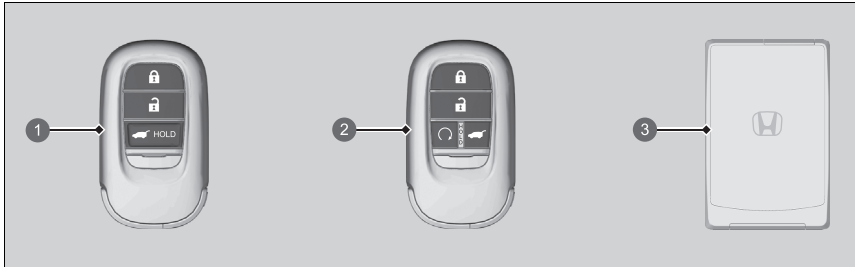

❶ Keyless Remote*1
❷ Keyless Remote*2
❸ Card Key*

Use the keys to start and stop the power system, lock and unlock all the doors, tailgate, and fuel fill door.

*1: Models without remote engine starter
*2: Models with remote engine starter

* Not available on all models

Continued

Key

All the keys have an immobilizer system. The immobilizer system helps to protect against vehicle theft.

Immobilizer System P. 225

Follow the advice below to prevent damage to the keys:

- Do not leave the keys in direct sunlight, or in locations with high temperature or high humidity.
- Do not drop the keys or set heavy objects on them.
- Keep the keys away from liquids, dust, and sand.
- Do not take the keys apart except to replace the battery.

If the circuits in the keys are damaged, the power system may not activate, and the remote transmitter may not work.
If the keys do not work properly, have them inspected by a dealer.


Models with remote engine starter

You can remotely turn the power system on using the remote engine start.

Remote Engine Start* P. 538


■ Built-in Key

The built-in key can be used to unlock the doors when the keyless remote or card key* battery becomes weak and the power door unlock operation is disabled.

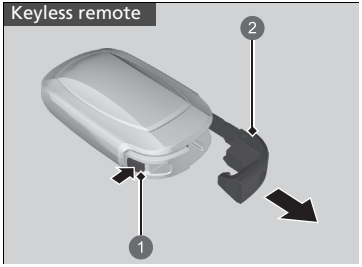

To remove the built-in key, push the release button and then pull out the key. To reinstall the built-in key, push the built-in key into the keyless remote until it clicks.

1 Release Button
2 Built-in Key

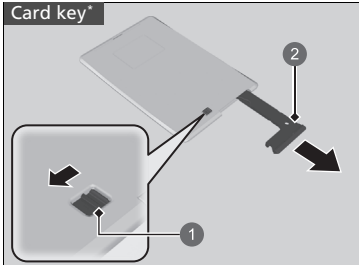


To remove the built-in key, slide the release knob and then pull out the key. To reinstall the built-in key, push the built-in key into the card key until it clicks.

1 Release Knob
2 Built-in Key

 * Not available on all models

■ Key Number Tag

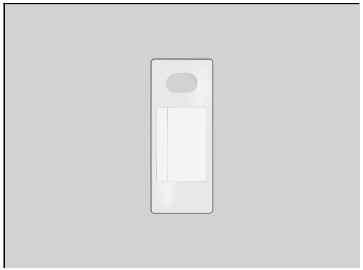

Contains a number that you will need if you purchase a replacement key.

Key Number Tag

Keep the key number tag separate from the key in a safe place outside of your vehicle.
If you wish to purchase an additional key, contact a dealer.

If you lose your key and you cannot activate the power system, contact a dealer.

Low Keyless Remote/Card Key* Signal Strength

The vehicle transmits radio waves to locate the keyless remote or card key* to activate the power system, and lock and unlock all the doors, tailgate, and the fuel fill door.

In the following cases, activating the power system may not work, locking/unlocking the doors/tailgate/fuel fill door may be inhibited, or operation may be unstable:

- Strong radio waves are being transmitted by nearby equipment.
- You are carrying the keyless remote or card key* together with telecommunications equipment, laptop computers, mobile phones, or wireless devices.
- A metallic object is touching or covering the keyless remote or card key*.
- The card key* is in a cover or case that blocks radio waves.

Low Keyless Remote/Card Key* Signal Strength

Communication between the keyless remote or card key* and the vehicle consumes the keyless remote or card key* battery.
Battery life is about 2*1 or 1.5*2 years, but this varies depending on regularity of use.
The battery is consumed whenever the keyless remote or card key* is receiving strong radio waves. Avoid placing it near electrical appliances such as televisions and personal computers.

Keyless remote


It is possible to reduce battery consumption by turning off radio wave reception. When you hold down the lock and unlock buttons at the same time for approximately three seconds, the LED will blink twice and radio wave reception will turn off.
If you press any button on the keyless remote once, it will begin receiving radio waves again.

*1: Keyless remote
*2: Card key

* Not available on all models

Locking/Unlocking the Doors from the Outside

■ Using the Keyless Access System

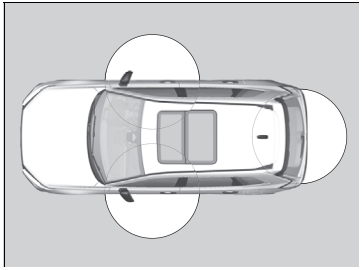

When you carry the keyless remote or card key*, you can lock/unlock the doors, tailgate, and fuel fill door.
You can lock/unlock the doors, tailgate, and fuel fill door within a radius of about 80 cm from the outside door handle or tailgate outer handle.

Locking/Unlocking the Doors from the Outside

If the interior light switch is in the door activated position, the interior light comes on when you unlock the doors and tailgate.
No doors opened: The light fades out after 30 seconds.
Doors and tailgate relocked: The light goes off immediately.

➡ **Interior Lights** P. 277

Using the Keyless Access System


If you do not open a door or the tailgate within 30 seconds of unlocking the vehicle with the keyless access system, the doors and tailgate will automatically relock.

You can lock or unlock doors using the keyless access system only when the power mode is in VEHICLE OFF.


* Not available on all models

Continued

■ Locking the doors and tailgate

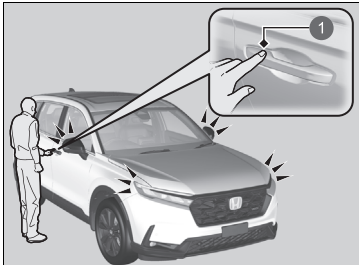

❶ Door Lock Sensor

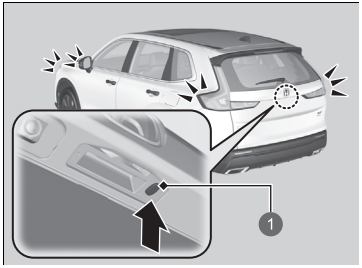

❶ Lock Button

Touch the door lock sensor on the front door or press the lock button on the tailgate.

▶ All the doors and tailgate lock and the security system sets.


▶ Some exterior lights flash once and the beeper sounds once.

Using the Keyless Access System

- Do not leave the keyless remote or card key* in the vehicle when you get out. Carry it with you.
- Even if you are not carrying the keyless remote or card key*, you can lock/unlock the doors and the tailgate while someone else with the keyless remote or card key* is within range.
- The door may be locked or unlocked if the door handle is covered with water in heavy rain or in a car wash if the keyless remote or card key* is within range.
- If you grip a front door handle or touch a door lock sensor wearing gloves, the door sensor may be slow to respond or may not respond by locking or unlocking the doors.
- After locking the door, you have up to 2 seconds during which you can pull the door handle to confirm whether the door is locked. If you need to unlock the door immediately after locking it, wait at least 2 seconds before gripping the handle, otherwise the door will not unlock.
- The door may not open if you pull it immediately after gripping the door handle. Grip the handle again and confirm that the door is unlocked before pulling the handle.
- Even within the 80 cm radius, you may not be able to lock/unlock the doors and the tailgate with the keyless remote or card key* if it is above or below the outside handle.
- The keyless remote or card key* may not operate if it is too close to the door, door glass, and tailgate.

 * Not available on all models

■ Unlocking the doors and tailgate

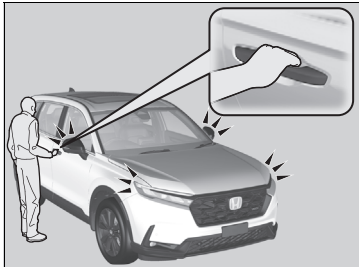

Right-hand Drive Type for African

Grab the driver's door handle:

- ▶ The driver's door and fuel fill door unlock.
- ▶ Some exterior lights flash twice and the beeper sounds twice.


Grab the front passenger's door handle:

- ▶ All doors, tailgate, and fuel fill door unlock.
- ▶ Some exterior lights flash twice and the beeper sounds twice.

Except Right-hand Drive Type for African

Grab the front door handle:

- ▶ All doors, tailgate, and fuel fill door unlock.
- ▶ Some exterior lights flash twice and the beeper sounds twice.

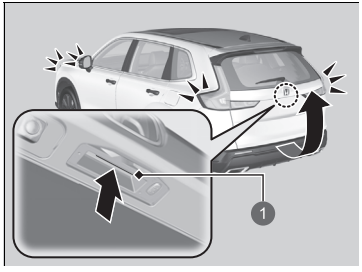

❶ Outer Handle

Press the outer handle:

Right-hand Drive Type for African

- ▶ The tailgate unlocks.

Except Right-hand Drive Type for African

- ▶ The tailgate and all doors unlock.

All models

- ▶ Some exterior lights flash twice and the beeper sounds twice.

➡ **Opening/Closing the Tailgate** P. 215

Using the Keyless Access System

The light flash, beep, and door unlock mode* settings can be customized.

Models with Display Audio without Google built-in

➡ **How to Customize the Vehicle Settings** P. 375

Models with Display Audio with Google built-in


➡ **How to Customize the Vehicle Settings** P. 477

You can also unlock and open with the power tailgate.


➡ **Using the Tailgate Outer Handle** P. 221

* Not available on all models

Continued

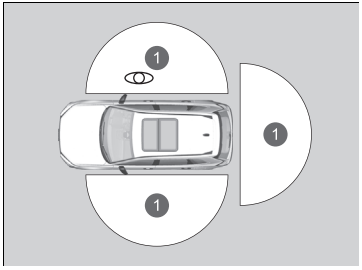

❶ The activation range of the auto lock function is about 1.5 m.

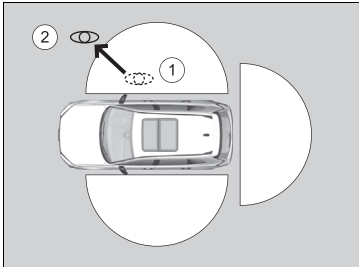

■ Locking the doors and tailgate (Walk away auto lock)

When you walk away from the vehicle with all doors and tailgate closed while carrying the keyless remote or card key*, the doors, tailgate, and fuel fill door will automatically lock.

The auto lock function activates when all doors and tailgate are closed, or all doors are closed and tailgate begins power close operation, and the keyless remote or card key* is within about 1.5 m radius of the outside door handle or tailgate outer handle.

Exit the vehicle while carrying keyless remote or card key* and close the door(s) and tailgate.

1. While within about 1.5 m radius of the vehicle.
▶ The beeper sounds; the auto lock function will be activated.

2. Carry the keyless remote or card key* beyond about 1.5 m from the vehicle and remain outside this range for 2 or more seconds.
▶ Some exterior lights flash; the beeper sounds; all doors, tailgate, and fuel fill door will then lock.

Locking the doors and tailgate (Walk away auto lock)

The auto lock function is set to OFF as the factory default setting. The auto lock function can be set to ON using the audio/information screen.

If you set the auto lock function to ON using the audio/information screen, only the remote transmitter that was used to unlock the driver's door prior to the setting change can activate auto lock.

Models with Display Audio without Google built-in

How to Customize the Vehicle Settings
P. 375

Models with Display Audio with Google built-in

How to Customize the Vehicle Settings
P. 477

After the auto lock function has been activated, when you stay within the locking/unlocking operation range, the indicator on the keyless remote will continue to flash until the doors and tailgate are locked.

When you stay beside the vehicle within the operation range, the doors and tailgate will automatically lock approximately 30 seconds after the auto lock function activating beeper sounds.

When you open a door or tailgate after the auto lock function activating beeper sounds, the auto lock function will be cancelled.

 * Not available on all models

To temporarily deactivate the function:

1. Set the power mode to OFF.
2. Open the driver's door.
3. Using the master door lock switch, operate the lock as follows:
Lock → Unlock → Lock → Unlock.
▶ The beeper sounds, and the function is deactivated.

To restore the function:

- Set the power mode to ON.
- Lock the vehicle without using the auto lock function.
- With the keyless remote or card key* on you, move out of the auto lock function operation range.
- Open any door.

Locking the doors and tailgate (Walk away auto lock)

Under the following circumstances, the auto-lock function will not activate:

- The keyless remote or card key* is inside the vehicle.

▶The beeper will not sound.

- The keyless remote or card key* is taken out of its operational range before all the doors and tailgate are closed.

▶The beeper will sound.

The auto lock function does not operate when any of the following conditions are met.

- The keyless remote or card key* is inside the vehicle.
- A door, tailgate, or the bonnet is not closed.
- The power mode is set to any mode other than OFF.
- The keyless remote or card key* is not located within a radius of about 1.5 m from the vehicle when you get out of the vehicle and close the doors and tailgate.

Auto lock function operation stop beeper

After the auto lock function has been activated, the auto lock operation stop beeper sounds for approximately two seconds in the following cases.


- The keyless remote or card key* is put inside the vehicle through a window.
- You are located too close to the vehicle.
- The keyless remote or card key* is put inside the tailgate.

If the warning beeper sounds, check that you are carrying the keyless remote or card key*. Then, open/close a door and confirm the auto lock activation beeper sounds once.


* Not available on all models

Continued

■ Lock Presetting

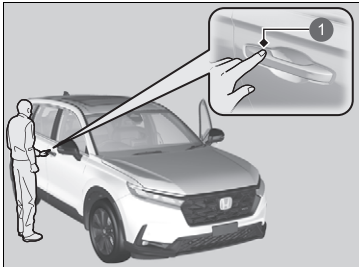

❶ Door Lock Sensor

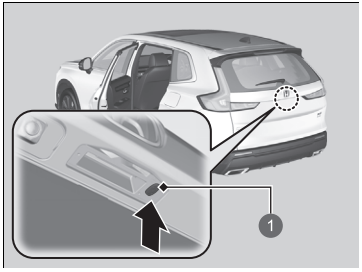

❶ Lock Button

The vehicle will automatically lock after you lock the doors in advance then close the doors and tailgate.
Activate lock presetting after closing the driver's door.

1. Touch the door lock sensor on the driver's door, press the lock button on the tailgate or press the lock button on the keyless remote.
▶ Alert sounds and lock presetting is activated.

2. Close all doors and the tailgate.
▶ Some exterior lights flash and a beeper sounds when vehicle locks.

Make sure the doors and tailgate are locked before moving away from the vehicle.

Lock Presetting

⚠WARNING

Opening or closing the power tailgate on someone's hands or fingers can cause serious injury. Make sure all hands and fingers, especially children's, are clear of the power tailgate.

Lock presetting will be reset if a door or the tailgate is opened before the vehicle has locked completely.

Before locking a door, make sure that the key is not inside the vehicle.

You can turn this function on and off.


Models with Display Audio without Google built-in

How to Customize the Vehicle Settings
P. 375

Models with Display Audio with Google built-in

How to Customize the Vehicle Settings
P. 477

■ Using the Remote Transmitter

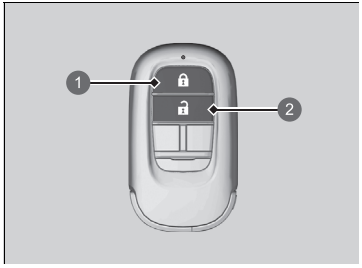

❶ Lock Button
❷ Unlock Button

■ Locking the doors and tailgate

Press the lock button.

Once:

▶ Some exterior lights flash, all the doors, tailgate, and fuel fill door lock, and the security system sets.

Twice (within five seconds after the first push):

▶ Some exterior lights flash, the beeper sounds, and verifies the security system is set.

■ Unlocking the doors and tailgate

Right-hand Drive Type for African

Press the unlock button.

Once:

▶ Some exterior lights flash twice, and the driver's door and fuel fill door unlock.

Twice:

▶ The remaining doors and tailgate unlock.

Except Right-hand Drive Type for African

Press the unlock button.

▶ Some exterior lights flash twice, and all the doors, tailgate, and fuel fill door unlock.

Using the Remote Transmitter

If you do not open a door or the tailgate within 30 seconds of unlocking the vehicle with the remote transmitter, the doors and tailgate will automatically relock.

You can lock or unlock doors using the remote transmitter only when the power mode is in VEHICLE OFF.

The remote transmitter uses low-power signals, so the operating range may vary depending on the surroundings.

If the distance at which the remote transmitter works varies, the battery is probably low.
If the LED does not come on when you press a button, the battery is dead.

➡ **Replacing the Remote Battery** P. 772

Right-hand Drive Type for African

You can customize the door unlock mode setting.

Models with Display Audio without Google built-in


➡ **How to Customize the Vehicle Settings** P. 375

Continued


■ Unlocking the Doors Using a Key

If the unlock function of the keyless remote or card key* does not work, use the built-in key instead. The keyhole is behind the door handle.

Keyless remote

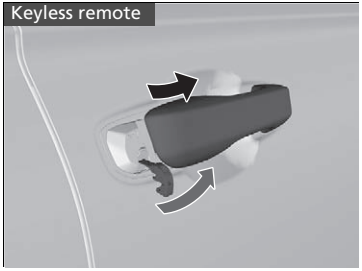

Card key*

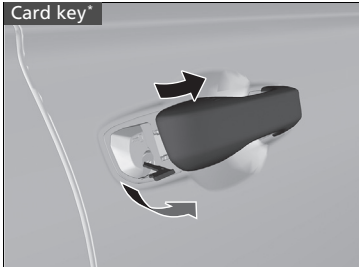

Pull and hold the outer handle.
Insert the built-in key into the key cylinder from below the handle and then turn it.

Unlocking the Doors Using a Key

Right-hand Drive Type for African

When unlocking, the driver's door unlocks first. Turning the key a second time within a few seconds does not unlock the remaining doors and the tailgate.

Except Right-hand Drive Type for African

When you unlock the driver's door with the key, all the other doors unlock at the same time.

Except Jordanian, Lebanese, and Tunisian models

If you unlock a door with the built-in key while the security system is activated, the alarm will sound.

Right-hand Drive Type for African

You can customize the door unlock mode setting.

Models with Display Audio without Google built-in

➡ **How to Customize the Vehicle Settings** P. 375


If the lock function of the keyless remote or card key* does not work, refer to the following.

➡ **Locking a Door Without Using a Key** P. 209

* Not available on all models

■ Locking a Door Without Using a Key

If you do not have the key on you, or if for some reason you cannot lock a door using the key, you can lock the door without it.

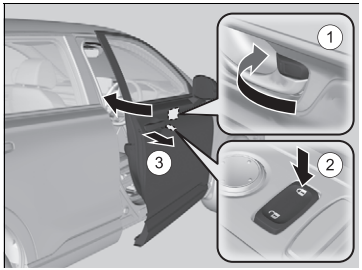

■ Locking the driver's door

Push the lock tab forward ① or push the master door lock switch in the lock direction ②, then pull and hold the outside door handle ③. Close the door, then release the handle.

■ Locking the passenger's doors

Push the lock tab forward and close the door.

■ Lockout prevention system

The doors and tailgate cannot be locked when the keyless remote or card key* is inside the vehicle.

Locking a Door Without Using a Key


When you lock the driver's door, all the other doors and tailgate lock at the same time.

Before locking a door, make sure that the key is not inside the vehicle.

* Not available on all models

Locking/Unlocking the Doors from the Inside

■ Using the Lock Tab

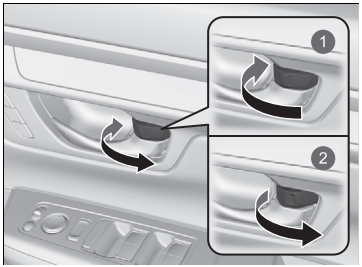

❶ To Lock
❷ To Unlock

■ Locking a door

Push the lock tab forward.

■ Unlocking a door

Pull the lock tab rearward.

Using the Lock Tab

Right-hand Drive Type for African

When you lock the door using the lock tab on the driver's door, all the other doors, the tailgate, and fuel fill door lock at the same time. When you unlock the door using the lock tab on the driver's door, only the driver's door and fuel fill door will unlock.

Except Right-hand Drive Type for African

When you lock/unlock the door using the lock tab on the driver's door, all the other doors, tailgate, and fuel fill door lock/unlock at the same time.

■ Unlocking Using the Driver's Door Inner Handle



Pull the driver's door inner handle.
▶ The door unlocks and opens in one motion.

Except Right-hand Drive Type for African


Unlocking and opening the driver's door from the inner handle unlocks all the other doors.

Unlocking Using the Driver's Door Inner Handle

The driver's door inner handle is designed to allow the driver to open the door in one motion. However, this feature requires that the driver never pull the door inner handle while the vehicle is in motion.

Children should always ride in a rear seat where childproof door locks are provided.
➡ **Childproof Door Locks** P. 212

■ Using the Master Door Lock Switch

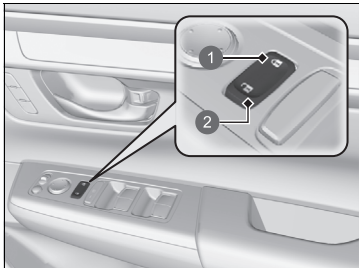

Press the master door lock switch in as shown to lock or unlock all the doors and the tailgate.

❶ To Lock
❷ To Unlock


Using the Master Door Lock Switch

When you lock/unlock either of the front doors using the master door lock switch, all the other doors, tailgate, and fuel fill door lock/unlock at the same time.

Childproof Door Locks

The childproof door locks prevent the rear doors from being opened from the inside regardless of the position of the lock tab.

■ Setting the Childproof Door Locks

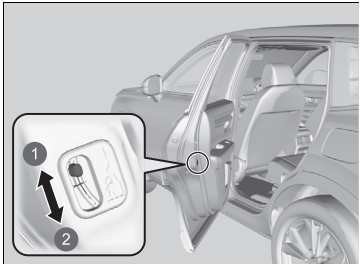

Slide the lever in the rear door to the lock position, and close the door.

■ When opening the door

Open the door using the outside door handle.

1 Unlock
2 Lock

Childproof Door Locks

To open the door from the inside when the childproof door lock is on, put the lock tab in the unlock position, lower the rear window, put your hand out of the window, and pull the outside door handle.

Auto Door Locking/Unlocking*

Your vehicle locks all doors or unlocks all doors/the driver's door automatically when a certain condition is met.

■ Auto Door Locking

■ Drive lock mode

All doors lock when the vehicle's speed reaches about 15 km/h.

■ Auto Door Unlocking

■ Park unlock mode

Right-hand Drive Type for African

The driver's door unlocks when the transmission is put into P with the brake pedal depressed.

The settings can be changed to unlock all doors.

Except Right-hand Drive Type for African

All doors unlock when the transmission is put into P with the brake pedal depressed.

Auto Door Locking/Unlocking*

You can turn off or change to another auto door locking/unlocking setting using the audio/information screen.

Models with Display Audio without Google built-in

How to Customize the Vehicle Settings
P. 375

Models with Display Audio with Google built-in

How to Customize the Vehicle Settings
P. 477

* Not available on all models

Precautions for Opening/Closing the Tailgate

Always make sure individuals and objects are clear of the tailgate before opening or closing it.

Keep the tailgate closed while driving to:

- ▶ Avoid possible damage.
- ▶ Prevent exhaust gas from leaking into the vehicle.

➔ **Carbon Monoxide Gas** P. 119

Precautions for Opening/Closing the Tailgate

⚠WARNING

Anyone caught in the path of a tailgate that is being opened or closed can be seriously injured.

Make sure that all people are clear of the tailgate before opening or closing it.


Be careful not to hit your head on the tailgate or to put your hands between the tailgate and the luggage area when closing the tailgate.

When you are storing or picking up luggage from the luggage area or by using a forward and back kicking motion under the centre of the rear bumper for hands free access*, while the engine is idling, do not stand in front of the exhaust pipe. You may get burned.

Do not allow any passenger in the luggage space. They may get hurt during hard braking, a sudden acceleration, or a crash.

 * Not available on all models


Opening/Closing the Tailgate

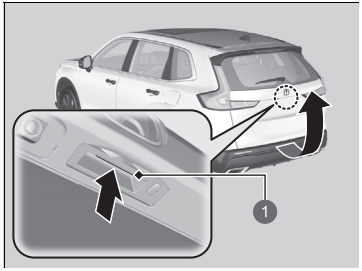

❶ Outer Handle

When all the doors are unlocked, the tailgate is unlocked.

Press the outer handle of the tailgate for more than one second, and lift open the tailgate. If you are carrying the keyless remote or card key*, you do not have to unlock the tailgate before opening it.

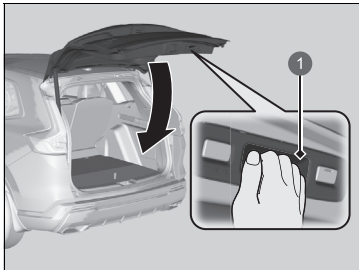

❶ Inner Handle

To close the tailgate, grab the inner handle, pull the tailgate down, and push it closed from outside.


Right-hand Drive Type for African

If you close the tailgate when the driver's door is locked, the tailgate locks automatically.

▶ Some exterior lights flash.

Precautions for Opening/Closing the Tailgate

Make sure luggage or other items do not touch the tailgate support struts.

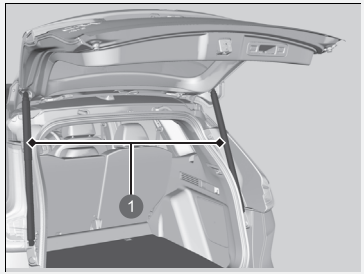

❶ Tailgate Support Struts

Opening/Closing the Tailgate

- Do not leave the keyless remote or card key* in the vehicle when you get out. Carry it with you.
- Even if you are not carrying the keyless remote or card key*, you can unlock the tailgate while someone else with the keyless remote or card key* is within range.

Right-hand Drive Type for African

- Do not leave the keyless remote inside the luggage area and close the tailgate. The beeper sounds and the tailgate cannot be closed.

* Not available on all models

Opening/Closing the Power Tailgate

The power tailgate can be operated by pressing the power tailgate button on the remote transmitter, pressing the power tailgate button on the driver side control panel, pressing the outer handle or inner button on the tailgate, or by raising and lowering your foot under the centre of the rear bumper for hands free access*.

The power tailgate can be opened/closed when the transmission is in P.

Opening/Closing the Power Tailgate

⚠WARNING

Opening or closing a power tailgate while any part of a passenger is in the tailgate's operating path can cause serious injury.

Make sure all passengers or objects are clear of the tailgate operating range before opening or closing the tailgate.

WARNING: Always take the ignition key with you whenever you leave the vehicle alone or with other occupants.


NOTICE


Do not push or pull on the power tailgate when it is being automatically opened or closed.
Forcibly opening or closing the power tailgate while in operation can deform the tailgate frame.

When operating the power tailgate, make sure there is enough space around your vehicle. People near the tailgate may be seriously hurt if the tailgate hits or closes on their heads. Be especially cautious if children are around.

* Not available on all models

■ Using the Hands Free Access*

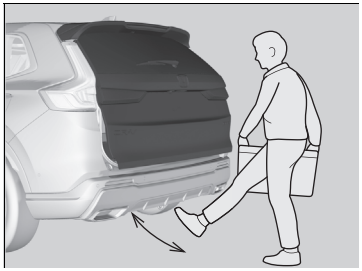

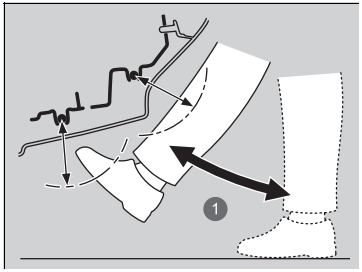

❶ About 1 second

Use a forward and back kicking motion for about 1 second under the centre of the rear bumper to open or close the power tailgate while carrying the keyless remote or card key*.

▶ Some exterior lights will flash and a beeper will sound, then the tailgate begins to move.

Using the Hands Free Access*

During rain or in other instances when the vehicle becomes wet, the sensor may not properly detect your foot motion.

When performing work on or around the rear section of the vehicle, you may inadvertently open or close the tailgate.
To prevent this from happening, select Customized Features on the audio/information screen and then select OFF for the feature.

Models with Display Audio without Google built-in

How to Customize the Vehicle Settings P. 375

Models with Display Audio with Google built-in

How to Customize the Vehicle Settings P. 477

If you hold your foot under the bumper for too long or sweep your foot from side to side, the power tailgate does not open or close.


This function will not operate if you don't have the keyless remote or card key* on you. Please make sure you have the keyless remote or card key* on you.

* Not available on all models

Continued


■ Power Tailgate Walk Away Close

When you walk away from the vehicle while carrying the keyless remote or card key*, the power tailgate will automatically close.

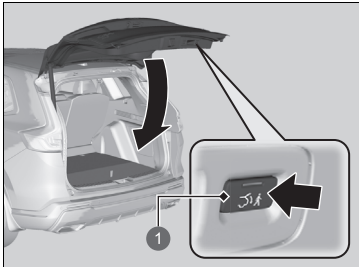

1. Walk Away Close Button

1. Carry the keyless remote or card key*, and press the walk away close button.
▶ The indicator on the walk away close button will turn green when the walk away close is activated.

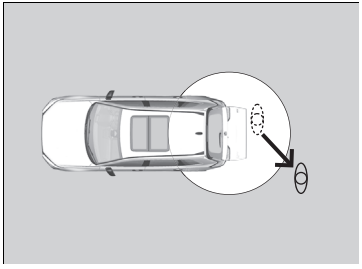

Walk at least 1.0 m away

2. Walk at least 1.0 m away from the vehicle within 30 seconds of pressing the walk away close button.
▶ Some exterior lights will flash and a beeper will sound, then the power tailgate begins to close.


Power Tailgate Walk Away Close

When auto lock function is set to ON, the vehicle will automatically lock when all doors and the tailgate have closed.

Locking the doors and tailgate (Walk away auto lock) P. 204

 * Not available on all models

■ Using the Remote Transmitter

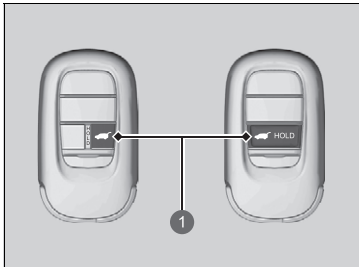

1 Power Tailgate Button

Press the power tailgate button for more than one second to operate when the power mode is in VEHICLE OFF.

▶ Some exterior lights flash and the beeper sounds.

If you press the button again while the power tailgate is moving, it will stop.
Press the button for more than one second, and the power tailgate will reverse direction.

■ Customizing when to open the tailgate

Anytime: The power tailgate unlocks and opens at the same time. This is the default setting.
When Unlocked/When unlocked: The tailgate opens when all doors are unlocked.

Models with Display Audio without Google built-in

How to Customize the Vehicle Settings P. 375

Models with Display Audio with Google built-in

How to Customize the Vehicle Settings P. 477

Opening/Closing the Power Tailgate

The power tailgate may not open or close under the following conditions:
- You activate the power system while the tailgate is automatically opening or closing.
- The vehicle is parked on a steep hill.
- The vehicle is swayed in a strong wind.
- The tailgate or the roof is covered with snow or ice.

Right-hand Drive Type for African

If you close the power tailgate when all the doors are locked, the power tailgate locks automatically and some exterior lights will flash.

If you replace the 12-volt battery or the power tailgate fuse while the tailgate is open, the power tailgate may be disabled. The power tailgate resumes once you manually close the tailgate.


Installing aftermarket components other than Honda Genuine Accessories on the power tailgate may prevent it from fully opening or closing.

Make sure the power tailgate is fully open before you get your luggage in and out.

The beeper sounds when you start driving while the power tailgate is still open, or closing.

Continued

■ Using the Power Tailgate Button

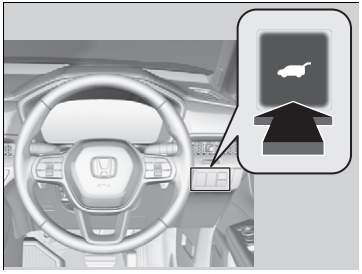

To open or close the power tailgate, press the power tailgate button for about one second.

▶ Some exterior lights will flash and the beeper sounds.

If you press the button again while the power tailgate is moving, it will stop.
Press the button for about one second, and the power tailgate will reverse direction.

Opening/Closing the Power Tailgate


Do not touch the sensors located on both sides of the tailgate. The power tailgate does not close if you touch either sensor when you are trying to close the tailgate.

Be careful not to scratch the sensors with a sharp object. If scratched, they can be damaged, and the power tailgate closing feature malfunctions.

If the power tailgate meets resistance while opening or closing, the auto reverse feature reverses the direction. The beeper sounds three times.

The auto reverse function stops sensing when the tailgate is almost closed to make sure that it fully closes.

Using the Tailgate Outer Handle

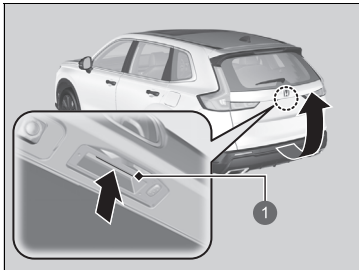

1 Outer Handle

If you press the outer handle of the tailgate for no longer than one second, the tailgate opens automatically.

▶ The beeper sounds.

▶ If you want to open the tailgate manually, press the outer handle for more than one second.

➡ **Opening/Closing the Tailgate** P. 215

If you are carrying the keyless remote or card key* you do not have to unlock the tailgate before opening it.

If you press the outer handle again while the power tailgate is moving, it will stop.
Press the outer handle, and the power tailgate will reverse direction.

Using the Tailgate Outer Handle

- Do not leave the keyless remote or card key* in the vehicle when you get out. Carry it with you.
- Even if you are not carrying the keyless remote or card key*, you can unlock the tailgate while someone else with the keyless remote or card key* is within range.

Right-hand Drive Type for African

- Do not leave the keyless remote inside the luggage area and close the tailgate. The beeper sounds and the tailgate cannot be closed.

You can change the power tailgate operation setting on and off.

Models with Display Audio without Google built-in

➡ **How to Customize the Vehicle Settings** P. 375


Models with Display Audio with Google built-in

➡ **How to Customize the Vehicle Settings** P. 477

* Not available on all models

Continued

■ Using the Tailgate Inner Button

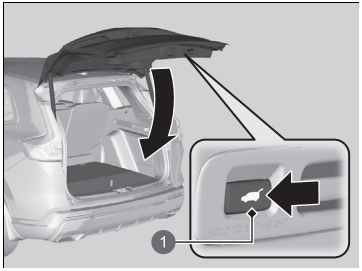


❶ Tailgate Inner Button

Press the tailgate inner button on the tailgate to close the power tailgate.

▶ The beeper sounds.

If you press the tailgate inner button again while the power tailgate is moving, it will stop. Press and release the tailgate inner button again, and the power tailgate will reverse direction.


Programming Tailgate Position

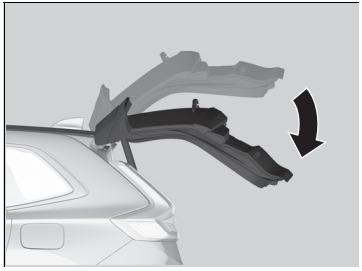

The extent to which the power tailgate automatically opens can be programmed.

To program:

1. Open the tailgate to the desired position.

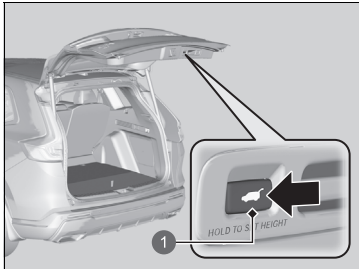

2. Press and hold the tailgate inner button. You will hear one long beep, followed by two short beeps.

❶ Tailgate Inner Button

Programming Tailgate Position

If the tailgate is only slightly opened, the position cannot be programmed, even if you push the tailgate inner button.

If you want to reprogram the power tailgate to open all the way, manually raise the tailgate to its upper most position and follow directions for step 2.

Continued

■ Auto-Closer

If you manually close the power tailgate, it latches automatically.

Auto-Closer

The auto-closer feature does not activate if you press the tailgate outer handle while the power tailgate is closing.

NOTICE

Do not put any force on the tailgate while the power tailgate is latching.

Keep your hands away from the tailgate when you manually close the tailgate and let it latch automatically. It is dangerous to put your hands around the tailgate as it starts to latch itself.

■ Power Tailgate Fall Detection

Automatically lowers the power tailgate when there is a possibility that the fully opened power tailgate can fall down by its own weight (for example, with snow on the tailgate). The beeper sounds while the power tailgate lowers.

Power Tailgate Fall Detection

If you try to manually close the power tailgate immediately after it fully opens, the power tailgate fall detection may activate.

Once the power tailgate fall detection activates, wait until the power tailgate fully closes. Keep away from the power tailgate when it is in motion.

If the power tailgate fall detection constantly activates, consult at a dealer.

Immobilizer System

This system prevents a key that has not been pre-registered from starting the power system.

Pay attention to the following when pressing the **POWER** button:

- Do not allow objects that emit strong radio waves near the **POWER** button.
- Make sure the key is not covered by or touching a metal object.
- Do not bring a key from another vehicle's immobilizer system near the **POWER** button.
- Do not put the key near magnetic items. Electronic devices, such as televisions and audio systems, emit strong magnetic fields. Note that even a key chain can become magnetic.

Immobilizer System

NOTICE

Leaving the key in the vehicle can result in theft or accidental movement of the vehicle.
Always take the key with you whenever you leave the vehicle unattended.

Do not alter the system or add other devices to it. Doing so may damage the system and make your vehicle inoperable.

If the system repeatedly does not recognise the coding of your key, contact a dealer. If you have lost your key and cannot start your vehicle, contact a dealer.

Security System Alarm

The security system alarm activates when the tailgate, bonnet, or doors are forcibly opened. The alarm does not activate if the tailgate or doors are opened with the key*, remote transmitter, or keyless access system.

■ When the security system alarm activates

The horn sounds intermittently, and some exterior lights flash.

■ To deactivate the security system alarm

Unlock the vehicle using the key*, remote transmitter, or keyless access system, or turn the power mode to ON. The system, along with the horn and flashing lights, is deactivated.

■ Setting the security system alarm

The security system alarm automatically sets when the following conditions have been met:

- The power mode is set to VEHICLE OFF.
- The bonnet is closed.
- All doors and the tailgate are locked from outside with the remote transmitter or keyless access system.

■ When the security system alarm sets

The security system alarm indicator in the instrument panel blinks and the blinking interval changes after about 15 seconds.

■ To cancel the security system alarm

The security system alarm is cancelled when the vehicle is unlocked using the key*, remote transmitter, or keyless access system, or when the power mode is set to ON. The security system alarm indicator goes off at the same time.

Security System Alarm

Do not alter the system or add other devices to it. Doing so may damage the system and make your vehicle inoperable.

The security system alarm will continue for approximately 5 minutes before the security system deactivates.
The system will go through ten 30-second cycles, during which the horn will sound and an emergency indicator will flash.
Depending on circumstances, the security system may continue operating for more than 5 minutes.

Do not set the security system alarm when someone is in the vehicle or a window is open. The system can accidentally activate when:

- Unlocking the door with the lock tab.
- Opening the bonnet with the bonnet release handle.

If the 12-volt battery goes dead after you have set the security system alarm, the security alarm may sound once the 12-volt battery is recharged or replaced.
If this occurs, deactivate the security system alarm by unlocking a door using the key*, remote transmitter, or keyless access system.

Except Jordanian, Lebanese, and Tunisian models

If you unlock a door with the built-in key while the security system is activated, the alarm will sound.

* Not available on all models

Opening/Closing the Power Windows

The power windows can be opened and closed when the power mode is in ON, using the switches on the doors.

The driver's side switches can be used to open and close all the windows. The power window lock button on the driver's side must be switched off to open and close the windows from anywhere other than the driver's seat.

When the power window lock button is pushed in, the indicator comes on and you can only operate the driver's window. Turn the power window lock button on if a child is in the vehicle.

Opening/Closing the Power Windows

⚠WARNING

Closing a power window on someone's hands or fingers can cause serious injury.

Make sure your passengers are away from the windows before closing them.

WARNING: Always take the ignition key with you whenever you leave the vehicle alone or with other occupants.

Except Australian, Bangladeshi, Bhutanese, and New Zealand models


The power windows can be operated for up to 10 minutes after you set the power mode to VEHICLE OFF.
Closing driver's door cancels this function.

Australian, Bangladeshi, Bhutanese, and New Zealand models

The power windows can be operated for up to 45 seconds after you set the power mode to VEHICLE OFF.
Opening either front door cancels this function.

Continued

■ Opening/Closing the Windows with Auto-Open/Close Function

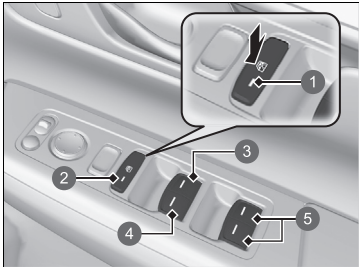

❶ Indicator
❷ Power Window Lock Button
❸ Driver's Window Switch
❹ Front Passenger's Window Switch*
❺ Rear Passenger's Window Switch*

■ Manual operation

To open: Push the switch down lightly, and hold it until the desired position is reached.
To close: Pull the switch up lightly, and hold it until the desired position is reached.

■ Automatic operation

To open: Push the switch down firmly.
To close: Pull the switch up firmly.

The window opens or closes completely. To stop the window at any time, push or pull the switch briefly.

Opening/Closing the Power Windows


Auto Reverse
If a power window senses resistance when closing automatically, it will stop closing and reverse direction.

The driver's window auto reverse function is disabled when you continuously pull up the switch.

The auto reverse function stops sensing when the window is almost closed to ensure that it fully closes.

 * Not available on all models

Opening/Closing Windows without Auto-Open/Close Function*

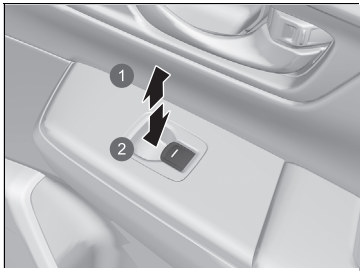


To open: Push the switch down.
To close: Pull the switch up.

Release the switch when the window reaches the desired position.

1 Close
2 Open

Opening/Closing* the Windows with the Remote

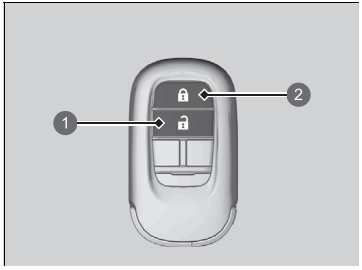

To open: Press the unlock button, and then within 10 seconds, press it again and hold it.

To close*: Press the lock button, and then within 10 seconds, press it again and hold it.

If the windows stop midway, repeat the procedure.

1 Unlock Button
2 Lock Button

Opening/Closing* the Windows with the Remote

Models with panoramic roof

If you open/close* the windows with the remote, the panoramic roof will open/close* automatically along with them.

You can change the keyless remote's window opening setting.

Models with Display Audio without Google built-in

How to Customize the Vehicle Settings P. 375

Models with Display Audio with Google built-in


How to Customize the Vehicle Settings P. 477

* Not available on all models

Continued

■ Opening the Windows with the Key*

Keyless remote

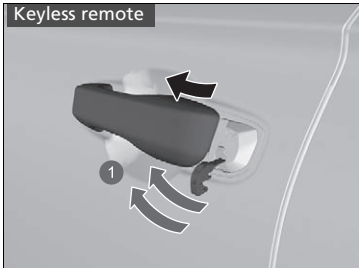


❶ Open

Pull and hold the outer handle. Insert the key into the key cylinder completely from below the handle.

Unlock the driver's door with the key. Within 10 seconds of returning the key to the central position, turn the key in the unlock direction and hold it there.

Release the key to stop the windows at the desired position. If you want further adjustment, repeat the same operation.

Card key

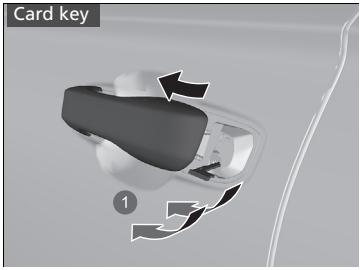

❶ Open

Opening the Windows with the Key*

If you open the windows with the key, the panoramic roof will open automatically along with them.

 * Not available on all models

Opening/Closing the Panoramic Roof

You can operate the panoramic roof when the power mode is in ON. Use the switch in the front of the ceiling to open and close the panoramic roof.

Opening/Closing the Panoramic Roof

⚠WARNING

Opening or closing the panoramic roof or sunshade on someone's hands or fingers can cause serious injury.

Make sure all hands and fingers are clear of the panoramic roof and sunshade before opening or closing it.

WARNING: Always take the ignition key with you whenever you leave the vehicle alone or with other occupants.

WARNING: Extending the head, arms or other parts of the body through the panoramic roof while the vehicle is moving can cause serious injury or death.

NOTICE

Opening the panoramic roof in below freezing temperature or when it is covered with snow or ice can damage the panoramic roof panel or motor.

* Not available on all models

Continued

Opening/Closing the Panoramic Roof

Except Australian, Bangladeshi, Bhutanese, and New Zealand models

The panoramic roof can be operated for up to 10 minutes after you set the power mode to VEHICLE OFF.
Closing driver's door cancels this function.

Australian, Bangladeshi, Bhutanese, and New Zealand models

The panoramic roof can be operated for up to 45 seconds after you set the power mode to VEHICLE OFF.
Opening either front door cancels this function.


When resistance is detected, the auto reverse function causes the panoramic roof to change directions, then stop. Auto reverse stops sensing when the panoramic roof is almost closed to ensure that it fully closes.

You can use the remote transmitter or the key* to operate the panoramic roof.

Opening/Closing* the Windows with the Remote P. 229
Opening the Windows with the Key* P. 230

 * Not available on all models

■ Using the Panoramic Roof Switch

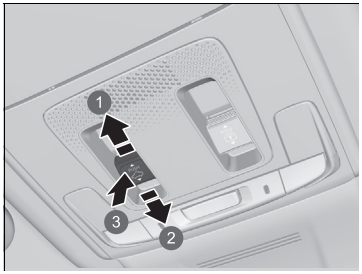

❶ Open
❷ Close
❸ Tilt

■ Automatic operation

To open: Pull the switch back firmly.
To close: Push the switch forward firmly.

The panoramic roof automatically opens or closes all the way. To stop the panoramic roof midway, pull or push the switch briefly.


■ Manual operation

To open: Pull the switch back lightly, and hold it until the desired position is reached.
To close: Push the switch forward lightly, and hold it until the desired position is reached.

■ Tilting the panoramic roof up

To tilt: Push on the centre of the panoramic roof switch.
To close: Push the switch forward firmly.

Using the Panoramic Roof Switch

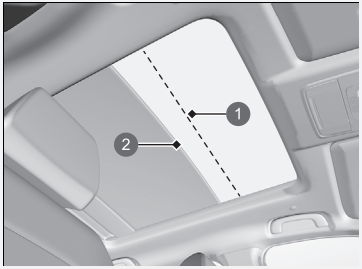

❶ Comfort Position
❷ Full Open Position


The panoramic roof cannot be fully opened in a single operation. The panoramic roof has a "comfort" position or wind noise reduction position at which the roof first stops.
To open fully, pull the switch back again after the roof has stopped at this position.

Whenever the panoramic roof is opening, the sunshade moves along with it. However, when the panoramic roof is closing, the sunshade does not move.

When you tilt open the panoramic roof, the sunshade opens slightly to let in fresh air. When you close the panoramic roof from this position, the sunshade returns to its closed position.

Continued

■ Using the Sunshade Switch

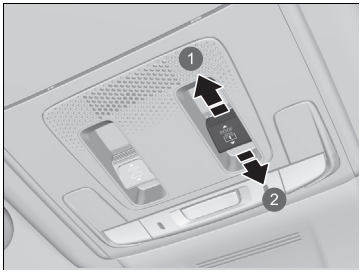

1 Open
2 Close

■ Automatic operation

To open: Pull the switch back firmly.
To close: Push the switch forward firmly.

The sunshade automatically opens or closes all the way. To stop the sunshade midway, pull or push the switch briefly.

■ Manual operation

To open: Pull the switch back lightly, and hold it until the desired position is reached.
To close: Push the switch forward lightly, and hold it until the desired position is reached.

Using the Sunshade Switch


The sunshade can be opened or closed to adjust the amount of light that enters the cabin.

When you use the sunshade switch to open the sunshade, the panoramic roof does not move.

The sunshade cannot be fully closed if the panoramic roof is open. When you close the sunshade with the panoramic roof open, the sunshade stops slightly ahead of the panoramic roof glass. When you push the switch forward again, the sunshade and the panoramic roof close together.

POWER Button

Changing the Power Mode

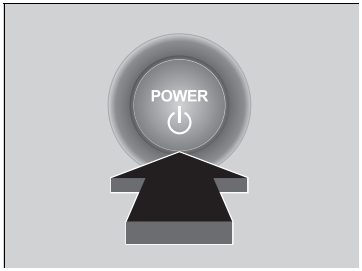

If you carry the keyless remote or card key* and press the **POWER** button without depressing the brake pedal, the power mode will change in this order: VEHICLE OFF→ ACCESSORY→ON→VEHICLE OFF.

VEHICLE OFF:
Vehicle power is turned OFF.
ACCESSORY:
The audio system and some accessories can be used.
ON:
All accessories can be used.

POWER Button

If the keyless remote or card key* is set in a storage box or another place where its signal can be interrupted, the power mode may not change.

Except Australian, Bangladeshi, Bhutanese, New Zealand, and Vietnamese models

When the power mode is set to ON, the power mode will change to ACCESSORY if the **POWER** button is pressed while the transmission is in a position other than P.

* Not available on all models

Continued

■ Automatic Power Off

If you leave the vehicle for 30 to 60 minutes with the transmission in P and the power mode in ACCESSORY, the vehicle automatically goes into the mode similar to VEHICLE OFF (LOCK) to avoid draining the 12-volt battery.

Except Australian, Bangladeshi, Bhutanese, New Zealand, and Vietnamese models


When in this mode: The steering wheel does not lock. You cannot lock or unlock doors with the remote transmitter or the keyless access system. Press the **POWER** button twice to switch the mode to VEHICLE OFF (LOCK).

■ Power Mode Reminder

If you open the driver's door when the power mode is in ACCESSORY, a warning beep sounds.

■ Keyless Remote/Card Key* Reminder

Except Right-hand Drive Type for African

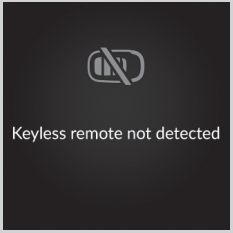

Right-hand Drive Type for African



When the power mode is set to any mode other than OFF and you remove the keyless remote or card key* from the vehicle and shut the door, an alarm will sound. If the alarm continues to sound, place the keyless remote or card key* in another location.

■ When the power mode is in ACCESSORY

The alarm will sound from outside the vehicle.

■ When the power mode is in ON

An alarm will sound both inside and outside the vehicle. In addition, a warning indicator will appear on the instrument panel.

Keyless Remote/Card Key* Reminder

When the keyless remote or card key* is within the system's operational range, and the driver's door is closed, the warning function cancels.


If the keyless remote or card key* is taken out of the vehicle after the power system has been turned on, you can no longer change the **POWER** button mode or restart the power system. Always make sure that the keyless remote or card key* is in your vehicle when you operate the **POWER** button.

Removing the keyless remote or card key* from the vehicle through a window does not activate the warning buzzer.

Do not put the keyless remote or card key* on the dashboard or in the glove box. It may cause the warning buzzer to sound. Under some other conditions that can prevent the vehicle from locating the keyless remote or card key*, the warning buzzer may also sound even if the keyless remote or card key* is within the system's operational range.

* Not available on all models

Turn Signals

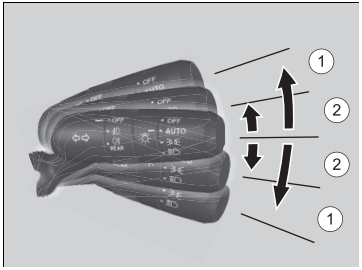

The turn signals can be used when the power mode is in ON.

■ ①: **Turn signal**

Push the lever up or down based on the direction you want to turn, and the turn signal will blink.

■ ②: **One-touch turn signal**

When you lightly push the lever up or down and release it, the turn signal will blink 3 times.

▶ If you lightly push the lever in the opposite direction while it is blinking, the blinking will stop.

Turn Signals


The turn signal indicator on the instrument panel will blink when the external turn signal blinks.

➔ **Turn Signal and Hazard Warning Indicators** P. 134

Lights

■ Headlights/Position Lights

The lights will turn on automatically depending on the ambient brightness. They can also be switched on and off manually.

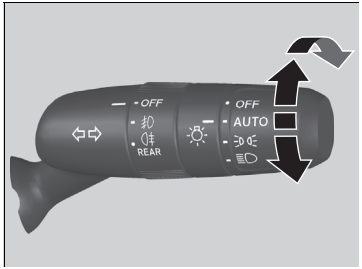

The exterior lights will switch on automatically when the light switch is set to **AUTO** while the power mode is in ON.

■ Manual operation

Headlights/position lights:

Turn the light switch to .

Position lights:

Turn the light switch to .

Headlight/position lights off:

Turn the light switch to **OFF** and release it while the transmission is in P or the parking brake is applied.

▶ The lights will come back on automatically when:

- The light switch is turned to **OFF** again and released.
- The transmission is taken out of P and the parking brake is released.

Lights

When the lights are on, the lights on indicator in the instrument panel will be on.

➡ **Lights On Indicator** P. 134

The headlights are suitable for only left-hand or only right-hand drive. When driving on roads with different traffic rules, the headlight beam must be adjusted.

➡ **Adjusting Headlight Distribution*** P. 602

Headlights/Position Lights

When the position lights are on, the tail, rear side marker, and rear licence plate lights will also switch on.

When the light switch is turned to or and the power is turned to OFF, a beeper sounds when the driver's door is opened.


When the light switch is turned to **AUTO** and the ambient light levels are low, the headlights and position lights will switch on if you unlock a door. They will switch off when the door is locked.

* Not available on all models

Continued

■ High Beams

When the headlights are on, push the lever forward. Pull the lever back to return to low beams.

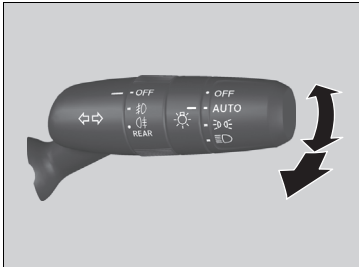

■ Flashing the high beams


Pull the lever back to switch on the high beams.

▶ Release the lever to return to low beams.


Headlights/Position Lights

The light sensor is in the location shown below. Do not cover this light sensor with anything; otherwise the automatic lighting system may not work properly.

Models without automatic intermittent wipers

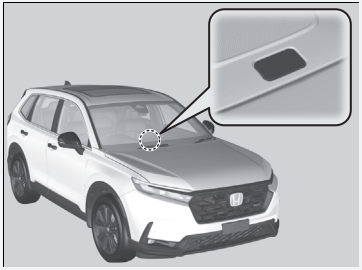

Models with automatic intermittent wipers

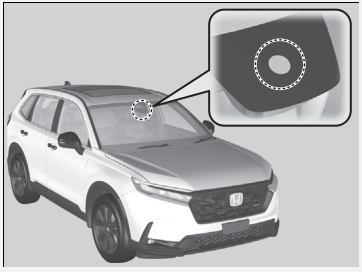

Do not leave the lights on when the power system is off because it will cause the 12-volt battery to discharge.

■ Headlight Integration with Wipers

The headlights automatically come on when the wipers are used several times within a certain number of intervals with the headlight switch in **AUTO**.
The headlights automatically go off a few minutes later if the wipers are stopped.

Headlight Integration with Wipers

This feature activates while the headlights are off in **AUTO**. The instrument panel brightness does not change when the headlights come on.

At dark ambient light levels, the automatic lighting control feature turns on the headlights, regardless of the number of wiper sweeps.

You can turn the headlight integration with wipers function on and off.

Models with Display Audio without Google built-in

How to Customize the Vehicle Settings
P. 375

Models with Display Audio with Google built-in

How to Customize the Vehicle Settings
P. 477

■ Automatic Lighting Off Feature

The headlights, all other exterior lights, and the instrument panel lights turn off 15 seconds after you set the power mode to VEHICLE OFF, take the keyless remote or card key* with you, and close the driver's door.

If you set the power mode to VEHICLE OFF with the headlight switch on, but do not open the door, the lights turn off after 10 minutes (3 minutes, if the switch is in the **AUTO** position).

The lights turn on again when you unlock or open the driver's door. If you unlock the door, but do not open it within 15 seconds, the lights go off. If you open the driver's door, you will hear a reminder chime alerting you that the lights are on.

Automatic Lighting Off Feature

You can change the headlight auto off timer setting.

Models with Display Audio without Google built-in

How to Customize the Vehicle Settings
P. 375

Models with Display Audio with Google built-in

How to Customize the Vehicle Settings
P. 477

* Not available on all models

Continued

■ Fog Lights

The fog lights can be used when the power mode is in ON.


■ Front fog lights

Can be used when the position lights or the headlights are on.

■ Rear fog light*

Can be used when the position lights, headlights, or the front fog lights are on.

■ Front and rear fog light switch*

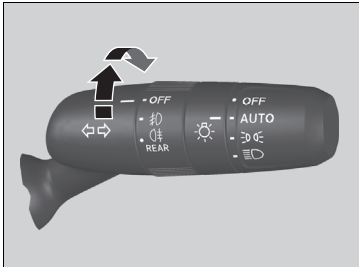


To turn the front fog lights on:
Rotate the switch up from the **OFF** position to the position. The indicator comes on.

To turn the front and rear fog lights on:
Rotate the switch one position up from the position. The and indicators comes on.

To turn the rear fog light on:
Rotate the switch one position up from the position and then rotate the switch one position down from the position. The indicator comes on.
To turn the rear fog light off, turn the headlight switch to the **OFF** position.

 * Not available on all models

■ Front fog light switch*

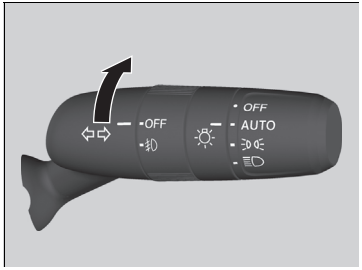

To turn the front fog lights on:
Rotate the switch to [⫫D]. The [⫫D] indicator comes on.

■ Daytime Running Lights

The position/daytime running lights come on when the following conditions have been met:

- The power mode is in ON.
- The headlight switch is **AUTO** or [≡D◡].
- The ambient light is bright.

While the vehicle is stopped, if you turn the light switch to **OFF** and release it, the daytime running lights will turn off. When the transmission is taken out of [P] and the parking brake is released, the lights will come on again. Otherwise, if the light switch is once more turned to **OFF**, the lights will come on again.

» Daytime Running Lights

Daytime running lights and the position lights share the same light source.


Daytime running lights are brighter than the position lights.

* Not available on all models

Active Cornering Lights*

Enhance the visibility of the corner(s) when making a turn. With the power mode in ON, the headlights on, and the vehicle speed at less than 40 km/h, the cornering light(s) comes on either when operating the turn signals or the steering wheel, or putting the transmission into R.


■ The corner you are making a turn towards is illuminated when:

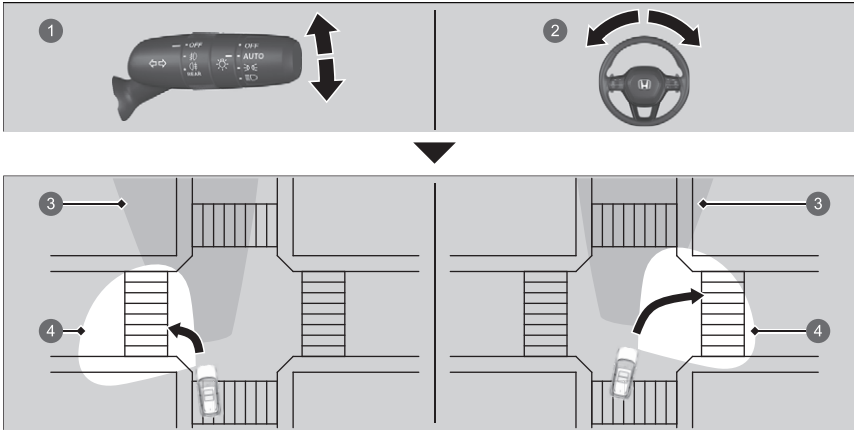

1. You operate the turn signal lever.
2. You turn the steering wheel around 75 degrees or more.
3. Headlight beam coverage
4. Cornering light beam coverage


Active Cornering Lights*

The active cornering lights go off automatically after five minutes. To resume the lights on, recreate the same condition; putting the turn signal lever or steering wheel in the centre position, then operate it again, or if the transmission has been in R, put it to another position momentarily.

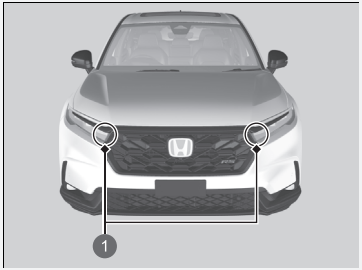

1. Active Cornering Lights

 * Not available on all models

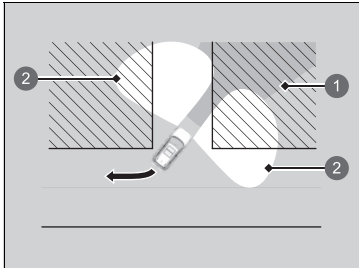


❶ Headlight beam coverage
❷ Cornering light beam coverage

■ **Both front corners are illuminated when:**

You put the transmission into R.

Headlight Adjuster*

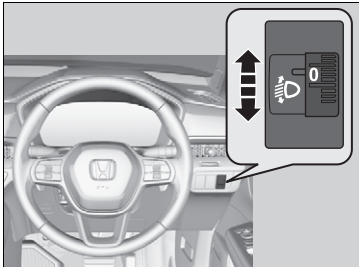

You can adjust the vertical angle of the low beam headlights when the position lights or headlights are on.

Turn the adjustment dial to select an appropriate angle for the headlights.

The larger dial number indicates the lower angle.

■ To select the adjustment dial position

Refer to the below table for the appropriate dial position for your vehicle's riding and loading conditions.

Condition	Dial position
A driver A driver and a front passenger	0
Five persons in the front and rear seats	1
Five persons in the front and rear seats and luggage in the luggage area, within the limit of maximum permissible axle weight and maximum permissible vehicle weight	2
A driver and luggage in the luggage area, within the limits of maximum permissible axle weight and maximum permissible vehicle weight	3

Headlight Adjuster*

Models without adjustment dial

Your vehicle is equipped with the automatic headlight adjusting system that automatically adjusts the vertical angle of the low beam headlights. If you find a significant change in the vertical angle of the headlights, there may be a problem with the system. Have your vehicle checked by a dealer.

* Not available on all models

Auto High-Beam*

The front sensor camera detects the light sources ahead of the vehicle such as the lights of a preceding or oncoming vehicle, or street lights. When you are driving at night, the system automatically switches the headlights between low beam and high beam depending on the situation.

How to Use the Auto High-Beam

Activating the system

When all of the following conditions have been met, the auto high-beam indicator comes on and automatically switches between the high beam and low beam, depending on the situation.



- The power mode is in ON.
- The light switch is in **AUTO**.
- The lever is in the low beam position.
- The headlights have been automatically activated.
- It is dark outside the vehicle.

❶ Auto High-Beam Indicator
❷ Light Switch

If the auto high-beam indicator does not come on even when all the conditions have been met, carry out either of the procedures below and the indicator will come on.

- Pull the lever towards you and release it.
- Turn the light switch to [AUTO] then turn the light switch to **AUTO**.

Auto High-Beam*

The auto high-beam system does not always operate in every situation. This system is just for assisting the driver. Always observe your surroundings and manually switch the headlights between high beam and low beam if necessary.

The range and the distance at which the camera can recognise light sources varies depending on conditions surrounding your vehicle.

Regarding the handling of the camera mounted to the inside of the windscreen, refer to the following.

Front Sensor Camera P. 687

For the auto high-beam to work properly:

- Do not place an object that reflects light on the dashboard.
- Keep the windscreen around the camera clean.
- When cleaning the windscreen, be careful not to apply the windscreen cleanser to the camera lens.
- Do not attach an object, sticker, or film to the area around the camera.
- Do not touch the camera lens.

If the camera receives a strong impact, or repairing of the area near the camera is required, consult a dealer.

* Not available on all models

Continued

■ Automatic switching between high-beam and low-beam

When the auto high-beam indicator comes on, the headlights switch between high beam and low beam based on the following conditions.

High beam		Low beam
All of the following conditions must be met before the high beams turn on. • Your vehicle speed is 30 km/h or more. • There are no preceding or oncoming vehicles with headlights or taillights turned on. • There are few street lights on the road ahead.	⟷	One of the following conditions must be met before the low beams turn on. • Your vehicle speed is 24 km/h or less. • There is a preceding or oncoming vehicle with headlights or taillights turned on. • There are many street lights on the road ahead.

Automatic switching between high-beam and low-beam

In the following cases, the auto high-beam system may not switch the headlights properly or the switching timing may be changed. If the automatic switching operation does not fit for your driving habits, please switch the headlights manually.

- The brightness of the lights from a preceding or oncoming vehicle is intense or poor.
- Visibility is poor due to the weather (rain, snow, fog, windscreen frost, etc.).
- Surrounding light sources like street lights, electric billboards, and traffic lights are illuminating the road ahead.
- The brightness level of the road ahead constantly changes.
- The road is bumpy or has many curves.
- A vehicle suddenly appears in front of you, or a vehicle in front of you is not in the preceding or oncoming direction.
- Your vehicle is tilted with a heavy load in the rear.
- A traffic sign, mirror, or other reflective object ahead is reflecting strong light towards the vehicle.
- The oncoming vehicle frequently disappears under roadside trees or behind median barriers.
- The preceding or oncoming vehicle is a motorcycle, bicycle, mobility scooter, or other small vehicle.

The auto high-beam system keeps the headlight low beam on when:

- Windscreen wipers are operating at a high speed.
- The camera has detected a dense fog.

■ Manual switching between high-beam and low-beam

If you want to manually switch the headlights between high beam and low beam, follow either of the procedures below. Note that when you do this, the auto high-beam indicator will turn off and the auto high-beam will be deactivated.

Using the lever:

Pull the lever towards you for flashing the high beams and then release it.

▶ To reactivate the auto high-beam, follow either of the procedures below and the auto high-beam indicator will come on.

- Pull the lever towards you and release it.
- Turn the light switch to ≡D and then to **AUTO** when the lever is in the low beam position.

Using the light switch:

Turn the light switch to ≡D.

▶ To reactivate the auto high-beam, turn the light switch to **AUTO** when the lever is in the low beam position, and the auto high-beam indicator will come on.

Auto High-Beam*

How to turn off the Auto High-Beam System

You can turn the auto high-beam system on and off.

Models with Display Audio without Google built-in


How to Customize the Vehicle Settings P. 375

Models with Display Audio with Google built-in

How to Customize the Vehicle Settings P. 477

* Not available on all models

Adaptive Driving Beam*

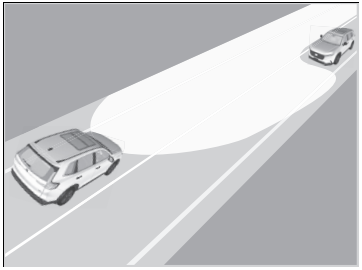

When driving at night, the front sensor camera detects light sources such as street lights or the lights of an oncoming or preceding vehicle. The system automatically switches the headlights between low and high beam depending on the situation.
In addition, the system automatically adjusts the light distribution of the high beams in order to reduce glare for preceding and oncoming vehicles.

The system also increases the coverage of the low beams when the low beams are on and the vehicle speed is 40 km/h or less, improving visibility to the left and right.

Adaptive Driving Beam*

The adaptive driving beam system does not always operate in every situation. This system is just for assisting the driver. Always observe your surroundings and manually switch the headlights between high beam and low beam if necessary.

The range and the distance at which the camera can recognise light sources varies depending on conditions surrounding your vehicle.

Regarding the handling of the camera mounted to the inside of the windscreen, refer to the following.

Front Sensor Camera P. 687

For the adaptive driving beam to work properly:

- Do not place an object that reflects light on the dashboard.
- Keep the windscreen around the camera clean.
- When cleaning the windscreen, be careful not to apply the windscreen cleanser to the camera lens.
- Do not attach an object, sticker, or film to the area around the camera.
- Do not touch the camera lens.


If the camera receives a strong impact, or repairing of the area near the camera is required, consult a dealer.

 * Not available on all models

How to Use the Adaptive Driving Beam

Activating the system

The adaptive driving beam indicator comes on, and the system begins adjusting the light distribution of the high beams when all of the following conditions are met.

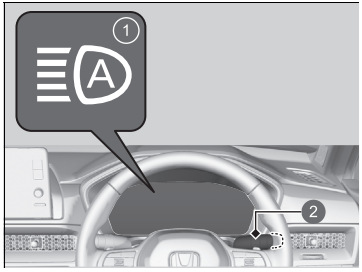

- The power mode is in ON.
- The light switch is in **AUTO**.
- The lever is in the low beam position.
- The headlights have been automatically activated.
- It is dark outside the vehicle.

❶ Adaptive Driving Beam Indicator
❷ Light Switch

If the adaptive driving beam indicator does not come on even when all the conditions have been met, carry out either of the procedures below and the indicator will come on.

- Pull the lever towards you and release it.
- Turn the light switch to AUTO then turn the light switch to **AUTO**.

Adaptive Driving Beam*

In the following cases, the adaptive driving beam system may not switch the headlights properly or the switching timing may be changed. If the automatic switching operation does not fit for your driving habits, please switch the headlights manually.

- The brightness of the lights from a preceding or oncoming vehicle is intense or poor.
- Visibility is poor due to the weather (rain, snow, fog, windscreen frost, etc.).
- Surrounding light sources like street lights, electric billboards, and traffic lights are illuminating the road ahead.
- The brightness level of the road ahead constantly changes.
- The road is bumpy or has many curves.
- A vehicle suddenly appears in front of you, or a vehicle in front of you is not in the preceding or oncoming direction.
- Your vehicle is tilted with a heavy load in the rear.
- A traffic sign, mirror, or other reflective object ahead is reflecting strong light towards the vehicle.
- The oncoming vehicle frequently disappears under roadside trees or behind median barriers.
- The preceding or oncoming vehicle is a motorcycle, bicycle, mobility scooter, or other small vehicle.

The adaptive driving beam system keeps the headlight low beam on when:

- Windscreen wipers are operating at a high speed.
- The camera has detected a dense fog.

* Not available on all models

Continued

■ Automatically adjusting the light distribution

The system starts to automatically adjust the light distribution of the high beams once the vehicle speed is 10 km/h or higher, and the light distribution changes depending on vehicle speed, or under the following conditions:

- There is a preceding or oncoming vehicle with headlights or taillights turned on.
- There are many street lights on the road ahead.

If the vehicle speed slows to 6 km/h or lower, the system stops automatically adjusting the light distribution and switches the headlights to low beam.

■ Manual switching between high-beam and low-beam

If you want to manually switch the headlights between high beam and low beam, follow either of the procedure below. Note that when you do this, the adaptive driving beam indicator will turn off and the adaptive driving beam will be deactivated.

Using the lever:

Pull the lever towards you for flashing the high beams and then release it.

▶ To reactivate the adaptive driving beam, follow either of the procedures below and the adaptive driving beam indicator will come on.

- Pull the lever towards you and release it.
- Turn the light switch to ≡D and then to **AUTO** when the lever is in the low beam position.

Using the light switch:

Turn the light switch to ≡D.

▶ To reactivate the adaptive driving beam, turn the light switch to **AUTO** when the lever is in the low beam position, and the adaptive driving beam indicator will come on.

Adaptive Driving Beam*

How to turn off the Adaptive Driving Beam System

You can turn the adaptive driving beam system on and off.

Models with Display Audio without Google built-in

➡ **How to Customize the Vehicle Settings** P. 375


Models with Display Audio with Google built-in

➡ **How to Customize the Vehicle Settings** P. 477

* Not available on all models

Wipers and Washers

■ Windscreen Wipers/Washers

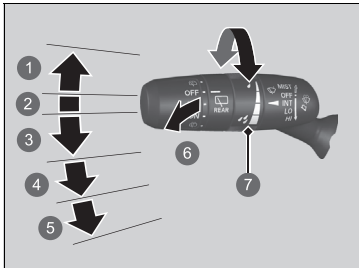

❶ **MIST**
❷ **OFF**
❸ **INT**[*1]**/AUTO**[*2]
❹ **LO**: Low speed wipe
❺ **HI**: High speed wipe
❻ **Washer**
❼ Intermittent Time Adjustment Ring[*]
:Lower speed, fewer sweeps
:Higher speed, more sweeps

The windscreen wipers and washers can be used when the power mode is in ON.

■ MIST

The wipers run at high speed until you release the lever.

■ Wiper switch (OFF, INT[*1]/AUTO[*2], LO, HI)

Move the lever up or down to change the wiper settings.

■ Adjusting wiper operation[*]

Turn the adjustment ring to adjust the wiper operation.

■ Washer

Sprays while you pull the lever toward you. When you release the lever for more than one second, the spray stops, the wipers sweep two or three more times to clear the windscreen, and then stop.

Wipers and Washers

NOTICE
When lifting the front wiper arms, move them into the maintenance position before lifting them.
Lifting the Front Wiper Arms P. 760

NOTICE
Do not use the wipers when the windscreen is dry. The windscreen will get scratched, or the rubber blades will get damaged.

NOTICE
Turn the washers off if no washer fluid comes out. The pump may get damaged.

The wiper motor may stop motor operation temporarily to prevent an overload. Wiper operation will return to normal within a few minutes.

Models with intermittent time adjustment ring
If the vehicle speeds up while the wipers are operating intermittently, the length of the wipe interval shortens.
When the vehicle speeds up, the wiper operation's shortest delay setting ( ) and the **LO** setting become the same.


NOTICE
In cold weather, the blades may freeze to the windscreen.
Operating the wipers in this condition may damage the wipers. Use the demister to warm the windscreen, then turn the wipers on.

*1: Models with manual intermittent operation
*2: Models with automatic intermittent operation

* Not available on all models

Continued

■ Automatic Intermittent Wipers*

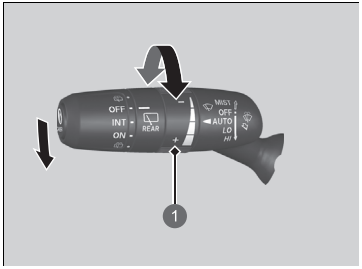

1 Adjustment Ring
−: Low Sensitivity
+: High Sensitivity

When you push the lever down to **AUTO**, the windscreen wipers sweep once, and go into the automatic mode.

The wipers operate intermittently, at low speed, or at high speed and stop in accordance with the amount of rainfall the rainfall sensor detects.

■ AUTO sensitivity adjustment


When the wiper function is set to **AUTO**, you can adjust the sensitivity of the rainfall sensor (using the adjustment ring) so that wipers will operate in accordance with your preference.

Wipers and Washers

If the wipers stop operating due to an obstacle such as the buildup of snow, park the vehicle in a safe place. Rotate the wiper switch to **OFF**, set the power mode to ACCESSORY or VEHICLE OFF, then remove the obstacle.

Automatic Intermittent Wipers*

The rainfall sensor is in the location shown below.

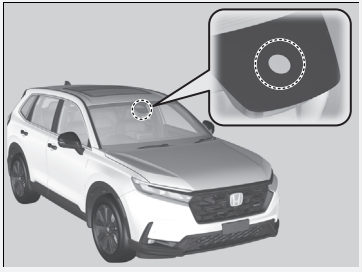


NOTICE

AUTO should always be turned **OFF** before the following situations in order to prevent severe damage to the wiper system:

- Cleaning the windscreen
- Driving through a car wash
- No rain present

 * Not available on all models

■ Rear Wiper/Washer

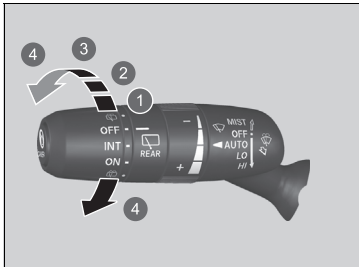

❶ **OFF**
❷ **INT**: Intermittent
❸ **ON**: Continuous wipe
❹ Washer

The rear wiper and washer can be used when the power mode is in ON.

■ Wiper switch (OFF, INT, ON)

Change the wiper switch setting according to the amount of rain.

■ Washer ( )


Sprays on the rear window while you rotate the switch to this position.
Hold it to activate the rear wiper and to spray the washer. Once released, the washer spray will stop and the rear wiper will return to its selected switch setting after a few sweeps.

■ Operating in reverse

When you shift the transmission to R with the windscreen wipers activated, the rear wiper operates automatically as follows even if its switch is off.

Front Wiper Operation	Rear Wiper Operation
Intermittent	Intermittent
Low speed wipe High speed wipe	Continuous

Rear Demister Button

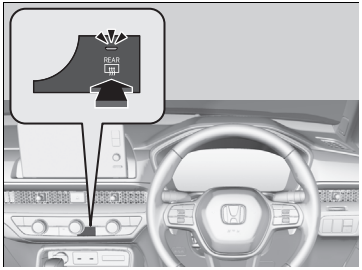

Press the rear demister button to demist the rear window when the power mode is in ON.

The rear demister automatically switches off after 10-30 minutes depending on the outside temperature. However, if the outside temperature is 0°C or below, it does not automatically switch off.

Rear Demister Button


This system consumes a lot of power, so turn it off when the window has been demisted. Also, do not use the system for a long time while the power system is stopped. This may weaken the 12-volt battery, making it difficult to turn the power system on.

Driving Position Memory System*

You can store two driver's seat positions (except for power lumbar) with the driving position memory system.

When you unlock and open the driver's door with a keyless remote or keyless access system, the seat adjusts automatically to one of the two preset positions.

- **DRIVER 1** transmitter is linked to memory button 1.
- **DRIVER 2** transmitter is linked to memory button 2.

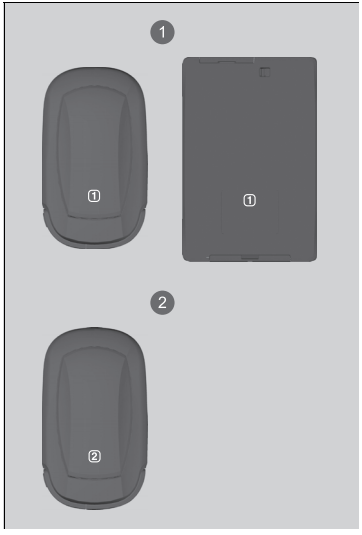

1 DRIVER 1
2 DRIVER 2

The driver's seat moves rearward depending on the set seating position once you

- Stop the vehicle.
- Put the transmission in P.
- Set the power mode to VEHICLE OFF.
- Open the driver's door.

Once the power mode is in the ACCESSORY position, the driver's seat moves forward to the **DRIVER 1** or **2** preset position.

Driving Position Memory System*

Using the audio/information screen, you can disable the automatic seat adjustment function.

Models with Display Audio without Google built-in

How to Customize the Vehicle Settings P. 375

Models with Display Audio with Google built-in

How to Customize the Vehicle Settings P. 477

The driver's seat easy exit feature can be turned ON/OFF.

Models with Display Audio without Google built-in

How to Customize the Vehicle Settings P. 375

Models with Display Audio with Google built-in

How to Customize the Vehicle Settings P. 477

System Operation

The system will not operate if:

- The transmission is out of the P position.
- Either memory button is pressed while the seat is in motion.
- The seat position is adjusted while in operation.
- Either of the memorized positions is set fully to the rear.


The system may not recognise a key if:

- The key is in close proximity to a mobile phone or other wireless device.
- Both keys are in the vehicle at the same time.
- The Driving Position Memory System is disabled in customized features.
- Opening driver's door without fully grabbing the door handle.

* Not available on all models

Continued

■ Storing a Position in Memory

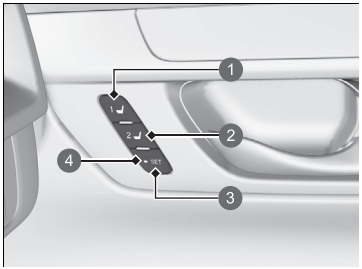


❶ Memory Button 1
❷ Memory Button 2
❸ **SET** Button
❹ Indicator Light

1. Set the power mode to ON. Adjust the driver's seat to the desired position.
2. Press the **SET** button.
▶ The **SET** button indicator light will come on.
3. Press memory button [1] or [2] within five seconds of pressing the **SET** button.
▶ You will hear the beeper, and the **SET** button indicator light goes off.

Storing a Position in Memory

After you press the **SET** button, the storing operation will be cancelled when:
- You do not press the memory button within five seconds.
- You readjust the seat position before the double-beep.
- You set the power mode to any position except ON.

■ Recalling the Stored Position

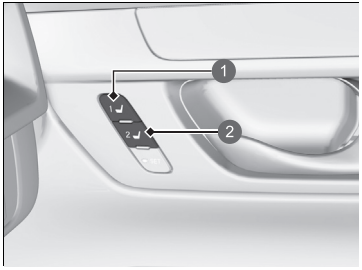

❶ Memory Button 1
❷ Memory Button 2

1. Put the transmission into [P].
2. Apply the parking brake.
3. Press a memory button ([1] or [2]).


The seat will automatically move to the memorized position.

Recalling the Stored Position

The seat will stop moving if you:
- Press the **SET** button, or a memory button ([1] or [2]).
- Adjust the seat position.
- Put the transmission to a position other than [P].

Adjusting the Steering Wheel

The steering wheel height and distance from your body can be adjusted so that you can comfortably grip the steering wheel in an appropriate driving posture.

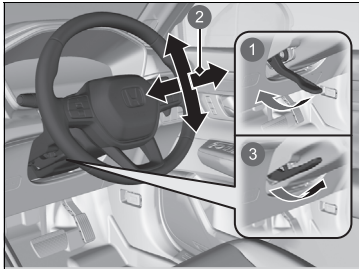

❶ Release
❷ Adjust
❸ Lock

1. While the vehicle is stopped, push the steering wheel adjustment lever down.
▶ The steering wheel adjustment lever is under the steering column.
2. Move the steering wheel up or down, and in or out.
▶ Make sure you can see the instrument panel gauges and indicators.
3. Pull the steering wheel adjustment lever up to lock the steering wheel in position.
▶ After adjusting the position, make sure you have securely locked the steering wheel in place by trying to move it up, down, in, and out.

Adjusting the Steering Wheel

⚠WARNING

Adjusting the steering wheel position while driving may cause you to lose control of the vehicle and be seriously injured in a crash.

Adjust the steering wheel only when the vehicle is stopped.

Interior Rearview Mirror

Adjust the angle of the rearview mirror when you are sitting in the correct driving position.

■ Rearview Mirror with Day and Night Positions*



Flip the tab to switch the position.
The night position will help to reduce the glare from headlights behind you when driving after dark.

❶ Tab
❷ Night Position
❸ Daytime Position


Mirrors

Keep the inside and outside mirrors clean and adjusted for best visibility.

Adjust the mirrors before you start driving.
➡ **Front Seats** P. 264

* Not available on all models

Automatic Dimming Rearview Mirror*

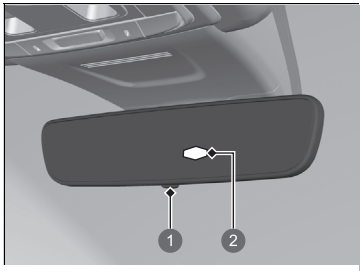

When you are driving after dark, the automatic dimming rearview mirror reduces the glare from headlights behind you. Press the AUTO button to turn this function on and off. When activated, the AUTO indicator comes on.


1 Auto Button
2 Sensor

Automatic Dimming Rearview Mirror*

The auto dimming function cancels when the transmission is in R.

* Not available on all models

Power Door Mirrors

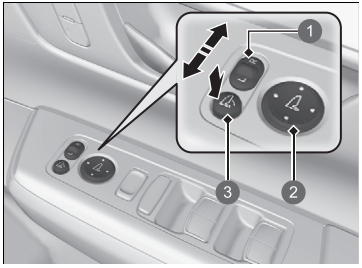

1 Selector Switch
2 Adjustment Switch
3 Folding Button

You can adjust the door mirrors when the power mode is in ON.

■ **Mirror position adjustment**

L/R selector switch:

Select the left or right mirror. After adjusting the mirror, return the switch to the centre position.


Mirror position adjustment switch:

Press the switch left, right, up, or down to move the mirror.

■ **Folding door mirrors**

Press the folding button to fold in and out the door mirrors.

■ Reverse Tilt Door Mirror*

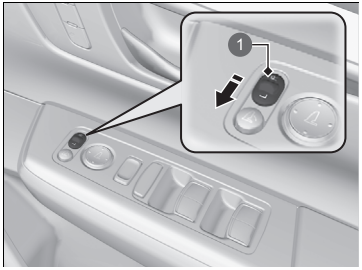

1 Selector Switch

If activated, the passenger side door mirror automatically tilts downward when you put the transmission into R: this improves close-in visibility on the passenger side of the vehicle when backing up. The mirror automatically returns to its original position when you take the transmission out of R.

To activate this feature, set the power mode to ON and slide the selector switch to the passenger's side.

* Not available on all models

■ Automatic Folding Door Mirror Function*

■ Folding in the door mirrors

Press the lock button on the keyless remote or the tailgate, or touch the door lock sensor on either front door.

▶ The mirrors start folding in automatically.

■ Folding out the door mirrors

Press the unlock button on the keyless remote, or grab the door handle on either front door.

▶ The mirrors start folding out automatically.

Automatic Folding Door Mirror Function*

You cannot turn the automatic folding out automatically if they have been folded in using the folding button.

You can turn the automatic folding door mirror function on and off.

Models with Display Audio without Google built-in

How to Customize the Vehicle Settings P. 375


Models with Display Audio with Google built-in

How to Customize the Vehicle Settings P. 477

Door mirrors will not fold automatically when locking from inside the vehicle using lock tab or master door lock switch.

* Not available on all models

Front Seats

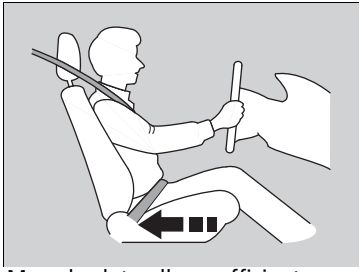

Move back to allow sufficient space.

Adjust the driver's seat as far back as possible while allowing you to maintain full control of the vehicle. You should be able to sit upright, well back in the seat and be able to adequately press the pedals without leaning forward, and grip the steering wheel comfortably. The passenger's seat should be adjusted in a similar manner so that it is as far back from the front airbag in the dashboard as possible.

Seats

Always make seat adjustments before driving.

Front Seats

⚠WARNING


Sitting too close to a front airbag can result in serious injury or death if the front airbags inflate.

Always sit as far back from the front airbags as possible while maintaining control of the vehicle.

In addition to the seat adjustment, you can adjust the steering wheel up and down, in and out. Allow at least 25 cm between the centre of the steering wheel and the chest.

■ Adjusting the Seat Positions

■ Adjusting the front power seat(s)

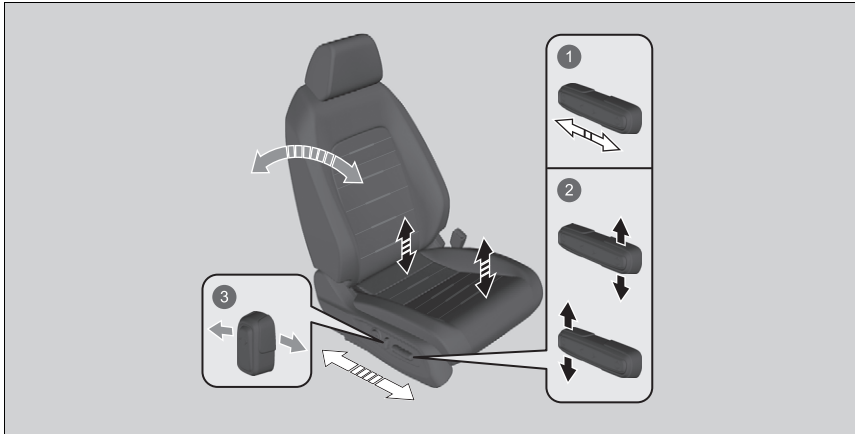


❶ **Horizontal Position Adjustment**
Slide the lever to move the seat.

❷ **Height Adjustment (Driver side only)**
Pull up or push down the lever to raise or lower the seat.

❸ **Seat-back Angle Adjustment**
Push forward or pull backward the lever to change the angle.

Continued

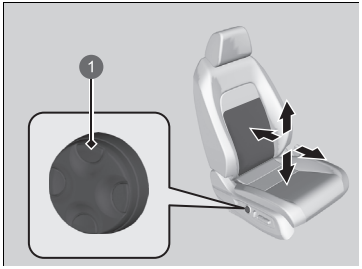

❶ Lumbar Support Adjustment Switch

■ **Lumbar support adjustment switch (Driver's seat only)**


Press the top: To move the lumbar support up.

Press the bottom: To move the lumbar support down.

Press the front: To increase the entire lumbar support.

Press the rear: To decrease the entire lumbar support.

■ Adjusting the front manual seat*

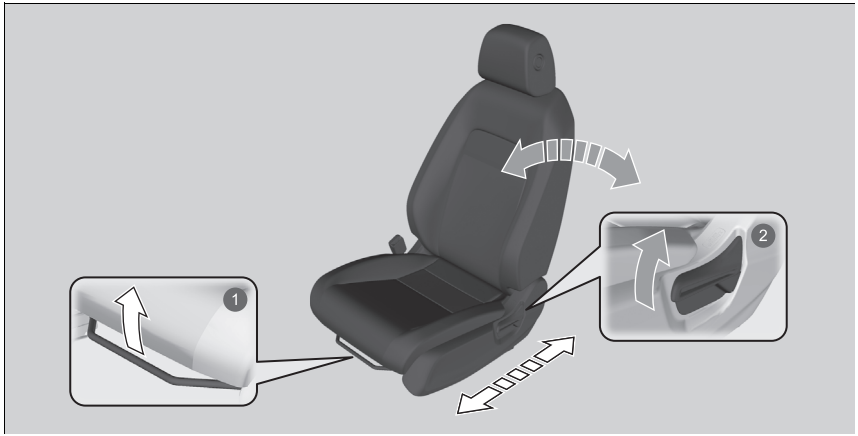

❶ Horizontal Position Adjustment
Pull up on the bar to move the seat, then release the bar.

❷ Seat-back Angle Adjustment
Pull up the lever to change the angle.


Adjusting the front manual seat*

Once a seat is adjusted correctly, rock it back and forth to make sure it is locked in position.

* Not available on all models

Continued

■ Adjusting the Seat-Backs

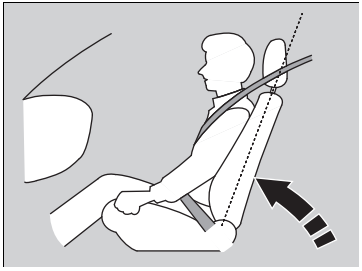

Adjust the driver's seat-back to a comfortable, upright position, leaving ample space between your chest and the airbag cover in the centre of the steering wheel.

The front seat passenger should also adjust their seat-back to a comfortable, upright position.

Reclining a seat-back so that the shoulder part of the belt no longer rests against the occupant's chest reduces the protective capability of the belt. It also increases the chance of sliding under the belt in a crash and being seriously injured. The farther a seat-back is reclined, the greater the risk of injury.

Adjusting the Seat-Backs

⚠WARNING

Reclining the seat-back too far can result in serious injury or death in a crash.

Adjust the seat-back to an upright position, and sit well back in the seat.


Do not put a cushion, or other object, between the seat-back and your back.

Doing so may interfere with proper seat belt or airbag operation.

If you cannot get far enough away from the steering wheel and still reach the controls, we recommend that you investigate whether some type of adaptive equipment may help.

Rear Seats

Adjusting the Seat Positions

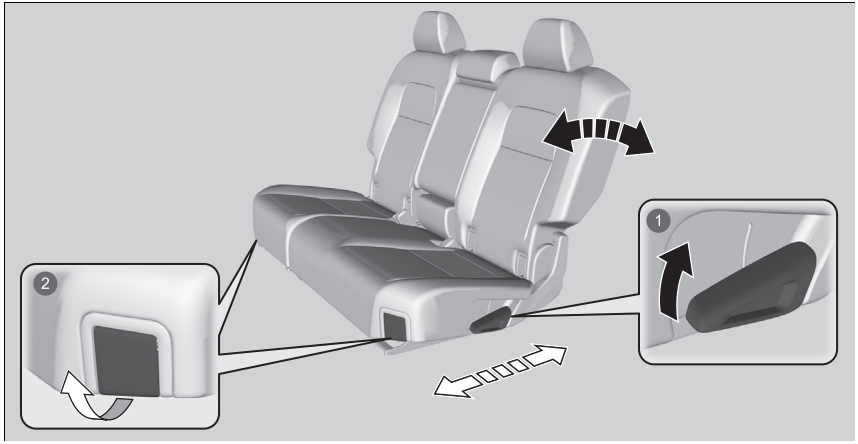

❶ **Seat-back Angle Adjustment**
Pull up the lever to change the angle.

❷ **Horizontal Position Adjustment**
Pull up on the lever to move the seat, then release the lever.

Rear Seats

⚠WARNING

An unsecured seat or seat-back can move out of position or collapse without warning if there is sudden acceleration or stop or in a crash.

A seat or seat-back that suddenly moves or collapses can result in severe injury or death.


Always make sure all seats and seat-backs are securely locked into position before driving.

Once a seat is adjusted correctly, rock it back and forth to make sure it is locked in position.

Continued

■ Folding Down the Rear Seats

The rear seats can be folded down separately to allow for additional storage space.

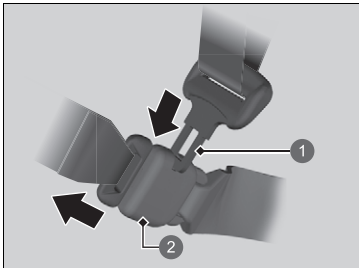


❶ Latch Plate
❷ Anchorage Buckle

1. Store the centre seat belt first. Insert the latch plate into the slot on the side of the anchorage buckle.

2. Retract the seat belt into the holder on the ceiling.

➡ **Seat Belt with Detachable Anchorage** P. 60

3. Lower the rear seat head restraint to its lowest position. Put the armrest back into the seat-back.

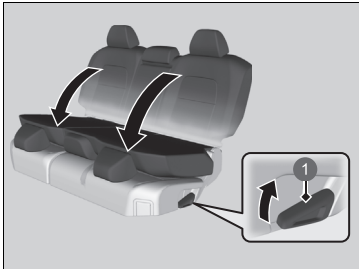

❶ Release Lever

4. Pull the release lever and fold down the seat.

When returning the seat-back to its original position, push it firmly back. Also, make sure all rear shoulder belts are positioned in front of the seat-back.
Make sure the seat-back, head restraints, and seat cushion are securely latched back into place before driving.

Folding Down the Rear Seats

⚠WARNING

Make sure the seat-backs are latched securely before driving.

The seat-backs can be folded down to accommodate bulkier items in the luggage area.

Remove any items from the rear seat cushion and floor before you fold down the rear seat.

The front seats must be far enough forward so they do not interfere with the rear seats as they fold down.

Make sure all items in the luggage area or items extending to the rear seats are properly secured. Loose items can fly forward if you have to brake hard.

Rear Seat Reminder

This feature alerts you of the possible presence of passengers or items in the rear seats before you exit the vehicle. It activates when the power mode is set to VEHICLE OFF if the rear doors were opened shortly before or after the power mode was set to ON.

Except Right-hand Drive Type for African



Right-hand Drive Type for African



A reminder appears on the driver information interface and an alert will sound when the power mode is set to VEHICLE OFF.

Rear Seat Reminder

When the power mode is set to VEHICLE OFF, the reminder comes on briefly, then the function is deactivated.

The reminder will not work if the power mode has not been set to ON within 10 minutes of operating the rear doors.

The system does not detect passengers in the rear seats. Instead, it can detect when a rear door is opened and closed, indicating that there may be something in the rear seats.

You can turn off the notification setting.

Models with Display Audio without Google built-in

How to Customize the Vehicle Settings P. 375

Models with Display Audio with Google built-in

How to Customize the Vehicle Settings P. 477

Maintain a Proper Sitting Position

After all occupants have adjusted their seats and head restraints, and put on their seat belts, it is very important that they continue to sit upright, well back in their seats, with their feet on the floor, until the vehicle is safely parked and the power system is off.

Sitting improperly can increase the chance of injury during a crash. For example, if an occupant slouches, lies down, turns sideways, sits forward, leans forward or sideways, or puts one or both feet up, the chance of injury during a crash is greatly increased.

In addition, an occupant who is out of position in the front seat can be seriously or fatally injured in a crash by striking interior parts of the vehicle or being struck by an inflating front airbag.

Maintain a Proper Sitting Position

⚠WARNING


Sitting improperly or out of position can result in serious injury or death in a crash.

Always sit upright, well back in the seat, with your feet on the floor.


Head Restraints

Your vehicle is equipped with head restraints in all seating positions.

■ Adjusting the Front Head Restraint Positions

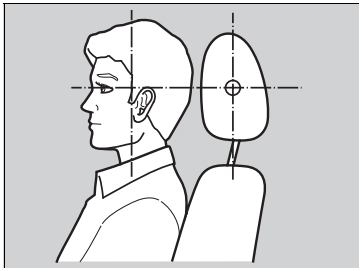

Head restraints are most effective for protection against whiplash and other rear-impact crash injuries when the centre of the back of the occupant's head rests against the centre of the restraint. The tops of the occupant's ears should be level with the centre height of the restraint.

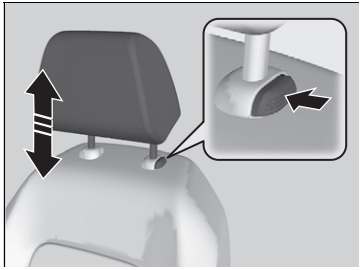

To raise the head restraint:
Pull it upward.
To lower the head restraint:
Push it down while pressing the release button.

Head Restraints

⚠WARNING


Improperly positioning head restraints reduces their effectiveness and increases the likelihood of serious injury in a crash.

Make sure head restraints are in place and positioned properly before driving.

In order for the head restraint system to work properly:
- Do not hang any items on the head restraints, or from the restraint legs.
- Do not place any objects between an occupant and the seat-back.
- Install each restraint in its proper location.

The front seat head restraints cannot be removed.

Continued

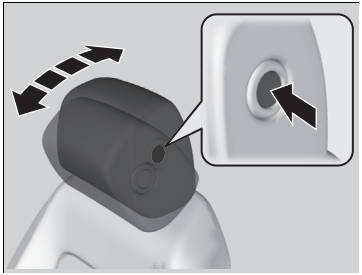


Australian, Bangladeshi, Bhutanese, New Zealand, and Taiwanese models

The front head restraint tilt can be adjusted according to you and a front passenger's head positions.

To tilt forward: Push the head restraint forward.

To return to the original position: Press the release button.

Changing the Rear Seat Head Restraint Positions

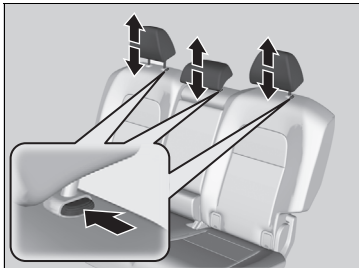

A passenger sitting in the rear seat should adjust the height of their head restraint to an appropriate position before the vehicle begins moving.

To raise the head restraint:
Pull it upward.

To lower the head restraint:
Push it down while pressing the release button.

Removing and Reinstalling the Rear Seat Head Restraints

Head restraints can be removed for cleaning or repair.

To remove a head restraint:
Pull the restraint up as far as it will go. Then, push the release button and pull the restraint up and out.

To reinstall a head restraint:
Insert the legs back in place, then adjust the head restraint to an appropriate height while pressing the release button. Pull up on the restraint to make sure it is locked in position.

Changing the Rear Seat Head Restraint Positions

When you use the head restraint in the rear centre seating position, pull up the head restraint to its highest position. Do not use it in any lower position.



Removing and Reinstalling the Rear Seat Head Restraints


⚠WARNING

Failure to reinstall or correctly reinstall the head restraints can result in severe injury during a crash.

Always replace the head restraints before driving.

Armrest

■ Using the Front Seat Armrest

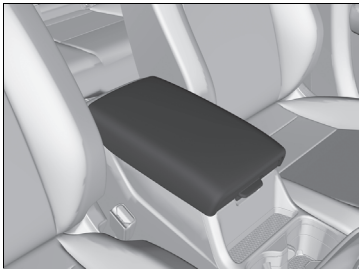

The console compartment can be used as an armrest.


■ Using the Rear Seat Armrest



Pull down the armrest in the centre seat-back.

Interior Lights

■ Interior Light Switches

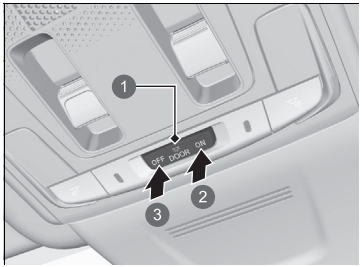

❶ Door Activated Position
❷ **ON**
❸ **OFF**

■ ON

The interior lights come on regardless of whether the doors are open or closed.

■ Door activated

The interior lights come on in the following situations:

- When any doors are opened.
- When the driver's door is unlocked.
- When the power mode is set to VEHICLE OFF.

■ OFF

The interior lights remain off regardless of whether the doors are open or closed.

Interior Light Switches

In the door activated position, the interior lights fade out and turn off about 30 seconds after the doors are closed.

The lights turn off after about 30 seconds in the following situations:

- When you unlock the driver's door but do not open it.
- When you set the power mode to VEHICLE OFF but do not open a door.

You can change the interior lights dimming time.

Models with Display Audio without Google built-in

How to Customize the Vehicle Settings P. 375

Models with Display Audio with Google built-in

How to Customize the Vehicle Settings P. 477

The interior lights turn off immediately in the following situations:


- When you lock the driver's door.
- When you close the driver's door in ACCESSORY mode.
- When you set the power mode to ON.

If you leave any of the doors open in VEHICLE OFF mode, the interior lights turn off after about 15 minutes.

To avoid draining the 12-volt battery, do not leave the interior light on for an extended length of time when the power system is off.


Continued

■ Map Light Switches

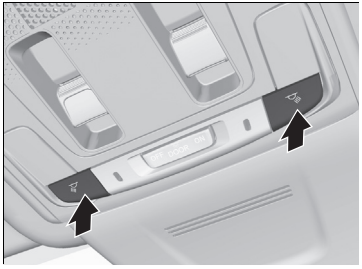

■ Front seat

The map lights can be turned on and off by pressing the switches.

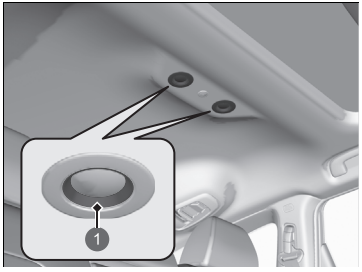

■ Rear seat


The map lights can be turned on and off by touching the map lights.

❶ Touch

Map Light Switches

When the front interior light switch is in the door activated position and any door is open, the map light will not turn off when you press the switches or touch the rear map lights.


■ Luggage Area Lights

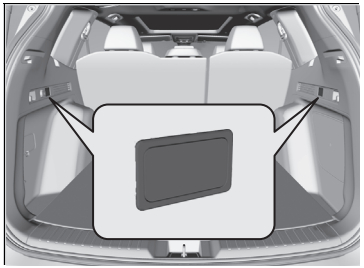

The luggage area lights come on when you open the tailgate.

Storage Items

■ Glove Box

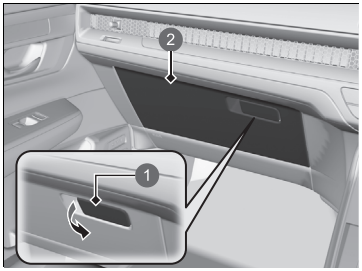

Pull the handle to open the glove box.

❶ Handle
❷ Glove Box


Glove Box

⚠WARNING


An open glove box can cause serious injury to your passenger in a crash, even if the passenger is wearing the seat belt.

Always keep the glove box closed while driving.

■ Console Compartment

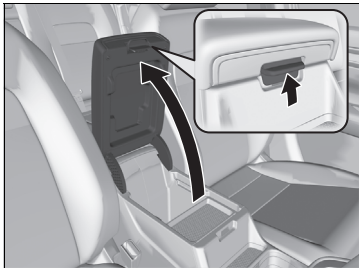

Pull the handle to open the console compartment.

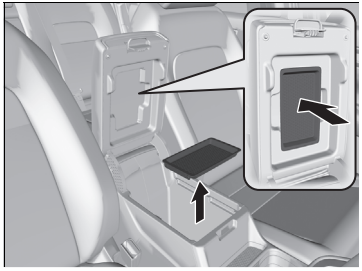


■ Removable tray

The tray can be removed and stored on the bottom surface of the armrest.


Continued

■ Beverage Holders

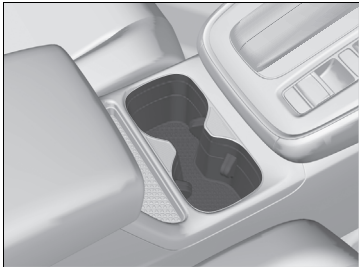


■ Front seat beverage holders

Located in the console between the front seats.

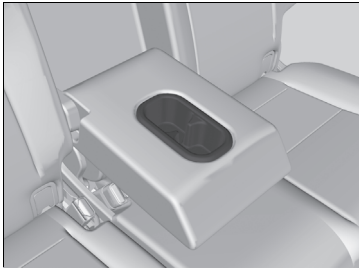

■ Rear seat beverage holders

Fold the armrest down to use the rear seat beverage holders.

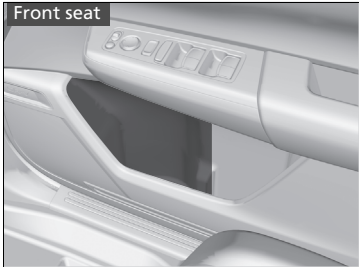

■ Door beverage holders


Located on both of the front and rear door side pockets.

Beverage Holders


NOTICE

Spilled liquids can damage the upholstery, carpeting, and electrical components in the interior.

Be careful when you are using the beverage holders. Hot liquid can scald you.

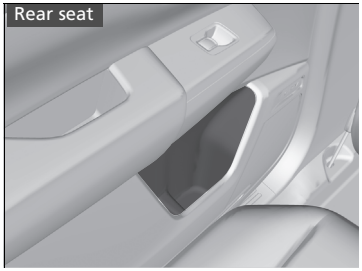

Coat Hook

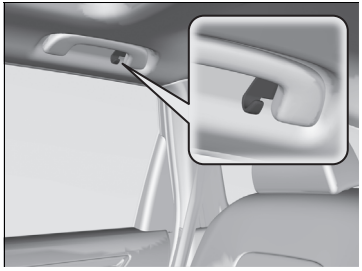


There is a coat hook on the driver side rear grab handle.

Coat Hook

The coat hook is not designed for large or heavy items.

Continued

■ Tie-down Anchorages

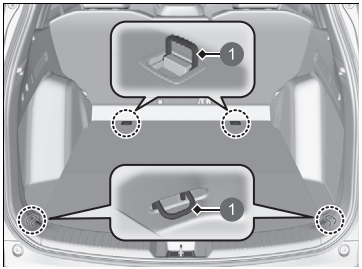


The tie-down anchorages on the luggage area floor can be used to install a net for securing items.

❶ Anchorages

Tie-down Anchorages

Do not let anyone access items in the luggage area while driving. Loose items can cause injury if you have to brake hard.

■ Luggage Hooks

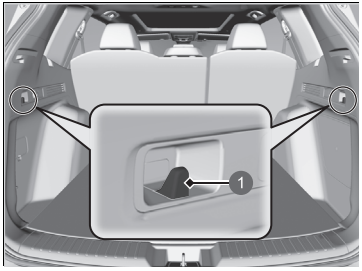

The luggage hooks on the both sides of the luggage area can be used to hang a light items.


❶ Hook

Luggage Hooks

NOTICE


Do not hang a large object or an object that weighs more than 3 kg on the side luggage hooks. Hanging heavy or large objects may damage the hooks.

■ Sunglasses Holder

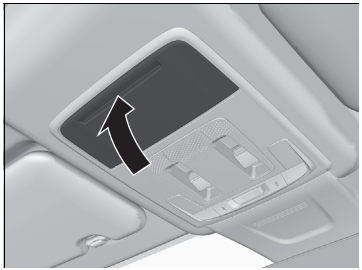

To open the sunglasses holder, press and release the indent. To close, press it again until it latches.

You can store eyeglasses and other small items in this holder.

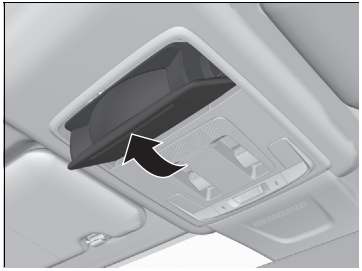

■ Conversation mirror*

The sunglasses holder comes with a mirror. Open the sunglasses holder fully, then push it back to the first detent.

You can use the mirror to view the rear seats.


Sunglasses Holder

Keep the holder closed while driving except when accessing stored items.

* Not available on all models

Continued


■ Luggage Floor Box

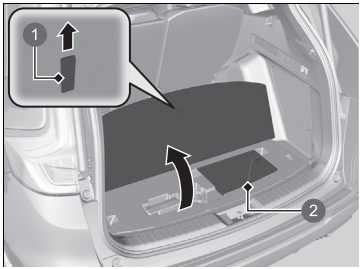


Pull the strap on the floor lid and open the lid.

❶ Strap
❷ Luggage Floor Box

■ Luggage Area Cover*

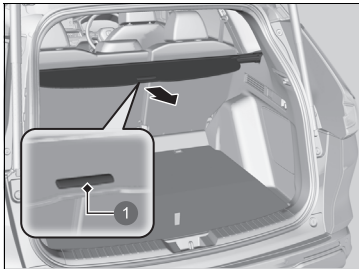

❶ Handle

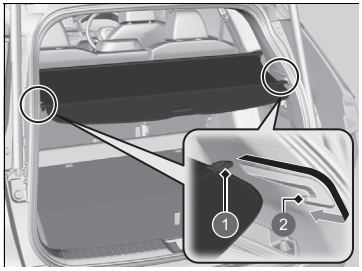

❶ Mounting Rod
❷ Hook

The luggage area cover can be used to conceal items in the luggage area and protect them from direct sunlight.

■ To extend:
Slightly lift up on the handle at the centre edge of the cover to unhook each end, then pull the cover rearward and clip the mounting rods in the hooks at both sides of the tailgate opening.

■ To retract:
Slip the rods out of the hooks, then slowly roll it back until it is completely retracted.

Luggage Area Cover*

Do not let anyone access items in the luggage area while driving. Loose items can cause injury if you have to brake hard.


Do not stack objects higher than the top of the seat in the luggage area. They could block your view and be thrown about the vehicle during a sudden stop.

To prevent luggage area cover damage:
- Do not place items on the luggage area cover.
- Do not put weight on the luggage area cover.

Be sure that each mounting rod sets in its respective retention groove when you retract the rear luggage cover. If they are not set in the grooves, the rods may rattle as they contact the surrounding surfaces.

* Not available on all models

Continued

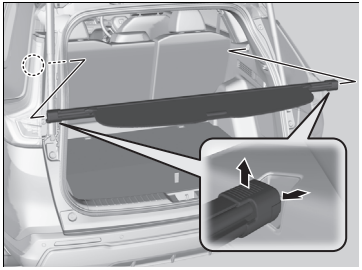


■ **To remove:**

Push either end of the housing inward, then lift it out of its position.


Other Interior Convenience Items

■ Accessory Power Sockets

The accessory power sockets can be used when the power mode is in ACCESSORY or ON.

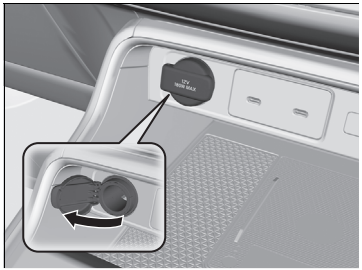

■ Console panel
Open the cover to use it.

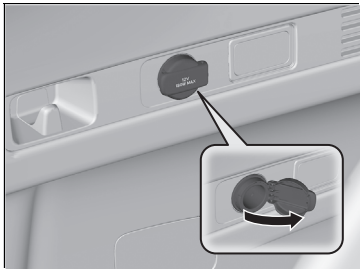

■ Luggage area
Open the cover to use it.

Accessory Power Sockets

NOTICE
Do not insert an automotive type cigarette lighter element. This can overheat the accessory power socket.

The accessory power socket is designed to supply power for 12-volt DC accessories that are rated 180 watts (15 amps) or less.


To prevent 12-volt battery drain, only use the accessory power socket with the power system on.

When the accessory power socket is not in use, close the cover to prevent any small foreign objects from getting into the accessory power socket.

Continued

■ Wireless Charger

To use the wireless charger, the power mode must be in ACCESSORY or ON. Charge any devices compatible with Qi wireless charging on the area indicated by the mark as follows:

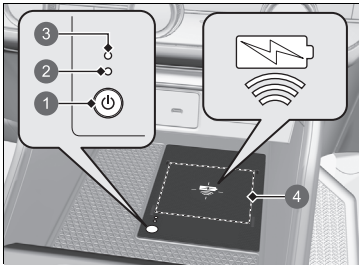

❶ (Power) Button
❷ Green Indicator
❸ Amber Indicator
❹ Charging Area

1. To turn the system on and off, press and hold the (power) button.
▶ When the system is activated, the green indicator light comes on.
2. Place the device you want to charge on the charging area.
▶ The system will automatically start charging the device, and the amber indicator light will come on.
▶ Make sure that the device is compatible with the system, and placed with the chargeable side in the centre of the charging area.
3. When charging is completed, the green indicator light will come on.
▶ Depending on the device, the amber indicator light will stay on.

Wireless Charger

⚠CAUTION

Metal objects between the charge pad and the device to be charged will get hot and can burn you.

- Always remove foreign objects from the charge pad before charging the device.
- Be sure the surface is clear of dust and other debris before charging.
- Do not spill liquids (e.g., water, drinks, etc.) on the charger and the device.
- Do not use oil, grease, alcohol, benzine, or thinner for cleaning the charge pad.
- Do not cover the system with towels, clothing, or other objects while charging etc.
- Avoid spraying aerosols which may come in contact with the charge pad surface.

In order to use safely:

- Remove any metal objects from the charge pad before charging a device.
- Do not open the charger case.
- Do not use the charger if it malfunctions. Contact your dealer.

appears on the audio/information screen when the device is being charged by the wireless charger.

■ When charging does not start

Perform one of the solutions in the following table.

Indicator		Cause	Solution
Green & Amber	Blinking simulta-neously	There is an obstacle(s) between the charging area and the device.	Remove the obstacle(s).
		The device is not within the charging area.	Pick up and reset the device to the centre of the charging area where is located.
		The temperature of the wireless charger pad increases.	Temporarily suspend charging the device. Wait for the temperature to drop and attempt to charge the device again.
Amber	Blinking	The wireless charger is faulty.	Contact a dealer for repairs.

Continued

Wireless Charger

If the charger interferes with radio communications, attempt to correct the interference:

- Press and hold the switch on the charger for a few seconds to turn off the charger.

This system consumes a lot of power. Do not use the system for a long time when the power system is off. This may weaken the 12-volt battery, making it difficult to turn the power system on.

When using the wireless charger, check the user's manual that came with the compatible device you want to charge.

Wireless Charger

The wireless charger can support up to 15 W, but the charging rate varies based on the device and other conditions.

NOTICE

Do not place any magnetic recording media or precision machines within the charging area while charging.
The data on your cards such as credit cards can be lost because of the magnetic effect. Also, precision machines such as watches can be affected.

"Qi" and marks are the registered trademarks owned by Wireless Power Consortium (WPC).

In the following cases, charging may stop or not start:
- The device is already fully charged.
- The temperature of the device is extremely high while charging.
- You are at a place that emits strong electromagnetic waves or noises, such as a TV station, electric power plant, or petrol station.
- The device has a cover, case, or accessories which are not compatible with wireless charging.

A device may not charge if the size or shape of its chargeable side is not appropriate for use with the charging area.

Not all devices are compatible with the system.

Wireless Charger

During the charging phase, it is normal for the charging area and device to heat up.

Charging may be briefly interrupted when:
- All the doors and the tailgate are closed
  - to avoid interference with the proper functioning of the keyless access system.
- The position of the device is altered.

Do not charge more than one device at a time on a charging area.

If the device becomes too hot and its battery protection function activates, it may charge extremely slowly or no longer charge.
The temperature at which the battery protection function activates depends on the device.


Models with Display Audio without Google built-in



Burn risk:
Any metal objects placed between pad and device may become hot.

Continued

■ Heated Steering Wheel*

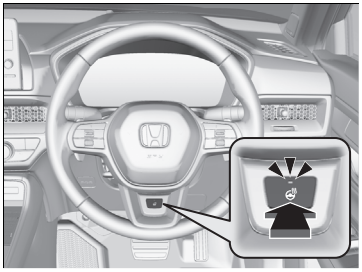

The heated steering wheel can be used when the power mode is in ON.

Press the button on the lower side of the steering wheel.

When a comfortable temperature is reached, press the button again to turn it off.

The heated steering wheel is turned off every time you activate the power system, even if you turned it on the last time you drove the vehicle.


Heated Steering Wheel*

Do not use the heated steering wheel continuously when the power system is off. Under such conditions, the 12-volt battery may be weakened, making the power system difficult to start.

* Not available on all models

Front Seat Heaters*/Ventilators*



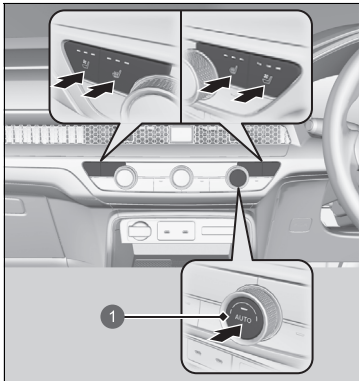

❶ **AUTO** Button

The seat heaters or ventilators can be used when the power mode is in ON.
The seat heaters: Use them to warm up the seat.
The seat ventilators: Use them when you want to ventilate the surface of the seats. When used with the air conditioning, the surface of the seats will become easier to cool.

Press the seat heater or the seat ventilator button:
Once - The HI setting (three indicators on)
Twice - The MID setting (two indicators on)
Three times - The LO setting (one indicator on)
Four times - The OFF setting (no indicators on)

When the power mode is turned on after it is turned off, the previous setting is maintained.

Models with Display Audio with Google built-in

Press the **AUTO** button:
Both the air conditioner and seat temperature will automatically change to the setting most suitable to the ambient environment.

▶ When any seat heater or seat ventilation button is pressed, settings will switch to manual mode.

Front Seat Heaters*/Ventilators*

⚠WARNING

Heat induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower limb nerve damage, or paralysis) or with sensitive skin should not use seat heaters.

Do not use the seat heaters even in LO when the power system is off. Under such conditions, the 12-volt battery may be weakened, making the power system difficult to start.

After a certain period of time, the strength setting for the front seat heaters will automatically be reduced by one level at a time until the front seat heaters shut off. The elapsed time varies according to the interior environment.

Models with Display Audio with Google built-in


As time passes, the set temperature will fall, and eventually the seat heater will shut off.

The seat heater and seat ventilation may turn on if sensors detect weight on the passenger seat due to luggage, etc.

* Not available on all models

Continued

■ Rear Seat Heaters*

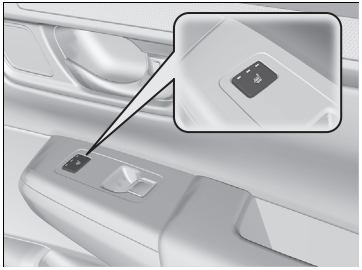

The seat heaters can be used when the power mode is in ON.

There is no heater in the rear centre seating position.

Press the seat heater button:
Once - The HI setting (three indicators on)
Twice - The MID setting (two indicators on)
Three times - The LO setting (one indicator on)
Four times - The OFF setting (no indicators on)

Front Seat Heaters*/Ventilators*

Models with Display Audio with Google built-in

To prevent automatic activation, you can turn off automatic climate control for the front seat.

How to Customize the Vehicle Settings
P. 477

Rear Seat Heaters*

⚠WARNING

Heat induced burns are possible when using seat heaters.


Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower limb nerve damage, or paralysis) or with sensitive skin should not use seat heaters.

Do not use the seat heaters even in LO when the power system is off. Under such conditions, the 12-volt battery may be weakened, making the power system difficult to start.

After a certain period of time, the strength setting for the rear seat heaters will automatically be reduced by one level at a time until the rear seat heaters shut off. The elapsed time varies according to the interior environment.

 * Not available on all models

Sun Visor

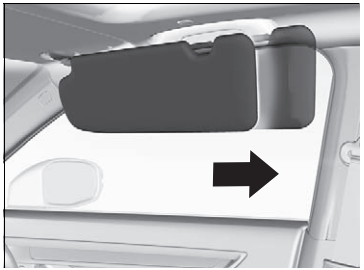

The sun visor can be extended horizontally.


Using Automatic Climate Control

The automatic climate control system maintains the interior temperature you select. The system also selects the proper mix of heated or cooled air that raises or lowers the interior temperature to your preference as quickly as possible.

Use the system when the power system is on.

1. Press the **AUTO** button.
2. Adjust the interior temperature using the driver's side or passenger's side temperature control dial.
3. Press the ON/OFF (on/off) button to cancel.

Models with MAX COOL button

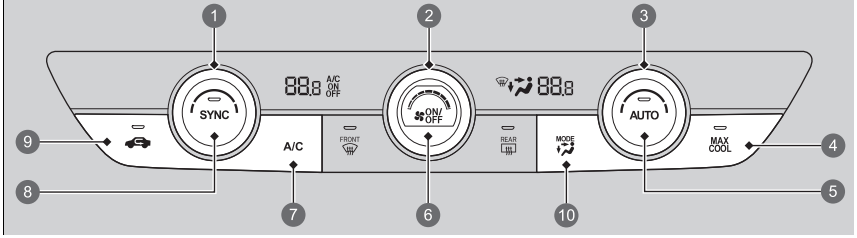

1. Passenger's Side Temperature Control Dial*1
2. Fan Control Dial
3. Driver's Side Temperature Control Dial*1
4. **MAX COOL** Button*1
5. **AUTO** Button*1
6. **ON/OFF** Button
7. **A/C** (Air Conditioning) Button*1
8. **SYNC** Button*1
9. Recirculation Button*1
10. **MODE** Button*1
    - Air flows from dashboard and back of the centre console vents
    - Air flows from dashboard, floor, and back of the centre console vents
    - Air flows from floor vents
    - Air flows from floor and windscreen demister vents

*1:Right-hand drive types shown. For the left-hand drive types, these buttons are located at the symmetrically opposite to the right-hand drive type.

* Not available on all models

Using Automatic Climate Control

If any buttons are pressed while using the climate control system in auto, the function of the button that was pressed will take priority.
The auto button indicator will go off, but functions unrelated to the button that was pressed will be controlled automatically.

To prevent cold air from blowing in from outside, the fan may not start immediately when the **AUTO** button is pressed.

Models without MAX COOL button

If the interior is very warm, you can cool it down more rapidly by partially opening the windows, turning the system on auto, and setting the temperature to low. Change the fresh air mode to recirculation mode until the temperature cools down.

Models with MAX COOL button


If the interior is very warm, you can cool it down more rapidly by partially opening the windows, press the **MAX COOL** button.

When you set the temperature to the lower or upper limit, **Lo** or **Hi** is displayed.

For directions on the proper handling of the front seat heaters* and seat ventilation*, refer to the following page.

Front Seat Heaters*/Ventilators* P. 295

Models without MAX COOL button

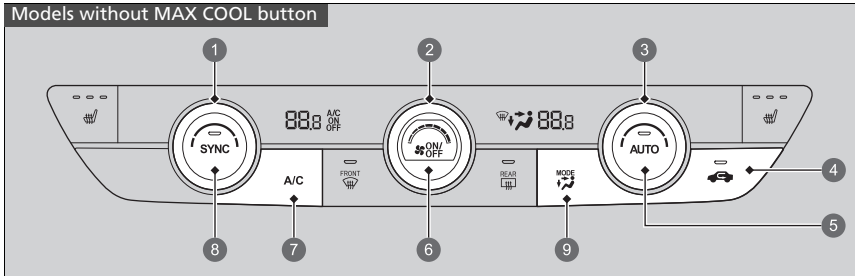

1. Passenger's Side Temperature Control Dial*1
2. Fan Control Dial
3. Driver's Side Temperature Control Dial*1
4. Recirculation Button*1
5. **AUTO** Button*1
6. **ON/OFF** Button
7. **A/C** (Air Conditioning) Button*1
8. **SYNC** Button*1
9. **MODE** Button*1
   - Air flows from dashboard and back of the centre console vents
   - Air flows from dashboard, floor, and back of the centre console vents
   - Air flows from floor vents
   - Air flows from floor and windscreen demister vents

*1:Right-hand drive types shown. For the left-hand drive types, these buttons are located at the symmetrically opposite to the right-hand drive type.

■ Switching between the recirculation and fresh air modes

Press the (recirculation) button and switch the mode depending on environmental conditions.

Recirculation mode (indicator on): Recirculates air from the vehicle's interior through the system.

Fresh air mode (indicator off): Maintains outside ventilation. Keep the system in fresh air mode in normal situations.


Continued

Using Automatic Climate Control

Pressing the ON/OFF button switches the climate control system between on and off. When turned on, the system returns to your last selection.

While ECON mode is active, the climate control system may have reduced cooling performance.

■ Defrosting the Windscreen and Windows

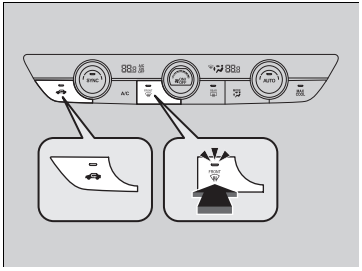

African, Middle Eastern, Oceanian, Bangladeshi, and Bhutanese models

Pressing the FRONT (windscreen demister) button turns the air conditioning system on and automatically switches the system to fresh air mode.


Models for other countries

Pressing the FRONT (windscreen demister) button turns the air conditioning system on.
Press the button (indicator off) to switch the fresh air mode.

All models

Press the FRONT button again to turn off. The system returns to the previous settings.

■ To rapidly defrost the windows

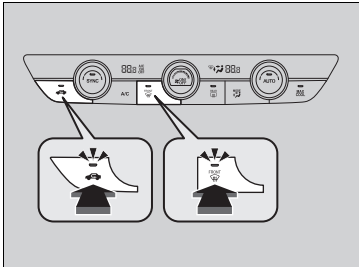

1. Press the FRONT button (indicator on).
2. Press the button (indicator on).

Defrosting the Windscreen and Windows

For your safety, make sure you have a clear view through all the windows before driving.

Do not set the temperature near the upper or lower limit.
When cold air hits the windscreen, the outside of the windscreen may fog up.

To rapidly defrost the windows


After defrosting the windows, switch over to fresh air mode. If you keep the system in recirculation mode, the windows may fog up from humidity. This impedes visibility.

■ Synchronization Mode

You can set the temperature synchronously for the driver's side and the passenger's side in synchronization mode.

1. Press the **SYNC** button.
▶ The system switches to synchronization mode.
2. Adjust the temperature using the driver's side temperature control dial.

Press the **SYNC** button or adjust the interior temperature using the passenger's side temperature control dial to return to dual mode.

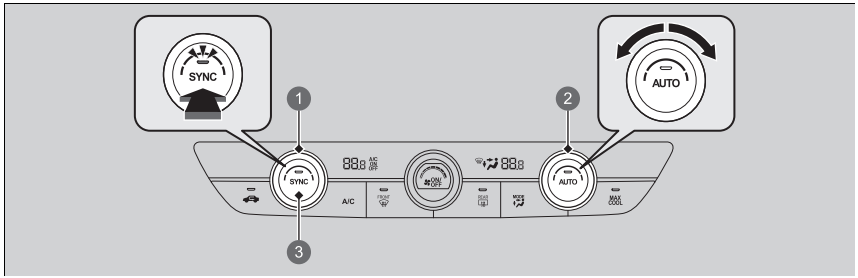

❶ Passenger's Side Temperature Control Dial
❷ Driver's Side Temperature Control Dial
❸ **SYNC** Button


Synchronization Mode

When the system is in dual mode, the driver's side temperature and the passenger's side temperature can be set separately.

When you press the FRONT button, the system changes to synchronization mode.

Continued

■ Plasmacluster*

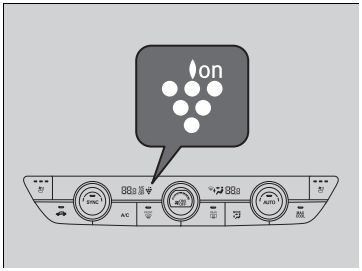


Plasmacluster turns on when the climate control system or fan is on.

Plasmacluster*

Plasmacluster is a trademark of Sharp Corporation.


 * Not available on all models

Automatic Climate Control Sensors

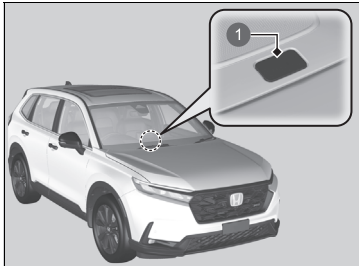

The automatic climate control system is equipped with a sensor. Do not cover or spill any liquid on them.

❶ Sensor

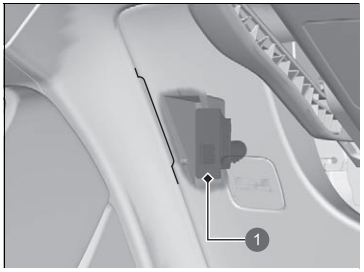

❶ Sensor

Features


This chapter describes how to operate technology features.

Audio System..... 306
Display Audio 308
Display Audio with Google built-in.....407
Audio Error Messages..... 504
General Information on the Audio System..... 506

About Your Audio System

The audio system features FM/AM radio and Digital Audio Broadcasting (DAB) service*. It can also play USB flash drives, iPod, iPhone, *Bluetooth*® devices, and smartphones.

You can operate the audio system from the buttons and knobs on the panel, the remote controls on the steering wheel or the icons on the touchscreen interface.

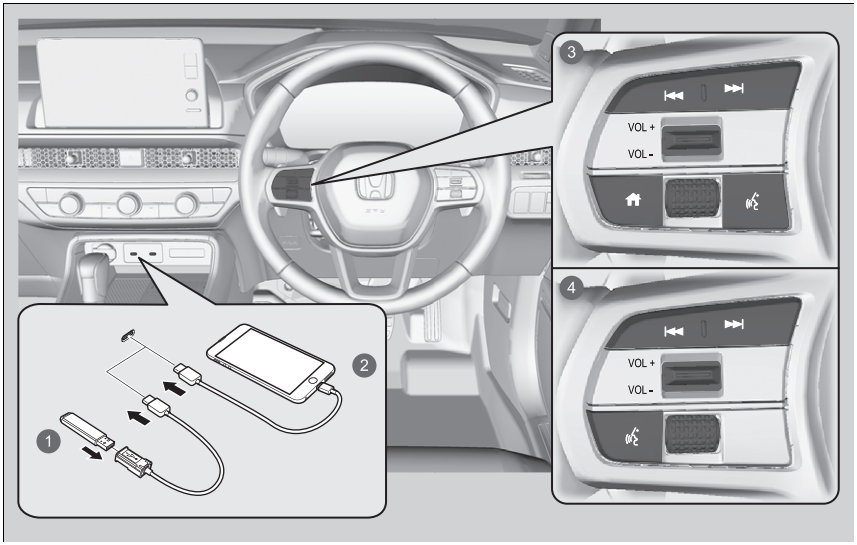

❶ USB Flash Drive
❷ iPod
❸ Remote Controls*1
❹ Remote Controls*2

*1: Models with A-type meter
*2: Models with B-type meter

* Not available on all models

Audio System Theft Protection*

The audio system is disabled when it is disconnected from the power source, such as when the battery is disconnected or goes dead. In certain conditions, the system may display a code entry screen. If this occurs, reactivate the audio system.


■ Reactivating the audio system

1. Set the power mode to ON.
2. Turn on the audio system.
3. Press and hold the **VOL/ ⏻ AUDIO** (Volume/Power) knob for more than two seconds.
▶ The audio system is reactivated when the audio control unit establishes a connection with the vehicle control unit. If the control unit fails to recognise the audio unit, you must go to a dealer and have the audio unit checked.

* Not available on all models


Start Up

The Display Audio starts automatically when you set the power mode to ACCESSORY or ON. At start-up, the disclaimer screen will be displayed.

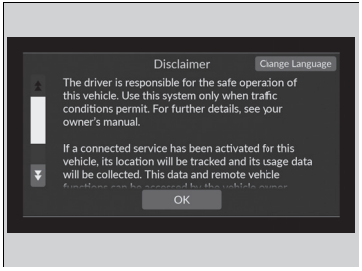

Select **OK**.

▶ If there is no registered device, select **OK** and the *Bluetooth*® pairing screen will be displayed.

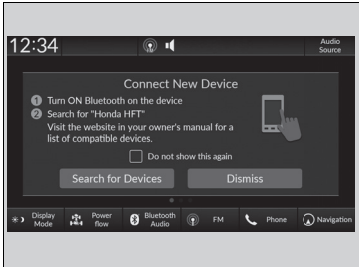

■ To pair a mobile phone (when there is no phone paired to the system)

1. Make sure your phone is in search or discoverable mode.

2. Select **Honda HFT** from your phone.

▶ If you want to pair a phone from this Display Audio, select **Search for Devices**, and then select your phone when it appears on the list.

▶ If you check the box with **Do not show this again**, this screen will not be displayed.

Basic Operation

Audio System Function

To use the audio system function, the power mode must be in ACCESSORY or ON.



❶ **All Apps**
❷ Status Icons
❸ App Shortcut Icons
❹ Arrow
❺ HOME (Home) Button
❻ BACK (Back) Button
❼ **VOL**/ ⏻ **AUDIO** (Volume/Power) Knob
❽ ⏮ / ⏭ (Seek/Track) Buttons
❾ Mode Change Switch Icons
❿ ☀ **Display Mode** Icon

Audio System Function


This screen is shown for the right-hand drive models. For the left-hand drive models, these are located at the symmetrically opposite to the right-hand drive model.

Continued

All Apps: Displays all apps.
Status Icons: Show the indicators of the information for the vehicle, connected phones, etc. in the header area.
App Shortcut Icons: Display the app shortcut icons.
Arrow: Displays the next pages on the audio/information screen.
(Home) Button: Presses to go to the home screen.
(Back) Button: Presses to go back to the previous screen.
VOL/ AUDIO (Volume/Power) Knob: Turns the audio system on and off and turns to adjust the volume.
/ (Seek/Track) **Buttons**: Press to change station, song or file.
Mode Change Switch Icons: Display icons to change the mode directly.
Display Mode Icon: Changes the audio/information screen brightness. Select once and select or to make an adjustment.

■ USB Ports

On the front panel

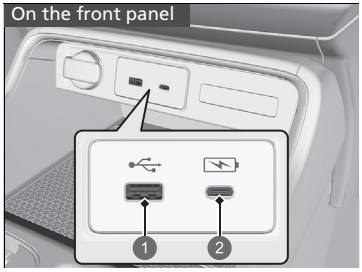


❶ Playing audio files and connecting compatible phones
❷ Only for charging devices

■ USB Charging/Connector Port ( )

The USB port (2.5A) is for charging devices, playing audio files, and connecting compatible phones with Apple CarPlay or Android Auto.

▶ To prevent any potential issues, be sure to use an Apple MFi Certified Lightning Connector for Apple CarPlay. For Android Auto, the USB cables should be certified by USB-IF to be compliant with USB 2.0 Standard.

On the back of the console compartment

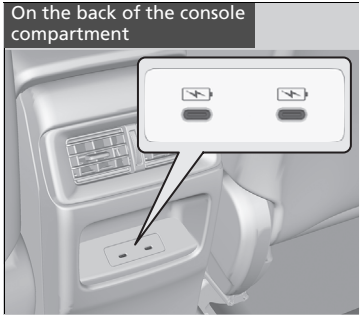

■ USB Charging Port ( )

These USB ports (3.0A) are only for charging devices.

▶ You cannot play music even if you have connected music players to them.

USB Ports

- Do not leave the iPod or USB flash drive in the vehicle. Direct sunlight and high temperatures may damage it.
- We recommend that you use a USB cable if you are attaching a USB flash drive to the USB port.
- Do not connect the iPod or USB flash drive using a hub.
- Do not use a device such as a card reader or hard disk drive, as the device or your files may be damaged.
- We recommend backing up your data before using the device in your vehicle.
- Displayed messages may vary depending on the device model and software version.
- Some devices may not work even if they are connected to the USB ports.

USB charge


The USB port can supply up to 2.5A/3.0A of power. It does not output 2.5A/3.0A unless requested by the device.
For amperage details, read the operating manual of the device that needs to be charged.

Under certain conditions, a device connected to the port may generate noise to the radio station you are listening to.

Continued

■ Audio Remote Controls


Models with A-type meter

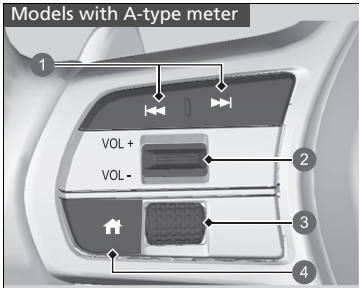

Allow you to operate the audio system while driving. The information is shown on the driver information interface.

❶ |◀◀ / ▶▶| (Seek/Skip) Buttons
❷ **VOL** + **/VOL** − (Volume) Switch
❸ Left Selector Wheel
❹ ⌂ (Home) Button

Models with B-type meter

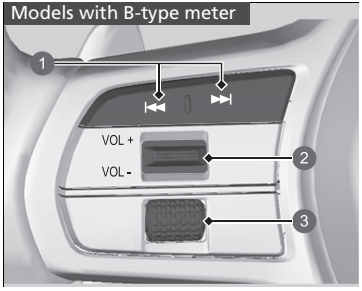

❶ |◀◀ / ▶▶| (Seek/Skip) Buttons
❷ **VOL** + **/VOL** − (Volume) Switch
❸ Left Selector Wheel

Audio Remote Controls

Some modes appear only when an appropriate device or medium is used.

Depending on the *Bluetooth*® device you connect, some functions may not be available.

Models with A-type meter

Press the ⌂ (home) button to go back to the home screen of the driver information interface.

VOL ＋/VOL －(Volume) Switch
Press Up: To increase the volume.
Press Down: To decrease the volume.

Models with A-type meter

Left Selector Wheel

- When selecting the audio mode

Press the (home) button, then roll up or down to select (audio) on the driver information interface, and then press the left selector wheel.

Roll up or down:
To cycle through the audio modes, roll up or down and then press the left selector wheel.

Models with B-type meter

Left Selector Wheel
Roll up or down:
To cycle through the audio modes, roll up or down and then press the left selector wheel.

Continued

|◀◀/▶▶| (Seek/Skip) Buttons

- When listening to the radio
  Press ▶▶|: To select the next preset radio station.
  Press |◀◀: To select the previous preset radio station.
  Press and hold ▶▶|: To select the next strong station.
  Press and hold |◀◀: To select the previous strong station.
- When listening to a wired connection, USB flash drive, *Bluetooth*® Audio, or Smartphone Connection
  ▶ Depending on a connected device, operations may be changed.
  Press ▶▶|: To skip to the next song.
  Press |◀◀: To go back to the previous song.
- When listening to a USB flash drive
  Press and hold ▶▶|: To skip to the next folder.
  Press and hold |◀◀: To go back to the previous folder.

Audio/Information Screen

Displays the audio status and clock. From this screen, you can go to various setup options.



Audio/Information Screen


Touchscreen Operation

- Use simple gestures - including touching, swiping, and scrolling - to operate certain audio functions.
- Some items may be grayed-out during driving to reduce the potential for distraction.
- You can select them when the vehicle is stopped.
- Wearing gloves may limit or prevent touchscreen response.

You can change the touchscreen sensitivity setting.
Customized Features P. 366

Continued

■ App Shortcut Function

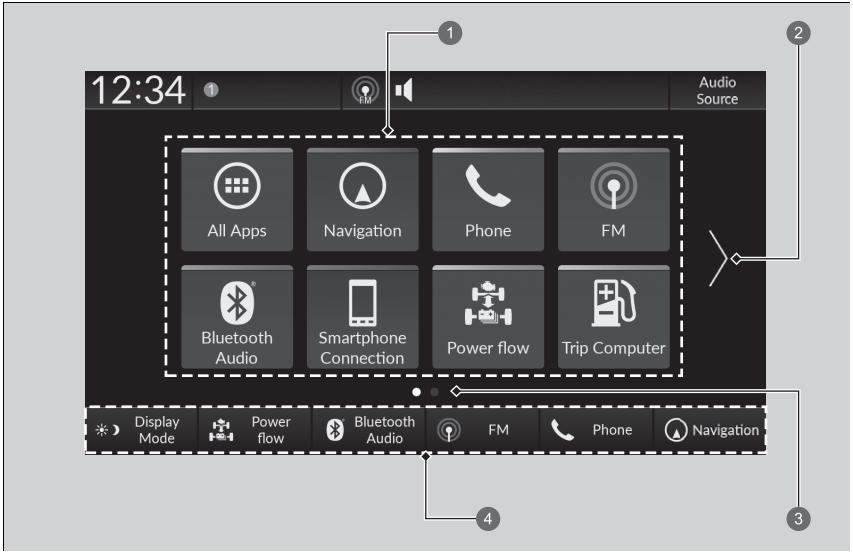

❶ App Shortcut Icons
❷ Arrow
❸ Page Indicator
❹ Mode Change Switches

■ To move to the next screen
Selecting < or >, or swiping the screen left or right changes to the next screen.


App Shortcut Function

The home screen can be added up to 6 pages.

Press the HOME button to go directly back to the first page of the home screen from any page.

■ To add app icons on the home screen

App icons can be added on the home screen.

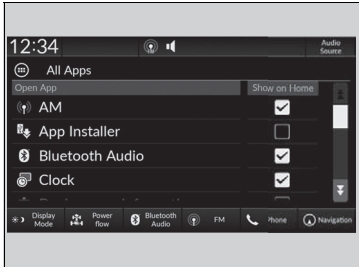

1. Press the HOME button.
2. Select **All Apps**.
3. Select an app to check or uncheck it.

Continued

■ To move icons on the home screen

You can change icon locations on the home screen.




1. Press the HOME button.
2. Select and hold an icon.
   ▶ The screen switches to the customization screen.
3. Drag and drop the icon to where you want it to be.
4. Select **Done**.
   ▶ The screen will return to the home screen.

To move icons on the home screen

Select **Tips** to show tips. To hide them, select it again.

■ To remove icons on the home screen

You can delete the icons on the home screen.

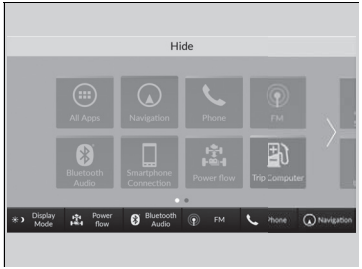

1. Press the HOME button.
2. Select and hold an icon.
   ▶ The screen switches to the customization screen.
3. Drag and drop the icon you want to remove to the header area.
   ▶ The icon is removed from the home screen.
4. Select **Done**.
   ▶ The screen will return to the home screen.

To remove icons on the home screen

Apps will not be deleted by deleting the icon on the home screen.

Select **Tips** to show tips. To hide them, select it again.

Continued

■ To shortcut icons on the home screen

You can store up to five icons on the bottom of the home screen.



1 Mode Change Switches


1. Press the HOME button.
2. Select and hold an icon.
   ▶ The screen switches to the customization screen.
3. Drag and drop the icon you want to store to the bottom of the home screen.
   ▶ The icon is stored on the mode change switch area.
4. Select **Done**.
   ▶ The screen will return to the home screen.

To shortcut icons on the home screen

Select **Tips** to show tips. To hide them, select it again.

■ Status Area


Shows the indicators of the information for the vehicle, connected phones, etc. in the header area. You can confirm the detail information by selecting these icons.

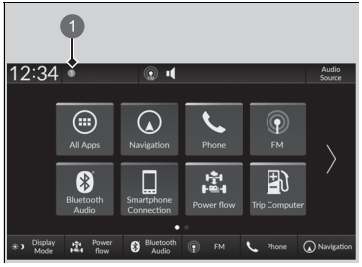

1. Select the system status icon.
   ▶ The status area appears.
2. Select an item to see the details.
3. Press the BACK button or select the system status icon to close the area.

1 System Status Icon

■ Selecting an Audio Source

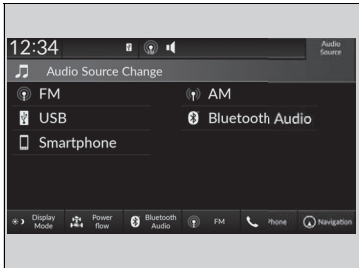


Select **Audio Source** in the header area, then select an icon on the source list to switch the audio source.

Clock Setup

■ Adjusting the Clock

You can adjust the time manually and set the wallpaper of the clock in the audio/information screen.

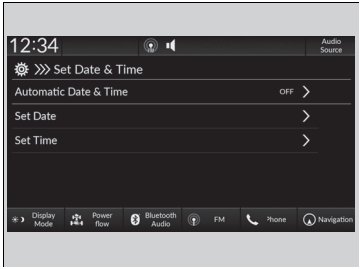

1. Press the HOME button.
2. Select **General Settings**.
3. Select **System**.
4. Select **Date & Time**.
5. Select **Set Date & Time**.
6. Select **Automatic Date & Time**, then select **OFF**.

To adjust date:
7. Select **Set Date**.
8. Select ▲/▼.
9. Select **Save** to set the date.

To adjust time:
7. Select **Set Time**.
8. Select ▲/▼.
9. Select **Save** to set the time.

Adjusting the Clock


The clock is automatically updated through the audio system.

You can also adjust the clock by touching the clock displayed on the header area of the audio/information screen, **Clock** displayed on the home screen, or **All Apps**.

1. Touch the clock on the screen.
   The clock screen of the face-type appears.
2. Select **Settings**.
3. Select **Date & Time**.
4. Select **Set Date & Time**.
5. Select **Automatic Date & Time**, then select **OFF**.
6. Select **Set Date** or **Set Time**.
7. Adjusting the dates, hours and minutes by selecting ▲/▼.
8. Select **Save** to set the time.

You can customise the clock display.
System P. 367

■ Clock Wallpaper Setup

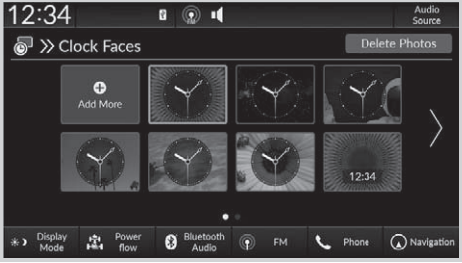

■ Import clock wallpaper

1. Connect the USB flash drive to the USB port.
USB Ports P. 311
2. Press the HOME button.
3. Select **Clock**.
▶ If **Clock** is not displayed on the home screen, select **All Apps**.
4. Select **Settings**.
5. Select **Clock Faces**.
6. Select **Add More**.
▶ The image of the pictures stored in the USB flash drive are displayed on the list.
7. Select a desired picture to import.
▶ Multiple pictures can be selected at the same time.
8. Select **OK**.
▶ The selected pictures are displayed.
9. Select **Transfer**.
▶ It will return to the clock wallpaper setting screen.

Clock Wallpaper Setup

- When importing wallpaper files, the image must be in the USB flash drive's root directory. Images in a folder cannot be imported.
- The file name must be less than 64 bytes.
- The file format of the image that can be imported is BMP (bmp) or JPEG (jpg).
- The individual file size limit is less than 10 MB.
- If the USB flash drive does not have any pictures, the message appears.
- Up to 11 pictures can be imported.
- The maximum image size is 4,096 x 2,304 pixels. If the image size is less than 1,280 x 720, the image is displayed in the middle of the screen with the extra area appearing in black.

Continued

■ **Select clock wallpaper**

1. Press the HOME button.
2. Select **Clock**.
▶ If **Clock** is not displayed on the home screen, select **All Apps**.
3. Select **Settings**.
4. Select **Clock Faces**.
5. Select a desired picture to set.
▶ The preview is displayed on the screen.
6. Select **Save**.
▶ The clock screen which the wallpaper has been set is displayed.

■ **Delete clock wallpaper**

1. Press the HOME button.
2. Select **Clock**.
▶ If **Clock** is not displayed on the home screen, select **All Apps**.
3. Select **Settings**.
4. Select **Clock Faces**.
5. Select **Delete Photos**.
6. Select a desired picture to delete.
▶ Multiple pictures can be selected at the same time.
7. Select **OK**.
▶ The selected pictures are displayed.
8. Select **Delete**.
▶ It will return to the clock wallpaper setting screen.

Adjusting the Sound

1. Press the HOME button.
2. Select an audio source icon.
3. Select **Sound**.

Select an item from the following choices:
- **Bass / Treble:** Treble, Midrange, Bass
- **Audio Zones & Balance / Fader**[*1]**:** Driver Only, Front Only, Rear Only, Full Vehicle, Balance, Fader
- **Bose Centerpoint**[*1]**:** Turns the Bose Centerpoint ON and OFF.
- **Bose Dynamic Speed Compensation**[*1]**:** Sets the amount of volume increase.
- **Balance / Fader**[*2]**:** Balance, Fader
- **Speed Volume Compensation**[*2]**:** Sets the amount of volume increase.

*1: Models with BOSE AMP
*2: Models with Normal AMP

Adjusting the Sound

The **Bose Dynamic Speed Compensation**[*1]**/Speed Volume Compensation**[*2] (SVC) adjusts the volume level based on the vehicle speed. As you go faster, audio volume increases. As you slow down, audio volume decreases.

You can also adjust the sound by the following procedure.
1. Press the HOME button.
2. Select **General Settings**.
3. Select **Sound**.

Audio Zones & Balance / Fader[*1]
You can change where the sound comes from by selecting one of the speaker options below:
- **Full Vehicle:** All the speakers emit sound.
- **Driver Only:** Only the speaker by the driver's seat emits sound.
- **Front Only:** Only the front speakers emit sound.
- **Rear Only:** Only the rear speakers emit sound.

To reset each setting for **Bass / Treble**, **Audio Zones & Balance / Fader**[*1], **Bose Dynamic Speed Compensation**[*1], **Balance / Fader**[*2], and **Speed Volume Compensation**[*2], select **Default** on each setting screen.

Display Setup

You can set the screen brightness.

■ Switching Display Mode Manually

Select **Display Mode**.

▶ The brightness bar is displayed for a few seconds.

▶ Select or to adjust the brightness.

▶ Select **Display OFF** to turn off the screen. To turn on the screen, press the HOME or BACK button.

Display Setup

You can adjust the screen brightness by sliding or tapping on the brightness bar.

You can also change the screen brightness on the following procedures.

1. Press the HOME button.
2. Select **General Settings**.
3. Select **Display**.
4. Select the setting you want.

To reset the settings, select **Default**.

System Updates

The audio system's firmware can be updated with a Wi-Fi connection, a USB device, or the telematics control unit (TCU)* through the subscription-based service.

■ How to Update

When the audio system update is available, the notification is shown on the status area. Use the following procedure to update the system.

1. Press the HOME button.

2. Select **System Updates**.

▶ If **System Updates** is not displayed on the home screen, select **All Apps**.

▶ The system will check for updates.

▶ If the update icon is appeared on the home screen, select the status icon.

➡ **Status Area** P. 321

3. Select **Download**.

▶ A notification appears on the screen if need to user acceptance for download.

4. Select **Install Now** or **Install While Vehicle Off**.

▶ A notification appears on the screen if the update is successful.

How to Update

You can update the system via Wi-Fi, but cannot use the captive portal that requires login or agreement to the terms of use on the browser.

Your download will be cancelled if:

- Your Wi-Fi connection is severed.
- You turn off the power system when the 12-volt battery is low on power.

Your download will recommence the next time a Wi-Fi connection is established.

For 12-volt battery protection, **Install While Vehicle Off** cannot be selected when the battery is low on power. If you want to install the updated data, recharge the battery or select **Install Now**.

* Not available on all models

Continued

■ System Updates Settings

You can change or confirm system update settings.

1. Press the HOME button.
2. Select **System Updates**.
3. Select **Settings**.
4. Select the option you want to change or confirm.

The following settings can be set.

- **Automatic Download**
- **Version Status**
- **Connection Setup**
- **Update History**

How to Update Wirelessly

Wireless connection mode setup

1. Press the HOME button.
2. Select **System Updates**.
   ▶ If **System Updates** is not displayed on the home screen, select **All Apps**.
3. Select **Settings**.
4. Select **Connection Setup**.
5. Select **OK**.
6. Select an access point from the network list.
   ▶ To connect to a hotspot that is not automatically detected, select **Options** then **Add Network**.
7. Enter the password.
   ▶ If you check the **Use this network to automatically download system updates** box, you can set the network to be used for system updates.
8. Select **Connect**.

How to update

1. Press the HOME button.
2. Select **System Updates**.
   ▶ If **System Updates** is not displayed on the home screen, select **All Apps**.
3. Select **via Wireless**.
4. Select **Download**.
   ▶ A notification appears on the screen if need to user acceptance for download.
5. Select **Install Now** or **Install While Vehicle Off**.
   ▶ A notification appears on the screen if the update is successful.

Continued

■ How to Update with a USB Device

■ Download the update files from the server

1. Press the HOME button.
2. Select **System Updates**.
▶ If **System Updates** is not displayed on the home screen, select **All Apps**.
3. Select **Other Methods**.
4. Select **Via USB**.
▶ A notification appears on the screen.
5. Connect a USB device into the USB port.
▶ The inventory data is copied into the USB device.
➡ **USB Ports** P. 311
6. Remove the USB device from the USB port.
7. Connect the USB device into your computer, and then download the update files.
▶ Follow the link to download the required software update files. Refer to *https://usb.honda.com* for instructions.

■ Update the audio system

1. Press the HOME button.
2. Select **System Updates**.
3. Select **Other Methods**.
4. Select **Via USB**.
▶ A notification appears on the screen.
5. Connect the USB device with the update files into the USB port.
▶ A notification appears on the screen.
➡ **USB Ports** P. 311
6. Select **Install Now**.
▶ A notification appears on the screen if the update is successful.

How to Update with a USB Device

A USB device with a minimum of 8 GB of free space or more is recommended.

Be sure to delete any previous inventory or update files from the USB before starting the USB update process.

Voice Control Operation*

Your vehicle has a voice control system that allows hands-free operation.
The voice control system uses the (Talk) button on the steering wheel and a microphone near the map lights on the ceiling.

Voice Recognition

To achieve optimum voice recognition when using the voice control system:

- Make sure the correct screen is displayed for the voice command that you are using.
  The system recognises only certain commands.
  Available voice commands:
  Voice Portal Screen P. 332
- Close the windows and panoramic roof.
- Adjust the dashboard and side vents so air does not blow onto the microphone on the ceiling.
- Speak clearly in a natural speaking voice without pausing between words.
- Reduce any background noise if possible. The system may misinterpret your command if more than one person is speaking at the same time.

Voice Control Operation*

When you press the button, a helpful prompt asks what you would like to do. Press and release the button again to bypass this prompt and give a command.


Voice Recognition

The voice control system can only be used from the driver's seat because the microphone unit removes noises from the front passenger's side.

* Not available on all models

Continued

■ Voice Portal Screen

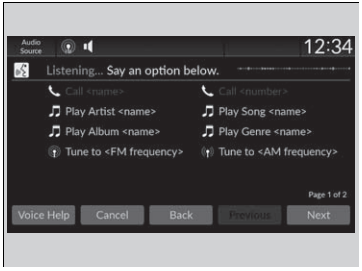

When the (talk) button is pressed, available voice commands appear on the screen.
For a complete list of commands, say "*Help*" after the beep.

Depending on the selected mode, the displayed commands are different on the voice portal screen. The commands recognised are the same regardless of which screen is selected.
Normal Mode: A list of example commands is displayed to quickly complete your desired function.
Assist Mode: A list of basic commands is displayed to guide you step by step through the voice menu.

You can change the mode on the **General Settings** screen.
Voice Control* P. 374

The system only recognises the commands on the following pages, at certain screens. Free-form voice commands are not recognised.

■ General Commands

When the voice portal screen is displayed, it will change to the top screen of each function by using the global commands.
- *Music Search*
- *AM*
- *FM*
- *Phone*
- *Navigation**

■ Phone Commands

When the system recognises a phone command, the screen will change to the dedicated phone voice recognition screen. These commands can only be used when a phone is connected.

■ Phone Commands
- *Call <name>*
- *Call <number>*

The system only recognises contact names stored in the phonebook of your phone. If a full name is registered in the first name field, the system will recognise the first name and last name as one contact name.

Phone commands are not available if using Apple CarPlay.

■ Audio Commands

When the system recognises an audio command, the screen will change to the dedicated audio voice recognition screen.

■ FM Commands
- *Tune to <FM frequency>*

■ AM Commands
- *Tune to <AM frequency>*

* Not available on all models

■ **iPod Commands**
- *List Album <name>*
- *List Artist <name>*
- *List Genre <name>*
- *List Playlist <name>*
- *Play <artist> <album>*
- *Play*
- *Play Album <name>*
- *Play Artist <name>*
- *Play Genre <name>*
- *Play Music <text:media_combo>*
- *Play Playlist <name>*
- *Play Song <name>*

■ **USB Commands**
- *List Album <name>*
- *List Artist <name>*
- *List Playlist <name>*
- *Play <artist> <album>*
- *Play*
- *Play Album <name>*
- *Play Artist <name>*
- *Play Music <text:media_combo>*
- *Play Playlist <name>*
- *Play Song <name>*

■ Navigation Commands*

The screen will change to the navigation screen when a navigation voice command is received.

➡ **Refer to the Navigation System Manual**

■ Standard Commands

- *Voice Help*
- *Cancel*
- *Back*


Voice Help provides guidance for the current screen.

■ List Commands

- *Previous*
- *Next*
- *Yes*
- *No*

* Not available on all models

Playing FM/AM Radio

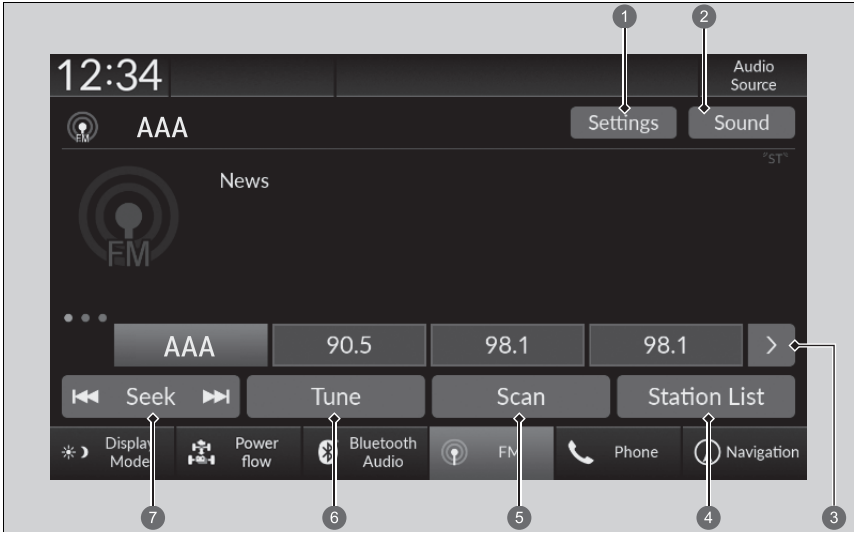

❶ **Settings Icon***
❷ **Sound Icon**
❸ **Preset Icons**
❹ **Station List Icon**
❺ **Scan Icon**
❻ **Tune Icon**
❼ **Seek Icon**

* Not available on all models

■ Preset Memory

Tunes the radio frequency for preset memory.
To store a station:
1. Tune to the selected station.
2. Select and hold the preset icon to store that station.
▶ Selecting **Press & Hold** can set a new preset station.

■ Station List

Lists the strongest stations on the selected band.
1. Select **Station List** to display a list.
2. Select the station.

■ Manual update

Updates your available station list at any time.
1. Select **Station List** to display a list.
2. Select **Refresh**.

■ Scan

Samples each of the strongest stations on the selected band for 10 seconds.
To begin scanning, select **Scan**, and to turn it off, select **Stop** or press the BACK button.

■ Seek

Selects |◀◀ or ▶▶| to search the selected band up or down for a station with a strong signal.

Preset Memory

The **ST** indicator appears on the display indicating stereo FM broadcasts.

Switching the Audio Mode
Roll the left selector wheel or select **Audio Source** on the screen.
➡ **Audio Remote Controls** P. 312

You can store 12 AM/FM stations into preset memory.

Continued

■ Sound

Adjusts the sound settings.

Adjusting the Sound P. 325

■ Radio Frequency Manual Tune Screen

Selects to use the on-screen keyboard for entering the radio frequency directly.



1. Select **Tune**.
2. Enter the desired radio frequency using the on-screen keyboard.
3. Select **Enter** to tune into the frequency.

1 On-screen Keyboard

Radio Frequency Manual Tune Screen

◀/▶ icons:
Select ◀ or ▶ to tune the radio frequency.

■ Radio Data System (RDS)*

Provides text data information related to your selected RDS-capable FM station.

■ To find an RDS station from Station List

1. Select **Station List** to display a list while listening to an FM station.
2. Select the station.

■ Manual update

Updates your available station list at any time.
1. Select **Station List** to display a list while listening to an FM station.
2. Select **Refresh**.

■ Traffic announcement (TA)

The TA standby function allows the system to stand by for traffic announcements in any mode while the function is on. The last tuned station must be an RDS-capable traffic program station.

To turn the function on: Select **TA**. When a traffic announcement begins, the information screen appears on the audio/information screen. The system returns to your last selected mode after the traffic announcement is finished.

▶ If you want to go back to your last selected mode during the traffic announcement, select **Stop**.

To turn the function off: Select **TA** again.

Radio Data System (RDS)*

When you select an RDS-capable FM station, the RDS automatically turns on, and the frequency display changes to the station name. However, when the signals of that station become weak, the display changes from the station name to the frequency.

Traffic announcement (TA)

The **TA** indicator appears on the header area while the TA standby function is on.

If you select **Scan** while the TA standby function is on, the system searches TP station only.

Selecting **TA** while the traffic announcement is on does not cancel the TA standby function.

* Not available on all models

Continued

■ Settings*

Changes the RDS settings.

1. Select **Settings**.


2. Select an option.

- **TA-Information:** Turns on and off the traffic information. (**ON**/**OFF**[*1])
- **AF:** Turns on and off to automatically change the frequency of the same program you enter different regions. (**ON**[*2]/**OFF**[*3])
- **REG:** Turns on and off to keep the same stations within that region even if the signal gets weak. (**ON**[*1]/**OFF**)
- **NEWS:** Turns on and off to automatically to tune to the news program. (**ON**/**OFF**[*1])

*1: Default Setting
*2: Default Setting for African models with Right-hand Drive Type
*3: Default Setting for Oceanian models

* Not available on all models

Playing DAB (Digital Audio Broadcasting)*

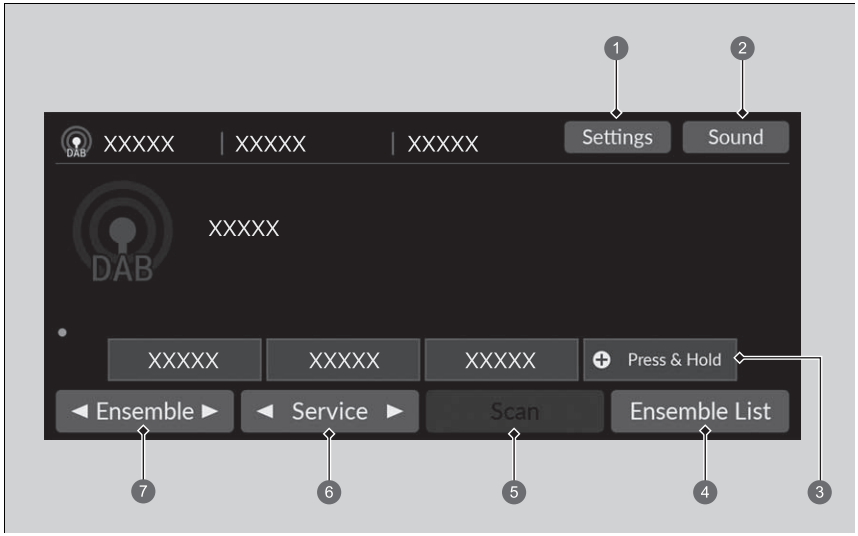

1. **Settings Icon**
2. **Sound Icon**
3. **Preset Icons**
4. **Ensemble List Icon**
5. **Scan Icon**
6. **Service Icons**
7. **Ensemble Icons**

* Not available on all models

Continued

■ Preset Memory

Tunes the preset frequency.
To store a service:
1. Tune to the selected service.
2. Select and hold the preset icon to store that station.
▶ Selecting **Press & Hold** can set a new preset station.

■ Ensemble List

Lists the receivable ensembles on the selected service.
1. Select **Ensemble List** to display a list.
2. Select the ensemble.

■ Manual update

Updates your available ensemble list at any time.
1. Select **Ensemble List** to display a list.
2. Select **Refresh**.

■ Ensemble

Tunes the ensemble.
1. Select ◀ or ▶ to tune the ensemble.
2. Select and hold ◀ or ▶ to search the selected service up to down for an ensemble until a receivable ensemble is found.

■ Service

Tunes the service component.
To tune it, select ◀ or ▶.

Preset Memory

Switching the Audio Mode
Roll the left selector wheel or select **Audio Source** on the screen.
Audio Remote Controls P. 312

You can store 12 DAB stations into preset memory.

■ Scan

Samples each of the receivable ensemble or service on the selected service for 10 seconds.
To begin scanning, select **Scan**, and to turn it off, select **Stop** or press the BACK button.

■ Sound

Adjusts the sound settings.
➡ **Adjusting the Sound** P. 325


■ Settings

Changes the DAB settings.
1. Select **Settings**.
2. Select the option you want to change.

Music Playback via Wired Connection

Using your USB connector, connect the device to the USB charging/connector port, then select the USB icon.

USB Ports P. 311

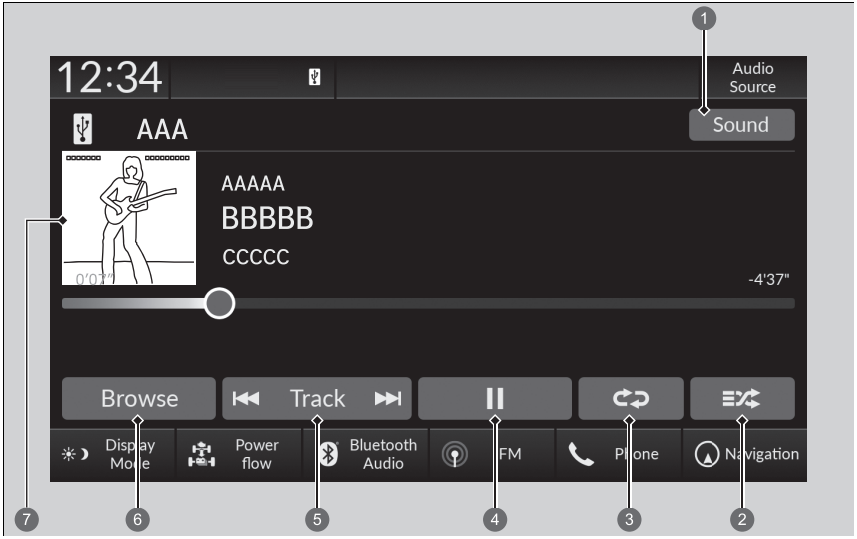

1. **Sound Icon**
2. **Shuffle Icon**
3. **Repeat Icon**
4. **Play/Pause Icon**
5. **Track Icons**
6. **Browse Icon**
7. **Cover Art**

Music Playback via Wired Connection

Available operating functions vary on models or versions. Some functions may not be available on the vehicle's audio system.

If a smartphone is connected via Apple CarPlay or Android Auto, the USB source will be unavailable and audio files on the phone will be playable only within Apple CarPlay or Android Auto.

■ How to Select a Song from the Music Search List

You can select to display the music search list screen.

1. Select **Browse**.

2. Select a search category.

3. Continue making selections until you find the song of your choice.

■ How to Select a Play Mode

You can select shuffle and repeat modes when playing a song.

■ Shuffle/Repeat

Repeatedly select the shuffle or repeat icon until you find a play mode option of your preference.

Shuffle

(shuffle off): Shuffle mode to off.

(shuffle all songs): Plays all available songs in a selected list in random order.

Repeat

(repeat off): Repeat mode to off.

(repeat song): Repeats the current song.

(repeat all): Repeats all songs.

Continued

■ How to Change a Song

You can select |◀◀ or ▶▶| to change songs. Select and hold to move rapidly within a song.

■ Sound

You can adjust the sound settings.

➡ **Adjusting the Sound** P. 325

Media Playback via USB Flash Drive

Your audio system reads and plays sound and video files on a USB flash drive. Connect your USB flash drive to the USB charging/connector port, then select the USB icon.

USB Ports P. 311



❶ **Settings Icon** (Playing a video)
❷ **Sound Icon**
❸ **Random Icon**
❹ **Repeat Icon**
❺ **Play/Pause Icon**
❻ **Stop Icon** (Playing a video)
❼ **Track/Video Icons**
❽ **Browse Icon**
❾ **Cover Art** (Playing a music)/ **Mini Player** (Playing a video)

Continued

Media Playback via USB Flash Drive

You can use the following formats to play sound or video files on a USB flash drive.
When playing a sound file: MP3, WMA, AAC*1, FLAC, WAV
When playing a video file: MP4, AVI, MKV, ASF/ WMV

*1: Only AAC format files recorded with iTunes are playable on this unit.

■ How to Select a File from the Music Search List

You can select to display the music search list screen.

1. Select **Browse**.

2. Select **Current Playlist**, **Music**, or **Video**.

3. Continue making selections until you find the file or video of your choice.

Media Playback via USB Flash Drive

Use the recommended USB flash drives.

➔ **General Information on the Audio System** P. 506

WMA and AAC files protected by digital rights management (DRM) cannot be played.
The audio system displays **Unplayable File**, then skips to the next file.

■ How to Select a Play Mode

You can select repeat and random modes when playing a file.

■ Random/Repeat

Repeatedly select the random or repeat icon until you find a play mode option of your preference.

Random

(random off): Random mode to off.

(random all files): Plays all files in random order.

(random in folder): Plays all files in the current folder in random order.

Repeat

(repeat off): Repeat mode to off.

(repeat file): Repeats the current file.

(repeat folder): Repeats all files in the current folder.

■ When playing a video file

/ : Select to shrink a video screen. Select to expand a video screen.

■ How to Change a File

Track/Video Icons

You can select to change files. Select and hold to move rapidly within a file.

Continued

■ Sound

You can adjust the sound settings.

Adjusting the Sound P. 325

■ Settings

Changes the USB settings when playing a video file.

1. Select **Settings**.

2. Select an option.

- **Image Settings:** Changes the brightness of the audio/information screen. To reset the settings, select **Default**. (**Brightness**/**Contrast**/**Black Level**/**Colour** (**Color**)/**Tint**).
- **Aspect Ratio:** Selects the display mode with a different aspect ratio. (**Original**/**Normal**[*1]/**Full**/**Zoom**)
- **Overlay Clock Location:** Changes the clock display layout. (**Upper right** (**Upper Right**)[*1]/**Upper left** (**Upper Left**)/**Lower right** (**Lower Right**)/**Lower left** (**Lower Left**)/**OFF**)

*1: Default Setting

Playing *Bluetooth*® Audio

Your audio system allows you to listen to music from your *Bluetooth*-compatible phone.

This function is available when the phone is paired and connected to the vehicle's Hands-Free Telephone (HFT) system.

Phone Setup P. 393



❶ **Sound Icon**
❷ **Shuffle Icon**
❸ **Repeat Icon**
❹ **Play/Pause Icon**
❺ **Track Icons**
❻ **Browse Icon**
❼ **Cover Art**

Playing *Bluetooth*® Audio

Not all *Bluetooth*-enabled phones with streaming audio capabilities are compatible with the system. To check if your phone is compatible, ask a dealer.

It may be illegal to perform some data device functions while driving.

Only one phone can be used with HFT at a time. When there is more than one paired phone in the vehicle, the system automatically connects to the prioritized phone. You can assign priority to a phone in the *Bluetooth*® device list.

Phone Setup P. 393

If more than one phone is paired to the HFT system, there may be a delay before the system begins to play.

In some cases, the name of the artist, album, or track may not appear correctly.

Some functions may not be available on some devices.

If a phone is currently connected via Apple CarPlay or Android Auto, *Bluetooth*® Audio from that phone will be unavailable. However, if the other phone is connected to the system, it can be used as *Bluetooth*® Audio by selecting the audio mode.

Phone Setup P. 393

Continued

■ To Play *Bluetooth*® Audio Files

1. Make sure that your phone is paired and connected to the system.
➡ **Phone Setup** P. 393

2. Select the *Bluetooth*® Audio mode.

If the phone is not recognised, another HFT-compatible phone, which is not compatible for *Bluetooth*® Audio, may already be connected.

■ How to Select a Play Mode

Repeatedly select the shuffle or repeat icon until you find a play mode option of your preference.

Shuffle

(shuffle off): Shuffle mode to off.

(shuffle all songs): Plays all available songs in a selected list in random order.

Repeat

(repeat off): Repeat mode to off.

(repeat song): Repeats the current song.

(repeat group): Repeats the current group.

(repeat all): Repeats all songs.

To Play *Bluetooth*® Audio Files

To play the audio files, you may need to operate your phone. If so, follow the phone manufacturer's operating instructions.

Switching to another mode pauses the music playing from your phone.

You can change the connected phone by selecting **Change Device**.
➡ **Phone Setup** P. 393

■ Searching for Music

1. Select **Browse**.
2. Select a search category.
3. Select an item.
▶ The selection begins playing.

■ Sound

You can adjust the sound settings.
➡ **Adjusting the Sound** P. 325

Searching for Music

Depending on the *Bluetooth*® device you connect, some or all of the lists may not be displayed.

Wi-Fi Connection

This vehicle is equipped with Wi-Fi connectivity. You can connect to an external Wi-Fi hotspot or communication device.

■ Connect the Vehicle to a Wi-Fi Hotspot



1. Press the HOME button.
2. Select **General Settings**.
3. Select **Connections**.
4. Select **Wi-Fi**.
5. Select **OK**.
6. Select an access point from the network list.
▶ To connect to a hotspot that is not automatically detected, select **Options** then **Add Network**.
7. Enter the password.
▶ If you check the **Use this network to automatically download system updates** box, you can set the network to be used for system updates.
➡ **System Updates** P. 327
8. Select **Connect**.

■ Turning off the Wi-Fi connection

1. Select **Change Mode**.
2. Select **OFF**.

Wi-Fi Connection

Wi-Fi and Wi-Fi Direct are registered trademarks of Wi-Fi Alliance®.

Connect the Vehicle to a Wi-Fi Hotspot

You cannot go through the setting procedure while the vehicle is moving. Park in a safe place to set the audio system in Wi-Fi mode.

Some mobile phone carriers charge for tethering and smartphone data use. Check your phone's data subscription package.

Check your phone manual to find out if the phone has Wi-Fi connectivity.

You can confirm whether Wi-Fi connection is on or off with the icon on the system status area. Transmission speed and others will not be displayed on this screen.
➡ **Status Area** P. 321

In case of Wi-Fi connection with your phone, make sure your phone's Wi-Fi setting is in access point (tethering) mode.

Apple CarPlay

If you connect an Apple CarPlay-compatible iPhone to the system via the USB charging/connector port or wirelessly, you can use Apple CarPlay on the audio/information screen.

USB Ports P. 311



1 Apple CarPlay

Apple CarPlay

We recommend that you update iOS to the latest version when using Apple CarPlay.

Park in a safe place before connecting your iPhone to Apple CarPlay and when launching any compatible apps.

While connected to Apple CarPlay, it is not possible to use the *Bluetooth*® Audio or Hands-Free Telephone (HFT). You can only make calls or listen to music through Apple CarPlay. If you want to make a call with the Hands-Free Telephone (HFT), turn Apple CarPlay OFF. Other previously paired phones can use the *Bluetooth*® Audio.

Apple CarPlay and Android Auto cannot run at the same time.

For details on countries and regions where Apple CarPlay is available, as well as information pertaining to function, refer to the Apple website.

Use of Apple CarPlay will result in the transmission of certain user and vehicle information (such as vehicle location, speed, and status) to your iPhone to enhance the Apple CarPlay experience. You will need to consent to the sharing of this information on the audio/information screen.

Continued

■ Apple CarPlay Menu

For details on available applications, please refer to the Apple CarPlay website. Apps displayed on your screen can be changed with your iPhone.
Select the **Honda** icon on the Apple CarPlay menu screen to go back to the home screen.

Apple CarPlay

Apple CarPlay Operating Requirements & Limitations
Apple CarPlay requires a compatible iPhone with an active mobile connection and data plan. Your carrier's rate plans will apply.

Changes in operating systems, hardware, software, and other technology integral to providing Apple CarPlay functionality, as well as new or revised governmental regulations, may result in a decrease or cessation of Apple CarPlay functionality and services. Honda cannot and does not provide any warranty or guarantee of future Apple CarPlay performance or functionality.

It is possible to use third-party apps if they are compatible with Apple CarPlay. Refer to the Apple website for information on compatible apps.

■ Connect Apple CarPlay Using the USB Cable

1. Connect the iPhone to the USB charging/connector port using the USB cable.
➡ **USB Ports** P. 311
▶ The confirmation screen will be displayed.
2. Select **Yes**.
▶ If you do not want to connect Apple CarPlay, select **No**.

You may change the consent settings under the **Smartphone Connection** settings menu.

■ Connect Apple CarPlay Wirelessly

■ Connect Apple CarPlay wirelessly on the home screen

1. Press the HOME button.
2. Select **Smartphone Connection**.
3. Select **+ Connect New Device**.
4. Pair the iPhone to the vehicle's Hands-Free Telephone (HFT) system.
➡ **Phone Setup** P. 393
5. Select **Yes**.
▶ If your iPhone asks for permission to accept an Apple CarPlay connection, accept to connect.

Apple CarPlay

Only initialize Apple CarPlay when you are safely parked.
When Apple CarPlay first detects your iPhone, you will need to set up your iPhone. Refer to the instruction manual that came with your iPhone.

You can use the following procedure to disconnect or delete the devices connecting Apple CarPlay:
Select General Settings → Smartphone Connection → Apple CarPlay → Select device

Use of user and vehicle information
The use and handling of user and vehicle information transmitted to/from your iPhone by Apple CarPlay is governed by the Apple iOS terms and conditions and Apple's Privacy Policy.

Continued

■ **Connect Apple CarPlay wirelessly on the Apple CarPlay device list**

1. Press the HOME button.
2. Select **General Settings**.
3. Select **Smartphone Connection**.
4. Select **Apple CarPlay**.
5. Select **+ Connect New Device**.
6. Pair the iPhone to the vehicle's Hands-Free Telephone (HFT) system.
➡ **Phone Setup** P. 393
7. Select **Yes**.
▶ If your iPhone asks for permission to accept an Apple CarPlay connection, accept to connect.

■ **Connect Apple CarPlay wirelessly on the *Bluetooth*® device list**

1. Press the HOME button.
2. Select **General Settings**.
3. Select **Connections**.
4. Select **Bluetooth**.
5. Select **+ Connect New Device**.
6. Pair the iPhone to the vehicle's Hands-Free Telephone (HFT) system.
➡ **Phone Setup** P. 393
7. Check the box on **Apple CarPlay**.
▶ If you select **Apple CarPlay**, you cannot select **Audio** and **Phone**.
8. Select **Connect**.
9. Select **Yes**.
▶ If your iPhone asks for permission to accept an Apple CarPlay connection, accept to connect.

■ **Connect Apple CarPlay wirelessly with the steering wheel**

1. Press and hold the (talk) button on the steering wheel.

2. Pair the iPhone to the vehicle's Hands-Free Telephone (HFT) system.

➡ **Phone Setup** P. 393

3. Check the box on **Apple CarPlay**.

▶ If you select **Apple CarPlay**, you cannot select **Audio** and **Phone**.

4. Select **Connect**.

5. Select **Yes**.

▶ If your iPhone asks for permission to accept an Apple CarPlay connection, accept to connect.

■ **Connect Apple CarPlay wirelessly at start-up (when there is no phone paired to the system)**

1. Set the power mode to ACCESSORY or ON.

2. Select **OK**.

▶ If there is no registered device, the *Bluetooth*® pairing screen will be displayed.

▶ If you check the box with **Do not show this again**, this screen will not be displayed.

3. Pair the iPhone to the vehicle's Hands-Free Telephone (HFT) system.

➡ **Phone Setup** P. 393

4. Check the box on **Apple CarPlay**.

▶ If you select **Apple CarPlay**, you cannot select **Audio** and **Phone**.

5. Select **Connect**.

6. Select **Yes**.

▶ If your iPhone asks for permission to accept an Apple CarPlay connection, accept to connect.

Continued

■ Operating Apple CarPlay with Siri

Press and hold the (talk) button to activate Siri.
Press again to deactivate Siri.
Press and release to activate voice tag dial*/standard voice recognition system*.

Operating Apple CarPlay with Siri

Below are examples of questions and commands for Siri:

- What movies are playing today?
- Call dad at work.
- What song is this?
- How's the weather tomorrow?
- Read my latest email.

For more information, please visit *www.apple.com/ios/siri*.

 * Not available on all models

Android Auto™

When you connect an Android™ phone to the audio system via the USB charging/ connector port, Android Auto is automatically initiated, and you can use Android Auto on the audio/information screen.

USB Ports P. 311

NOTE:

Android Auto may not be available in your country or region. For details about Android Auto, please refer to the Google support site.



❶ Android Auto

Android Auto™

We recommend that you update Android OS to the latest version when using Android Auto.

Bluetooth A2DP cannot be used while your phone is connected to Android Auto.

Park in a safe place before connecting your Android phone to Android Auto and when launching any compatible apps.

When your Android phone is connected to Android Auto, it is not possible to use the *Bluetooth*® Audio. However, other previously paired phones can stream audio via *Bluetooth*® while Android Auto is connected.

Phone Setup P. 393

Apple CarPlay and Android Auto cannot run at the same time.

Android and Android Auto are trademarks of Google LLC.

To use each of Android Auto's features: say a wake-up word while the Android Auto screen is displayed, or press and hold the (talk) button to activate Google Assistant.

Operating Android Auto with Voice Recognition P. 362

Continued

■ Android Auto Menu

For details on available applications, please refer to the Android Auto website. Apps displayed on your screen can be changed with your smartphone.
Select the **Honda** icon on the Android Auto menu screen to go back to the home screen.

Android Auto™

For details on countries and regions where Android Auto is available, as well as information pertaining to function, refer to the Android Auto website.

Android Auto Operating Requirements & Limitations
Android Auto requires a compatible Android phone with an active mobile connection and data plan. Your carrier's rate plans will apply.

Changes in operating systems, hardware, software, and other technology integral to providing Android Auto functionality, as well as new or revised governmental regulations, may result in a decrease or cessation of Android Auto functionality and services. Honda cannot and does not provide any warranty or guarantee of future Android Auto performance or functionality.

It is possible to use third-party apps if they are compatible with Android Auto. Refer to the Android Auto website for information on compatible apps.

■ Enabling Android Auto

To enable Android Auto after connecting an Android phone to the USB charging/ connector port, select **Yes** on the screen.

You may change the consent settings under the **Smartphone Connection** settings menu.

Android Auto™

Only initialize Android Auto when you are safely parked. When Android Auto first detects your phone, you will need to set up your phone so that auto pairing is possible. Refer to the instruction manual that came with your phone.

You can use the following procedure to disconnect or delete the devices connecting Android Auto after you have completed the initial setup:
Select General Settings → Smartphone Connection → Android Auto → Select device

Use of user and vehicle information
The use and handling of user and vehicle information transmitted to/from your phone by Android Auto is governed by Google's Privacy Policy.

Continued

■ Operating Android Auto with Voice Recognition

Press and hold the (talk) button to operate Android Auto with your voice.
Press and release to activate voice tag dial*/standard voice recognition system*.

Operating Android Auto with Voice Recognition

Below are examples of commands you can give with voice recognition:


- Reply to text.
- Call my wife.
- Navigate to Honda.
- Play my music.
- Send a text message to my wife.
- Call flower shop.

For more information, please refer to the Android Auto website.

 * Not available on all models

Power Flow

The power flow screen shows the vehicle's power flow, average fuel economy, and range.

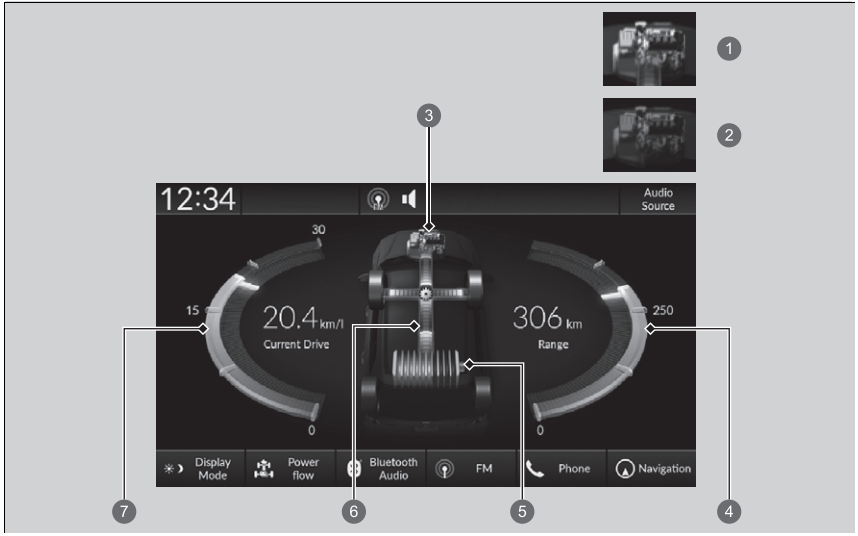


❶ Engine ON
❷ Engine OFF
❸ Engine
❹ Driving Range
❺ High Voltage Battery Level Gauge
❻ Power Flow
❼ Average Fuel Economy (Current Drive)

Continued

Shows the power flow, indicating what is supplying power to the vehicle and/or charging the battery.

▶ The indicator for the power transmission appears in blue, and for the battery charging operation, in green.

Display	Colour of indicators	Vehicle's Condition
2WD models  AWD models 	Blue	Power is being supplied by the High Voltage battery and the engine-driven generator.
2WD models  AWD models 	Blue	Power is being supplied by the High Voltage battery.
2WD models  AWD models 	Blue	Power is being supplied by the engine-driven generator.

Power Flow

While the engine provides propulsion directly to the wheels, the icon appears in the power flow monitor on the screen.


Display	Colour of indicators	Vehicle's Condition
2WD models  AWD models 	Blue and Green	Power is being supplied directly by the engine and the High Voltage battery is being charged by the engine-driven generator.
	Green	The High Voltage battery is being charged through regenerative braking.
	Green	The High Voltage battery is being charged by the engine-driven generator.

Customized Features

Use the audio/information screen to customize certain features.

■ How to Customize the General Settings

With the power mode in ON, select **General Settings**, and select a setting item.

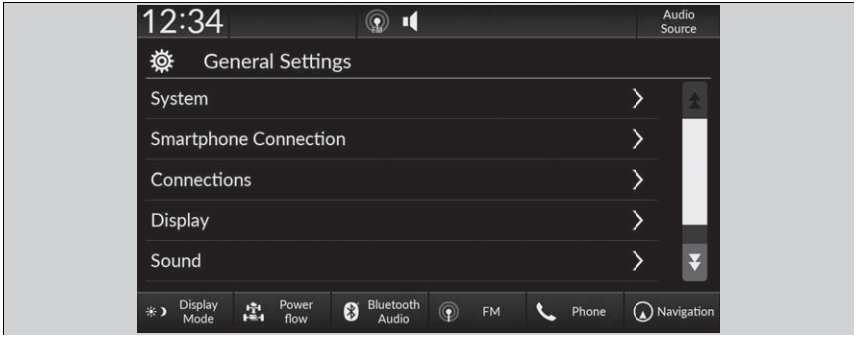

- **System** ➔ P. 367
- **Smartphone Connection** ➔ P. 369
- **Connections** ➔ P. 370
- **Display** ➔ P. 371
- **Sound** ➔ P. 372
- **Camera** ➔ P. 373
- **Voice Control*** ➔ P. 374

Customized Features

When you customize settings:

- Make sure that the vehicle is at a complete stop.
- Shift to P.

* Not available on all models

■ **System**

Customizable Features			Description	Selectable Settings
Date & Time	**Set Date & Time**	**Automatic Date & Time**	Select **ON** to have the GPS automatically adjust the clock. Select **OFF** to cancel this function.	**ON/OFF**
		Set Date	Adjusts date. ➡ **Adjusting the Clock** P. 322	**Day/Month/Year**
		Set Time	Adjusts time. ➡ **Adjusting the Clock** P. 322	**Hour/Minute AM/PM**
	Time Zone*	**Automatic Time Zone***	Sets the audio system to automatically adjust the clock when driving through different time zones.	**ON/OFF**
		(Select time zone)	Changes the time zone manually.	—
	Auto Daylight Saving Time*		Sets the clock to update based on daylight savings time.	**ON/OFF**
	Date Format		Select a date format.	**MM/DD/YYYY/ DD/MM/YYYY/ YYYY/MM/DD**
	Time Format		Select a time format.	**12-H/24-H** (**12H/24H**)

* Not available on all models

Continued

Customizable Features		Description	Selectable Settings
Language		Changes the driver information interface and audio/information screen language separately.	**English** (United Kingdom)*1, **English** (United States)*1, or Arabic*1 Some languages may not be available in all regions. Check the audio/information screen for available options.
Touch Panel Sensitivity		Sets the sensitivity of the touch panel screen.	**High/Normal**
System Volumes	**System Sounds**	Sets the system sound volume level.	—
	Text-to-Speech	Sets the text-to-speech volume level.	—
	Navigation Guidance	Sets the navigation guidance volume level.	—
	Phone Calls	Sets the phone call volume level.	—
	Default	Resets all **System Volumes** settings to default values.	
Refuel Recommend*		Turns the refuel recommend function on and off. **Refuel Recommend*** P. 406	**ON/OFF**

*1:The default setting varies depending on the model.

* Not available on all models

Customizable Features		Description	Selectable Settings
About	**Status**	Displays the Android setting items.	—
	Legal Information		
	Model Number		
	Android Version		
	Kernel Version		
	Build Number		
Factory Data Reset		Resets all the settings to their factory default. ➡ **Defaulting All the Settings** P. 385	**Continue/Cancel**
Detail Information	**App Manager**	Displays the Android system memory and apps information.	—

■ **Smartphone Connection**

Customizable Features		Description	Selectable Settings
Apple CarPlay	**+ Connect New Device**	Pairs a new phone to Apple CarPlay. ➡ **Phone Setup** P. 393	—
	(Saved Devices)	Connects, disconnects, or deletes a paired phone. ➡ **Phone Setup** P. 393	—
Android Auto	(Saved Devices)	Connects, disconnects, or deletes a paired phone. ➡ **Phone Setup** P. 393	—

Continued

■ **Connections**

Customizable Features			Description	Selectable Settings
Wi-Fi	**Change Mode**		Changes the Wi-Fi mode.	**Network/ Smartphone**[*1]**/OFF**
	(Available Networks/Connected Devices)		Displays the available network(s) or current connected device(s).	—
	Options	**Add Network**	Adds a new network to connect Wi-Fi.	—
		Saved Networks	Saves the connected network.	—
Bluetooth	**Options**	**Bluetooth**	Turns *Bluetooth*® on and off.	**ON/OFF**
		Priority Device	Displays the priority device.	—
	+ Connect New Device		Pairs a new phone to HFT. **Phone Setup** P. 393	—
	(Saved Devices)		Connects, disconnects, or deletes a paired phone. **Phone Setup** P. 393	—

*1:Appears only when Apple CarPlay is connected wirelessly.

■ **Display**

Customizable Features	Description	Selectable Settings
Brightness	Changes the brightness of the audio/information screen.	—
Contrast	Changes the contrast of the audio/information screen.	—
Black Level	Changes the black level of the audio/information screen.	—
Default	Resets all customized settings for the brightness, contrast, and black level.	—

Continued

■ **Sound**

Customizable Features		Description	Selectable Settings
Bass / Treble	**Treble**	Adjusts the settings of the audio speakers' sound. ➡ **Adjusting the Sound** P. 325	—
	Midrange		
	Bass		
Audio Zones & Balance / Fader[*1]			
Bose Centerpoint[*1]			
Bose Dynamic Speed Compensation[*1]			
Balance / Fader[*2]			
Speed Volume Compensation[*2]			

*1:Models with BOSE AMP
*2:Models with Normal AMP

■ **Camera**

Customizable Features		Description	Selectable Settings
Rear Camera*	**Fixed Guideline**	Shows the guideline that does not move with the steering wheel. ➡ **Multi-View Rear Camera*** P. 713	**ON/OFF**
	Dynamic Guideline	Shows the guideline that moves with the steering wheel. ➡ **Multi-View Rear Camera*** P. 713	**ON/OFF**
LaneWatch*	**Show with indicator** (**Show with turn signal**)	Selects whether the LaneWatch display comes on when you move the turn signal lever to indicate a left*1/right*2 turn. ➡ **LaneWatch*** P. 598	**ON/OFF**
	Display Time after Indicator Off (**Display Time after Turn Signal Off**)	Changes the length of time the LaneWatch display stays on after the turn signal lever returns to the centre. ➡ **LaneWatch*** P. 598	**0 seconds/2 seconds**
	Show Reference Line	Selects whether the reference lines come on the LaneWatch monitor. ➡ **LaneWatch*** P. 598	**ON/OFF**

*1:Right-hand Drive Type
*2:Left-hand Drive Type

* Not available on all models

Continued

Customizable Features			Description	Selectable Settings
Multi View Camera*	**Guidelines**	**Fixed Guideline**	Shows the guideline that does not move with the steering wheel. ➡ **Multi-View Camera*** P. 715	**ON/OFF**
		Dynamic Guideline	Shows the guideline that moves with the steering wheel. ➡ **Multi-View Camera*** P. 715	**ON/OFF**
	Customise (**Customize**)	**Show after shifting from Reverse**	Selects whether to display the forward camera image after shifting from R to D.	**ON/OFF**
		Auto display when obstacle is detected	Displays the forward camera image when a parking sensor detects an obstacle.	**ON/OFF**
Cross Traffic Monitor*			Shows arrows on the rear camera image to indicate vehicles approaching from the sides. ➡ **Cross Traffic Monitor*** P. 709	**ON/OFF**


■ **Voice Control***

Customizable Features	Description	Selectable Settings
Voice Control Mode	Selects a mode of the voice portal screen. ➡ **Voice Control Operation*** P. 331	**Assist/Normal**

 * Not available on all models

How to Customize the Vehicle Settings

With the power mode in ON, select **Vehicle Settings**, then select a setting item.

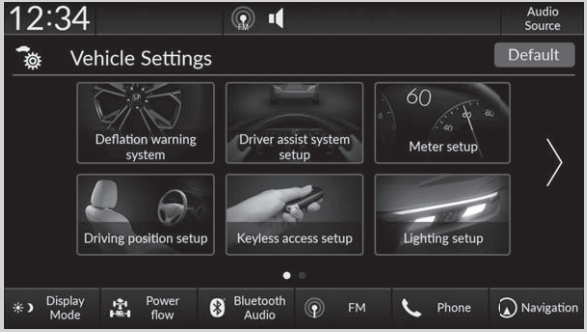

- **Deflation warning system** (**TPMS Calibration**)* P. 376
- **Driver assist system setup** (**Driver Assist System Setup**) P. 376
- **Meter/HUD* setup** (**Meter/HUD Setup**) P. 379
- **Driving position setup** (**Driving Position Setup**)* P. 380
- **Keyless access setup** (**Keyless Access Setup**) P. 381
- **Lighting setup** (**Lighting Setup**) P. 382
- **Door/window setup** (**Door/Window Setup**) P. 383
- **Power tailgate setup** (**Power Tailgate Setup**) P. 384

How to Customize the Vehicle Settings

If **Vehicle Settings** is not displayed on the home screen, select **All Apps**. You can change the displayed icons on the home screen.

App Shortcut Function P. 316

* Not available on all models

Continued

■ **Deflation warning system (TPMS Calibration)***

Customizable Features	Description	Selectable Settings
Deflation warning system (**TPMS Calibration**)	Cancels/Calibrates Deflation Warning System. ➡ **Deflation Warning System*** P. 590	**Calibrate/Cancel**

■ **Driver assist system setup (Driver Assist System Setup)**

Customizable Features	Description	Selectable Settings
Preceding vehicle proximity warning distance (**Forward Collision Warning Distance**)	Changes the distance at which Collision Mitigation Braking System (CMBS) alerts. ➡ **Collision Mitigation Braking System (CMBS)** P. 606	**Far/Normal**[*1]**/Near** (**Long/Normal**[*1]**/Short**)
Head-up warning (**Head-up Warning**)*	Turn On/Off warning light for head-up flash alert.	**ON**[*1]**/OFF**
ACC vehicle ahead detected beep (**ACC Forward Vehicle Detect Beep**)	Turns On/Off audible notification when vehicle has moved in/out of adaptive cruise control range. ➡ **Adaptive Cruise Control (ACC) with Low Speed Follow** P. 636	**ON/OFF**[*1]
Lead car departure notification system (**Lead Car Departure Notification System**)*	Changes the setting for the lead car departure notification system. ➡ **Lead Car Departure Notification System*** P. 677	**Normal**[*1]**/Early/OFF**

*1:Default Setting

* Not available on all models

Customizable Features	Description	Selectable Settings
Road departure mitigation setting (**Road Departure Mitigation Setting**)	Selects operating mode of the Road Departure Mitigation system. ➡ **Road Departure Mitigation System** P. 626	Australian, Bangladeshi, Bhutanese, and New Zealand models **Early/Normal/Delayed***1 Except Australian, Bangladeshi, Bhutanese, and New Zealand models **Early/Normal***1**/Delayed/Warning only** (**Narrow/Normal***1**/Wide/Warning Only**)
Lane keep assist beep (**Lane Keeping Assist Suspend Beep**)	Switches the LKAS and Traffic Jam Assist* suspend alert beeps on and off. ➡ **Lane Keeping Assist System (LKAS)** P. 655 ➡ **Traffic Jam Assist** P. 668	**ON/OFF***1
Blind spot information*	Selects On/Off the blind spot information system audible alert. ➡ **Blind Spot Information System*** P. 593	**Audible and visual alert***1**/Visual alert only**
Traffic sign recognition system display*	Displays the traffic sign recognition system on the instrument panel. ➡ **Traffic Sign Recognition System*** P. 681	**Display***1**/None**
Traffic sign recognition system over speed warning*	Enables over speed limit warning when speed limit is exceeded. ➡ **Traffic Sign Recognition System*** P. 681	**ON***1**/OFF**

*1:Default Setting

* Not available on all models

Continued

Customizable Features	Description	Selectable Settings
Driver attention monitor (**Driver Attention Monitor**)	Changes the setting for the driver attention monitor. ➡ **Driver Attention Monitor** P. 179	**OFF/Tactile alert only/ Tactile and audible alert**[*1] (**OFF/Tactile Alert/Tactile And Audible Alert**[*1])
Rear sensor setting (**Rear Sensor Setting**)*	Turns the rear parking sensor ON or OFF. This selection will also affect the rear Low Speed Braking Control if equipped. ➡ **Parking Sensor System** P. 703 ➡ **Low Speed Braking Control*** P. 620	**ON**[*1]**/OFF**

*1:Default Setting

 * Not available on all models

■ **Meter/HUD* setup (Meter/HUD Setup)**

Customizable Features	Description	Selectable Settings
Warning message*	Selects whether to display the warning message.	**ON/OFF**[*1]
Adjust outside temp. display (**Adjust Outside Temp. Display**)	Selects to adjust outside temperature reading by a few degrees. ➔ **Outside Temperature** P. 148	**-3°C ~ ±0°C**[*1] **~ +3°C**
Trip A reset timing (**"Trip A" Reset Timing**)	Selects the timing to reset Trip A. ➔ **Range/Fuel/Trip Meter** P. 173 ➔ **Speed/Time/Trip Meter** P. 175	**When fully refueled/When ignition is turned OFF/Manual reset**[*1] (**When Fully Refueled/IGN OFF/ Manually Reset**[*1])
Trip B reset timing (**"Trip B" Reset Timing**)	Selects the timing to reset Trip B. ➔ **Range/Fuel/Trip Meter** P. 173 ➔ **Speed/Time/Trip Meter** P. 175	**When fully refueled/When ignition is turned OFF/Manual reset**[*1] (**When Fully Refueled/IGN OFF/ Manually Reset**[*1])
Alarm volume control (**Adjust Alarm Volume**)	Changes volume level of all system warnings, door opening warning and indicator.	**Max/Mid**[*1]**/Min** (**High/Mid**[*1]**/Low**)
Reverse position alert tone*	Turns on/off the reverse alert sound.	**ON**[*1]**/OFF**
Fuel efficiency backlight (**Fuel Efficiency Backlight**)*	Turns the ambient meter feature on and off.	**ON**[*1]**/OFF**

*1:Default Setting

* Not available on all models

Continued

Customizable Features	Description	Selectable Settings
Turn by turn display (**Turn By Turn Auto Display**)	Turns the pop-up warning ON/OFF in the turn-by-turn navigation in the driver information interface or head-up display*. ➡ **Turn-by-Turn Directions** P. 177	**ON***1/**OFF**
Fuel economy unit (**Fuel Economy Unit**)*	Selects the fuel consumption units.	Except Vietnamese models **km/l***1 / **l/100km** Vietnamese models **km/l** / **l/100km***1
Rear seat reminder (**Rear Seat Reminder**)	Turns the Rear Seat Reminder feature on and off.	**ON***1/**OFF**

*1:Default Setting

■ **Driving position setup (Driving Position Setup)***

Customizable Features	Description	Selectable Settings
Memory position link (**Memory Position Link**)	Turns the driving position memory system on and off.	**ON***1/**OFF**
Seat Position Movement At Entry/Exit	Moves the seat rearward when you get in/get out of the vehicle. Changes the setting for this feature.	**ON***1/**OFF**

*1:Default Setting

* Not available on all models

■ **Keyless access setup (Keyless Access Setup)**

Customizable Features	Description	Selectable Settings
Door unlock mode*	Changes which doors unlock when you grab the driver's door handle.	**Driver door only*1/All doors**
Keyless access beep volume (**Keyless Access Beep Volume**)	Changes the beep volume of unlocking /locking the doors.	**Max*1/Min** (**High*1/Low**)
Keyless access light flash (**Keyless Access Light Flash**)	Causes some exterior lights to flash when you unlock/lock the doors.	**ON*1/OFF**
Keyless access beep (**Keyless Access Beep**)	Causes the beeper to sound when you unlock/lock the doors.	**ON*1/OFF**
Remote start system ON/OFF (**Remote Start System ON/OFF**)*	Turns the remote engine start feature on and off.	**ON*1/OFF**

*1:Default Setting

* Not available on all models

■ **Lighting setup (Lighting Setup)**

Customizable Features	Description	Selectable Settings
Auto High Beam*	Turns On/Off auto high beam function.	**ON*1/OFF**
Adaptive driving beam (Adaptive Driving Beam)*	Turns On/Off adaptive driving beam function.	**ON*1/OFF**
Interior light dimmer duration (Interior Light Dimming Time)	Selects the length of time the interior lights stay on after doors are closed. ➡ **Interior Lights** P. 277	**60sec/30sec*1/15sec**
Headlight auto OFF timer (Headlight Auto OFF Timer)	Selects the length of time the exterior lights stay on after you close the driver's door. ➡ **Automatic Lighting Off Feature** P. 241	**60sec/30sec/15sec*1/0sec**
Headlight integration with wipers (Auto Headlight On with Wiper On)	Selects On/Off headlight function and wiper operation when the headlight is in **AUTO** setting. ➡ **Headlight Integration with Wipers** P. 241	**ON*1/OFF**

*1:Default Setting

 * Not available on all models

■ **Door/window setup (Door/Window Setup)**

Customizable Features	Description	Selectable Settings
Auto door lock (**Auto Door Lock**)*	Changes the setting for the automatic locking feature.	**OFF/With vehicle speed***1**/ Shift from P** (**OFF/With Vehicle Speed***1**/ Shift From P**)
Auto door unlock (**Auto Door Unlock**)*	Changes the setting for when the doors unlock automatically.	African models with Right-hand Drive Type **OFF/All doors with IGN OFF/Driver door with IGN OFF/All Doors With Shift To P/Driver Door With Shift To P***1 Except African models with Right-hand Drive Type **OFF/Shift to P***1**/When ignition is turned OFF** (**OFF/Shift To P***1**/IGN OFF**)
Key and remote unlock mode*	Sets up either the driver's door or all doors to unlock on the first push of the keyless remote or built-in key.	**Driver door only***1**/All doors**
Walk away lock (**Walk Away Auto Lock**)	Changes the settings for the auto lock function when you walk away from the vehicle.	**ON/OFF***1
Lock presetting (**Lock Presetting**)	Turns on/off the lock presetting function.	**ON***1**/OFF**

*1:Default Setting

* Not available on all models

Continued

Customizable Features	Description	Selectable Settings
Keyless lock notification (**Keyless Lock Answer Back**)	Turns On/Off flash of exterior lights when doors are locked/ unlocked by keyless remote. **Using the Remote Transmitter** P. 207	**ON***1**/OFF**
Auto folding door mirror (**Auto Folding Door Mirror**)*	Changes how you can fold the door mirrors.	**ON***1**/OFF**
Remote Window Control	Turns the remote window control on and off.	**ON***1**/OFF**

*1:Default Setting

■ **Power tailgate setup (Power Tailgate Setup)**

Customizable Features	Description	Selectable Settings
Keyless open mode (**Keyless Open Mode**)	Changes the keyless setting for when the power tailgate opens.	**Anytime***1**/When unlocked** (**Anytime***1**/When Unlocked**)
Power open by outer handle (**Power Open By Outer Handle**)	Changes the setting to open power tailgate by tailgate outer handle.	**ON (Power/Manual)***1**/OFF (Manual only)** (**ON (Power/Manual)***1**/OFF (Manual Only)**)
Hands free access (**Hands Free Access Function**)*	Changes the setting to open power tailgate by a swift forward in and out kicking motion under the rear bumper.	**ON***1**/OFF**

*1:Default Setting

* Not available on all models

Defaulting All the Settings

Reset all the menu and customized settings as the factory defaults.

■ Defaulting General Settings

1. Press the HOME button.
2. Select **General Settings**.
3. Select **System**.
4. Select **Factory Data Reset**.
▶ A confirmation message appears on the screen.
5. Select **Continue** to reset the settings.
6. Select **Continue** again to reset the settings.
▶ The system will reboot.

■ Defaulting Vehicle Settings

1. Press the HOME button.
2. Select **Vehicle Settings**.
3. Select **Default**.
4. Select **Yes**.

Defaulting All the Settings


When you transfer the vehicle to a third-party, reset all settings to default and delete all personal data.

If you perform **Factory Data Reset**, it will reset the preinstalled apps to their factory default.

Hands-Free Telephone (HFT) System

Hands-Free Telephone (HFT) system allows you to place and receive phone calls using your vehicle's audio system, without handling your mobile phone.

■ HFT Buttons

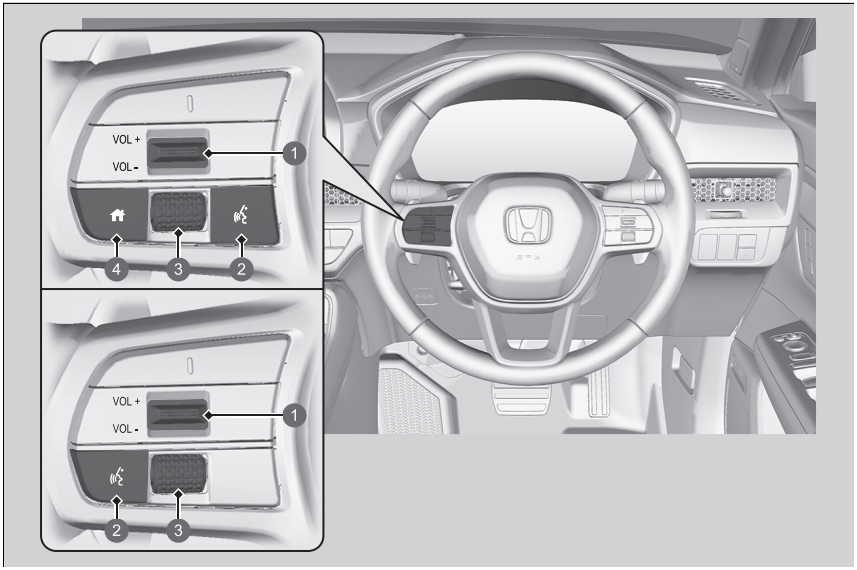

❶ **VOL** ＋/**VOL** －(Volume) Switch
❷ (Talk) Button
❸ Left Selector Wheel
❹ (Home) Button*1

*1: Models with A-type meter

* Not available on all models

Hands-Free Telephone (HFT) System

Place your phone where you can get good reception.

To use HFT, you need a *Bluetooth*-compatible mobile phone. For a list of compatible phones, pairing procedures, and special feature capabilities, ask a dealer or your local Honda.

To use the system, the **Bluetooth** setting must be **ON**.

Phone Setup P. 393

Voice control tips

- Aim the vents away from the ceiling and close the windows, as noise coming from them may interfere with the microphones.
- Press the button when you want to call a number using a stored voice tag*, a phonebook name* or a number*. Speak clearly and naturally after a beep.
- If the microphone picks up voices other than yours, the command may be misinterpreted.
- To change the volume level, select the audio system's **VOL** (Volume) or use the remote audio controls on the steering wheel.

If there is no Favourite contacts entry in the system, the pop-up notification appears on the screen.

Favourite Contacts P. 398

(Talk) button: Press to call a number with a stored voice tag* or to access Voice Portal*.

(Home) button*1: Press to go back to the home screen of the driver information interface.

Left Selector Wheel: Press the (Home) button*1. Roll up or down to select (phone) on the driver information interface, and then press the left selector wheel. While receiving a call, the incoming call screen is displayed on the driver information interface. You can pick up the call using the left selector wheel.

Receiving a Call P. 404

Hands-Free Telephone (HFT) System

Bluetooth® Wireless Technology

The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth* SIG, Inc., and any use of such marks by Honda Motor Co., Ltd., is under licence. Other trademarks and trade names are those of their respective owners.

HFT Limitations

An incoming call on HFT will interrupt the audio system when it is playing. It will resume when the call is ended.


*1: Models with A-type meter

* Not available on all models

Continued

■ HFT Status Display

The audio/information screen notifies you when there is an incoming call.

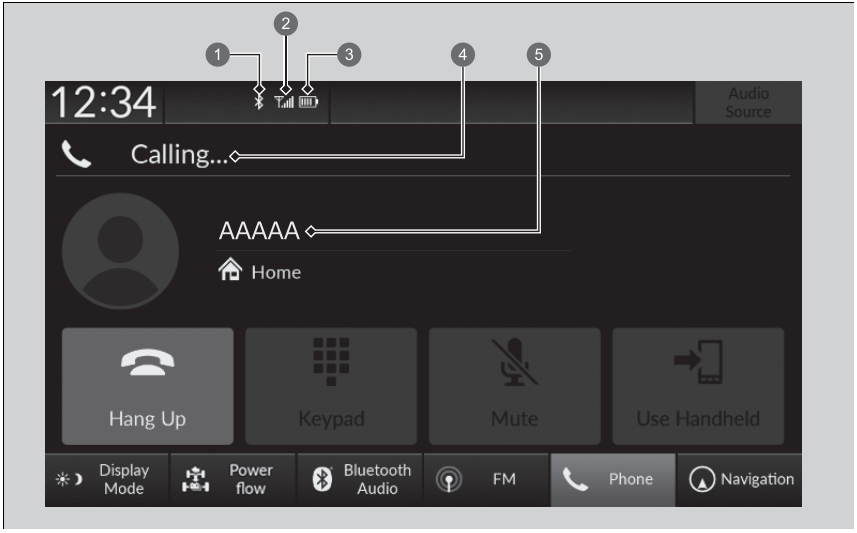

❶ *Bluetooth*® Indicator
Appears when your phone is connected to HFT.
❷ Signal Strength
❸ Battery Level Status
❹ HFT Mode
❺ Caller's Name (If registered)/Caller's Number (If not registered)

HFT Status Display

The information that appears on the audio/information screen varies between phone models.

■ Limitations for Manual Operation

Certain manual functions are disabled or inoperable while the vehicle is in motion. You cannot select a grayed-out option until the vehicle is stopped.

Only previously stored Favourite contacts entries with voice tags*, phonebook names*, or numbers* can be called using voice commands while the vehicle is in motion.

➲ **Favourite Contacts** P. 398

* Not available on all models

Continued

■ HFT Menus

The power mode must be in ACCESSORY or ON to use the system. Select **Phone** to display the phone screen.



❶ **Settings**
❷ **Recent calls** (**Recent Calls**)
❸ **Favourite contacts** (**Favorite Contacts**)
❹ **Contacts**
❺ **Keypad**

HFT Menus


Some functions are limited while driving.

Settings: Changes the phone settings.
➡ **Phone Settings Screen** P. 392
Recent calls (Recent Calls): Displays the last outgoing, incoming, and missed calls.
➡ **To make a call using the recent calls** P. 402
Favourite contacts (Favorite Contacts): Dials the selected number in the Favourite contacts entry.
➡ **To make a call using a Favourite contacts entry** P. 402
Contacts: Displays the phonebook of the paired phone.
➡ **To make a call using the imported phonebook** P. 403
Keypad: Enters a phone number to dial.
➡ **To make a call using a phone number** P. 403

Continued

■ Phone Settings Screen

To display the phone settings screen, select **Settings** on the phone screen.

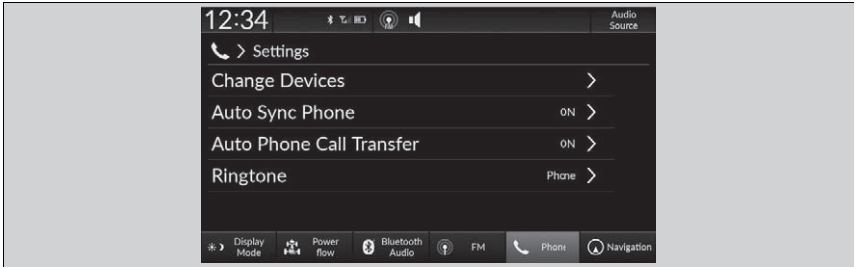

Change Devices: Pairs a new phone to the system and connect, disconnect, or delete a paired device.

Phone Setup P. 393

Auto Sync Phone: Sets phonebook and recent calls data to be automatically imported when a phone is paired to HFT.

Automatic Import of Mobile Phonebook and Recent calls P. 396

Auto Phone Call Transfer: Sets calls to automatically transfer from your phone to HFT when you enter the vehicle.

Automatic Transferring P. 397

Ringtone: Selects the ringtone.

Ringtone P. 397


■ Phone Setup

■ *Bluetooth*® setup

You can turn *Bluetooth*® function on and off.

1. Press the HOME button.
2. Select **General Settings**.
3. Select **Connections**.
4. Select **Bluetooth**.
5. Select **Options**.
6. Select **Bluetooth**, then select **ON**.

Continued

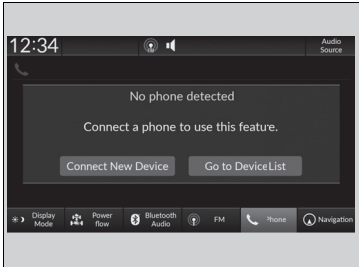

■ To pair a mobile phone (when there is no phone paired to the system)

1. Select **Phone**.
2. Select **Connect New Device**.
3. Make sure your phone is in search or discoverable mode.
4. Select **Honda HFT** from your phone.
   ▶ If you want to pair a phone from this audio system, select **Search for Devices**, and then select your phone when it appears on the list.
5. The system gives you a pairing code on the audio/information screen.
   ▶ Confirm if the pairing code on the screen and your phone matches.
   This may vary by a phone.
6. Select desired functions and then select **Connect**.
7. A notification appears on the screen if pairing is successful.
8. Select **OK**.

Phone Setup

Your *Bluetooth*-compatible phone must be paired to the system before you can make and receive hands-free calls.

Phone Pairing Tips:
- You cannot pair your phone while the vehicle is moving.
- Up to six phones can be paired.
- Your phone's battery may drain faster when it is paired to the system.

Once you have paired a phone, you can see it displayed on the screen with the following icons.

: The phone is compatible with *Bluetooth*® Audio.

: The phone can be used with HFT.

: The phone is compatible with Apple CarPlay.

If there is an active connection to Apple CarPlay or Android Auto, pairing of additional *Bluetooth*® compatible devices is unavailable.



■ To change the currently paired phone

1. Select **Phone**.
2. Select **Settings**.
3. Select **Change Devices**.
4. Select a phone to connect.
   - ▶ HFT disconnects the connected phone and starts searching for another paired phone.
   - ▶ You can set the connected phone priority. Select the box checked on the phone you want to prioritize.
5. Select (audio), (phone), or (Apple CarPlay).
   - ▶ and can be selected simultaneously, however, when is selected, and cannot be selected.
6. Select **Apply**.



■ To delete a paired phone

1. Select **Phone**.
2. Select **Settings**.
3. Select **Change Devices**.
4. Select a phone you want to delete.
5. Select **Delete**.
6. A confirmation message appears on the screen. Select **Delete**.

To change the currently paired phone

If no other phones are found or paired when trying to switch to another phone, HFT will inform you that the original phone is connected again.

To pair other phones, select **+ Connect New Device** from the **Bluetooth** screen.

Continued

■ Automatic Import of Mobile Phonebook and Recent calls


When your phone is paired, the contents of its phonebook and recent calls are automatically imported to the system.

1. Select **Phone**.
2. Select **Settings**.
3. Select **Auto Sync Phone**.
4. Select **ON** or **OFF**.
▶ The default setting is **ON**.

Automatic Import of Mobile Phonebook and Recent calls

On some phones, it is necessary to set up it enabled to be imported the mobile phonebook.

When you select a name from the list in the mobile phonebook, you can see a category icon. The icons indicate what types of numbers are stored for that name.

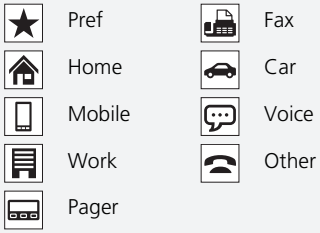

On some phones, it may not be possible to import the category icons to the system.

The phonebook is updated after every connection. Recent calls are updated after every connection or call.

■ Automatic Transferring

If you get into the vehicle while you are on the phone, the call can be automatically transferred to HFT.

1. Select **Phone**.
2. Select **Settings**.
3. Select **Auto Phone Call Transfer**.
4. Select **ON** or **OFF**.
▶ The default setting is **ON**.

■ Ringtone

You can change the ringtone setting.

1. Select **Phone**.
2. Select **Settings**.
3. Select **Ringtone**.
4. Select **Vehicle** or **Phone**.
▶ The default setting is **Phone**.

Ringtone


Vehicle: The fixed ringtone sounds from the speakers.
Phone: Depending on the make and model of the mobile phone, the ringtone stored in the phone will sound if the phone is connected.

Continued

■ Favourite Contacts



1 Star Icon

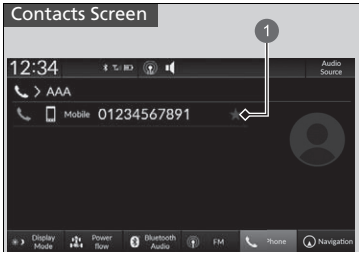

1 Star Icon

■ To add a Favourite contacts

1. Select **Phone**.
2. Select **Recent calls** (**Recent Calls**), **Contacts**, or **Keypad**.

On the Recent calls or Contacts screen

3. Select the star icon.

On the Keypad screen


3. Select **Add to Favourite Contacts** (**Add to Favorite Contacts**).
   - ▶ A notification appears on the screen if the Favourite contacts is successfully stored.
   - ▶ To remove the Favourite contacts, select the star icon again.

Keypad Screen



❶ **Add to Favourite Contacts**
(**Add to Favorite Contacts**)

Continued

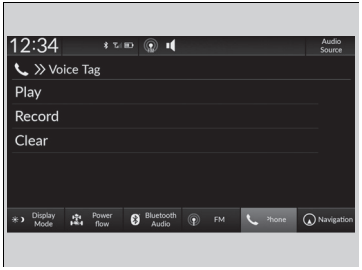

Models without voice control system

■ **To add a voice tag to a stored Favourite contacts entry**

1. Select **Phone**.
2. Select **Favourite contacts** (**Favorite Contacts**).
3. Select **Edit** on the Favourite contacts entry you want to edit.
4. Select **Voice Tag**.
5. Select **Record**.
6. Select **Record**, or use the button and follow the prompts to complete the voice tag.

Models without voice control system


■ **To delete a voice tag**

1. Select **Phone**.
2. Select **Favourite contacts** (**Favorite Contacts**).
3. Select **Edit** on the Favourite contacts entry you want to edit.
4. Select **Voice Tag**.
5. Select **Clear**.
6. A confirmation message appears on the screen. Select **Yes**.

Favourite Contacts

Models without voice control system

Avoid using duplicate voice tags.
Avoid using "*home*" as a voice tag.
It is easier for the system to recognise a longer name.
For example, use "*John Smith*" instead of "*John*."

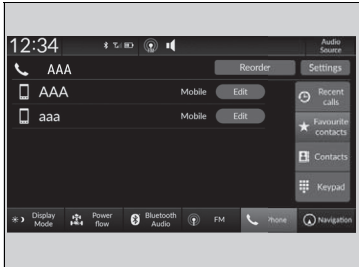

■ **To edit a Favourite contacts**

1. Select **Phone**.
2. Select **Favourite contacts** (**Favorite Contacts**).
3. Select **Edit** on the Favourite contacts entry you want to edit.
4. Select a setting you want.
5. Select **Done**.

■ **To delete a Favourite contacts**

1. Select **Phone**.
2. Select **Favourite contacts** (**Favorite Contacts**).
3. Select **Edit** on the Favourite contacts entry you want to delete.
4. Select **Remove**.
5. A confirmation message appears on the screen. Select **Yes**.

Continued

■ Making a Call



You can make calls by inputting any phone number, or by using the imported **Recent calls** (**Recent Calls**), **Favourite contacts** (**Favorite Contacts**), and **Contacts** entries.

■ To make a call using the recent calls

Recent calls are stored by **All**, **Dialled** (**Dialed**), **Missed**, and **Received**.

1. Select **Phone**.
2. Select **Recent calls** (**Recent Calls**).
▶ You can sort by **All**, **Dialled** (**Dialed**), **Missed**, or **Received**. Select the icon on the upper right of the screen.
3. Select a number.
▶ Dialing starts automatically.

■ To make a call using a Favourite contacts entry

1. Select **Phone**.
2. Select **Favourite contacts** (**Favorite Contacts**).
▶ You can change the order of Favourite contacts entries by selecting **Reorder**.
3. Select a number.
▶ Dialing starts automatically.

Making a Call

Models without voice control system

Any voice-tagged Favourite contacts entry can be dialled by voice from most screens.
Press the button and say the voice tag name.

Once a call is connected, you can hear the voice of the person you are calling through the audio speakers.

While there is an active connection with Apple CarPlay, phone calls cannot be made with Hands-Free Telephone (HFT) system and are only made from Apple CarPlay.

To make a call using the recent calls

The recent calls appear only when a phone is connected to the system.

All: Displays the last outgoing, incoming, and missed calls.
Dialled (Dialed): Displays the last outgoing calls.
Missed: Displays the last missed calls.
Received: Displays the last incoming calls.

To make a call using a Favourite contacts entry

Models without voice control system

When a voice tag is stored, press the button to call the number using the voice tag.
➡ **Favourite Contacts** P. 398

Any voice-tagged Favourite contacts entry can be dialled by voice from any screen.
Press the button and follow the prompts.

■ **To make a call using the imported phonebook**


1. Select **Phone**.
2. Select **Contacts**.
3. Select a name.
▶ You can sort by **First Name** or **Surname** (**Last Name**). Select the icon on the upper right of the screen.
4. Select a number.
▶ Dialing starts automatically.

■ **To make a call using a phone number**

1. Select **Phone**.
2. Select **Keypad**.
3. Select a number.
▶ Use the keyboard on the touch screen for entering numbers.
4. Select **Call**.
▶ Dialing starts automatically.

Continued

■ Receiving a Call

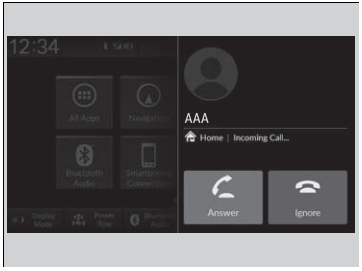

When there is an incoming call, an audible notification sounds (if activated) and the **Incoming Call...** screen appears.

You can answer the call using the left selector wheel.
To pick up the call, roll up or down to select (answer) on the driver information interface and then press the left selector wheel.

▶ If you want to decline or end the call, select (ignore) on the driver information interface using the left selector wheel.


Receiving a Call

Call Waiting
Select (answer) to put the current call on hold to answer the incoming call.
Select using the left selector wheel to return to the current call.

Select (ignore) to ignore the incoming call if you do not want to answer it.
Select if you want to hang up the current call.

You can select the icons on the audio/information screen instead of and on the driver information interface.

■ Options During a Call

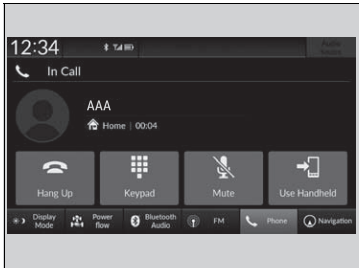

The following options are available during a call.
Keypad: Send numbers during a call. This is useful when you call a menu-driven phone system.
Mute: Mute your voice.
Use Handheld: Transfer a call from the system to your phone.

The available options are shown on the lower half of the screen.

Select the option.
▶ The mute icon appears when **Mute** is selected when the other source screen other than the phone screen is displayed. Select **Mute** again to turn it off.

Options During a Call

You can select the icons on the audio/information screen.

Refuel Recommend*

Your vehicle is equipped with a feature that automatically calculates when to refuel. This feature will notify you when refueling is recommended as well as enable you to search for gas stations that are located in the vicinity of your vehicle.



1. When it is time to refuel the vehicle, a notification is displayed and a notification icon is displayed in the header.
2. Touch the box that contains the icon.
3. Select **Find Petrol Station Now** (**Find Gas Station Now**).
4. Choose a gas station from the search screen of the navigation system.
   ▶ For instructions on how to use the navigation system, refer to the navigation system manual.

1 Notification Icon

* Not available on all models

Refuel Recommend*

You can turn the Refuel Recommend function on and off.

➡ **Customized Features** P. 366

When you turn off this feature, the refuel recommend notification will not display.

This feature can only be used when the gas tank fuel level is below 30 percent.

If you select **Find Petrol Station Now** (**Find Gas Station Now**) or put more than 5 liters of gasoline into the gas tank, the notification for refueling will disappear. If you prefer not to be notified, select OFF in the settings for Refuel Recommend.

When you drive on a rough road or ascend or descend a hill for an extended period of time, the notification may disappear or may not be displayed at all.

Start Up


The Display Audio starts automatically when you set the power mode to ACCESSORY or ON. At start-up, the disclaimer screen will be displayed. When adding a new user, entry of user information is required at start-up.

Select **OK** on the disclaimer screen.

- ▶ If you do not select **OK**, the system will automatically be display off after a certain period of time.
- ▶ If there is no registered device, select **OK** and the *Bluetooth*® pairing screen will be displayed.
- ▶ If you check the box with **Do not show this again**, this screen will not be displayed.

Continued

■ Registering new user information.

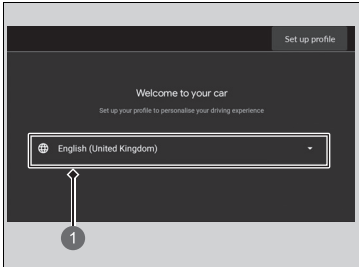

❶ Language List

1. Read the disclaimer screen and select **OK**.
2. Select **Set up profile**.
   ▶ If you want to change the language, select the language list.
3. **Name your profile** and select **Next**.
4. You can view the terms and conditions of the Google Services agreement.
5. On the System-wide permission Settings screen, select the data you give permission for the system to access, and select **Accept**.
6. Select **Done for now**.
   ▶ By selecting **Profile lock**, you can set security settings for your profile.
   ▶ By selecting **Set up Google Assistant and apps**, you can customize settings related to Google.
   An internet connection is required to change settings.
   ➔ **Wi-Fi Connection** P. 446

Registering new user information.

Refer to the Google website for more information on set up profile.


Additional information for Google Apps and Services is available at Honda Web site.

Specifications may be changed via system updates, etc.

Basic Operation

■ Audio System Function

To use the audio system function, the power mode must be in ACCESSORY or ON.

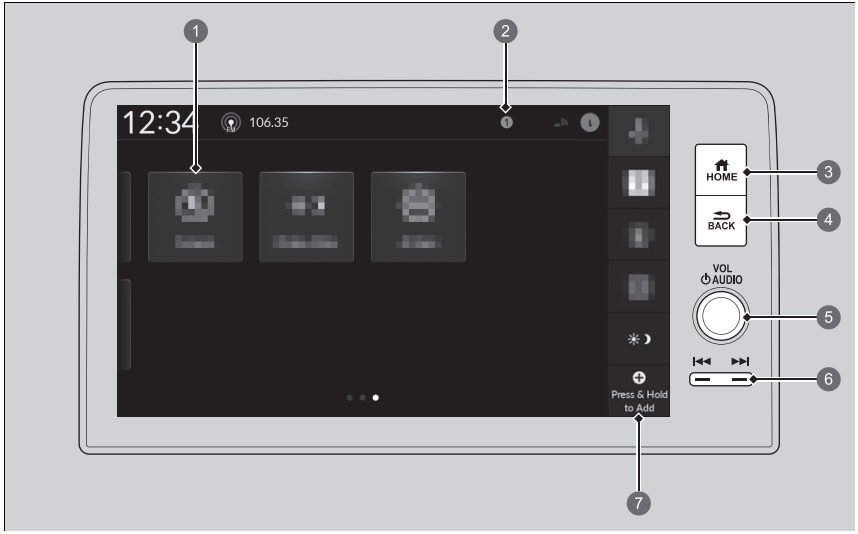


Continued

❶ App Shortcut Icons
Display the app shortcut icons.
▶ You can check all apps installed on this system by selecting **All Apps**.
Audio/Information Screen P. 415
❷ Status Icons
Show the indicators of the information for the vehicle, connected phones, etc.
❸ **(Home) Button**
❹ **(Back) Button**
❺ **VOL/ AUDIO (Volume/Power) Knob**
Press to turn the audio system on and off.
Turn to increase or decrease the volume.
❻ **/ (Seek/Track) Buttons**
Press to change station, song or file.
❼ Mode Change Switch Icons
Display icons to change the mode directly.

■ Reboot Audio

You can reboot the audio system.
1. Press and hold the button until the reboot dialog screen appears.
2. Select **Reboot**.
▶ If **Safe Mode** is selected, the audio system will be rebooted with third-party applications turned off.
After the power mode has been turned off once, third-party applications can be used again.

■ USB Ports

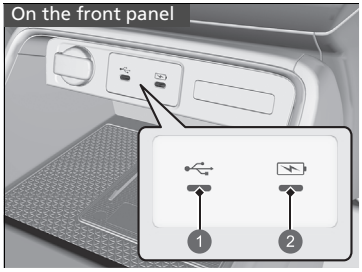

❶ Playing audio files and connecting compatible phones
❷ Only for charging devices

■ USB Charging/Connector Port ( )


The USB port is for charging devices, playing audio files, and connecting compatible phones with Apple CarPlay or Android Auto.

▶ To prevent any potential issues, be sure to use an Apple MFi Certified Lightning Connector for Apple CarPlay. For Android Auto, the USB cables should be certified by USB-IF to be compliant with USB 2.0 Standard.

■ USB Charging Port on the front panel ( )

The USB port is only for charging devices.

▶ You cannot play music even if you have connected music players to it.

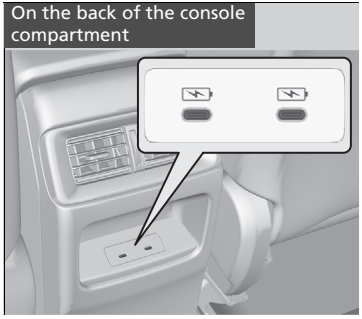

■ USB Charging Port on the back of the console compartment ( )

The USB ports (3.0A) are only for charging devices.

▶ The USB port can supply up to 3.0A of power. It does not output 3.0A unless requested by the device.

▶ You cannot play music even if you have connected music players to it.

USB Ports

- Do not leave the iPod or USB flash drive in the vehicle. Direct sunlight and high temperatures may damage it.
- We recommend that you use a USB cable if you are attaching a USB flash drive to the USB port.
- Do not connect the iPod or USB flash drive using a hub.
- Do not use a device such as a card reader or hard disk drive, as the device or your files may be damaged.
- We recommend backing up your data before using the device in your vehicle.
- Displayed messages may vary depending on the device model and software version.
- Some devices may not work even if they are connected to the USB ports.


Supplementary information about USB Charging:

- The USB ports on the front panel support USB Power Delivery.
- USB standard output
  When using 1 port: 5V/3A(15W), 9V/3A(27W), 15V/3A(45W), 20V/3A(60W)
  When using both ports: 5V/3A(15W), 9V/3A(27W), 20V/2.25A(45W), Max 60W in total
  For amperage details, read the operating manual of the device that needs to be charged.
- The USB port also supports PPS (Programmable Power Supply). PPS 5.0V-21V (Max 60W).
- Charging may not start or may operate slowly depending on the connected devices and cables. Using only one port while not connecting anything (including cables) to the other port may solve the issue.

Continued

■ Audio Remote Controls


Models with A-type meter

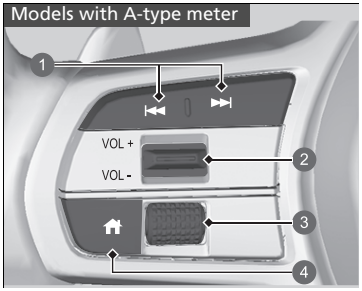

Allow you to operate the audio system while driving. The information is shown on the driver information interface.

❶ |◀◀ / ▶▶| (Seek/Skip) Buttons
❷ **VOL** + **/VOL** − (Volume) Switch
❸ Left Selector Wheel
❹ ⌂ (Home) Button

Models with B-type meter

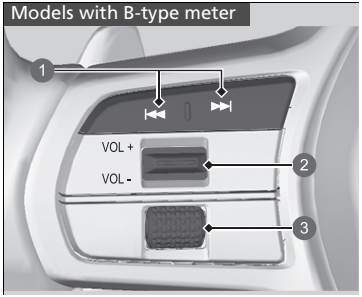

❶ |◀◀ / ▶▶| (Seek/Skip) Buttons
❷ **VOL** + **/VOL** − (Volume) Switch
❸ Left Selector Wheel

Audio Remote Controls

Some modes appear only when an appropriate device or medium is used.

Depending on the *Bluetooth*® device you connect, some functions may not be available.

Models with A-type meter

Press the ⌂ (home) button to go back to the home screen of the driver information interface.

VOL ＋/VOL －(Volume) Switch
Press Up: To increase the volume.
Press Down: To decrease the volume.

Models with A-type meter

Left Selector Wheel

- When selecting the audio mode

Press the (home) button, then roll up or down to select **Audio** on the driver information interface, and then press the left selector wheel.

Roll up or down:
To cycle through the audio modes, roll up or down and then press the left selector wheel.

Continued

Models with B-type meter

Left Selector Wheel

Roll up or down:


To cycle through the audio modes, roll up or down and then press the left selector wheel.

|◀◀/▶▶| (Seek/Skip) Buttons

- When listening to the radio
  Press ▶▶|: To select the next preset radio station.
  Press |◀◀: To select the previous preset radio station.
  Press and hold ▶▶|: To select the next strong station.
  Press and hold |◀◀: To select the previous strong station.
- When listening to a wired connection, USB flash drive, *Bluetooth*® Audio, or Smartphone Connection
  ▶ Depending on a connected device, operations may be changed.
  Press ▶▶|: To skip to the next song.
  Press |◀◀: To go back to the previous song.
- When listening to a USB flash drive
  Press and hold ▶▶|: To skip to the next folder.
  Press and hold |◀◀: To go back to the previous folder.

Audio/Information Screen

Displays the audio status and wallpaper. From this display, you can go to various setup options.

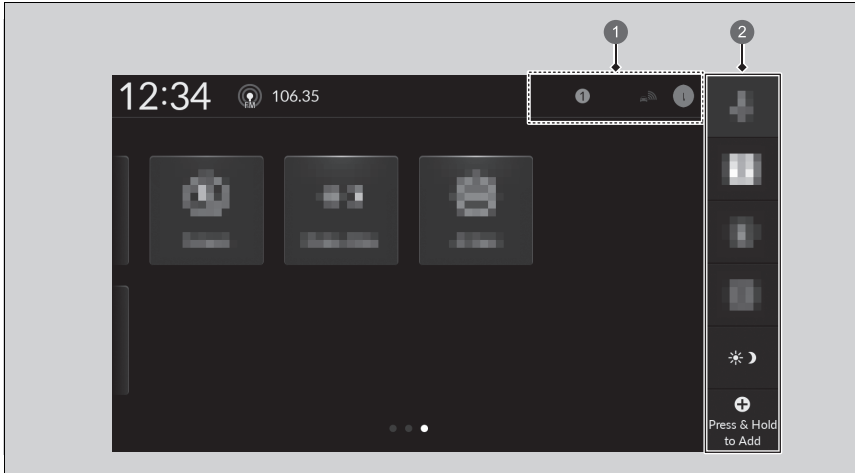

1 Status Bar
2 Mode Change Switch Bar

Audio/Information Screen

Touchscreen Operation

- Use simple gestures - including touching, swiping, and scrolling - to operate certain audio functions.
- Some items may be greyed-out during driving to reduce the potential for distraction.
- You can select them when the vehicle is stopped or use voice commands.
- Wearing gloves may limit or prevent touchscreen response.

You can change the touchscreen sensitivity setting.
Customized Features P. 465


Mode Change Switch Bar

You can also select any application from the Mode Change Switch bar. Shortcuts can be edited to open other applications; however, **Google Assistant** cannot be edited.

Continued

■ To move to the next screen

Swiping the screen left or right changes to the next screen.

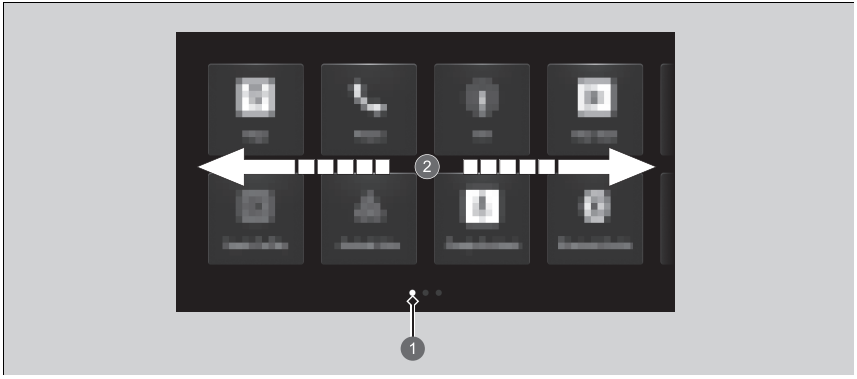

❶ Current page position
❷ Swipe

To move to the next screen

You can add up to six pages to the home screen.

Press the HOME button to go directly back to the first page of the home screen from any page.

■ To add/remove app icons on the home screen

App icons can be added or deleted on the home screen.

1. Press the HOME button.

2. Select **All Apps**.

3. Select an app to check or uncheck it.


To add/remove app icons on the home screen

Apps will not be deleted by deleting the icon on the home screen.

Continued

■ To move/remove icons on the home screen

You can change icon locations on the home screen.

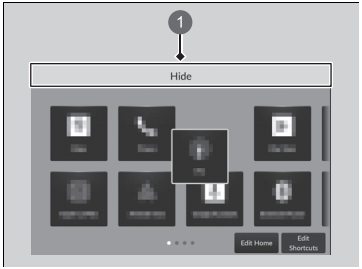

1 Hide

1. Press the HOME button.
2. Select and hold an icon.
   ▶ The screen switches to the customization screen.
3. Drag and drop the icon to where you want it to be.
   ▶ Drag and drop the icon to **Hide** to remove from the home screen.
4. Press the HOME or BACK button.
   ▶ The screen will return to the home screen.


To move/remove icons on the home screen

Apps will not be deleted by deleting the icon on the home screen.

Select **Tips** to show tips. To hide them, select it again.

■ To shortcut icons on the home screen

You can store up to five icons on the mode change switch bar.

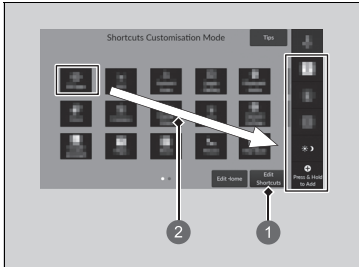

❶ Edit Shortcuts
❷ Drag and Drop

1. Press the HOME button.
2. Select and hold an icon.
▶ The screen switches to the customization screen.
3. Select **Edit Shortcuts**.
4. Drag and drop the icon you want to store to the right of the home screen.
▶ The icon is a shortcut.
5. Press the HOME or BACK button.
▶ The screen will return to the home screen.

To shortcut icons on the home screen

Select **Tips** to show tips. To hide them, select it again.


You can also store icons on the mode change switch bar by the following procedure.
1. Select and hold an icon.
2. Select **Edit Shortcuts**.
3. Select an icon.
4. Select shortcut location.
5. Press the HOME or BACK button.

Features

Continued

■ Status Bar

Shows the indicators of the information for the vehicle, connected phones, etc. in the header area. You can confirm the detail information by selecting these icons.

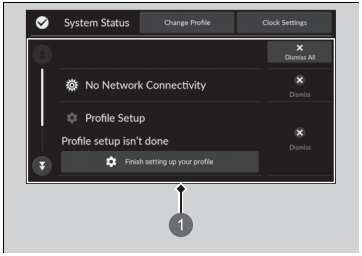


1. Select the Status Bar.
▶ The status area appears.
2. Select an item to see the details.
3. Press the HOME or BACK button.

❶ Status Area

■ Selecting an Audio Source

You can select an audio source on the audio/information screen.

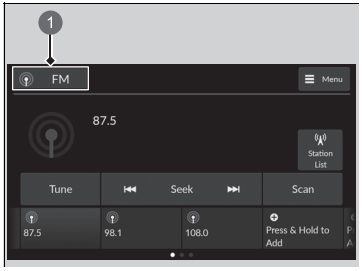

1. Select application icon of the audio/ information screen.
2. Select an icon on the source list to switch the audio source.

❶ Application Icon

Clock Setup

■ Adjusting the Clock

You can adjust the time manually and set the wallpaper of the clock in the audio/information screen.

1. Press the HOME button.
2. Select **General Settings**.
3. Select **System**.
4. Select **Date & Time**.
5. Select **Set Date & Time**.
6. Select **Automatic Date & Time**, then select **OFF**.

To adjust date:
7. Select **Set Date**.
8. Select ▲/▼.
9. Press the BACK button to set the date.

To adjust time:
7. Select **Set Time**.
8. Select ▲/▼.
9. Press the BACK button to set the time.

Adjusting the Clock

The clock is automatically updated through the audio system.

You can also adjust the clock by touching the clock displayed on the header area of the audio/information screen, **Clock** displayed on the home screen, or **All Apps**.

1. Touch the clock on the screen.
   The clock screen of the face-type appears.
2. Select **Menu**.
3. Select **Date & Time**.
4. Select **Set Date & Time**.
5. Select **Automatic Date & Time**, then select **OFF**.
6. Select **Set Date** or **Set Time**.
7. Adjusting the dates, hours and minutes by selecting ▲/▼.
8. Press the BACK button to set the time.

You can customise the clock display.
➡ **System** P. 466

■ Wallpaper Setup

You can change, store, and delete the wallpaper on the audio/information screen.

■ Import wallpaper

1. Connect the USB flash drive to the USB port.
➡ **USB Ports** P. 311
2. Select **Clock**.
3. Select **Menu**.
4. Select **Clock Faces**.
5. Select **Add More**.
6. Import a desired picture.
▶ Multiple pictures can be imported at the same time.
7. Select **Select Files**.
8. Select **Add Files**.
▶ The display will return to the **Clock Faces** screen.

■ Select wallpaper

1. Select **Clock**.
2. Select **Menu**.
3. Select **Clock Faces**.
4. Select a desired wallpaper.
5. Select **Save**.
▶ The display will return to the **Clock Faces** screen.

Wallpaper Setup

The wallpaper you set up on **Clock Faces** cannot be displayed on the driver information interface.

- When importing wallpaper files, the image must be in the USB flash drive's root directory. Images in a folder cannot be imported.
- The file name must be less than 64 bytes.
- The file format of the image that can be imported is BMP (bmp) or JPEG (jpg).
- Up to 21 pictures can be imported.
- The individual file size limit is 10 MB.
- The maximum image size is 4,096 × 2,304 pixels. If the image size is less the image is displayed in the middle of the screen with the extra area appearing in black.

Continued

■ **Delete wallpaper**

1. Select **Clock**.
2. Select **Menu**.
3. Select **Clock Faces**.
4. Select **Delete Files**.
5. Select **Select Files to Delete**.
▶ If you want to delete all wallpapers, select **Delete All Files**.
6. Select a desired wallpaper.
7. Select **Select Files**.
8. Select **Delete Files**.
▶ The display will return to the **Clock Faces** screen.

Delete wallpaper

You cannot delete the initial imported wallpapers.

When the file size is large, it takes a while to be previewed.

Adjusting the Sound

1. Press the HOME button.
2. Select an audio source icon.

AM/FM Radio, DAB* mode

3. Select **Menu**.
4. Select **Sound Settings**.
5. Select the setting you want.

USB Audio, Bluetooth Audio mode

3. Select **Sound**.
4. Select the setting you want.

Select an item from the following choices:

- **Speed Volume Compensation**[*2]: Sets the amount of volume increase.
- **Bass / Mid / Treble**: Bass, Midrange, Treble
- **Balance / Fader**[*2]: Balance, Fader
- **Audio Zones & Balance / Fader**[*1]: Driver Only, Front Only, Rear Only, Full Vehicle, Balance, Fader
- **Bose Centerpoint Surround**[*1]: Turns the Bose Centerpoint ON and OFF.
- **Bose Dynamic Speed Compensation**[*1]: Sets the amount of volume increase.

*1: Model with BOSE AMP
*2: Model with Normal AMP

* Not available on all models

Adjusting the Sound

The **Speed Volume Compensation**[*2] and **Bose Dynamic Speed Compensation**[*1] adjusts the volume level based on the vehicle speed. As you go faster, audio volume increases. As you slow down, audio volume decreases.

You can also adjust the sound by the following procedure.
1. Press the HOME button.
2. Select **General Settings**.
3. Select **Sound**.

To reset each setting for **Bass / Mid / Treble**, **Balance / Fader**[*2], **Audio Zones & Balance / Fader**[*1], **Bose Dynamic Speed Compensation**[*1], and **Speed Volume Compensation**[*2] select **Reset to Default** in each setting item.

Display Setup

You can change the brightness of the audio/information screen.

■ Changing the Screen Brightness

1. Press the HOME button.
2. Select **General Settings**.
3. Select **Display**.
4. Select the setting you want.

Changing the Screen Brightness

You can change the **Contrast** and **Black Level** settings in the same manner.

To reset the settings, select **Reset to Default**.

System Updates

When an update for your system becomes available, a screen prompting you to update your system will be displayed on the audio/information screen.
System Updates uses the telematics control unit (TCU) or Wi-Fi communication capability to operate.

System Updates

If new software has been released, perform an update as soon as possible.

If a system update fails, please consult a dealer.

System updates that change specifications may result in some discrepancies with the information in this owner's manual. For the most up-to-date information, please refer to the Honda website.

Certain features may not be available during system updates.

Continued

■ Performing System Updates

1. Select **System Updates**.
2. Select **Agree to Update while power mode is OFF** to give permission for the update.
▶ The installation progress screen will be displayed.
▶ While the power mode is set to OFF, an update started notification appears for a few seconds.
3. The next time the power mode is turned to ON, the system update results screen will be displayed.
▶ System update results can also be viewed from **Settings → Update History** within System Update.

Performing System Updates

Make sure your vehicle is stopped in a safe location before starting a system update.

If you have pressed **Agree to Update while power mode is OFF** on the agreement screen when an update is being offered, or **Automatic Update** is set to **ON**, and the update started notification is not displayed even though the power mode is set to OFF, it may be due to one or more of the conditions listed below. For more information, consult a dealer.
- The shift position is not in P.
- The vehicle is providing one or more emergency notifications.
- The 12-Volt Battery is depleted.

If the system is being updated via Wi-Fi, you will not be able to use this feature in some situations based on Wi-Fi authentication methods.
For example:
- The connection requires you to log in.
- Agreement to terms of use is required.

If you are disconnected from the network, the download will be stopped.
Download is resumed when a new network connection is established.

System Updates Settings

You can change or confirm system update settings.

1. Press the HOME button.
2. Select **System Updates**.
3. Select **Settings**.
4. Select the option you want to change or confirm.


The following settings can be set.

- **Automatic Update**
- **Automatic Download**
- **Control Unit Versions**
- **Connection Setup**
  Wi-Fi Connection P. 446
- **Update History**

System Updates Settings

To perform a system update via Wi-Fi, change settings for connecting to Wi-Fi.
Wi-Fi Connection P. 446

Playing AM/FM Radio

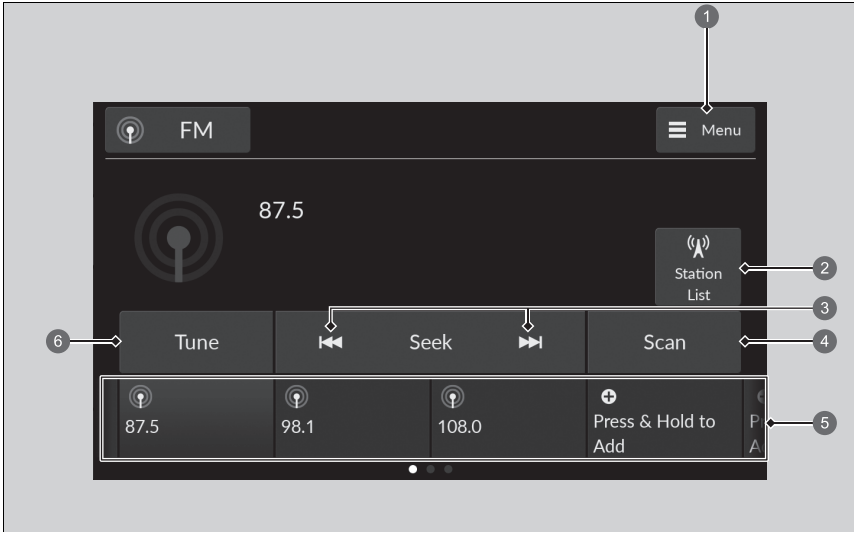

❶ **Menu Icon**
❷ **Station List Icon**
❸ **Seek Icon**
❹ **Scan Icon**
❺ **Favourite Station Icons**
❻ **Tune Icon**

■ Favourite Station

To add a station:
1. Tune to the selected station.
2. Select and hold **Press & Hold to Add**.

■ Editing a favourite station

Select and hold the desired favourite station icon.
The following items are available:
- **Remove Favourite**: Delete the favourite station icon from the favourite station list.
- **Replace with** (number): Replace the stored favourite station icon.
- **Add to Home**: Add the shortcut icon of the stored favourite station to the home screen.

■ Station List

Lists the strongest stations on the selected band.
1. Select **Station List** to display a list.
2. Select the station.

■ Manual update

Updates your available station list at any time.
1. Select **Station List** to display a list.
2. Select **Refresh**.

Favourite Station

Switching the Audio Mode
Roll the left selector wheel or select the audio source icon on the screen.
➡ **Audio Remote Controls** P. 412

You can store 12 AM/FM stations into preset memory.

Continued

■ Scan

Samples each of the strongest stations on the selected band for 10 seconds. To turn off scan, select **Stop** or press the BACK button.

■ Seek

Selects |◀◀ or ▶▶| to search the selected band up or down for a station with a strong signal.

■ Radio Frequency Manual Tune Screen

Selects to use the on-screen keyboard for entering the radio frequency directly.

1. Select **Tune**.
2. Enter the desired radio frequency using the on-screen keyboard.
3. Select **Enter** to tune into the frequency.

■ Radio Data System (RDS)*

Provides text data information related to your selected RDS-capable FM station.

■ To find an RDS station from Station List

1. Select **Station List** to display a list while listening to an FM station.
2. Select the station.

■ Manual update

Updates your available station list at any time.
1. Select **Station List** to display a list while listening to an FM station.
2. Select **Refresh**.

■ Traffic announcement (TA)

The TA standby function allows the system to stand by for traffic announcements in any mode while the function is on. The last tuned station must be an RDS-capable traffic program station.

To turn the function on: Select **TA**. When a traffic announcement begins, the information screen appears on the audio/information screen. The system returns to your last selected mode after the traffic announcement is finished.

▶ If you want to go back to your last selected mode during the traffic announcement, select **Stop**.

To turn the function off: Select **TA** again.

Radio Data System (RDS)*

When you select an RDS-capable FM station, the RDS automatically turns on, and the frequency display changes to the station name. However, when the signals of that station become weak, the display changes from the station name to the frequency.

Traffic announcement (TA)

The **TA** indicator appears on the header area while the TA standby function is on.

If you select **Scan** while the TA standby function is on, the system searches TP station only.

Selecting **TA** while the traffic announcement is on does not cancel the TA standby function.

* Not available on all models

Continued

■ Menu

Adjusts the sound settings and changes the RDS* settings.

1. Select **Menu**.


2. Select an option.

- **Sound Settings:** Adjusts the sound settings
  Adjusting the Sound P. 425
- **TA-Information*:** Turns on and off the traffic information. (**ON**/**OFF***1)
- **AF*:** Turns on and off to automatically change the frequency of the same program you enter different regions. (**ON**/**OFF***1)
- **REG*:** Turns on and off to keep the same stations within that region even if the signal gets weak. (**ON***1/**OFF**)
- **NEWS*:** Turns on and off to automatically to tune to the news program. (**ON**/**OFF***1)

*1 : Default Setting

* Not available on all models

Playing DAB (Digital Audio Broadcasting)*

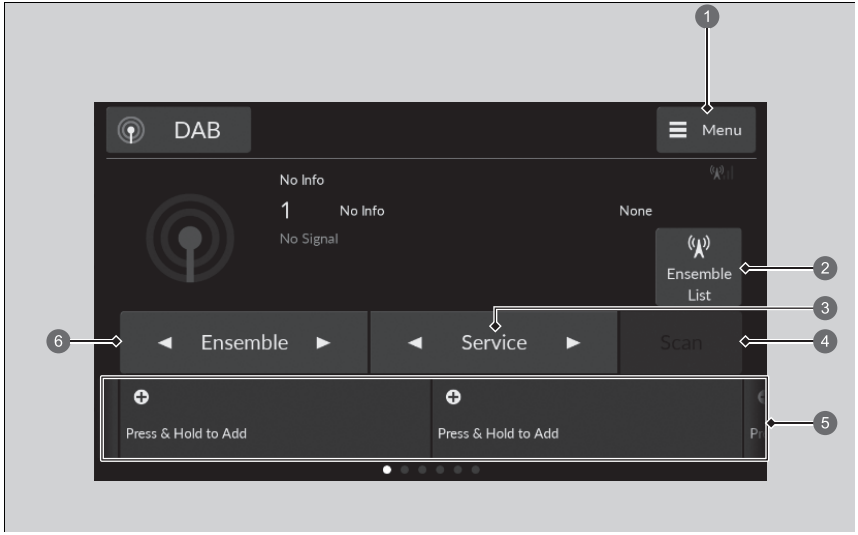

1 Menu Icon
2 Ensemble List Icon
3 Service Icon
4 Scan Icon
5 Favourite Station Icons
6 Ensemble Icon

* Not available on all models

Continued

■ Preset Memory

To store a service:
1. Tune to the selected service.
2. Select and hold **Press & Hold to Add**.

■ Ensemble List

Lists the receivable service on the selected ensembles.
1. Select the **Ensemble List**.
2. Select the ensemble.

■ Manual update

Updates your available ensemble list at any time.
1. Select the **Ensemble List**.
2. Select **Refresh**.

Preset Memory

Switching the Audio Mode
Roll the left selector wheel or select the audio source icon on the screen.
Audio Remote Controls P. 312

You can store 12 ensembles into preset memory.

■ Scan

Samples each of the receivable ensemble or service on the selected service for 10 seconds. To turn off scan, select **Stop** or press the BACK button.

■ Change scan mode

1. Select **Menu**.
2. Select **Scan Mode**.
3. Select **Ensemble** or **All**.

■ Radio text

Displays the radio text information of the selected DAB station.

■ Settings


Change the DAB settings.

1. Select **Menu**.
2. Select the option you want to change.

Music Playback via Wired Connection

Using your USB connector, connect the device to the USB charging/connector port, then select the USB icon.

USB Ports P. 311

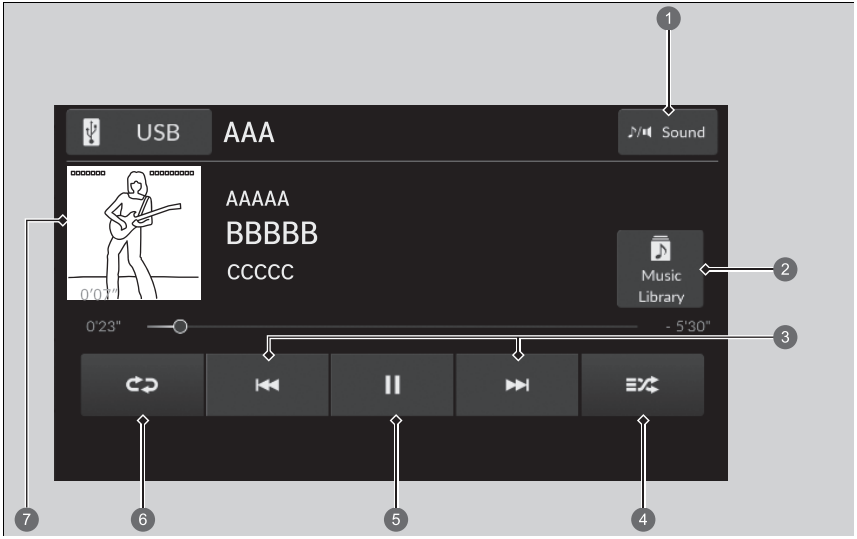

❶ **Sound Icon**
❷ **Music Library Icon**
❸ **Track Icons**
❹ **Shuffle Icon**
❺ **Play/Pause Icon**
❻ **Repeat Icon**
❼ **Cover Art**

How to Select a Song from the Music Search List

1. Select **Music Library**.
2. Select a search category (e.g., Artists, Albums, etc.).
3. Continue making selections until you find the song of your choice.

How to Select a Play Mode

You can select shuffle and repeat modes when playing a file.

Shuffle/Repeat

Repeatedly select the shuffle or repeat icon until you find a play mode option of your preference.

Shuffle

Shuffle off: Shuffle mode turns off.
Shuffle all songs: Plays all available songs in a selected list in random order.

Repeat

Repeat off: Repeat mode turns off.
Repeat song: Repeats the current song.
Repeat all: Repeats all songs.

How to Change a Song

You can select |◀◀| or |▶▶| to change songs. Select and hold to move rapidly within a song.

Sound

You can adjust the sound settings.
Adjusting the Sound P. 425

Music Playback via Wired Connection


Available operating functions vary on models or versions. Some functions may not be available on the vehicle's audio system.

If an iPhone is connected via Apple CarPlay, the USB source will be unavailable and audio files on the phone will be playable only within Apple CarPlay.

Media Playback via USB Flash Drive

Your audio system reads and plays audio files on a USB flash drive in either MP3, WMA, AAC*1, FLAC, WAV, opus, MP4*, AVI*, MKV*, 3GPP*, WebM*, or MPEG2-TS* format. Connect your USB flash drive to the USB charging/connector port, then select the USB icon.

USB Ports P. 311

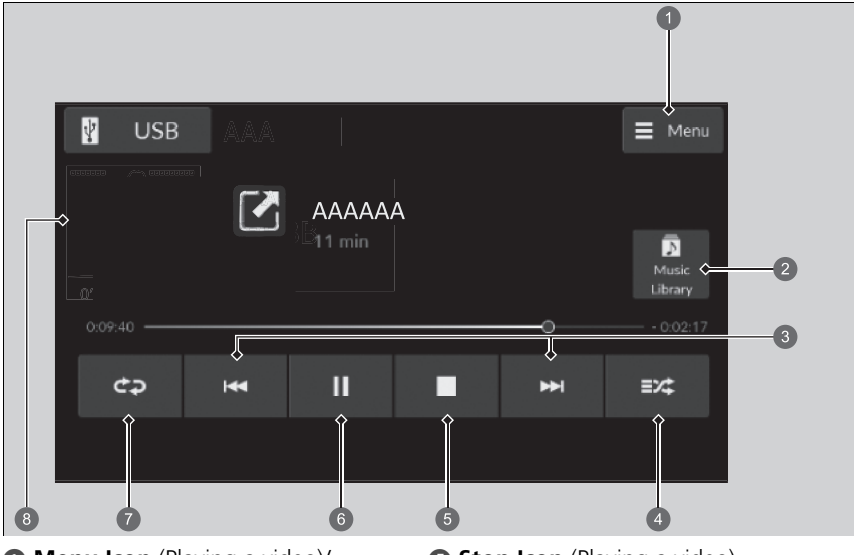

1. **Menu Icon** (Playing a video)/ **Sound Icon** (Playing a music)
2. **Music Library Icon**
3. **Track/Video Icons**
4. **Random Icon**
5. **Stop Icon** (Playing a video)
6. **Play/Pause Icon**
7. **Repeat Icon**
8. **Cover Art** (Playing a music)/ **Mini Player** (Playing a video)

*1: Only AAC format files recorded with iTunes are playable on this unit.

* Not available on all models

How to Select a File from the Music Search List

1. Select **Music Library**.
2. Select a search category (e.g., Artists, Albums, Videos, etc.).
3. Continue making selections until you find the song or video of your choice.

How to Select a Play Mode

You can select random and repeat modes when playing a file.

Random/Repeat

Repeatedly select the random or repeat icon until you find a play mode option of your preference.

Random

Random off: Random mode turns off.
Random all tracks: Plays all files in random order.
Random in folder: Plays all files in the current folder in random order.

Repeat

Repeat off: Repeat mode turns off.
Repeat track: Repeats the current playing file.
Repeat in folder: Repeats all files in the current folder.

Media Playback via USB Flash Drive

Use the recommended USB flash drives.
General Information on the Audio System P. 506

WMA files protected by digital rights management (DRM) cannot be played.
The audio system displays **The selected file cannot be played on this system**, then skips to the next file.

Continued

■ How to Change a File

You can select |◀◀| or |▶▶| to change file. Select and hold to move rapidly within a file.

■ Sound (Playing a Music File)

You can adjust the sound settings.

➡ **Adjusting the Sound** P. 425

■ Menu (Playing a Video File)

Changes the USB settings when playing a video file.

1. Select **Menu**.

2. Select an option.

- **Sound Settings**: Adjusts the sound settings.
  ➡ **Adjusting the Sound** P. 425
- **Image Settings**: Changes the brightness of the audio/information screen.
  ➡ **Display Setup** P. 426
- **Aspect Ratio**: Selects the display mode with a different aspect ratio. (**Original/Normal***1**/Full/Zoom**)
- **Overlay Clock Location**: Changes the clock display layout. (**OFF***1**/Upper right/Upper left/Lower right/Lower left**)


*1: Default Setting

Playing *Bluetooth*® Audio

Your audio system allows you to listen to music from your *Bluetooth*-compatible phone.

This function is available when the phone is paired and connected to the vehicle's Hands-Free Telephone (HFT) system.

Phone Setup P. 492

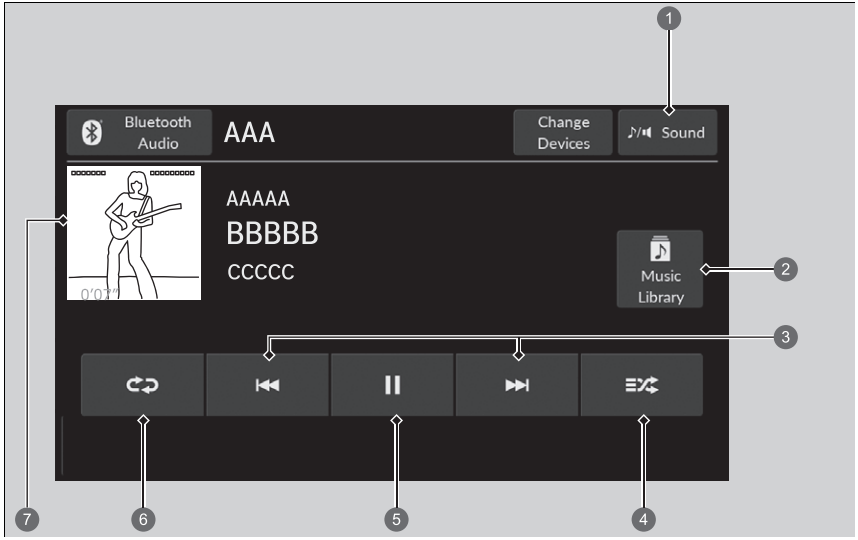

❶ **Sound Icon**
❷ **Music Library Icon**
❸ **Track Icons**
❹ **Shuffle Icon**
❺ **Play/Pause Icon**
❻ **Repeat Icon**
❼ **Cover Art**

Playing *Bluetooth*® Audio

Not all Bluetooth-enabled phones with streaming audio capabilities are compatible.
To check if your phone is compatible, ask a dealer.

It may be illegal to perform some data device functions while driving.

Only one phone can be used with HFT at a time. When there is more than one paired phone in the vehicle, the system automatically connects to the prioritized phone. You can assign priority to a phone in the *Bluetooth*® device list.

Phone Setup P. 492

The connected phone for *Bluetooth*® Audio can be different.

If more than one phone is paired to the HFT system, there may be a delay before the system begins to play.

In some cases, the name of the artist, album, or track may not appear correctly.

Some functions may not be available on some devices.

If a phone is currently connected via Apple CarPlay or Android Auto, *Bluetooth*® Audio from that phone will be unavailable.

Phone Setup P. 492

Continued

■ To Play *Bluetooth*® Audio Files

1. Make sure that your phone is paired and connected to the system.
➡ **Phone Setup** P. 492

2. Select the *Bluetooth*® Audio mode.

If the phone is not recognised, another HFT-compatible phone, which is not compatible for *Bluetooth*® Audio, may already be connected.

To Play *Bluetooth*® Audio Files

To play the audio files, you may need to operate your phone. If so, follow the phone manufacturer's operating instructions.

Switching to another mode pauses the music playing from your phone.

You can change the connected phone by selecting **Change Devices**.
➡ **Phone Setup** P. 492

■ Searching for Music

1. Select **Music Library**.
2. Select a search category (e.g., Albums).
3. Select an item.
▶ The selection begins playing.

Searching for Music

Depending on the *Bluetooth*® device you connect, some or all of the lists may not be displayed.

■ How to Select a Play Mode

You can select shuffle and repeat modes when playing a file.

■ Shuffle/Repeat

Repeatedly select the shuffle or repeat icon until you find a play mode option of your preference.

Play Mode Menu Items

Shuffle

Shuffle off: Shuffle mode to off.

Shuffle All Songs: Plays all available songs in a selected list in random order.

Repeat

Repeat off: Repeat mode to off.

Repeat Song: Repeats the current song.

Repeat Group: Repeats the current group.

Repeat all: Repeats all songs.

How to Select a Play Mode

Depending on the *Bluetooth*® device you connect, some or all of the functions may not be displayed.

Wi-Fi Connection

This vehicle is equipped with Wi-Fi connectivity. You can connect to an external Wi-Fi hotspot or communication device.

■ Connect the vehicle to a Wi-Fi hotspot

1. Press the HOME button.
2. Select **General Settings**.
3. Select **Connections**.
4. Select **Wi-Fi**.
▶ To change the Wi-Fi settings, select **Options**.
5. Select the access point you want to connect to the system.
6. Select **Connect**.
▶ When the connection is successful, the status text **Connected** next to the network name is displayed on the list.
7. Press the HOME button to go back to the home screen.

Wi-Fi Connection

Wi-Fi and Wi-Fi Direct are registered trademarks of Wi-Fi Alliance®.

Connect the vehicle to a Wi-Fi hotspot

You cannot go through the setting procedure while the vehicle is moving. Park in a safe place to set the audio system in Wi-Fi mode.

Some mobile phone carriers charge for tethering and smartphone data use. Check your phone's data subscription package.

Check your phone manual to find out if the phone has Wi-Fi connectivity.

You can confirm whether Wi-Fi connection is on or off with the icon on the Wi-Fi network list. Transmission speed and others will not be displayed on this screen.

In case of Wi-Fi connection with your phone, make sure your phone's Wi-Fi setting is in access point (tethering) mode.

When you select **Access Point**, you can set up a Wireless connection from the phone to the vehicle.
➔ **Customized Features** P. 465

Apple CarPlay

If you connect an Apple CarPlay-compatible iPhone to the system via the USB charging/connector port on the front panel or wirelessly, and the Apple CarPlay icon is selected, you can use Apple CarPlay on the audio/information screen.

➲ **USB Ports** P. 311

Apple CarPlay

We recommend that you update iOS to the latest version when using Apple CarPlay.

Park in a safe place before connecting your iPhone to Apple CarPlay and when launching any compatible apps.

While connected to Apple CarPlay, it is not possible to use the *Bluetooth*® Audio or Hands-Free Telephone (HFT). You can only make calls or listen to music through Apple CarPlay. Other previously paired phones can use the *Bluetooth*® Audio.

When using Hands Free, you can only control it with Siri.

➲ **Operating Apple CarPlay with Siri** P. 450

Apple CarPlay and Android Auto cannot run at the same time.

For details on countries and regions where Apple CarPlay is available, as well as information pertaining to function, refer to the Apple website.

Use of Apple CarPlay will result in the transmission of certain user and vehicle information (such as vehicle location, speed, and status) to your iPhone to enhance the Apple CarPlay experience. You will need to consent to the sharing of this information on the audio/information screen.

Continued

■ Apple CarPlay Menu

For details on available applications, please refer to the Apple CarPlay website. Apps displayed on your screen can be changed with your iPhone.
Select the **Honda** icon on the Apple CarPlay menu screen to go back to the home screen.

Apple CarPlay

Apple CarPlay Operating Requirements & Limitations
Apple CarPlay requires a compatible iPhone with an active mobile connection and data plan. Your carrier's rate plans will apply.

Changes in operating systems, hardware, software, and other technology integral to providing Apple CarPlay functionality, as well as new or revised governmental regulations, may result in a decrease or cessation of Apple CarPlay functionality and services. Honda cannot and does not provide any warranty or guarantee of future Apple CarPlay performance or functionality.

It is possible to use third-party apps if they are compatible with Apple CarPlay. Refer to the Apple website for information on compatible apps.

■ Connect Apple CarPlay Using the USB Cable

1. Connect the iPhone to the USB charging/connector port using the USB cable.
➡ **USB Ports** P. 311
▶ The confirmation screen will be displayed.
2. Select **Yes**.
▶ If you do not allow this consent, select **No**.

You may change the consent settings under the **Connections** settings menu.

■ Connect Apple CarPlay Wirelessly

1. Press the HOME button.
2. Select **Apple CarPlay**.
3. Select **Connect New Phone** or **Check Device List**.
4. Pair the iPhone to the vehicle's *Bluetooth*® system.
➡ **Phone Setup** P. 492
5. Select **Yes**.

Apple CarPlay

Only initialize Apple CarPlay when you are safely parked.
When Apple CarPlay first detects your iPhone, you will need to set up your iPhone. Refer to the instruction manual that came with your iPhone.

You can also use the method below to set up Apple CarPlay:
Press the HOME button → **General Settings** → **Connections** → **Manage Device Connections** → Select Device

Use of user and vehicle information
The use and handling of user and vehicle information transmitted to/from your iPhone by Apple CarPlay is governed by the Apple iOS terms and conditions and Apple's Privacy Policy.

If there is a problem with the connection of your iPhone, an error code will be displayed.
➡ **Customized Features** P. 465

Continued

■ Operating Apple CarPlay with Siri

Press and hold the (Talk) button to activate Siri.
Press again to deactivate Siri.
Press and release to activate standard voice recognition system.

Operating Apple CarPlay with Siri

Below are examples of questions and commands for Siri:

- What movies are playing today?
- Call dad at work.
- What song is this?
- How's the weather tomorrow?
- Read my latest email.

For more information, please visit *www.apple.com/ios/siri*.

Android Auto™

When you connect an Android™ phone to the audio system via the USB charging/connector port on the front panel or wirelessly, and the Android Auto icon is selected, you can use Android Auto on the audio/information screen.
We recommend that you complete this tutorial while safely parked before using Android Auto.

USB Ports P. 311

NOTE:
Android Auto may not be available in your country or region. For details about Android Auto, please refer to the Google support site.

Android Auto™

We recommend that you update Android OS to the latest version when using Android Auto.
Bluetooth A2DP cannot be used while your phone is connected to Android Auto.

Park in a safe place before connecting your Android phone to Android Auto and when launching any compatible apps.

To directly access the Android Auto phone function, press **Phone** on the home screen.

Apple CarPlay and Android Auto cannot run at the same time.

Android and Android Auto are trademarks of Google LLC.

To use each of Android Auto's features: say a wake-up word while the Android Auto screen is displayed, or press and hold the (talk) button to activate Google Assistant.

Operating Android Auto with Google Assistant P. 454

Continued

■ Android Auto Menu

For details on available applications, please refer to the Android Auto website. Apps displayed on your screen can be changed with your smartphone.
Select the **Honda** icon on the Android Auto menu screen to go back to the home screen.

Android Auto™

For details on countries and regions where Android Auto is available, as well as information pertaining to function, refer to the Android Auto website.

Screens may differ depending on the version of the Android Auto app you are using.

Android Auto Operating Requirements & Limitations
Android Auto requires a compatible Android phone with an active mobile connection and data plan. Your carrier's rate plans will apply.

Changes in operating systems, hardware, software, and other technology integral to providing Android Auto functionality, as well as new or revised governmental regulations, may result in a decrease or cessation of Android Auto functionality and services. Honda cannot and does not provide any warranty or guarantee of future Android Auto performance or functionality.

It is possible to use third-party apps if they are compatible with Android Auto. Refer to the Android Auto website for information on compatible apps.

Connect Android Auto Using the USB Cable

1. Connect the Android phone to the USB charging/connector port using the USB cable.

USB Ports P. 311

▶ The confirmation screen will be displayed.

2. Select **Yes**.

▶ If you do not allow this consent, select **No**.

You may change the consent settings under the **Connections** settings menu.

Connect Android Auto Wirelessly

1. Press the HOME button.

2. Select **Android Auto**.

3. Select **Connect Phone** or **Search for Device**.

4. Pair the device to the vehicle's *Bluetooth*® system.

Phone Setup P. 492

5. Select **Yes**.

Android Auto™

Only initialize Android Auto when you are safely parked. When Android Auto first detects your phone, you will need to set up your phone so that auto pairing is possible. Refer to the instruction manual that came with your phone.

You can use the method below to change Android Auto settings after you have completed the initial setup:
Press the HOME button → **General Settings** → **Connections** → **Manage Device Connections** → Select Device

Use of user and vehicle information
The use and handling of user and vehicle information transmitted to/from your phone by Android Auto is governed by Google's Privacy Policy.

If there is a problem with the connection of your smartphone, an error code will be displayed.

Customized Features P. 465

Continued

■ Operating Android Auto with Google Assistant

Press and hold the (Talk) button to operate Android Auto with your voice.
Press and release to activate standard voice recognition system.

Operating Android Auto with Google Assistant


Below are examples of commands you can give with voice recognition:

- Reply to text.
- Call my wife.
- Navigate to Honda.
- Play my music.
- Send a text message to my wife.
- Call flower shop.

For more information, please refer to the Android Auto website.

Power Flow

Displays the motor and engine power flow, average fuel economy, and range.

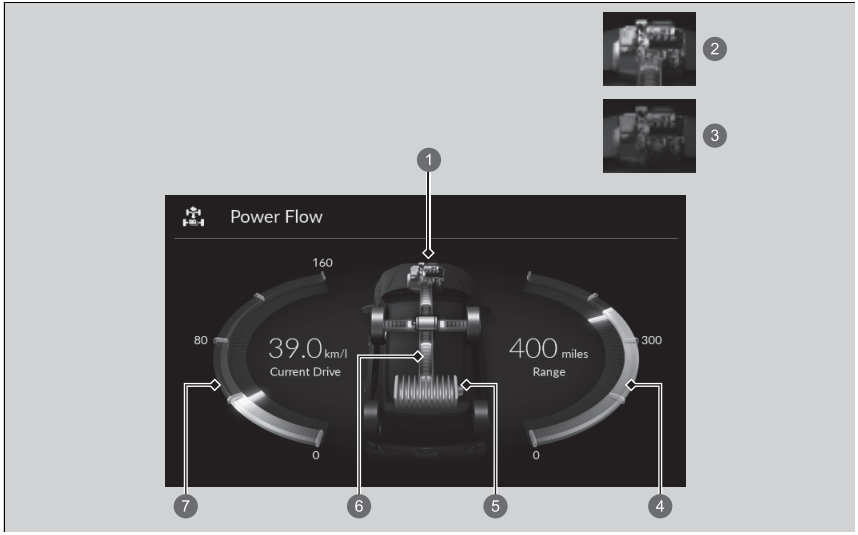

❶ Engine ❷ Engine ON ❸ Engine OFF
❹ Driving Range ❺ High Voltage Battery Level Gauge ❻ Power Flow
❼ Average Fuel Economy (Current Drive)

Power Flow



The power flow monitor is also displayed on the driver information interface.

Power Flow Monitor P. 171

Continued

Displays the power flow, indicating what is supplying power to the vehicle and/or charging the battery.

▶ The indicator for the power transmission appears in blue, and for the battery charging operation, in green.

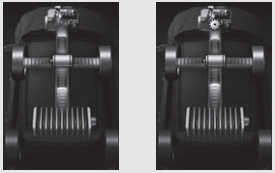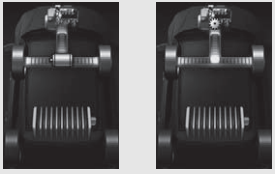Display	Colour of indicators	Vehicle's Condition
	Blue	Power is being supplied by the High Voltage battery and the engine-driven generator.
	Blue	Power is being supplied by the High Voltage battery.
	Blue	Power is being supplied by the engine-driven generator.

Power Flow

While the engine provides propulsion directly to the wheels, the icon appears in the power flow monitor on the screen.

Display	Colour of indicators	Vehicle's Condition
 	Blue and Green	Power is being supplied directly by the engine and the High Voltage battery is being charged by the engine-driven generator.
	Green	The High Voltage battery is being charged through regenerative braking.
	Green	The High Voltage battery is being charged by the engine-driven generator.

Google built-in

You can use the features available with Google built-in on the audio screen.

■ Google Assistant

You can operate features with hands-free help from Google Assistant.

You can activate Google Assistant by:
- Saying "*Hey Google*."
  ▶ Wake words vary by region and language. Refer to the Google website for more information.
- Pressing the (Talk) button on the steering wheel.
- Selecting the Google Assistant icon on the audio/information screen.

Google built-in

- Google, Google Play, and Google Maps are trademarks of Google LLC.
- For more details on Google Apps and Services' features, visit the Google website.

Additional information for Google Apps and Services is available at Honda website.

Google Assistant

Below are example voice commands that can be used once Google Assistant is activated:
- Play music.
- Play radio.

You can customize language and other settings regarding **Google Assistant**.

How to Customize the General Settings
P. 465

■ Google Maps

Google Maps helps you reach your next destination faster with real-time traffic info, automatic rerouting, and voice control.

Google Maps

Operate when vehicle is stopped in a safe location.

When your Google Account is linked with a valid user account, destinations stored on other devices (home, work, favourites, previous searches, etc.) can be displayed. When the device and the vehicle are logged into the same Google Account, changing information on the device will change it on Google Maps as well.


■ Google Play

Download your favourite apps on Google Play.

Google Play

The vehicle must be stopped in order to download an app.
Operate when vehicle is stopped in a safe location.

User Information

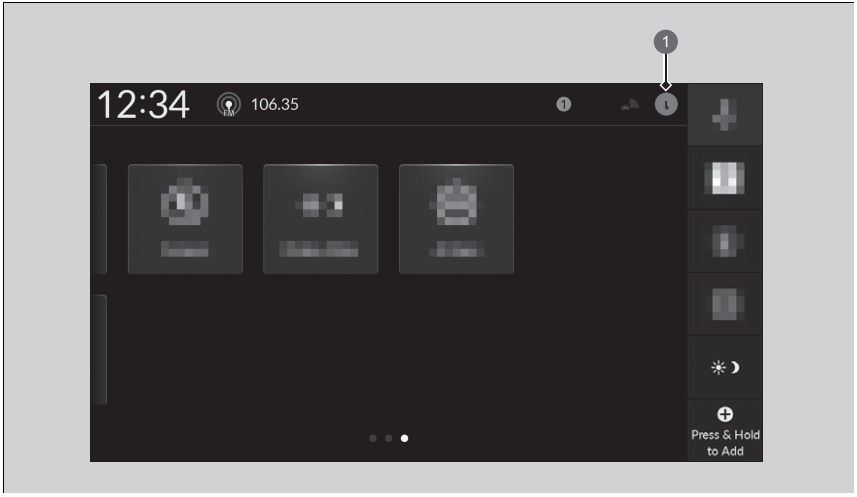

1 User Information

User Information

This feature cannot be used while driving.

You can customize settings individually for each user.
Profile Settings P. 464

You can customize security settings for each user. If you have forgotten security settings, you will need to delete the user and create a new one. If you have forgotten security settings for the Owner user, please contact a dealer.

Certain features are unavailable when using a newly created user or the Guest user.

You can add and change users, as well as customize user settings.
By registering a user, you can personalize your vehicle settings.
You can select a user when the audio/information screen loads, even when the doors are open or unlocked.

By linking your profile with your Google Account, you can enjoy a more personalized Google built-in experience. For more assistance on account linking, visit the Google website.



Continued

■ Registering a User

1. Select User Info.
▶ You can also add users by selecting **Profile Settings**.
➡ **Profile Settings** P. 464
▶ You can add users even when the doors are open or unlocked.
2. Select **Change Profile**.
3. Select **+ Add User**.
4. Enter User Information.
➡ **Start Up** P. 407

■ Switching Users

1. Select User Info.
▶ You can also change users by selecting **Profile Settings**.
➡ **Profile Settings** P. 464
▶ You can switch users even when the doors are open or unlocked.
2. Select **Change Profile**.
3. Select the user you want to use.

Registering a User

Profile can be changed only when the vehicle is parked.

You can add up to 4 users other than the Owner user and the Guest user.

When you add a user, the audio/information screen is loaded under that user.

Switching Users

Profile can be changed only when the vehicle is parked.

Users with customized security settings can restrict screen operations by selecting the **Screen Lock** shortcut.

■ Deleting Users

1. Select **Profile Settings**.
2. Select **Manage Profile**.
3. Select **Profiles & accounts**.
4. Select **Delete your profile**.

Deleting Users

When the profile currently being used is deleted, the audio/information screen is loaded under the Guest user.

While using the Owner user, you can delete other user via General Settings → Advanced Settings.
➡ **Customized Features** P. 465

Depending on the version of your OS, the steps for deleting a user may differ from the instructions on this page. Follow the on-screen prompts.

Profile Settings

You can add and change users, as well as customize user settings.

■ How to Customize the Profile Settings

Press the HOME button, select **Profile Settings**, and select a setting item you want.

■ Change Profile

You can change and add users.

➔ **User Information** P. 460

■ Manage Profile

Use **Manage Profile** to change profile settings. Please confirm the details on the audio/information screen.

Specifications are subject to change via system updates, etc.

Profile Settings

When you customize settings:

- Make sure that the vehicle is at a complete stop.
- Shift to P.
- Set the parking brake.

To customize features detail, refer to the following.

➔ **Change Profile** P. 464
➔ **Manage Profile** P. 464

Customized Features

Use the audio/information screen to customize certain features.

■ How to Customize the General Settings

With the power mode in ON, select **General Settings**, and select a setting item.

Customized Features

When you customize settings:
- Make sure that the vehicle is at a complete stop.
- Shift to P.

Continued

■ **System**

Customizable Features			Description	Selectable Settings
Date & Time	**Set Date & Time**	**Automatic Date & Time**	Select **ON** to have the GPS automatically adjust the clock. Select **OFF** to cancel this function.	**OFF/ON**
		Set Date	Adjusts date. ➡ **Adjusting the Clock** P. 422	—
		Set Time	Adjusts clock. ➡ **Adjusting the Clock** P. 422	—
	Time Zone*	**Automatic Time Zone**	Sets the navigation system to automatically adjust the clock when driving through different time zones.	**OFF/ON**
		(Select time zone)	Changes the time zone manually.	—
	Auto Daylight Saving Time*		Sets the clock to update based on daylight savings time.	**ON/OFF**

 * Not available on all models

Customizable Features		Description	Selectable Settings
Date & Time	**Date Format**	Sets the date format.	**Day-of-week, MM DD,YYYY/ YYYY.MM.DD Day-of-week/ YYYY.MM.DD (Day-of-week)/ Day-of-week DD.MM.YYYY/ DD.MM.YYYY**
	Time Format	Selects the digital clock display from **12-H** to **24-H**.	**12-H/24-H**
Language		Changes the display language.	**English**[*1], **Thai**[*1], **Chinese**[*1], or **Bahasa Indonesia** Some languages may not be available in all regions. Check the audio/information screen for available options.
Touch Panel Sensitivity		Sets the sensitivity of the touch panel screen.	**Low/High**

*1:The default setting varies depending on the model.

Customizable Features		Description	Selectable Settings
About	**IP address**	Displays the Android setting items.	—
	Wi-Fi MAC address		
	Bluetooth MAC address		
	Serial Number		
	Up Time		
	Model Number		
	Android Version		
	Kernel Version		
	Build Number		
	Software Version		
Factory Data Reset		Resets all the settings to their factory default. **Defaulting All the Settings** P. 486	**Cancel/Continue**

■ **Connections**

Customizable Features			Description	Selectable Settings
Manage Device Connections	**Options**	**Bluetooth**	Turns *Bluetooth*® on and off.	**On/Off**
		Priority Device Information	Displays the priority device.	—
		Change Name	Changes vehicle name for *Bluetooth*® connection setting.	—
		Smartphone Projection Screen Size	Changes the screen size of the smartphone projection.	**Normal/Wide**
		Smartphone Projection Error Code	Displays the error code(s) of the smartphone projection.	—
	+ Connect New Device		Pairs a new phone to HFT. ➡ **Phone Setup** P. 492	—
	(Saved Devices)		Connects, disconnects, or deletes a paired phone. ➡ **Phone Setup** P. 492	—

Customizable Features			Description	Selectable Settings
Wi-Fi	**Options**	**Wi-Fi**	Allow vehicle to connect to Wi-Fi.	**OFF/ON**
		Add Network	Allows you to connect to a new external network.	—
		Saved Networks	Deletes a saved network or changes update permission settings for the selected network.	—
Access Point	**Options**	**Access Point**	Allow wireless connection from the phone to the vehicle. This feature must be turned on for wireless Apple CarPlay or Android Auto to work.	**OFF/ON**
		Edit Access Point Settings	Allows you to confirm hotspot settings and edit hotspot connection information.	—
Data Connection Options	**Set up Wi-Fi**		Sets personal hotspot (phone tethering). ➔ **Wi-Fi Connection** P. 446	—

■ **Privacy**

Customizable Features		Description	Selectable Settings
Data Sharing with Honda		Turns the data sharing **Disable** and **Enable**.	**Disable/Enable**
Microphone		Turns the microphone on and off. e-call can still be used regardless of settings.	
Location		Sets the data sharing permission for each function.	
Infotainment system data			
App permissions			
System-wide Permission Settings			
Data sharing with Google[*1]			
Ads[*1]			
Google legal[*1]	**Google Terms of Service**[*1]	Displays the Google URL.	—
	Google Privacy Policy[*1]		

*1:Please confirm the details on the audio/information screen. Specifications are subject to change via system updates, etc.

■ **Display**

Customizable Features	Description	Selectable Settings
Brightness	Changes the brightness of the audio/information screen.	—
Contrast	Changes the contrast of the audio/information screen.	—
Black Level	Changes the black level of the audio/information screen.	—
Display OFF	Turns the audio/information screen brightness off.	—

■ **Sound**

Customizable Features		Description	Selectable Settings
Bass / Mid / Treble	**Treble**	Adjusts the settings of the audio speakers' sound. ➡ **Adjusting the Sound** P. 425	—
	Midrange		
	Bass		
Audio Zones & Balance / Fader*			
Bose Centerpoint Surround*			
Bose Dynamic Speed Compensation*			
Balance / Fader*			
Speed Volume Compensation*			

■ **Sound Volume**

Customizable Features	Description	Selectable Settings
System Sounds	Adjusts the settings of the sounds' volume.	—
Voice Recognition		
Navigation Guidance		
Phone Calls		

* Not available on all models

Continued

■ **Camera**

Customizable Features			Description	Selectable Settings
Rear Wide Camera*	**Guidelines**	**Fixed Guideline**	Shows the guideline that does not move with the steering wheel. ➡ **Multi-View Rear Camera*** P. 713	**OFF/ON**
		Dynamic Guideline	Shows the guideline that moves with the steering wheel. ➡ **Multi-View Rear Camera*** P. 713	**OFF/ON**
Multi View Camera*	**Guidelines**	**Fixed Guideline**	Shows the guideline that does not move with the steering wheel. ➡ **Multi-View Camera*** P. 715	**OFF/ON**
		Dynamic Guideline	Shows the guideline that moves with the steering wheel. ➡ **Multi-View Camera*** P. 715	**OFF/ON**
	Customise	**Show after shifting from Reverse**	Selects whether to display the forward camera image after shifting from R to D.	**OFF/ON**
		Auto display when obstacle is detected*1	Displays the forward camera image when a parking sensor detects an obstacle.	**OFF/ON**

*1:This customizable feature is effective for vehicles equipped with the Multi-View Camera, the front corner and front centre sensors.

* Not available on all models

Customizable Features		Description	Selectable Settings
LaneWatch*	**Show with indicator**	Selects whether the LaneWatch display comes on when you move the turn signal lever to indicate a left*1/right*2 turn.	**OFF/ON**
	Display Time after Indicator Off	Changes the length of time the LaneWatch display stays on after the turn signal lever returns to the centre.	**0 second/2 seconds**
	Show Reference Line	Selects whether the reference lines come on the LaneWatch monitor.	**OFF/ON**
Cross Traffic Monitor*		Shows arrows on the rear camera image to indicate vehicles approaching from the sides. ➡ **Cross Traffic Monitor*** P. 709	**ON/OFF**

*1:Right-hand Drive Type
*2:Left-hand Drive Type

* Not available on all models

■ **Voice Control**

Customizable Features	Description	Selectable Settings
Default Assist App	Selects the assistant apps.	**None/Google Assistant**
Listen for "Hey Siri"[*1]	Toggles Siri activation when you say "*Hey Siri*".	**ON/OFF**
Google Assistant	Sets the functions of **Google Assistant**.	—

*1:Activates when the iPhone is connected.

■ **Security**

You can customize security settings. Please confirm the details on the audio/information screen.
Specifications are subject to change via system updates, etc.

■ **Google**

You can customize Google settings. Please confirm the details on the audio/information screen.
Specifications are subject to change via system updates, etc.

■ **Advanced Settings**

You can customize advanced system settings. Please confirm the details on the audio/information screen.
Specifications may be changed via system updates, etc.

How to Customize the Vehicle Settings

With the power mode in ON, press the HOME button, and then select **Vehicle Settings** and select a setting item.

Continued

■ **Deflation Warning System***

Customizable Features	Description	Selectable Settings
Deflation Warning System	Calibrates the deflation warning system. ➡ **Deflation Warning System*** P. 590	**Initialise**

■ **Driver Assist System Setup**

Customizable Features	Description	Selectable Settings
Preceding vehicle proximity warning distance	Changes the distance at which Collision Mitigation Braking System (CMBS) alerts. ➡ **Collision Mitigation Braking System (CMBS)** P. 606	**Far/Normal*1/Near**
Head-up warning*	Turn On/Off warning light for head-up flash alert.	**ON*1/OFF**
ACC vehicle ahead detected beep	Turns audible notification On/Off when vehicle has moved in/out of adaptive cruise control range. ➡ **Adaptive Cruise Control (ACC) with Low Speed Follow** P. 636	**ON/OFF*1**
Lead Car Departure Notification System*	Changes the setting for the lead car departure notification system. ➡ **Lead Car Departure Notification System*** P. 677	**Normal*1/Early/OFF**

*1:Default Setting

 * Not available on all models

Customizable Features	Description	Selectable Settings
Road departure mitigation setting	Selects operating mode of the Road Departure Mitigation system. ➡ **Road Departure Mitigation System** P. 626	Australian, Bangladeshi, Bhutanese, and New Zealand models **Early/Normal/Delayed**[*1] Except Australian, Bangladeshi, Bhutanese, and New Zealand models **Warning only/Early/ Normal**[*1]**/Delayed**
Lane keep assist beep	Switches the LKAS and Traffic Jam Assist* suspend alert beeps on and off. ➡ **Lane Keeping Assist System (LKAS)** P. 655 ➡ **Traffic Jam Assist** P. 668	**ON/OFF**[*1]
Blind spot information*	Selects On/Off the blind spot information system audible alert. ➡ **Blind Spot Information System*** P. 593	**Audible And Visual Alert**[*1]**/ Visual Alert Only**
Traffic sign recognition system display*	Displays the traffic sign recognition system on the instrument panel. ➡ **Traffic Sign Recognition System*** P. 681	**ON**[*1]**/OFF**
Traffic sign recognition system over speed warning*	Enables over speed limit warning when speed limit is exceeded. ➡ **Traffic Sign Recognition System*** P. 681	**ON**[*1]**/OFF**
Driver attention monitor	Changes the setting for the driver attention monitor. ➡ **Driver Attention Monitor** P. 158, 179	**OFF/Tactile alert only/ Tactile and audible alert**[*1]
Rear Sensor Setting*	Turns the Rear Parking Sensor On or Off. ➡ **Parking Sensor System** P. 703	**ON**[*1]**/OFF**

*1:Default Setting

* Not available on all models

Continued

■ **Meter setup (Meter/Head-up Display Setup)**

Customizable Features	Description	Selectable Settings
Warning message*	Selects whether to display the warning message.	**ON/OFF**[*1]
Adjust outside temp. display	Adjusts outside temperature reading by a few degrees. ➡ **Outside Temperature** P. 148	**-3°C ~ ±0°C**[*1] **~ +3°C**
"Trip A" reset timing	Selects the timing to reset Trip A. ➡ **Range/Fuel/Trip Meter** P. 153, 173 ➡ **Speed/Time/Trip Meter** P. 155, 175	**When Fully Refueled/When ignition is turned OFF/Manual reset**[*1]
"Trip B" reset timing	Selects the timing to reset Trip B. ➡ **Range/Fuel/Trip Meter** P. 153, 173 ➡ **Speed/Time/Trip Meter** P. 155, 175	**When Fully Refueled/When ignition is turned OFF/Manual reset**[*1]
Alarm volume control	Changes volume level of all system warnings, door opening warning, and indicator.	**Max/Mid**[*1]**/Min**
Reverse position alert tone*	Turns on/off the reverse alert sound.	**ON**[*1]**/OFF**
Fuel efficiency backlight*	Turns the ambient meter feature on and off.	**ON**[*1]**/OFF**
Turn by turn display	Turns the pop-up information on/off in the turn-by-turn navigation in the driver information interface. ➡ **Turn-by-Turn Directions** P. 157	**ON**[*1]**/OFF**
Rear seat reminder	Turns the Rear Seat Reminder feature on and off.	**ON**[*1]**/OFF**
Fuel Economy Unit*	Selects the fuel consumption units.	Except Taiwanese models **km/l**[*1]**/l/100km** Taiwanese models **km/l/l/100km**[*1]

*1:Default Setting

* Not available on all models

■ **Driving position setup***

Customizable Features	Description	Selectable Settings
Memory position link	Turns the driving position memory system on and off.	**ON**[*1]**/OFF**
Seat Position Movement At Entry/Exit	Moves the seat rearward when you get in/get out of the vehicle. Changes the setting for this feature.	**ON**[*1]**/OFF**

*1:Default Setting

■ **Keyless Access Setup**

Customizable Features	Description	Selectable Settings
Door unlock mode*	Changes which doors unlock when you grab the driver's door handle.	**Driver door only**[*1]**/All doors**
Keyless access beep volume	Changes the beep volume of unlocking /locking the doors.	**High**[*1]**/Low**
Keyless access light flash	Causes some exterior lights to flash when you unlock/lock the doors.	**ON**[*1]**/OFF**
Keyless access beep	Causes the beeper to sound when you unlock/lock the doors.	**ON**[*1]**/OFF**
Remote start system ON/OFF*	Turns the remote engine start feature on and off.	**ON**[*1]**/OFF**

*1:Default Setting

* Not available on all models

Continued

■ **Lighting Setup**

Customizable Features	Description	Selectable Settings
Auto High-Beam*	Turns the auto high-beam on and off.	**ON**[*1]**/OFF**
Adaptive driving beam*	Turns on/off adaptive driving beam function.	**ON**[*1]**/OFF**
Interior light dimmer duration	Selects the length of time the interior lights stay on after doors are closed. ➡ **Interior Lights** P. 277	**60sec/30sec**[*1]**/15sec**
Headlight auto OFF timer	Selects the length of time the exterior lights stay on after you close the driver's door. ➡ **Automatic Lighting Off Feature** P. 241	**60sec/30sec/15sec**[*1]**/0sec**
Headlight integration with wipers	Turns headlight function at wiper operation On/Off when the headlight is in **AUTO** setting. ➡ **Headlight Integration with Wipers** P. 241	**ON**[*1]**/OFF**

*1:Default Setting

 * Not available on all models

■ **Door Setup**

Customizable Features	Description	Selectable Settings
Auto door lock*	Changes the setting for the automatic locking feature.	**With vehicle speed*1/Shift from P/OFF**
Auto door unlock*	Changes the setting for when the doors unlock automatically.	African models with Right-hand Drive Type **OFF/All Doors When Ignition Switched OFF/Driver door with IGN OFF/All doors with Shift to P/Driver Door With Shift To P*1** Except African models with Right-hand Drive Type **All doors with Shift to P*1/All Doors When Ignition Switched OFF/OFF**
Key And Remote Unlock Mode*	Sets up either the driver's door or all doors to unlock on the first push of the keyless remote or built-in key.	**Driver door only*1/All doors**
Walk away lock	Changes the settings for the auto lock function when you walk away from the vehicle.	**ON/OFF*1**
Keyless lock notification	Turns flash of exterior lights on/off when doors are locked/unlocked by keyless remote. **Using the Remote Transmitter** P. 219	**ON*1/OFF**
Auto Folding Door Mirror*	Changes the door mirror auto-folding operation.	**ON*1/OFF**
Lock Presetting	Changes the settings for the lock presetting function.	**ON*1/OFF**

*1:Default Setting

* Not available on all models

Continued

Customizable Features	Description	Selectable Settings
Keyless Remote Power Window Control	Turns the remote window control on and off.	**ON**[*1]**/OFF**

*1:Default Setting

■ **Power Tailgate Setup**

Customizable Features	Description	Selectable Settings
Keyless Open Mode	Changes the keyless setting for when the power tailgate opens.	**Anytime**[*1]**/When Unlocked**
Power Open By Outer Handle	Changes the setting to open power tailgate by tailgate outer handle.	**ON (Power/Manual)**[*1]**/ OFF (Manual Only)**
Hands Free Access*	Changes the setting to open power tailgate by a swift forward in and out kicking motion under the rear bumper.	**ON**[*1]**/OFF**

*1:Default Setting

■ **Climate Control Setup***

Customizable Features	Description	Selectable Settings
Driver seat automatic climate control	Automatic climate control of Driver Seat with automatic air conditioner. Changes the interlocking control setting.	**ON**[*1]**/OFF**
Passenger seat automatic climate control	Automatic climate control of Passenger Seat with automatic air conditioner. Changes the interlocking control setting.	**ON**[*1]**/OFF**

*1:Default Setting

* Not available on all models

■ **INDIVIDUAL Settings***

Customizable Features	Description	Selectable Settings
Powertrain	Selects the responsiveness of the powertrain. ➡ **Customizing the INDIVIDUAL Settings** P. 568	**ECON/NORMAL**[*1]**/SPORT**
Steering	Selects the level of steering effort. ➡ **Customizing the INDIVIDUAL Settings** P. 568	**NORMAL**[*1]**/SPORT**
Engine Sound	Selects the effect of engine sound. ➡ **Customizing the INDIVIDUAL Settings** P. 568	**NORMAL**[*1]**/SPORT**
Gauge*	Selects the gauges to be displayed in the Driver Information Interface. ➡ **Customizing the INDIVIDUAL Settings** P. 568	**NORMAL**[*1]**/SPORT**

*1:Default Setting

* Not available on all models

Defaulting All the Settings

Reset all the menu and customized settings as the factory defaults.

■ Defaulting System Settings

Only the Owner user can execute this command.
If current profile is not the Owner user, please switch users.

Switching Users P. 462

1. Press the HOME button.
2. Select **General Settings**.
3. Select **System**.
4. Select **Factory Data Reset**.
   ▶ A confirmation message appears on the screen.
5. Select **Continue** to reset the settings.
6. Select **Reset** to reset the settings.
   ▶ The system will reboot.

■ Defaulting Vehicle Settings

1. Press the HOME button.
2. Select **Vehicle Settings**.
3. Select **Default all**.
4. Select **Yes**.

Defaulting All the Settings


When you transfer the vehicle to a third-party, reset all settings to default and delete all personal data.

If you perform **Factory Data Reset**, it will reset the preinstalled apps to their factory default.

Hands-Free Telephone (HFT) System

Hands-Free Telephone (HFT) system allows you to place and receive phone calls using your vehicle's audio system, without handling your mobile phone.

HFT Buttons

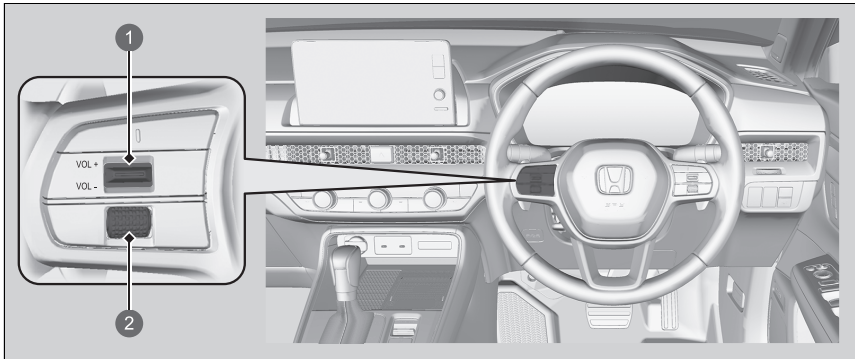

❶ **VOL**+/**VOL**− (Volume) Switch
❷ Left Selector Wheel

Left Selector Wheel: Roll up or down to select. **Phone** on the driver information interface, and then press the left selector wheel.

Hands-Free Telephone (HFT) System

Place your phone where you can get good reception.

To use HFT, you need a *Bluetooth*-compatible mobile phone. For a list of compatible phones, pairing procedures, and special feature capabilities, ask a dealer or your local Honda.

To use the system, the **Bluetooth** setting must be **ON**. If there is an active connection to Apple CarPlay, HFT/HFL is unavailable.

Phone Setup P. 492

Voice control tips

- Aim the vents away from the ceiling and close the windows, as noise coming from them may interfere with the microphones.
- If the microphones pick up voices other than yours, the command may be misinterpreted.
- To change the volume level, the volume level is able to change by the audio system's volume.

Bluetooth® Wireless Technology

The *Bluetooth*® word mark and logos are registered trademarks owned by *Bluetooth* SIG, Inc., and any use of such marks by Honda Motor Co., Ltd., is under licence. Other trademarks and trade names are those of their respective owners.


HFT Limitations

An incoming call on HFT will interrupt the audio system when it is playing. It will resume when the call is ended.

Continued

■ HFT Status Display

The audio/information screen notifies you when there is an incoming call.

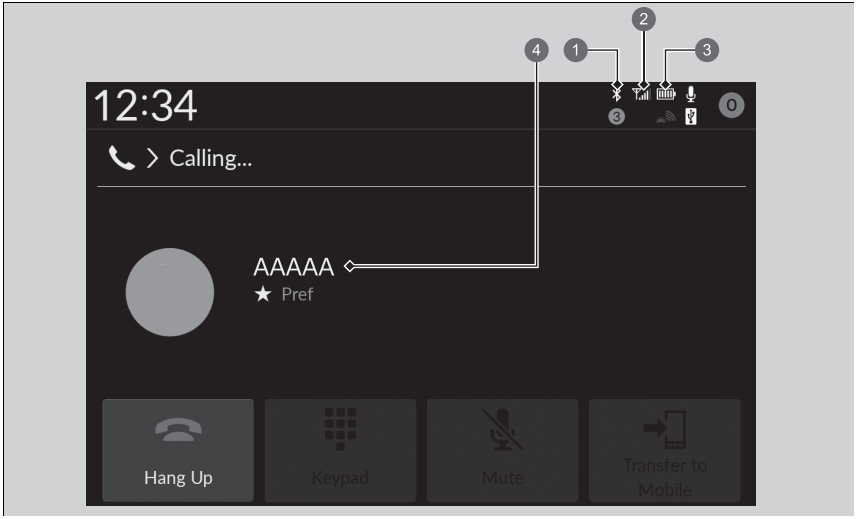

❶ *Bluetooth* Indicator
Appears when your phone is connected to HFT.
❷ Signal Strength
❸ Battery Level Status
❹ Caller's Name (If registered)/Caller's Number (If not registered)

■ Limitations for Manual Operation


Certain manual functions are disabled or inoperable while the vehicle is in motion. You cannot select a greyed-out option until the vehicle is stopped.

HFT Status Display

The information that appears on the audio/information screen varies between phone models.

HFT Menus

The power mode must be in ACCESSORY or ON to use the system. Select **Phone** to display the phone screen.

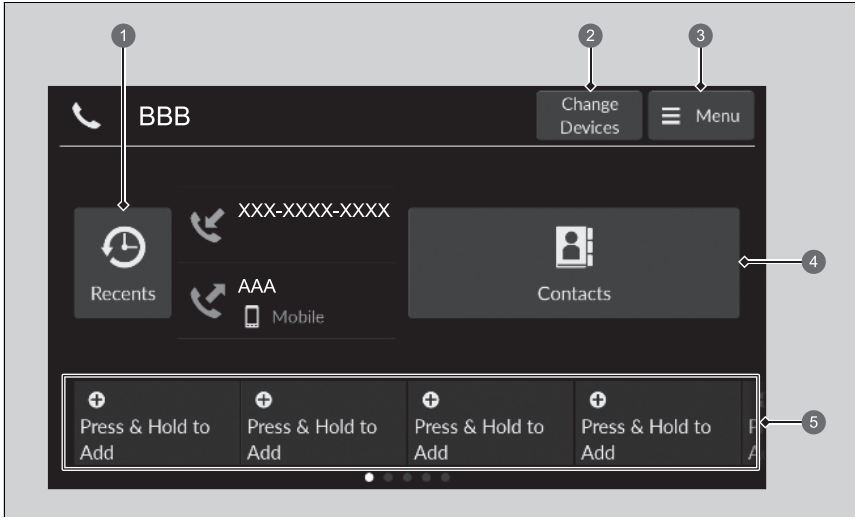

❶ **Recents**
❷ **Change Devices**
❸ **Menu**
❹ **Contacts**
❺ **Press & Hold to Add** (Existing entry list)

HFT Menus

To use HFT, you must first pair your *Bluetooth*-compatible mobile phone to the system while the vehicle is parked.

Some functions are limited while driving.

Continued

Recents: Displays the last outgoing, incoming, and missed calls.

➡ **To make a call using the call history** P. 501

Change Devices: Pairs a new phone to the system and connect, disconnect, or delete a paired device.

➡ **Phone Setup** P. 492

Menu: Changes the phone settings.

➡ **Phone Menu Screen** P. 491

Contacts: Displays the phonebook of the paired phone.

➡ **To make a call using the imported phonebook** P. 500

Press & Hold to Add (Existing entry list): Dials the selected number in the favourite contacts entry.

➡ **Favourite Contacts** P. 497

■ Phone Menu Screen

To display the phone menu screen, select **Menu** on the phone screen.

Keypad: Enters a phone number to dial.

➡ **To make a call using a phone number** P. 500

Latest Call History: Sets whether the history shortcut is displayed in the phone screen.

Auto Sync Phone: Sets phonebook and recent calls data to be automatically imported when a phone is paired to HFT.

➡ **Automatic Import of Mobile Phonebook and Call History** P. 495

Auto Phone Call Transfer: Sets calls to automatically transfer from your phone to HFT when you enter the vehicle.

➡ **Automatic Transferring** P. 496

Ringtone: Selects the ringtone.

➡ **Ringtone** P. 496

Continued

■ Phone Setup

■ *Bluetooth*® setup

You can turn *Bluetooth*® function on and off.

1. Press the HOME button.
2. Select **General Settings**.
3. Select **Connections**.
4. Select **Manage Device Connections**.
5. Select **Options**.
6. Set **Bluetooth** to **ON**.

■ **To pair a mobile phone (when there is no phone paired to the system)**

1. Press the HOME button.
2. Select **Phone**.
3. Select **Connect New Device**.
4. Make sure your phone is in search or discoverable mode, then select **Search for Devices**.
▶ HFT automatically searches for a *Bluetooth*® device.
5. Select your phone when it appears on the list.
▶ If your phone still does not appear, search for *Bluetooth*® devices using your phone.
From your phone, search for Vehicle Name.
▶ Confirm if the pairing code on the audio/information screen and your phone matches.
This may vary by phone.
6. Select **Yes**.

Phone Setup

Your *Bluetooth*-compatible phone must be paired to the system before you can make and receive hands-free calls.

Phone Pairing Tips:
- You cannot pair your phone while the vehicle is moving.
- Up to six phones can be paired.
- Your phone's battery may drain faster when it is paired to the system.

Once you have paired a phone, you can see it displayed on the screen with one or more icons on the right side.
These icons indicate the following:

: The phone is compatible with *Bluetooth*® Audio and HFT.

: The phone is compatible with Apple CarPlay.

: The phone is compatible with Android Auto.

Continued

■ To change the currently paired phone

1. Go to the phone screen.
➡ **HFT Menus** P. 489
2. Select **Change Devices**.
3. Select **Go to Device List**.
4. Select a phone to connect.
▶ HFT disconnects the connected phone and starts searching for another paired phone.
5. Select  or  , .
6. Select **Yes**.

■ To delete a paired phone

1. Go to the phone screen.
➡ **HFT Menus** P. 489
2. Select **Change Devices**.
3. Select **Go to Device List**.
4. Select a phone you want to delete.
5. Select **Delete Device**.
6. A confirmation message appears on the screen. Select **Delete**.

To change the currently paired phone

If no other phones are found or paired when trying to switch to another phone, the original phone is connected again.

To pair other phones, select **+ Connect New Device** from the **Bluetooth** screen.

You can also switch the connection with the  icon,  icon, or  icon in the device list.
When or is selected, cannot be selected.

■ Automatic Import of Mobile Phonebook and Call History

■ When Auto Sync Phone is set to ON:

When your phone is paired, the contents of its phonebook and call history are automatically imported to the system.

■ Changing the Auto Sync Phone setting

1. Go to the phone menu screen.

Phone Menu Screen P. 491

2. Select **Auto Sync Phone**.

3. Select **ON** or **OFF**.

Automatic Import of Mobile Phonebook and Call History

On some phones, you will be asked to allow your mobile phonebook to be imported.

When you select a name from the list in the mobile phonebook, you can see a category icon. The icons indicate what types of numbers are stored for that name.


Mobile


Work


Home


Other


Pref

On some phones, it may not be possible to import the category icons to the system.

The phonebook is updated after every connection. Call history is updated after every connection or call.

Continued

■ Automatic Transferring

If you get into the vehicle while you are on the phone, the call can be automatically transferred to HFT.

1. Go to the phone menu screen.
➡ **Phone Menu Screen** P. 491
2. Select **Auto Phone Call Transfer**.
3. Select **ON** or **OFF**.

■ Ringtone

You can change the ringtone setting.

1. Go to the phone menu screen.
➡ **Phone Menu Screen** P. 491
2. Select **Ringtone**.
3. Select **Vehicle** or **Phone**.

Ringtone

Vehicle: The fixed ringtone sounds from the speakers.
Phone: Depending on the make and model of the mobile phone, the ringtone stored in the phone will sound if the phone is connected.

■ Favourite Contacts

■ To add a favourite contact

1. Press the HOME button.
2. Select **Phone**.
3. Select and hold **Press & Hold to Add**.
4. Select **From Recents**, **From Contacts**, or **Using Enter Number**.

From Recents, From Contacts

5. Select the phone number.

Using Enter Number

5. Input number, and select **Enter**.

Continued

■ **To edit a favourite contact**

1. Press the HOME button.
2. Select **Phone**.
3. Select and hold a favourite contact.
4. Select **Edit Favourites**.
5. Select a setting you want.
6. Select **Enter** or select type.


■ **Add to the home screen a favourite contact**

1. Press the HOME button.
2. Select **Phone**.
3. Select and hold a favourite contact.
4. Select **Add to Home**.

■ **To delete a favourite contact**

1. Press the HOME button.
2. Select **Phone**.
3. Select and hold a favourite contact.
4. Select **Remove Favourite**.

Making a Call

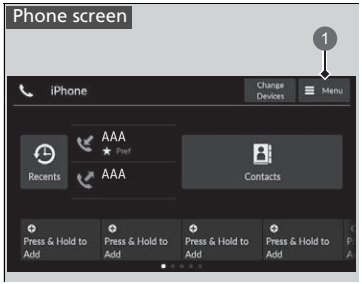

1 Menu

You can make calls by inputting any phone number, or by using the imported phonebook, call history, or favourite contact entries.

Making a Call

Once a call is connected, you can hear the voice of the person you are calling through the audio speakers.

While there is an active connection with Apple CarPlay, phone calls cannot be made with Hands-Free Telephone system and are only made from Apple CarPlay.

Continued

■ **To make a call using the imported phonebook**

1. Go to the phone screen.
➡ **HFT Menus** P. 489

2. Select **Contacts**.

3. Select a name.
▶ You can sort by **First Name** or **Surname**. Select the icon on the upper right of the screen.

4. Select a number.
▶ Dialing starts automatically.

■ **To make a call using a phone number**

1. Go to the phone menu screen.
➡ **Phone Menu Screen** P. 491

2. Select **Keypad**.

3. Select a number.
▶ Use the keyboard on the touch screen for entering numbers.

4. Select **Call**.
▶ Dialing starts automatically.

■ To make a call using the call history

Call history is stored by **All**, **Dialled**, **Missed**, and **Received**.

1. Go to the phone screen.

➔ **HFT Menus** P. 489

2. Select **Recents**.

▶ You can sort by **All**, **Dialled**, **Missed**, or **Received**. Select the icon on the upper right of the screen.

3. Select a number.

▶ Dialing starts automatically.

■ To make a call using a favourite contact entry

1. Go to the phone screen.

➔ **HFT Menus** P. 489

2. Select desired favourite contact.


▶ Dialing starts automatically.

To make a call using the call history

The call history appears only when a phone is connected to the system.

Continued

■ Receiving a Call

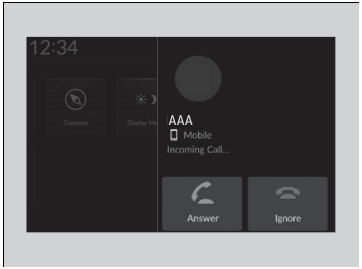

When there is an incoming call, an audible notification sounds (if activated) and the **Incoming Call...** screen appears.

You can answer the call using the left selector wheel.
To answer the call, roll up or down to select (answer) on the driver information interface and then press the left selector wheel.

▶ If you want to decline or end the call, select (ignore) on the driver information interface using the left selector wheel.

Receiving a Call

Call Waiting
Select (answer) to put the current call on hold to answer the incoming call.
Select using the left selector wheel to return to the current call.
Select (ignore) to ignore the incoming call if you do not want to answer it.
Select if you want to hang up the current call.

You can select the icons on the audio/information screen instead of the and on the driver information interface.

■ Options During a Call

The following options are available during a call.
Mute: Mute your voice.
Transfer to Mobile: Transfer a call from the system to your phone.
Keypad: Send numbers during a call. This is useful when you call a menu-driven phone system.

The available options are shown on the lower half of the screen.

Select the option.
▶ The mute icon appears when **Mute** is selected. Select **Mute** again to turn it off.

Options During a Call

You can select the icons on the audio/information screen.

The following error messages are just examples. If you see an error message not listed below, follow the on-screen instructions to clear it.

iPod/USB Flash Drive

If an error occurs while playing an iPod or USB flash drive, you may see the following error messages. If you cannot clear the error message, contact a dealer.

Error Message	Solution
Connect Retry[*1]	Appears when the system does not acknowledge the iPod. Reconnect the iPod.
Unplayable File[*1] **The selected file cannot be played on this system**[*2]	Appears when the files in the USB flash drive are copyright protected or an unsupported format. This error message appears for about a few seconds, then plays the next file.
No Data	iPod Appears when the iPod is empty. USB flash drive Appears when the USB flash drive is empty or there are no MP3, WMA, AAC, FLAC, WAV, MP4, AVI, MKV, or ASF/WMV files in the USB flash drive. iPod and USB flash drive Check that compatible files are stored on the device.
Unsupported[*1]	Appears when an unsupported device is connected. If it appears when a supported device is connected, reconnect the device.

*1:Models with Display Audio
*2:Models with Display Audio with Google built-in

Error Message	Solution
Error[*2]	Appears when an unsupported device is connected. If it appears when a supported device is connected, reconnect the device. Appears when unsupported formats are in the device. Check that compatible files are stored on the device.
No response from device (Device No Response)[*1]	Appears when the system does not communicate with a connected device. If it appears when a device is connected, contact your place of device purchase.
USB hub not supported[*1] **USB Hub Unsupported**[*2]	Appears when only a HUB is connected. If it appears, connect a USB flash drive to the HUB.
A charging error has occurred with the connected USB device. When safe please check the compatibility of the device and USB cable and try again.[*1]	Appears when an incompatible device is connected. Disconnect the device. Then, turn the audio system off and turn it on again. Do not reconnect the device that caused the error.

*1:Models with Display Audio
*2:Models with Display Audio with Google built-in

Compatible iPod, iPhone, and USB Flash Drives

iPod and iPhone Model Compatibility

Models with Display Audio

Model
Made for iPod touch (5th to 6th generation) released between 2012 and 2015
Made for iPhone 5s/iPhone 5c/iPhone 6/iPhone 6 Plus/iPhone 6S/iPhone 6S Plus/ iPhone SE/iPhone 7/iPhone 7 Plus/iPhone 8/iPhone 8 Plus/iPhone X/iPhone XS/ iPhone XS Max/iPhone XR/iPhone 11/iPhone 11 Pro/iPhone 11 Pro Max/iPhone SE (2nd generation)/iPhone 12/iPhone 12 Pro/iPhone 12 Pro Max/ iPhone 12 mini

Models with Display Audio with Google built-in

Model
Made for iPod touch (6th generation)/iPod touch (7th generation)
Made for iPhone 5s/iPhone 6/iPhone 6 Plus/iPhone 6s/iPhone 6s Plus/iPhone SE/ iPhone 7/iPhone 7 Plus/iPhone 8/iPhone 8 Plus/iPhone X/iPhone XS/iPhone XS Max/ iPhone XR/iPhone 11/iPhone 11 Pro/iPhone 11 Pro Max/iPhone SE (2nd generation)/iPhone 12 mini/iPhone 12/iPhone 12 Pro/iPhone 12 Pro Max/iPhone 13/iPhone 13 Pro/iPhone 13 Pro Max/iPhone 13 mini/iPhone SE (3rd generation)

iPod and iPhone Model Compatibility

This system may not work with all software versions of these devices.

The Lightning connector works with iPhone 5s, iPhone 5c, iPhone 6, iPhone 6 Plus, iPhone 6S, iPhone 6S Plus, iPhone SE, iPhone 7, iPhone 7 Plus, iPhone 8, iPhone 8 Plus, iPhone X, iPhone XS, iPhone XS Max, iPhone XR, iPhone 11, iPhone 11 Pro, iPhone 11 Pro Max, iPhone SE (2nd generation), iPhone 12, iPhone 12 Pro, iPhone 12 Pro Max, iPhone 12 mini, iPhone 13, iPhone 13 Pro, iPhone 13 Pro Max, iPhone 13 mini, iPhone SE (3rd generation), iPod touch (5th to 7th generation).

USB works with iPhone 5s, iPhone 5c, iPhone 6, iPhone 6 Plus, iPhone 6S, iPhone 6S Plus, iPhone SE, iPhone 7, iPhone 7 Plus, iPhone 8, iPhone 8 Plus, iPhone X, iPhone XS, iPhone XS Max, iPhone XR, iPhone 11, iPhone 11 Pro, iPhone 11 Pro Max, iPhone SE (2nd generation), iPhone 12, iPhone 12 Pro, iPhone 12 Pro Max, iPhone 12 mini, iPhone 13, iPhone 13 Pro, iPhone 13 Pro Max, iPhone 13 mini, iPhone SE (3rd generation), iPod touch (5th to 7th generation).

■ USB Flash Drives

- Please use a recommended USB flash drive of 256 MB or higher formatted with FAT16 or FAT32.
- Some digital audio players may not be compatible.
- Some USB flash drives (e.g., a device with security lockout) may not work.
- Some software files may not allow for audio play or text data display.
- Each audio system is compatible the following formats. Some versions of the formats may be unsupported.

Models with Display Audio

MP3, WMA, AAC, FLAC, WAV, MP4, AVI, MKV, ASF/WMV

Models with Display Audio with Google built-in

MP3, WMA, AAC, FLAC, WAV, Opus, MP4, AVI, MKV, 3GPP, WebM, MPEG2-TS

USB Flash Drives

Files on the USB flash drive are played in their stored order. This order may be different from the order displayed on your PC or device.

Continued

Models with Display Audio

■ Recommended Devices

■ MP4 File

Media	USB Flash Drive	
Profile (MP4 version)	BaselineProfile/Level 3, MailProfile/Level 3.1 (MPEG4-AVC)	SimpleProfile/Level 5 (MPEG4)
File extension (MP4 version)	.mp4/.m4v	
Compatible audio codec	AAC, MP3	
Compatible video codec	MPEG4-AVC (H.264)	MPEG4 (ISO/IEC 14496 Part.2)
Bit rate	10 Mbps, 14 Mbps (MPEG4-AVC)	8 Mbps (MPEG4)
Maximum image	1,280 × 720 pixels (MPEG4-AVC)	720 × 576 pixels (MPEG4)

■ AVI File

Media	USB Flash Drive		
Profile (AVI version)	BaselineProfile/Level 3, MailProfile/Level 3.1 (MPEG4-AVC)	SimpleProfile/Level 5 (MPEG4)	AdvancedProfile/Level 2, MainProfile/Level Medium, SimpleProfile/Level Medium (VC-1)
File extension (AVI version)	.avi		
Compatible audio codec	AAC, MP3, WMA		
Compatible video codec	MPEG4-AVC (H.264)	MPEG4 (ISO/IEC 14496 Part.2)	VC-1
Bit rate	10 Mbps, 14 Mbps (MPEG4-AVC)	8 Mbps (MPEG4)	20 Mbps, 10 Mbps, 384 kbps (VC-1)
Maximum image	1,280 × 720 pixels (MPEG4-AVC)	720 × 576 pixels (MPEG4)	1,280 × 720 pixels, 720 x 480 pixels, 352 x 288 pixels (VC-1)

■ **MKV File**

Media	USB Flash Drive		
Profile (MKV version)	BaselineProfile/Level 3, MailProfile/Level 3.1 (MPEG4-AVC)	SimpleProfile/Level 5 (MPEG4)	AdvancedProfile/Level 2, MainProfile/Level Medium, SimpleProfile/Level Medium (VC-1)
File extension (MKV version)	.mkv		
Compatible audio codec	AAC, MP3		
Compatible video codec	MPEG4-AVC (H.264)	MPEG4 (ISO/IEC 14496 Part.2)	VC-1
Bit rate	10 Mbps, 14 Mbps (MPEG4-AVC)	8 Mbps (MPEG4)	20 Mbps, 10 Mbps, 384 kbps (VC-1)
Maximum image	1,280 × 720 pixels (MPEG4-AVC)	720 × 576 pixels (MPEG4)	1,280 × 720 pixels, 720 x 480 pixels, 352 x 288 pixels (VC-1)

■ **ASF/WMV File**

Media	USB Flash Drive	
Profile (ASF/WMV version)	BaselineProfile/Level 3, MailProfile/Level 3.1 (MPEG4-AVC)	AdvancedProfile/Level 2, MainProfile/Level Medium, SimpleProfile/Level Medium (VC-1)
File extension (ASF/WMV version)	.asf/.wmv	
Compatible audio codec	WMA	
Compatible video codec	MPEG4-AVC (H.264)	VC-1
Bit rate	10 Mbps, 14 Mbps (MPEG4-AVC)	20 Mbps, 10 Mbps, 384 kbps (VC-1)
Maximum image	1,280 × 720 pixels (MPEG4-AVC)	1,280 × 720 pixels, 720 x 480 pixels, 352 x 288 pixels (VC-1)

Continued

Models with Display Audio with Google built-in

■ Recommended Devices

■ MP4 File

Media	USB Flash Drive				
File extension (MP4 version)	.mp4/.m4v				
Compatible audio codec	AAC, MP3				
Compatible video codec*1	MPEG4-AVC (H.264)	H.263	H.265 HEVC	MEPG-4 SP	MPEG-2
Profile (MP4 version)*1	BaselineProfile/Level 3, MainProfile/Level 3.1 (MPEG4-AVC)	—	—	—	—
Bit rate*1	10 Mbps, 14 Mbps (MPEG4-AVC)	—	—	—	—
Maximum image*1	1,280 × 720 pixels (MPEG4-AVC)	—	—	—	—

■ AVI File

Media	USB Flash Drive
File extension (AVI version)	.avi
Compatible audio codec	AAC, MP3, WMA
Compatible video codec*1	MPEG4-AVC (H.264)
Profile (AVI version)*1	BaselineProfile/Level 3, MainProfile/Level 3.1 (MPEG4-AVC)
Bit rate*1	10 Mbps, 14 Mbps (MPEG4-AVC)
Maximum image*1	1,280 × 720 pixels (MPEG4-AVC)

*1:Some video file format cannot be played on this audio system.

■ **MKV File**

Media	USB Flash Drive					
File extension (MKV version)	.mkv					
Compatible audio codec	AAC, MP3					
Compatible video codec[*1]	MPEG4-AVC (H.264)	H.263	H.265 HEVC	MPEG-2	VP8	VP9
Profile (MKV version)[*1]	BaselineProfile/Level 3, MainProfile/Level 3.1 (MPEG4-AVC)	—	—	—	—	—
Bit rate[*1]	10 Mbps, 14 Mbps (MPEG4-AVC)	—	—	—	—	—
Maximum image[*1]	1,280 × 720 pixels (MPEG4-AVC)	—	—	—	—	—

*1:Some video file format cannot be played on this audio system.

■ **3GPP File**

Media	USB Flash Drive		
File extension (3GPP version)	.3gp		
Compatible audio codec	MPEG-4, AAC LC (Low Complexity)		
Compatible video codec[*1]	H.263	H.264	MPEG-4 SP
Profile (3GPP version)[*1]	—	BaselineProfile/Level 3, MainProfile/Level 3.1 (MPEG4-AVC)	—
Bit rate[*1]	—	10 Mbps, 14 Mbps (MPEG4-AVC)	—
Maximum image[*1]	—	1,280 × 720 pixels (MPEG4-AVC)	—

■ **WebM File**

Media	USB Flash Drive	
File extension (WebM version)	.webm	
Compatible audio codec	Opus	
Compatible video codec[*1]	VP8	VP9
Profile (WebM version)[*1]	—	—
Bit rate[*1]	—	—
Maximum image[*1]	—	—

*1:Some video file format cannot be played on this audio system.

■ **MPEG2-TS File**

Media	USB Flash Drive	
File extension (MPEG2-TS version)	.ts	
Compatible audio codec	AAC, MP3	
Compatible video codec[*1]	MPEG-2	H.264 AVC
Profile (MPEG2-TS version)[*1]	—	BaselineProfile/Level 3, MainProfile/Level 3.1 (MPEG4-AVC)
Bit rate[*1]	—	10 Mbps, 14 Mbps (MPEG4-AVC)
Maximum image[*1]	—	1,280 × 720 pixels (MPEG4-AVC)

*1:Some video file format cannot be played on this audio system.

About Open Source Licences

To see the open source licence information, follow these steps.

Models with Display Audio

1. Press the HOME button.
2. Select **General Settings**.
3. Select **System**.
4. Select **About**.
5. Select **Legal Information**.
6. Select **Licence** (**License**).

Models with Display Audio with Google built-in

1. Press the HOME button.
2. Select **General Settings**.
3. Select **Advanced Settings**.
4. Select **System**.
5. Select **Legal Information**.
6. Select **Third-party licenses**.

Licence Information

Bluetooth

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by ALPS ALPINE CO., LTD. is under license. Other trademarks and trade names are those of their respective owners.

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Automotive Systems Co., Ltd. is under license. Other trademarks and trade names are those of their respective owners.

https://www.bluetooth.com/develop-with-bluetooth/marketing-branding/



Windows Media

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Continued

■ Apple

"Made for iPod," and "Made for iPhone," mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, or iPhone, may affect wireless performance.

Apple, the Apple Logo, iPhone, iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. Apple CarPlay, iPod, iPhone, iTunes, Siri and Lightning are trademarks of Apple Inc. App Store is a service mark of Apple Inc.



■ MPEG

Mpeg4 Visual
THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUALA STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC.
SEE *HTTP://WWW.MPEGLA.COM*.

VC-1
THIS PRODUCT IS LICENSED UNDER THE VC-1 PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE VC-1 STANDARD ("VC-1 VIDEO") AND/OR (ii) DECODE VC-1 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE VC-1 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE.
ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE *HTTP://WWW.MPEGLA.COM*.

Continued

AVC/H.264
THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NONCOMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD (“AVC VIDEO”) AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE.
ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE *HTTP://WWW.MPEGLA.COM*.

Legal Information on Apple CarPlay/Android Auto

■ OWNER'S MANUAL LICENSE/LIABILITY STATEMENTS

USE OF APPLE CARPLAY IS SUBJECT TO YOUR AGREEMENT TO THE CARPLAY TERMS OF USE, WHICH ARE INCLUDED AS PART OF THE APPLE iOS TERMS OF USE. IN SUMMARY, THE CARPLAY TERMS OF USE DISCLAIM APPLE AND ITS SERVICE PROVIDERS' LIABILITY IF THE SERVICES FAIL TO PERFORM CORRECTLY OR ARE DISCONTINUED, STRICTLY LIMIT APPLE AND ITS SERVICE PROVIDERS' OTHER LIABILITIES, DESCRIBE THE KINDS OF USER INFORMATION (INCLUDING, FOR EXAMPLE, VEHICLE LOCATION, VEHICLE SPEED, AND VEHICLE STATUS) BEING GATHERED AND STORED BY APPLE AND ITS SERVICE PROVIDERS, AND DISCLOSE CERTAIN POSSIBLE RISKS ASSOCIATED WITH THE USE OF CARPLAY, INCLUDING THE POTENTIAL FOR DRIVER DISTRACTION. SEE APPLE'S PRIVACY POLICY FOR DETAILS REGARDING APPLE'S USE AND HANDLING OF DATA UPLOADED BY CARPLAY.


USE OF ANDROID AUTO IS SUBJECT TO YOUR AGREEMENT TO THE ANDROID AUTO TERMS OF USE WHICH MUST BE AGREED TO WHEN THE ANDROID AUTO APPLICATION IS DOWNLOADED TO YOUR ANDROID PHONE. IN SUMMARY, THE ANDROID AUTO TERMS OF USE DISCLAIM GOOGLE AND ITS SERVICE PROVIDERS' LIABILITY IF THE SERVICES FAIL TO PERFORM CORRECTLY OR ARE DISCONTINUED, STRICTLY LIMIT GOOGLE AND ITS SERVICE PROVIDERS' OTHER LIABILITIES, DESCRIBE THE KINDS OF USER INFORMATION (INCLUDING, FOR EXAMPLE, VEHICLE LOCATION, VEHICLE SPEED, AND VEHICLE STATUS) BEING GATHERED AND STORED BY GOOGLE AND ITS SERVICE PROVIDERS, AND DISCLOSE CERTAIN POSSIBLE RISKS ASSOCIATED WITH THE USE OF ANDROID AUTO, INCLUDING THE POTENTIAL FOR DRIVER DISTRACTION. SEE GOOGLE'S PRIVACY POLICY FOR DETAILS REGARDING GOOGLE'S USE AND HANDLING OF DATA UPLOADED BY ANDROID AUTO.

Continued

■ DISCLAIMER OF WARRANTIES; LIMITATION ON LIABILITY

YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF APPLE CARPLAY OR ANDROID AUTO (“THE APPLICATIONS”) IS AT YOUR SOLE RISK AND THAT THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY AND EFFORT IS WITH YOU TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, AND THAT THE APPLICATIONS AND INFORMATION ON THE APPLICATIONS IS PROVIDED “AS IS” AND “AS AVAILABLE,” WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND, AND HONDA HEREBY DISCLAIMS ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE APPLICATIONS AND INFORMATION ON THE APPLICATIONS, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY, QUIET ENJOYMENT, AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY HONDA OR AN AUTHORISED REPRESENTATIVE SHALL CREATE A WARRANTY. AS EXAMPLES, AND WITHOUT LIMITATION, HONDA DISCLAIMS ANY WARRANTY REGARDING THE ACCURACY OF DATA PROVIDED BY THE APPLICATIONS, SUCH AS THE ACCURACY OF DIRECTIONS, ESTIMATED TRAVEL TIME, SPEED LIMITS, ROAD CONDITIONS, NEWS, WEATHER, TRAFFIC, OR OTHER CONTENT PROVIDED BY APPLE, GOOGLE, THEIR AFFILIATES, OR THIRD PARTY PROVIDERS; HONDA DOES NOT GUARANTEE AGAINST LOSS OF APPLICATION DATA, WHICH MAY BE LOST AT ANY TIME; HONDA DOES NOT GUARANTEE THAT THE APPLICATIONS OR ANY SERVICES PROVIDED THROUGH THEM WILL BE PROVIDED AT ALL TIMES OR THAT ANY OR ALL SERVICES WILL BE AVAILABLE AT ANY PARTICULAR TIME OR LOCATION. FOR EXAMPLE, SERVICES MAY BE SUSPENDED OR INTERRUPTED WITHOUT NOTICE FOR REPAIR, MAINTENANCE, SECURITY FIXES, UPDATES, ETC., SERVICES MAY BE UNAVAILABLE IN YOUR AREA OR LOCATION, ETC. IN ADDITION, YOU UNDERSTAND THAT CHANGES IN THIRD PARTY TECHNOLOGY OR GOVERNMENT REGULATION MAY RENDER THE SERVICES AND/OR APPLICATIONS OBSOLETE AND/OR UNUSABLE.

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL HONDA OR ITS AFFILIATES BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, CORRUPTION OR LOSS OF DATA, FAILURE TO TRANSMIT OR RECEIVE ANY DATA, BUSINESS INTERRUPTION OR ANY OTHER COMMERCIAL DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO THE APPLICATIONS OR YOUR USE OF OR INABILITY TO USE THE APPLICATIONS OR INFORMATION ON THE APPLICATIONS, HOWEVER CAUSED, REGARDLESS OF THE THEORY OF LIABILITY (CONTRACT, TORT OR OTHERWISE) AND EVEN IF HONDA WERE ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME REGIONS AND JURISDICTIONS MAY DISALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR DAMAGES, SO THESE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. THE FOREGOING LIMITATIONS WILL APPLY EVEN IF THE ABOVE STATED REMEDY FAILS OF ITS ESSENTIAL PURPOSE.

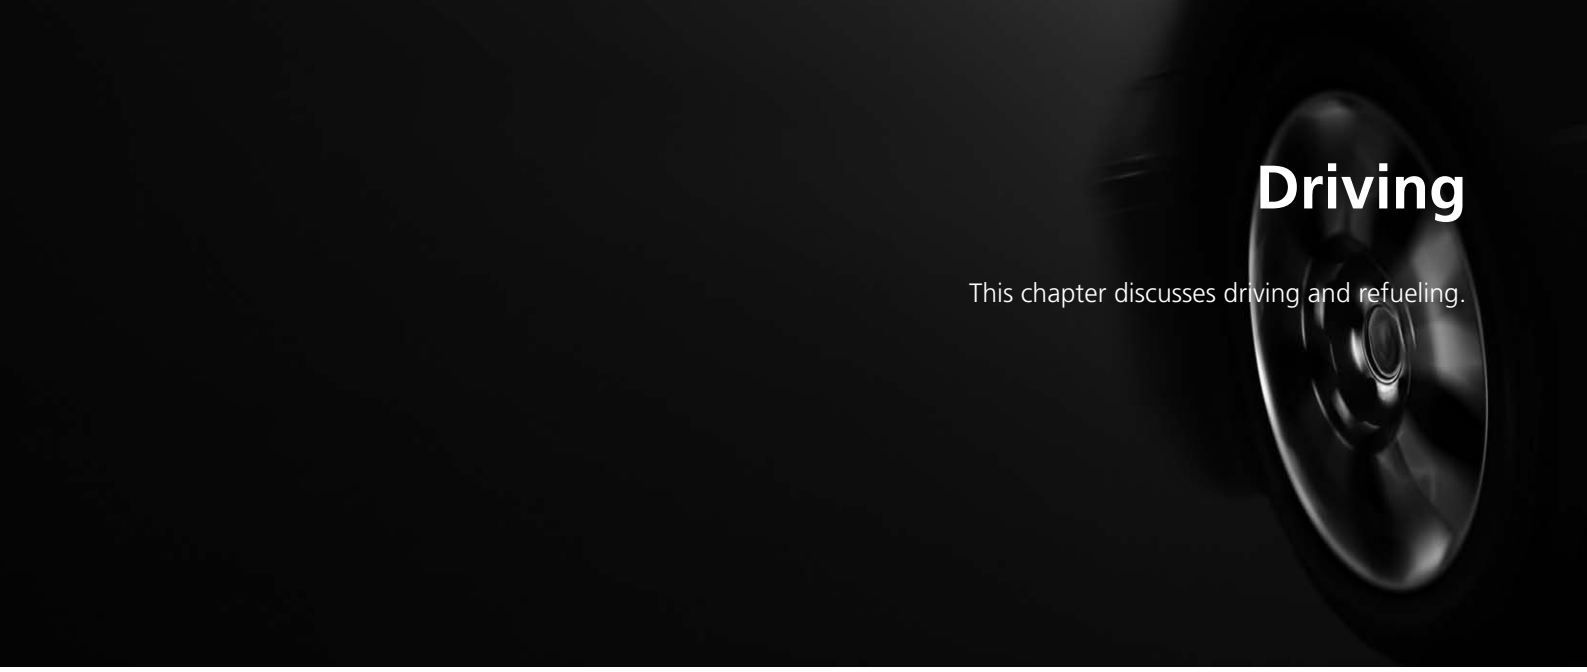

Driving

This chapter discusses driving and refueling.

Before Driving 522
Towing a Trailer 526
Off-road Guidelines 533
When Driving
- Turning on the Power 535
- Precautions While Driving 542
- Transmission 544
- Shifting 545, 547
- Deceleration Paddle Selector 553
- Acoustic Vehicle Alerting System 557
- Drive Mode Switch 558
- Hill Descent Control System 569
- Adjustable Speed Limiter* 571
- Intelligent Speed Limiter* 577
- Vehicle Stability Assist (VSA) System 583
- Agile Handling Assist 585
- Real Time AWD with Intelligent Control System* 586

Taiwanese models
- Tyre Pressure Monitoring System (TPMS) ...587

Except Taiwanese models
- Deflation Warning System* 590
- Blind Spot Information System* 593
- High Voltage Battery 597
- LaneWatch* 598
- Adjusting Headlight Distribution* 602

Honda SENSING 603
- Front Sensor Camera 687
- Radar Sensor 689
- Sonar Sensors* 690

Braking 691
Parking Your Vehicle 701
Multi-View Rear Camera* 713
Multi-View Camera* 715
Refueling 729
Fuel Economy and CO_2 Emissions 733

* Not available on all models

Driving Preparation

Check the following items before you start driving.

■ Exterior Checks

- Make sure there are no obstructions on the windows, door mirrors, exterior lights, or other parts of the vehicle.
  ▶ Remove any frost, snow, or ice.
  ▶ Remove any snow on the roof, as this can slip down and obstruct your field of vision while driving or fall off and impact other road users. If frozen solid, remove ice once it has softened.
  ▶ When removing ice from around the wheels, be sure not to damage the wheel or wheel components.
- Make sure the bonnet is securely closed.
  ▶ If the bonnet opens while driving, your front view will be blocked.
- Make sure the tyres are in good condition.
  ▶ Check air pressures, and check for damage and excessive wear.
  ➡ **Checking and Maintaining Tyres** P. 764
- Make sure there are no people or objects behind or around the vehicle.
  ▶ There are blind spots from the inside.

Exterior Checks

NOTICE

When doors are frozen shut, use warm water around the door edges to melt any ice. Do not try to force them open, as this can damage the rubber trim around the doors. When done, wipe dry to avoid further freezing.

Do not pour warm water into the key cylinder. You will be unable to insert the key if the water freezes in the hole.

Heat from the engine and exhaust can ignite flammable materials left under the bonnet, causing a fire. If you've parked your vehicle for an extended period, inspect and remove any debris that may have collected, such as dried grass and leaves that have fallen or have been carried in for use as a nest by a small animal. Also, check under the bonnet for leftover flammable materials after you or someone else has performed maintenance on your vehicle.

Interior Checks

- Store or secure all items on board properly.
  ▶ Carrying too much luggage, or improperly storing it, can affect your vehicle's handling, stability, stopping distance, and tyres, and make it unsafe.
  ➡ **Load Limit** P. 525
- Do not pile items higher than the seatback height.
  ▶ They can block your view and may be thrown forward in the event of sudden braking.
- Do not place anything in the front seat footwells. Make sure to secure the floor mat.
  ▶ An object or unsecured floor mat can interfere with your brake and accelerator pedal operation while driving.
- If you have any animals on board, do not let them move around in the vehicle.
  ▶ They may interfere with driving and a crash could occur.
- Securely close all doors and the tailgate.
- Adjust your seating position properly.
  ▶ Adjust the head restraint, too.
  ➡ **Seats** P. 264
  ➡ **Adjusting the Front Head Restraint Positions** P. 273
- Adjust the mirrors and steering wheel properly.
  ▶ Adjust them while sitting in the proper driving position.
  ➡ **Mirrors** P. 260
  ➡ **Adjusting the Steering Wheel** P. 259

Interior Checks

The headlight aim is set by the factory, and does not need to be adjusted. However, if you regularly carry heavy items in the luggage area or tow a trailer*, have the aiming readjusted at a dealer or by a qualified technician.

Models with manual headlight adjusting system

You can adjust the low beam headlight angle by yourself.

➡ **Headlight Adjuster*** P. 246

Models with automatic headlight adjusting system

Your vehicle is equipped with the automatic headlight adjusting system that automatically adjusts the vertical angle of the low beam headlights.

* Not available on all models

Continued

- Be sure items placed on the floor behind the front seats cannot roll under the seats.
  ▶ They can interfere with the driver's ability to operate the pedals, or the operation of the seats.
- Everyone in the vehicle must fasten their seat belt.
  ➡ **Fastening a Seat Belt** P. 57
- Make sure that the indicators in the instrument panel come on when you start the vehicle, and go off soon after.
  ▶ Always have a dealer check the vehicle if a problem is indicated.
  ➡ **Indicators** P. 122

Load Limit

When you load luggage, the total weight of the vehicle, all passengers, and luggage must not exceed the maximum permissible weight.

Specifications P. 838

The load for the front and rear axles also must not exceed the maximum permissible axle weight.

Specifications P. 838

Load Limit

⚠WARNING

Overloading or improper loading can affect handling and stability and cause a crash in which you can be hurt or killed.

Follow all load limits and other loading guidelines in this manual.

Except Australian, Bangladeshi, Bhutanese, Botswanan, Mauritian, Namibian, New Zealand, Seychelles, and South African models


Your vehicle is not designed to, and cannot safely, tow a trailer nor have a tow hitch installed. Do not install a tow hitch on, or tow with, your vehicle.

Australian, Bangladeshi, Bhutanese, Botswanan, Mauritian, Namibian, New Zealand, Seychelles, and South African models

Towing Preparation

■ Towing Load Limits

Your vehicle can tow a trailer if you carefully observe the load limits, use the proper equipment, and follow the towing guidelines. Check the load limits before driving.

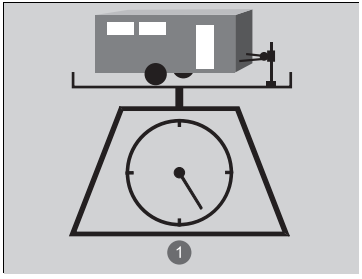

❶ Total Load

■ Total trailer weight

Do not exceed the maximum towing weight of the trailer and towbar (with/without brakes), luggage and everything in or on it. Towing loads in excess of the maximum towing weight can seriously affect vehicle handling and performance and can damage the power system and drivetrain.

Towing Load Limits

⚠WARNING

Exceeding any load limit or improperly loading your vehicle and trailer can cause a crash in which you can be seriously hurt or killed.

Check the loading of your vehicle and trailer carefully before starting to drive.


Check if all loads are within limits at a public scale. If a public scale is not available, add the estimated weight of your luggage load to the weight of your trailer (as quoted by the manufacturer), and the trailer nose load.

Break-in Period.
Avoid towing a trailer during your vehicle's first 1,000 km.

When using a detachable towing device, always remove the towing device when not in use and only install it when towing so that it does not cover or hide anything on the rear of your vehicle, such as the exterior lights or licence plate.

Never exceed the maximum towing weight and specified load limit.

Specifications P. 838

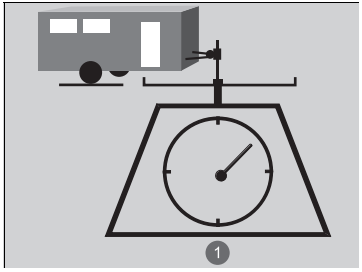

1 Trailer Nose Load

■ Trailer nose load

The trailer nose load should never exceed 75 kg. This is the amount of weight the trailer puts on the towbar when it is fully-loaded. As a rule of thumb for trailer weights of less than 750 kg, the trailer nose load should be 10 percent of the total trailer package.

- Excessive trailer nose load reduces front tyre traction and steering control. Too little trailer nose load can make the trailer unstable and cause it to sway.
- To achieve a proper trailer nose load, start by loading 60% of the load toward the front of the trailer and 40% toward the rear. Readjust the load as needed.

Towing Load Limits

If you tow a trailer in mountainous conditions, remember to reduce 10% of the combined vehicle weights from the maximum towing weight for every 1,000 metres of elevation.

Continued

■ Towing Equipment and Accessories

Towing equipment varies by the size of your trailer, how much load you are towing, and where you are towing.

■ Towbars

The towbar must be of an approved type and properly bolted to the underbody.

■ Safety chains

Always use safety chains when you tow a trailer. Leave enough slack to allow the trailer to turn corners easily, but do not allow the chains to drag on the ground.

■ Trailer brakes

If you are thinking of getting a trailer that has brakes, be sure they are electronically actuated. Do not attempt to tap into your vehicle's hydraulic system. No matter how successful it may seem, any attempt to attach trailer brakes to your vehicle's hydraulic system will lower braking effectiveness and create a potential hazard.

■ Additional towing equipment

There may be laws requiring special outside mirrors when towing a trailer. Even if mirrors are not required in your locale, you should install special mirrors if visibility is restricted in any way.

Towing Equipment and Accessories

Make sure that all equipment is properly installed and maintained, and that it meets the regulations of the country where you are driving.


Consult your trailer sales or rental agency if any other items are recommended or required for your towing situation.

Consult your trailer maker for proper installation and setup of the equipment.
Improper installation and setup can affect the electrical components, handling, stability, and braking performance of your vehicle.

The lighting and wiring of trailers can vary by type and brand. If a connector is required, it should only be installed by a qualified technician.

■ Trailer light

Trailer lights and equipment must comply with the regulations of the country where you are driving. Check with your local trailer sales or rental agency for the requirements in the area where you plan to tow.

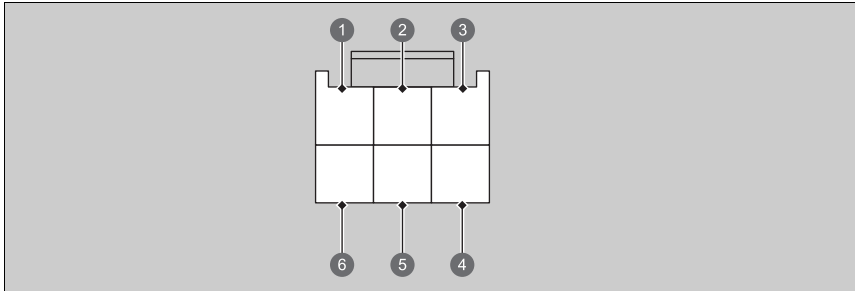

❶ Left Turn Signal (Light Blue)
❷ Grand (Black)
❸ Right Turn Signal (Green)
❹ +B Trailer (Light Violet/Red)
❺ Brake Light (Green)
❻ Small (Grey)

We recommend that you have a dealer install a Honda wiring harness and converter. They are designed for your vehicle.

The lighting and wiring of trailers can vary by type and brand. If a connector is required, it should only be installed by a qualified technician.

Trailer light

The trailer lighting connector is located behind the left side panel in the luggage area.
Even if you are planning to use the non-Honda trailer lighting harness and converter, ask a dealer for the correct connector and pins.

Trailer Stability Assist*

Helps to stabilize the vehicle and trailer when the trailer severely sways.

■ How trailer stability assist works

When the vehicle and trailer become unstable while driving, trailer stability assist determines the cause. If the trailer oscillation is detected as the cause, and the swaying increases, the system applies the brakes or controls power system output to reduce vehicle speed.

Both the vehicle and trailer brake lights come on automatically if you brake to reduce vehicle speed.

Trailer Stability Assist*

Trailer stability assist is not a function that prevents the vehicle and trailer from swaying. Avoid high speeds, abrupt steering, improper trailer load, and sudden braking to keep the trailer from swaying. When swaying too severely, the system becomes ineffective, and you may lose control of your vehicle, causing the trailer to roll over or get damaged.

➡ **Driving Safely with a Trailer*** P. 531

Trailer towing sway is caused by:

- Crosswinds
- Improper towbar down load
- Excessive speed

The VSA system indicator blinks during the trailer stability assist operation.

➡ **VSA Operation** P. 583

 * Not available on all models

Driving Safely with a Trailer*

Things You Need To Know Before Towing a Trailer

- Have the trailer properly serviced and keep it in good condition.
- Make sure that all the weights and load in the vehicle and trailer are within limits.
  ➡ **Towing Load Limits** P. 526
- Securely attach the towbar, safety chains, and other necessary parts to the trailer.
- Securely store all the items in and on the trailer so that they do not shift while driving.
- Check if the lights and brakes on the trailer are working properly.
- Check the pressure of the trailer tyres, including the spare.
- Check regulations concerning the maximum speed or driving restrictions for vehicles towing trailers. If you are driving across several countries, check each country's requirements before leaving home, because regulations may vary.
- Turn off the rear parking sensor system. It may alert if it detects the towed object as an obstacle.
  ➡ **Customized Features** P. 366, 465

Australian, Bangladeshi, Bhutanese, and New Zealand models

- Turn off the rear Low Speed Braking Control system through the rear sensor setting. It may activate if it detects the towed object as an obstacle.
  ➡ **Customized Features** P. 366, 465

Towing Speeds and Shift Position

- Drive slower than normal.
- Obey posted speed limits for vehicles with trailers.
- Use the D position when towing a trailer on level roads.

Driving Safely with a Trailer*

Operating speed when towing a trailer must not exceed 100 km/h.

Parking
In addition to the normal precautions, place wheel chocks at each of the trailer's tyres.

Remember to unhitch the trailer before changing a flat tyre. Ask the trailer sales or rental agency where and how to store the trailer's spare tyre.

We recommend you drive uphill of less than 12% slope. Follow the trailer association's recommendations for suitable roads.

Winds caused by passing large vehicles can sway your trailer, keep a constant speed and steer straight ahead.

Always drive slowly and have someone guide you when reversing.

Towing Speeds and Shift Position

When towing a fixed-sided trailer (e.g., camper), do not exceed 88 km/h. At higher speeds, the trailer may sway or affect vehicle handling.

* Not available on all models

Continued

■ Turning and Braking

- Turn more slowly and with a wider turning arc than normal.
- Allow more time and distance for braking.
- Do not brake or turn suddenly.

■ Driving in Hilly Terrain

- If the **Engine temperature near limit. Avoid strong acceleration and high speed.** message appears on the driver information interface, turn off the climate control system and reduce speed.
- If the **Engine temperature too hot. Do not drive. Allow engine to cool.** message appears on the driver information interface, pull to the side of the road safely to cool down the engine.
- If the **Power system temperature high. Power may be reduced.** message appears on the driver information interface, pull to the side of the road safely to cool down the power system.

General Information

Your vehicle has been designed primarily for use on pavement; however, its higher ground clearance allows you to occasionally travel on unpaved roads. It is not designed for trail-blazing, or other challenging off-road activities.

If you decide to drive on unpaved roads, you will find that it requires somewhat different driving skills and that your vehicle will handle somewhat differently than it does on pavement. Pay attention to the precautions and tips in this section, and get acquainted with your vehicle before leaving the pavement.

Important Safety Precautions

To avoid loss of control or rollover, be sure to follow all precautions and recommendations:

- Be sure to store luggage properly and do not exceed your luggage load limits.
  Load Limit P. 525
- Whenever you drive, make sure you and your passengers always wear seat belts.
- Keep your speed low, and never go faster than the conditions allow.
- It's up to you to continually assess the situation and drive within the limits.

Off-road Guidelines

⚠WARNING

Improperly operating this vehicle on or off-pavement can cause a crash or rollover in which you and your passengers could be seriously injured or killed.

- Follow all instructions and guidelines in this owner's manual.
- Keep your speed low, and don't drive faster than conditions permit.

Failure to operate your vehicle correctly might result in a crash or a rollover.

Important Handling Information P. 48
Precautions While Driving P. 542

Avoiding Trouble

- **Check Out Your Vehicle** before you leave the pavement and make sure that all scheduled maintenance has been completed. Pay special attention to the condition of the tyres, and check the tyre pressures.
- **Remember** the route you choose presents limits (too steep or bumpy), you have limits (driving skill and comfort), and your vehicle has limits (traction, stability, and power). Failing to recognise these limits will likely put you and your passengers in a hazardous situation.
- **Accelerating and Braking** should be done slowly and gradually. Trying to start or stop too fast can cause a loss of traction and you could lose control.
- **Avoiding Obstacles and Debris** in the road reduces the likelihood of a rollover or damage to your suspension or other components.
- **Driving on Slopes** increases your risk of a rollover, particularly if you attempt to drive across a slope that is too steep. Going straight up or down a slope is usually the safest. If you can't clearly see all conditions or obstacles on a slope, walk it before you drive it. If there is any doubt whether you can safely pass, don't try it. Find another route. If you get stuck when climbing, do not try to turn around. Back down slowly following the same route you took up the hill.
- **Crossing a Stream** - Avoid driving through deep water. If you encounter water in your route (a small stream or large puddle, for example), evaluate it carefully before going ahead. Make sure it is shallow, flowing slowly, and has firm ground underneath. If you are not sure of the depth or the ground, turn around and find another route. Driving through deep water can also damage your vehicle. The water can get into the transmission and differential, diluting the lubricant and causing an eventual failure. It can also wash the grease out of the wheel bearings.
- **If You Get Stuck**, carefully go in the direction that you think will get you unstuck. Do not spin the tyres as this will only make things worse and could damage the transmission. If you are unable to free yourself, your vehicle will need to be towed. Front and rear tow hooks are provided for this purpose.

Turning on the Power



1 Electric Parking Brake Switch

1. Make sure the parking brake is applied.
▶ The parking brake and brake system indicator (red) comes on for 30 seconds when you pull up the electric parking brake switch.

Turning on the Power

Keep your foot firmly on the brake pedal when turning the power system on.


The engine is harder to start in cold weather and in thinner air found at altitudes above 2,400 metres.

When turning the power system on in cold weather, turn off all electrical accessories such as the lights, climate control system, and rear demister in order to reduce the 12-volt battery drain.

If the exhaust system sounds abnormal or you can smell exhaust gas inside the vehicle, have your vehicle checked by a dealer. There may be a problem with the engine or exhaust system.

Continued


Except Australian, Bangladeshi, Bhutanese, New Zealand, and Vietnamese models

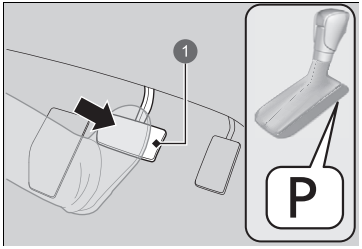

❶ Brake Pedal

2. Check that the transmission is in P, then depress the brake pedal.
▶ Although it is possible to start the vehicle in N, it is safer to start it in P.

Australian, Bangladeshi, Bhutanese, New Zealand, and Vietnamese models

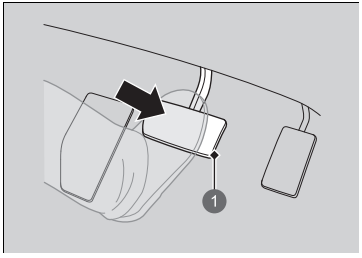

❶ Brake Pedal

2. Depress the brake pedal.

Turning on the Power

Bring the keyless remote or card key* close to the **POWER** button if the battery in the keyless remote or card key* is weak.

➡ **If the Keyless Remote/Card Key* Battery is Weak** P. 806

The power system may not start if the keyless remote or card key* is subjected to strong radio waves.

Do not hold the **POWER** button to turn the power system on. If the power system does not start, wait at least 30 seconds before trying again.

The engine may not run when the vehicle is ready for driving.
You can start driving with the indicator on.
If you press the **POWER** button while depressing the brake pedal with the indicator on, the power mode is set to VEHICLE OFF and you cannot start driving.

➡ **Ready Indicator** P. 128


The immobilizer system protects your vehicle from theft. If an improperly coded key (or other device) is used, the power system does not activate.

➡ **Immobilizer System** P. 225


When you set the power mode to ON, you may feel the brake pedal slightly sink down. This is normal.

 * Not available on all models

All models

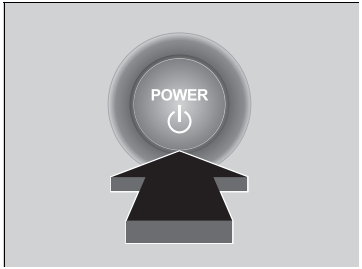

3. Without depressing the accelerator pedal, press the **POWER** button while depressing the brake pedal.

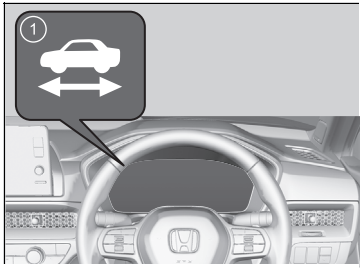

❶ (Ready) Indicator


4. Check the (Ready) indicator.
- ▶ Keep depressing the brake pedal until the indicator comes on.
- ▶ The indicator comes on when the power system is on and you can start driving.
- ▶ If the outside temperature is extremely low, you cannot drive until conditions are improved. In this case, the indicator does not come on and a warning message appears on the driver information interface.

Continued

■ Remote Engine Start*

You can remotely turn the power system on using the keyless remote.

■ To turn the power system on

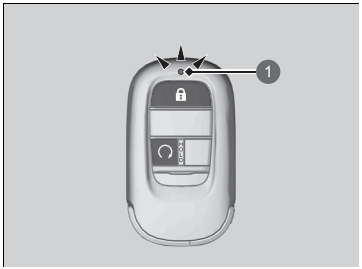

Press the [🔒] button, then press and hold the [⟳] button.
▶ Some exterior lights flash once.

❶ LED: Blinks when any button is pressed.



If the power system is turned on successfully, some exterior lights flash six times.

Remote Engine Start*

⚠WARNING

Engine exhaust contains toxic carbon monoxide.

Breathing carbon monoxide can kill you or cause unconsciousness.

Never use the remote engine starter when the vehicle is parked in a garage or other area with limited ventilation.

The remote engine start may violate local laws. Before using the remote engine start, check your local laws.

If there are buildings and obstacles between your vehicle and the keyless remote, the range will be reduced.
This distance may vary by external electrical interference.

 * Not available on all models



If the power system is not turned on, exterior lights will not flash.

▶ Go within the range, and try again.

The power system is on for up to 10 minutes without you starting the vehicle. To extend the time for another 10 minutes during the first 10 minutes, press the [🔒] button, then press and hold the [⟳] button.

▶ Some exterior lights flash six times if a 10-minute extension request was transmitted successfully.

Remote Engine Start*


The power system may not be turned on by the remote engine start if:

- You have disabled a remote engine start setting.
  ➔ **Customized Features** P. 366, 465
- The power mode is not in VEHICLE OFF.
- The transmission is in a position other than [P].
- The bonnet is open, or any door or the tailgate is unlocked.
- You have already used the remote twice to turn the power system on.
- Another registered keyless remote is in the vehicle.
- There is any antenna failure.
- The door is unlocked with the built-in key.
- The engine oil pressure is low.
- The engine coolant temperature is extremely high.
- The telematics unit malfunctions.
- The security system alarm is not set.
- The 12-volt battery charge is too low.

* Not available on all models

Continued

■ To turn the power system off

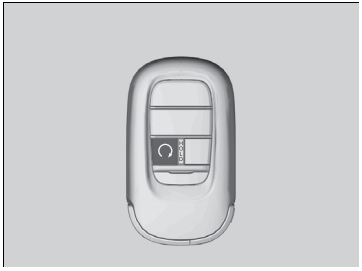

Press and hold the button for one second.



If the power system is turned off successfully, the exterior lights flash once.



When the keyless remote is out of the keyless access system range, the exterior lights will not flash.
The power system will not be turned off.
▶ Go within the range, and try again.

Remote Engine Start*

The power system may be turned off while it is running if:

- You do not start the vehicle within 10 minutes of turning the power system on with the keyless remote.
- The power system is turned off by using the keyless remote.
- The security system alarm is not set.
- The door is unlocked with the built-in key.
- The bonnet is open, or any door, or the tailgate is unlocked.
- You press the shift lever release button.
- The engine coolant temperature is extremely high.
- The 12-volt battery is low.
- The engine oil pressure is low.
- The malfunction indicator lamp comes on if there is a problem with the emissions control systems.

While the power system is on, the vehicle will automatically precondition inside the vehicle.
When it is cold outside:

- The demister is activated at a moderately warm temperature.
- The rear demister is activated.

Rear Demister Button P. 256

* Not available on all models

■ Starting to Drive

When the power system was turned on using the button on the keyless remote

1. Depress and hold the brake pedal, then press the **POWER** button.

When the power system was turned on in any case

2. Keeping your right foot on the brake pedal, check that the indicator is on, then put the transmission into D. Select R when reversing.

3. With the parking brake applied, release the brake pedal and gently depress the accelerator pedal.

▶ Make sure the parking brake and brake system indicator (red) goes off.

➡ **Parking Brake** P. 691

■ Hill start assist system

Hill start assist keeps the brake engaged briefly to help to prevent the vehicle from rolling on inclines as you move your foot from the brake pedal to the accelerator.

Put the transmission into D or B when facing uphill, or R when facing downhill, then release the brake pedal.

■ Stopping the Power System

You can turn the power system off when the vehicle is completely stopped.

Except Australian, Bangladeshi, Bhutanese, New Zealand, and Vietnamese models

1. Put the transmission into P.

2. Press the **POWER** button.

Australian, Bangladeshi, Bhutanese, New Zealand, and Vietnamese models

1. Depress the brake pedal and change the shift position to P.

▶ Do not release the brake pedal until you have confirmed that P is shown on the shift position indicator.

2. Press the **POWER** button.

Starting to Drive

When the power system was turned on using the button on the keyless remote

The power system is turned off when the transmission is taken out of P before the **POWER** button is pressed. Follow the step 1 when starting to drive.

You can also release the parking brake by pressing the electric parking brake switch while depressing the brake pedal.
When facing downhill, you can start your vehicle more smoothly by manually releasing it with the electric parking brake switch than by releasing it with the accelerator pedal.

As a hybrid vehicle, the sounds and vibrations from the engine may be absent even though the vehicle is ready for driving. It also makes you fail to recognise that you can start.
Make sure to check if the indicator is on before you start to drive.

Hill start assist system

Hill start assist may not prevent the vehicle from rolling downhill on a very steep or slippery slope, and will not operate on small inclines.

Hill start assist is not a replacement for the parking brake.

Hill start assist will operate even when VSA is switched off.

Precautions While Driving

■ Driving Guidelines for Your Utility Vehicle

Utility vehicles have a significantly higher rollover rate than other types of vehicles. To prevent rollovers or loss of control:

- Take corners at slower speeds than you would with a passenger vehicle.
- Avoid sharp turns and abrupt manoeuvres whenever possible.
- Do not modify your vehicle in any way that you would raise the centre of gravity.
- Do not carry heavy luggage on the roof.

■ In a Fog

Visibility becomes low when it is foggy. When you drive, turn on the low beam headlights even during the daytime. Slow down, using the road line in the centre, guard rails, and the taillights of the vehicle ahead of you as your driving guide.

■ In a Strong Wind

If a strong side wind drifts your vehicle while driving, hold the steering wheel tight. Slowly decelerate your vehicle and keep your vehicle in the middle of the road. Be careful with wind gusts especially when your vehicle is exiting a tunnel, driving on a bridge or river bank, and driving through an open area like a quarry, and when a large lorry is passing by.

Precautions While Driving

CAUTION: Do not drive on the road where water is deep. Driving through deep water will cause damage to the engine and electrical equipment and the vehicle will break down.

NOTICE

Do not operate the shift lever while pressing the accelerator pedal. You could damage the transmission.

NOTICE

If you repeatedly turn the steering wheel at an extremely low speed, or hold the steering wheel in the full left or right position for a while, the electric power steering (EPS) system heats up. The system goes into a protective mode, and limits its performance. The steering wheel becomes harder and harder to operate. Once the system cools down, the EPS system is restored.
Repeated operation under these conditions can eventually damage the system.

If the power mode is set to ACCESSORY while driving, the power system will shut down and all steering and brake power assist functions will stop, making it difficult to control the vehicle.

Do not select N while driving as you will lose regenerative braking (and acceleration) performance.

In Rain

The road is slippery when raining. Avoid hard braking, rapid acceleration, and abrupt steering and be more cautious when driving. It is likely to experience hydroplaning phenomenon if you are driving on a rutted road with puddles. Do not drive in deep water and on flooded roads. This can damage the engine or driveline, or cause electrical component failure.

Other Precautions

If there is a strong impact with something under the vehicle, stop in a safe location. Check the underside of the vehicle for damage or any fluid leaks.

Precautions While Driving

During the first 1,000 km of operation, avoid sudden acceleration or full throttle operation so as not to damage the engine or powertrain.

Avoid hard braking for the first 300 km after purchasing your new vehicle or replacing the brake pads or rotors, to allow for proper break-in.

Driving Guidelines for Your Utility Vehicle

Failure to operate your vehicle correctly might result in a crash or a rollover.

➡ **Important Handling Information** P. 48

In Rain

Be careful when hydroplaning phenomenon occurs. When you drive on a road covered with water at excessive speed, a layer of water builds between the tyres and the road surface. If this occurs, the vehicle cannot respond to control inputs such as steering, and braking.

Slowly decelerate when you increase the deceleration rate with the deceleration paddle selector. If the road is slippery, sudden regenerative braking can cause the tyres to skid.

Transmission

■ Creeping

As with a conventional petrol-powered vehicle with an automatic transmission, this vehicle will creep.
Keep the brake pedal firmly depressed when stopped.

■ Kickdown


Quickly depressing the accelerator pedal while driving uphill may cause the vehicle to react similar to an automatic transmission vehicle, unexpectedly increasing vehicle speed. Depress the accelerator pedal carefully, especially on slippery roads and curves.

Except Australian, Bangladeshi, Bhutanese, New Zealand, and Vietnamese models

Shifting

Change the shift position in accordance with your driving needs.

■ Shift positions

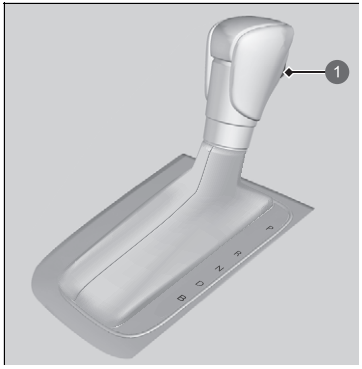

1 Release Button

P Park
Used when parking or turning the power on or off.

R Reverse
Used when reversing.

N Neutral
Transmission is not locked.

D Drive
Used for normal driving.

- The deceleration paddle selector can be used temporarily.
- The deceleration paddle selector can be used when **SPORT** mode is ON.

B Drive (B)

- Used when driving down a long hill and to increase regenerative braking.
- The deceleration paddle selector can be used.

Shifting

⚠WARNING

The vehicle can roll away if left unattended without confirming that Park is engaged.

A vehicle that rolls away could cause a crash resulting in serious injury or death.

Always keep your foot on the brake pedal until you have confirmed that P is shown on the shift position indicator.

While the High Voltage battery level is full, or the High Voltage battery temperature is low, regenerative braking may become less effective.

The beeper sounds and the message appears on the driver information interface when you depress the accelerator pedal with the shift position in N. Change the shift position to D or R with the brake pedal depressed.


You cannot change the power mode from ON to VEHICLE OFF unless the shift position is in P.

You may occasionally find that it takes longer than usual for the vehicle to start moving when you select R, release the brake pedal, and/or depress the accelerator pedal. This may occur when the High Voltage battery level is extremely low, and does not indicate a vehicle malfunction.

Continued


■ Shift Operation

Models with A-type meter

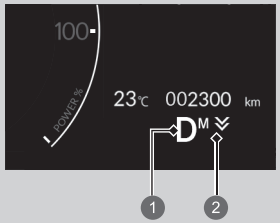

Models with B-type meter



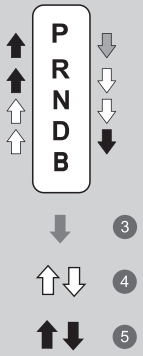

❶ Shift Position Indicator (Transmission System Indicator)
❷ Deceleration Paddle Selector Indicator
❸ Depress the brake pedal and press the shift lever release button to shift.
❹ Shift without pressing the shift lever release button.
❺ Press the shift lever release button and shift.

Shift Operation

NOTICE

When you change D to R and vice versa, come to a complete stop and keep the brake pedal depressed. Operating the shift position before the vehicle has come to a complete standstill can damage the transmission.

Use the shift position indicator to check the lever position before pulling away.

If the transmission system indicator blinks when driving, in any shift position, there is a problem with the transmission.
Avoid sudden acceleration and have the transmission checked by a dealer as soon as possible.

When shifting positions in extremely low temperatures (–30°C), there may be a short delay before the shift position is displayed. Always confirm you are in the correct shift position before driving.

It may not be possible to operate the shift lever if the brake pedal is applied while the shift lever release button is held down.
Depress the brake pedal first.

Australian, Bangladeshi, Bhutanese, New Zealand, and Vietnamese models

Shifting

Change the shift position in accordance with your driving needs.

■ Shift button positions



P Park

Used when parking or turning the power on or off.

R Reverse

Used when reversing.

N Neutral

Transmission is not locked.

D/B Drive/B Position

Each time you press the D/B button, the mode switches between Drive and **B** Position mode.

Drive

- Used for normal driving.
- The deceleration paddle selector can be used temporarily.
- The deceleration paddle selector can be used when **SPORT** mode is ON.

B Position

- Used when driving down a long hill and to increase regenerative braking.
- The deceleration paddle selector can be used.

Shifting

⚠WARNING

The vehicle can roll away if left unattended without confirming that Park is engaged.

A vehicle that rolls away could cause a crash resulting in serious injury or death.

Always keep your foot on the brake pedal until you have confirmed that P is shown on the shift position indicator.

While the High Voltage battery level is full, or the High Voltage battery temperature is low, regenerative braking may become less effective.


To prevent malfunction and unintended engagement:

- Do not spill any liquids on or around shift buttons.
- Do not place or drop any objects on or around shift buttons.
- Do not let passengers or children operate the shift buttons.

You may occasionally find that it takes longer than usual for the vehicle to start moving when you select R, release the brake pedal, and/or depress the accelerator pedal. This may occur when the High Voltage battery level is extremely low, and does not indicate a vehicle malfunction.

Continued

■ P (parking) button

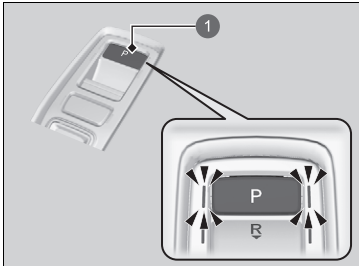

1 P Button


The transmission is put into P when you press the P button while the vehicle is parked with the power mode in ON.
The indicators on the sides of the P button come on.

Shifting

The beeper sounds and the message appears on the driver information interface when you depress the accelerator pedal with the transmission in N.
Put the transmission into D or R with the brake pedal depressed.


Shift Operation

Models with A-type meter

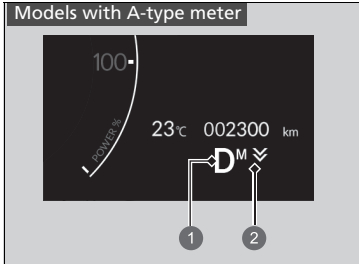

1 Shift Position Indicator (Transmission System Indicator)
2 Deceleration Paddle Selector Indicator

Models with B-type meter

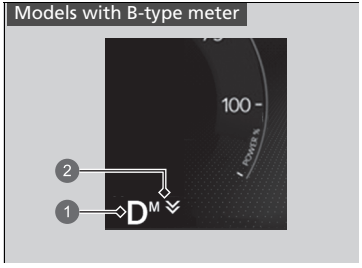

1 Shift Position Indicator (Transmission System Indicator)
2 Deceleration Paddle Selector Indicator

Shift Operation

NOTICE

When you change [D] to [R] and vice versa, come to a complete stop and keep the brake pedal depressed. Operating the shift button before the vehicle has come to a complete standstill can damage the transmission.

When changing the shift position to [P], always keep your foot on the brake pedal until you have confirmed that [P] is shown on the shift position indicator.

Use the shift position indicator and the shift button indicator to check the shift position before and after selecting a shift button.


If the indicator of the currently selected shift position, or all the shift position indicators are blinking simultaneously, there is a problem with the transmission.
Avoid sudden acceleration and have the transmission checked by a dealer as soon as possible.

The beeper sounds once when you put the transmission into [R].

Customized Features P. 366

When shifting positions in extremely low temperatures (-30°C), there may be a short delay before the shift position is displayed. Always confirm you are in the correct shift position before driving.

Continued

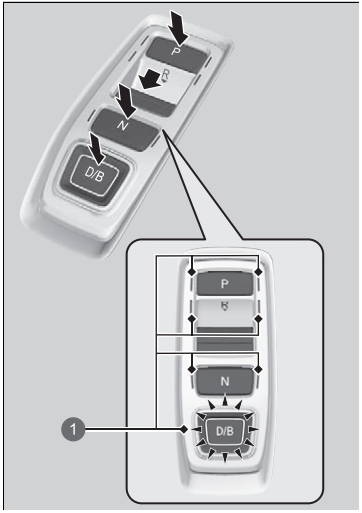

1 Shift Button Indicator

P: Press the P button.

R: Press back the R button.

N: Press the N button.

D/B: Press the D/B button.
Each time you press the button, the mode switches between Drive and **B** Position mode.

■ When opening the driver's door

If you open the driver's door under the following conditions, the transmission automatically changes to [P].

- The vehicle is stationary with the power mode in ON, or moving at 2 km/h or slower.
- The transmission is in other than [P].
- You have unfastened the driver side seat belt.
  ▶ If you manually put the transmission into any other position from [P] with the brake pedal depressed, the transmission will automatically return to [P] once you release the brake pedal.

■ When turning off the power mode

If you turn the power system off while the vehicle is stationary, and the transmission is in other than [P], the transmission automatically changes to [P].

■ If you want to keep the transmission in [N] position (car wash mode)

With the power system on:

1. Press and hold the brake pedal.
2. Select [N].
3. Within five seconds, press the **POWER** button.
The power mode changes to ACCESSORY and a message will be displayed on the driver information interface.
  ▶ This puts the vehicle in car wash mode which must be used when your vehicle is pulled through a conveyor type automatic car wash where you or an attendant do not remain in the vehicle.
  ▶ The transmission remains in [N] with the power mode in ACCESSORY for 15 minutes, then, it automatically changes to [P].

Manually changing to [P] cancels ACCESSORY mode. The [P] indicator comes on and the power mode changes to OFF.

Continued

When opening the driver's door

While the system is designed to automatically change the transmission to [P] under the described conditions, this is only an assistive feature and does not work in all situations. When you leave the driver's seat, change the shift position to [P] and make sure that [P] is displayed on the meter.

➡ **When Stopped** P. 701

If you want to drive the vehicle after the transmission has automatically changed to [P] under the described conditions, close the door, fasten the seat belt, depress the brake pedal, then change the shift position.

If you leave the vehicle, turn off the power system and lock the doors.

If you want to keep the transmission in [N] position (car wash mode)

Note that the transmission may not stay in [N] position while any of the following indicators is on:

- Transmission system indicator
- Malfunction indicator lamp
- 12-volt battery charging system indicator

■ **Restrictions on selecting a shift position**

You cannot select a shift position under certain circumstances that may lead to a crash.

When the transmission is in:	1. Under these circumstances:	2. If you try to change to the following:	3. The shift position remains in/changes to:	How to change the shift position
P	The brake pedal is not depressed.	Other shift position	P	Release the accelerator pedal and depress the brake pedal.
	The accelerator pedal is depressed.			
N	The vehicle is moving at low speed without the brake pedal depressed.		N	
	The vehicle is moving at low speed with the accelerator pedal depressed.			
N, D or B	The vehicle is moving forward.	R		Park your vehicle in a safe place.
R or N	The vehicle is moving backward.	D or B		
R, N, D or B	The vehicle is moving.	P		
P or N	The (Ready) indicator is not on.	A shift position other than P or N	P or N	Make sure that the indicator comes on.

Deceleration Paddle Selector

When you release the accelerator pedal, you can control the rate of deceleration without removing your hands from the steering wheel. Using the deceleration paddle selector situated on the steering wheel, you can sequentially shift through four stages of deceleration.

When descending a hill, you can use the deceleration paddle selector to help maintain the rate of deceleration, thereby allowing you to keep a safe distance between your vehicle and the vehicle ahead.

Deceleration Paddle Selector

⚠CAUTION

Rapidly increasing the deceleration rate by quickly shifting the deceleration paddle selector can cause the tyres to skid, resulting in a crash that could injure or kill someone.

Always maintain a reasonable rate of deceleration.

In the following situations, the stage may not change and the stage icon will blink even if you pull back the selector. The deceleration stage may decrease or cancel automatically:


- The High Voltage battery is fully charged or its temperature is too cold or too hot.
- The speed of the vehicle is beyond the deceleration range with **SPORT** mode off.
- Hybrid system protection is needed.
- The paddle selector is operated while your vehicle is stopped automatically by ACC with Low Speed Follow.

If either paddle selector is operated while driving, ACC with Low Speed Follow will cancel automatically.

If you pull back the right and left paddle selector at the same time, the deceleration stage may not change.

Continued

■ Deceleration Paddle Selector Operation

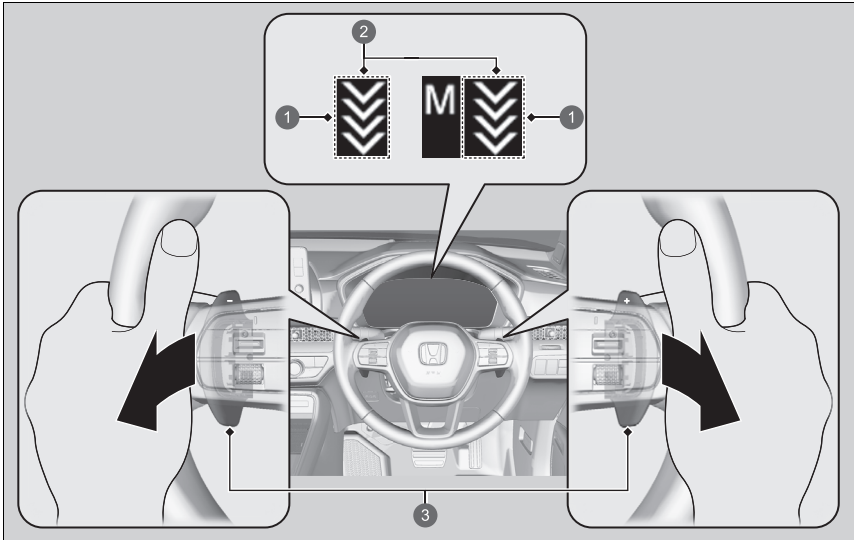

❶ Deceleration Paddle Selector Indicator
❷ Deceleration Stage
❸ Paddle Selector

■ **When the shift position is in** D

If you pull back the paddle selector, the rate of deceleration will increase temporarily, and the stage will appear on the gauge.

The deceleration paddle selector will cancel automatically and the deceleration paddle selector indicator on the gauge will disappear when you drive at a constant speed or slow to a near stop.

■ **When the shift position is in** D **and drive mode is SPORT**

If you choose **SPORT** mode, the rate of deceleration will increase and the stage along with **M** will appear.

When you want to cancel the deceleration paddle selector, change out of **SPORT** mode. When cancelled, the deceleration paddle selector indicator on the gauge disappears.

■ **When the shift position is in** B

If you change the shift position to B, the rate of deceleration will increase and the stage along with **M** will appear.


When you want to cancel the deceleration paddle selector, change the shift position to D and change out of **SPORT** mode. When cancelled, the deceleration paddle selector indicator on the gauge disappears.

Continued

■ Common operations

To select the different stages of deceleration:

- Pull back the [+] selector (right side) to decrease the deceleration stage.
- Pull back the [−] selector (left side) to increase the deceleration stage.

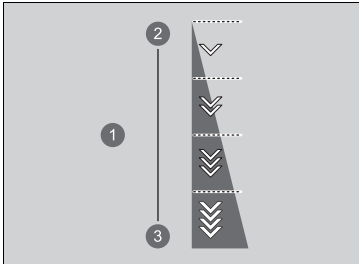

Each paddle selector operation makes a single stage deceleration change.

▶ The deceleration stage may not change if you keep the paddle selector pulled back.


❶ Deceleration Stage
❷ Decrease
❸ Increase

Acoustic Vehicle Alerting System

Alerts pedestrians when a vehicle is propelled solely by electricity, approaching at speeds around 25*1 or 20*2 km/h or less.

Except Australian, Bangladeshi, Bhutanese, Indonesian, Malaysian, New Zealand, Taiwanese models

■ Acoustic Vehicle Alerting System OFF Button

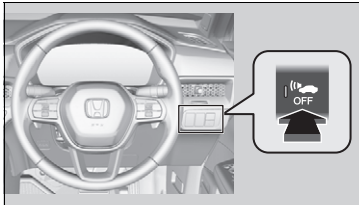

Press the button to turn the system on and off.

▶ The indicator in the button comes on when the system is off.

The system is turned on every time you turn the power system on, even if you turned it off the last time you drove the vehicle.

*1: Australian, Bangladeshi, Bhutanese, Indonesian, New Zealand, Taiwanese models
*2: Except Australian, Bangladeshi, Bhutanese, Indonesian, New Zealand, Taiwanese models

Acoustic Vehicle Alerting System

The pause function of the Acoustic Vehicle Alerting System shall not be used unless for an obvious lack of necessity to emit sound for alert in the surrounding area and that it is certain that there are no pedestrians within the short distance.

Drive Mode Switch


Models without INDIVIDUAL Mode

Press the **DRIVE MODE** switch to select the appropriate mode. The mode you select appears on the driver information interface.

Drive Mode Switch

The mode may not be able to be changed under some driving conditions.
If there is a vehicle system failure, a message will also appear on the driver information interface, and you cannot change the mode.


■ Selecting the Drive Mode

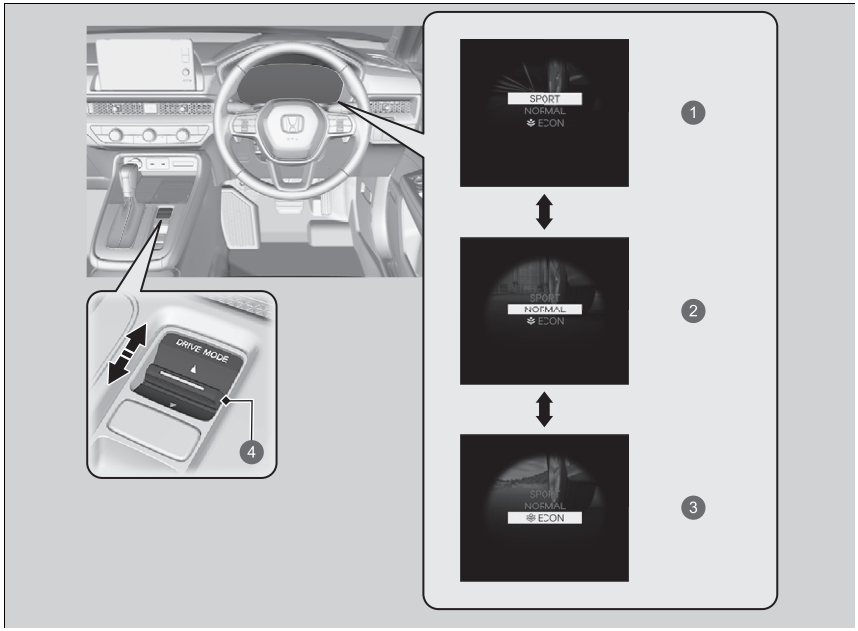

❶ **SPORT** Mode
❷ **NORMAL** Mode
❸ **ECON** Mode
❹ **DRIVE MODE** Switch


Continued

■ SPORT Mode

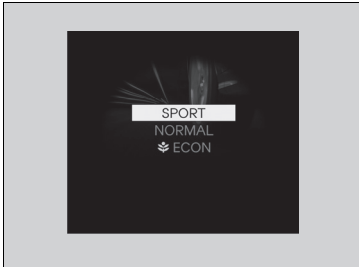

Enhances responsiveness to the driver's input.

■ NORMAL Mode

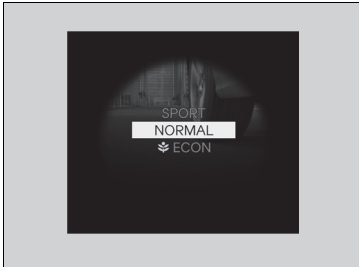

Optimises the balance between operability and comfort.

■ ECON Mode



Facilitates fuel-efficient driving.

■ Next Start-up Mode

The mode for the next start-up is saved according to the following chart.

Models with driving position memory system

Each keyless remote has its own mode saved.

Last Mode	Next Mode
SPORT or **NORMAL**	**NORMAL**
ECON	**ECON**

ECON Mode

While in **ECON** mode, the climate control system will be less effective and the vehicle will be slower to accelerate.

Drive Mode Switch


Models with INDIVIDUAL Mode

Press the **DRIVE MODE** switch to select the appropriate mode. The mode you select appears on the driver information interface and audio/information screen.

Drive Mode Switch

The mode may not be able to be changed under some driving conditions.
If there is a vehicle system failure, a message will also appear on the driver information interface, and you cannot change the mode.


Selecting the Drive Mode

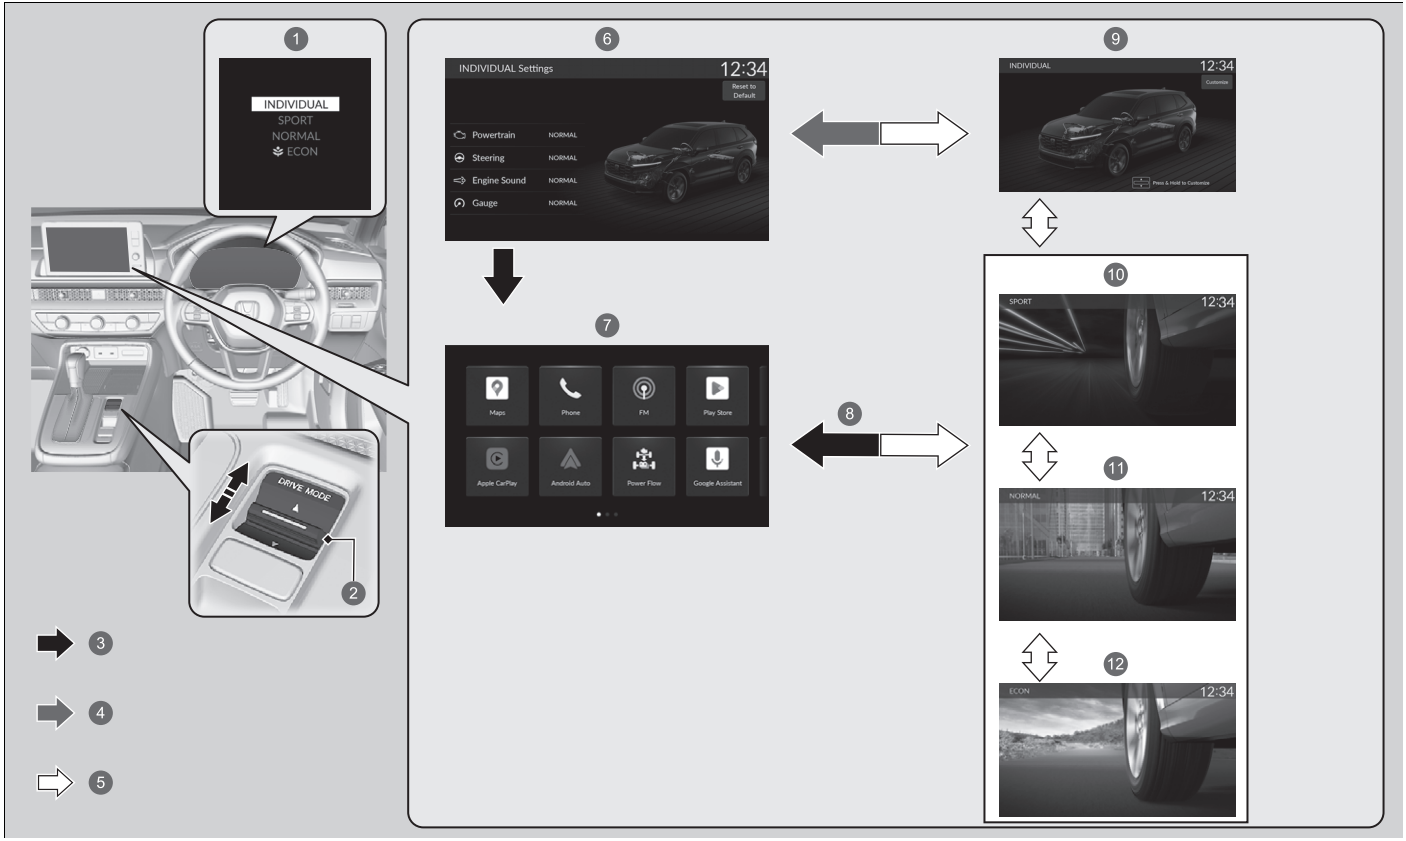

Continued

❶ Changing modes by **DRIVE MODE** switch alters the screen on the driver information interface.
❷ **DRIVE MODE** Switch
❸ Press the BACK or HOME button
❹ Press the **DRIVE MODE** switch up and hold or select **Customize** P. 568
❺ Press the **DRIVE MODE** switch up or down
❻ **INDIVIDUAL Settings** Screen
❼ Audio/Information Screen
❽ The display returns to audio/information screen a few seconds after pressing the **DRIVE MODE** switch up or down.
❾ **INDIVIDUAL** Mode
❿ **SPORT** Mode
⓫ **NORMAL** Mode
⓬ **ECON** Mode

■ INDIVIDUAL Mode

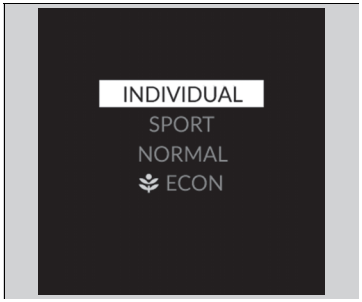

Each category can be customized separately to suit the driver's preference.

➡ **Customizing the INDIVIDUAL Settings**
P. 568

■ SPORT Mode



Enhances responsiveness to the driver's input.

Continued

■ NORMAL Mode



Optimises the balance between operability and comfort.

■ ECON Mode



Facilitates fuel-efficient driving.

ECON Mode

While in **ECON** mode, the climate control system will be less effective and the vehicle will be slower to accelerate.


■ Next Start-up Mode


The mode for the next start-up is saved according to the following chart.
Each keyless remote has its own mode saved.

Last Mode	Next Mode
INDIVIDUAL, **SPORT**, or **NORMAL**	**NORMAL**
ECON	**ECON**

Continued

■ Customizing the INDIVIDUAL Settings

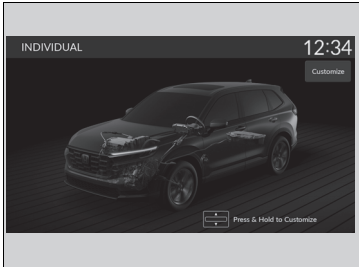

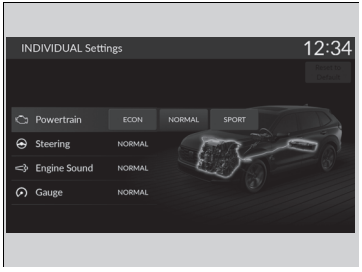

1. Select **INDIVIDUAL** mode.
2. Press the **DRIVE MODE** switch up and hold or select **Customize** to open the **INDIVIDUAL Settings**.
   ▶ You can also select from Customized Features on the audio/information screen.
   - **Selecting the Drive Mode** P. 563
   - **Customized Features** P. 366
3. Select the setting category.
4. Select the desired setting.

Customizing the INDIVIDUAL Settings

When you select **Reset to Default** on the **INDIVIDUAL Settings** screen, all **INDIVIDUAL** settings are reset to their factory defaults.

Hill Descent Control System


When driving down hills where engine braking is not enough to decelerate the vehicle, this system helps maintain a constant vehicle speed without needing to depress the brake pedal.

■ Hill Descent Control Operating Conditions

The system operates under the following conditions.

- Driving at a speed between about 3-20 km/h.
- Driving downhill.
- Accelerator pedal and brake pedal are not depressed.

■ Driver Information Interface Display

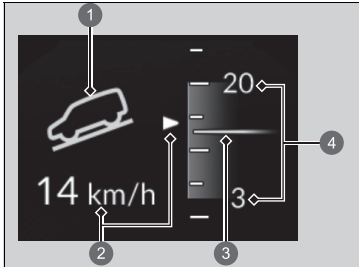

❶ The system's operating status
- Green: Activated
- White: Standby

❷ Vehicle speed display
- White: Set speed
- Grey: Current speed
  ▶ Blinks when the vehicle speed is above the operating speed.

❸ Current speed

❹ Operating range of set speed

Hill Descent Control System

⚠WARNING

Hill descent control cannot maintain a constant vehicle speed in every situation.

When driving down a very steep hill or on slippery road surfaces, the vehicle may not be able to maintain the vehicle speed and could cause a crash, resulting in serious injury or death.

Since Hill Descent Control is not designed to increase the limits of vehicle performance, the driver must always be aware of road surface conditions and drive safely.

The brake lights automatically come on while the system is in operation.

The system may not operate when driving down a gentle slope. Check the Hill Descent Control System indicator to see if the system is in operation.

The system may activate even when not driving downhill, such as when the vehicle leans while driving over uneven surfaces.

Continued

■ How to Operate Hill Descent Control



❶ Hill Descent Control System Indicator
❷ (Hill Descent Control) Button

■ To turn the system on

When the vehicle speed is less than about 20 km/h, press the button to turn the system on.

▶ The system goes into standby mode, and the Hill Descent Control System indicator (white) comes on.

When all the working conditions are met, the system activates, and the vehicle begins to maintain the vehicle speed when driving downhill.

▶ The Hill Descent Control System indicator (green) comes on when operating.

■ To adjust the set speed

Depress the accelerator pedal or brake pedal to adjust the vehicle speed within the operating range. The vehicle speed at which you release the accelerator pedal or brake pedal will be the set speed.

■ To turn the system off

Press the button to turn the system off.

How to Operate Hill Descent Control

Using the system repeatedly for a long time may cause the brakes to heat up and make the system go into standby mode temporarily.

Hill Descent Control is turned off every time you turn the power system off, even if it was turned on the last time you drove the vehicle.


The pedals may vibrate or you may hear the system working when in operation.

To turn the system off

When the vehicle speed is about 60 km/h or more, the system turns off automatically.

Adjustable Speed Limiter*

This system enables you to set a maximum speed that cannot be exceeded even if you are depressing the accelerator pedal.
The vehicle speed limit can be set from about 30 km/h to about 250 km/h.

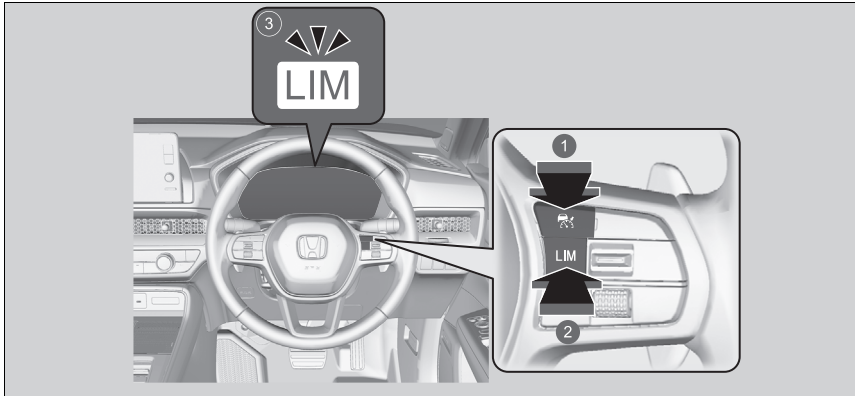

❶ Press the button on the steering wheel.
❷ If a different indicator comes on, press the **LIM** button to switch to the adjustable speed limiter.
❸ **The Adjustable Speed Limiter Indicator (White) is on in the gauge.**
Adjustable speed limiter is ready to use.

▶▶Adjustable Speed Limiter*

⚠WARNING

Adjustable Speed Limiter has limitations. It is always your responsibility to adjust the vehicle speed to obey the actual speed limit, and safely operate the vehicle.

⚠WARNING

Do not depress the accelerator pedal more than necessary.
Maintain an appropriate accelerator pedal position depending on the vehicle speed.

The adjustable speed limiter may not hold the set speed limit when driving downhill, especially if you are carrying a heavy luggage or towing a trailer. If this occurs, slow down by depressing the brake pedal.


When not using the adjustable speed limiter:
Turn off the adjustable speed limiter by pressing the button.

You cannot use the Adjustable Speed Limiter and below systems at the same time.
-Adaptive cruise control (ACC) with low speed follow
-Intelligent speed limiter

* Not available on all models

Continued

■ To Set the Speed Limit

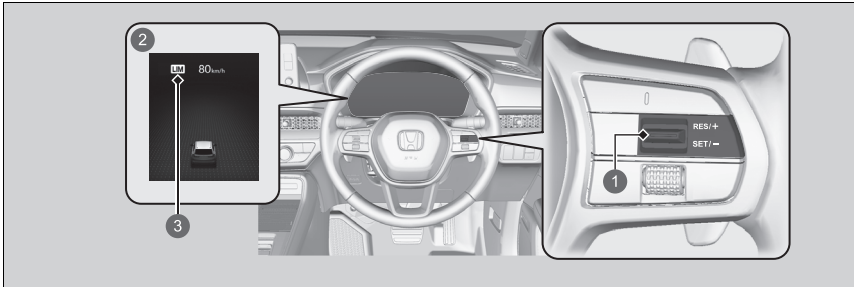

❶ **RES/+/SET/–** Switch
Up or down
❷ On when the adjustable speed limiter is set.
❸ Adjustable Speed Limiter Indicator (Green)

- Press the **RES/+/SET/–** switch up or down when you reach the desired speed. The moment you release the **RES/+/SET/–** switch, the speed limit is fixed, and the adjustable speed limiter is set. The speed limit is displayed.
- You can set the previously set speed limit by pressing the **RES/+/SET/–** switch up.

To Set the Speed Limit


If you set the speed limit while travelling at less than 30 km/h, the speed limit is set to 30 km/h.

The displayed speed limit will blink continuously if your vehicle exceeds the speed limit by 1 km/h or more on a steep descent.
A few seconds after the speed limit starts blinking, a beeper sounds for about four seconds.
However, when any of the following conditions are met, the beeper will stop.
- The brake pedal is depressed.
- The accelerator pedal is released.

The adjustable speed limiter is set to the current speed if it is higher than the previously set speed limit when you press the **RES/+/SET/–** switch up.

■ To Adjust the Speed Limit

Increase or decrease the speed limit by using the **RES/+/SET/–** switch on the steering wheel.

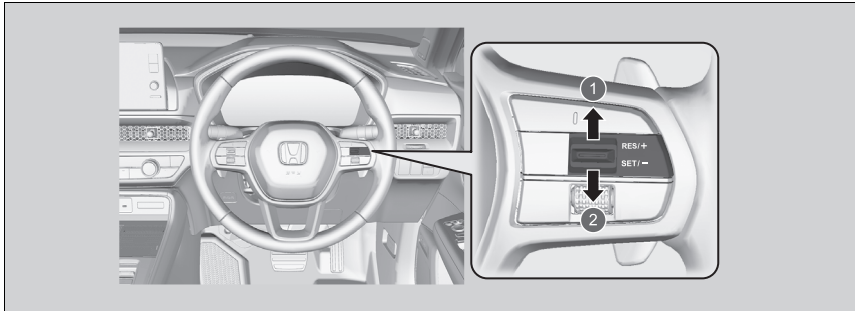

❶ To increase speed
❷ To decrease speed

- Each time you press the **RES/+/SET/–** switch up or down, the speed limit increases or decreases by 1 km/h accordingly.
- If you keep the **RES/+/SET/–** switch pressed, the speed limit increases or decreases in increments of 10 km/h every 0.5 second until system limit is reached.
- The vehicle may accelerate or decelerate until the set speed is reached.

Continued

■ Exceeding the Speed Limit Temporarily

The speed limit can be exceeded by depressing the accelerator pedal completely.

▶ The displayed limit speed blinks.


▶ The beeper sounds once the speed limit has been exceeded.

Exceeding the Speed Limit Temporarily

The beeper sounds when the vehicle speed goes higher than the set speed limit with the accelerator pedal depressed completely.

The adjustable speed limiter resumes working once the vehicle speed goes lower than the set speed limit.

To Cancel

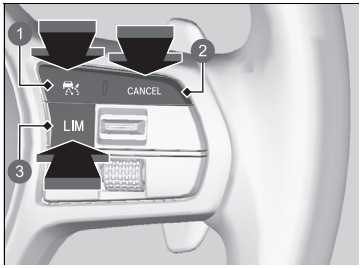

❶ Button
❷ **CANCEL** Button
❸ **LIM** Button


To cancel the adjustable speed limiter, do any of the following:

- Press the **CANCEL** button.
- Press the button.
- Press the **LIM** button.

To Cancel

The adjustable speed limiter changes into adaptive cruise control (ACC) with Low Speed Follow or intelligent speed limiter if the **LIM** button is pressed.

Resuming the prior set speed:
Press the **CANCEL** button to display the prior set speed (grey) and press the **RES/+/SET/–** switch up to resume the prior set speed.
If you are driving at a speed faster than the prior set speed (grey), the adjustable speed limiter is set to the current speed by pressing the **RES/+/SET/–** switch up.
If you press the **RES/+/SET/–** switch up when no prior set speed (in grey) is displayed, the speed will be set to your vehicle's current speed.

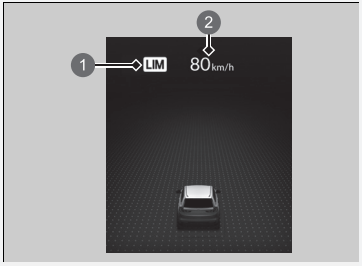


❶ Adjustable Speed Limiter Indicator (White)
❷ Prior Set Speed (Grey)

Continued

To Cancel

If there is a problem with the system when you are using the adjustable speed limiter, the beeper sounds and **OFF** comes on. The adjustable speed limiter will be turned off.

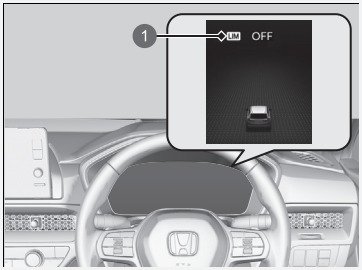

1 Adjustable Speed Limiter Indicator (White)

Intelligent Speed Limiter*

Automatically sets the speed limit that the traffic sign recognition system detects. And the speed limit cannot be exceeded even if you are depressing the accelerator pedal. If you fully depress the accelerator the speed limit can be exceeded.

➔ **Traffic Sign Recognition System*** P. 681

Intelligent Speed Limiter*


⚠WARNING

Intelligent Speed Limiter has limitations. The Intelligent Speed Limiter may set itself to a speed above or below the actual speed limit, or may not work, particularly where the traffic sign recognition system does not operate correctly or where a road has no speed limit signs. It is always your responsibility to adjust the speed to obey the actual speed limit and to safely operate the vehicle.

Depending on the amount of depression of the accelerator pedal, the vehicle will accelerate until it reaches the speed identified by the traffic sign recognition system.

* Not available on all models

Continued

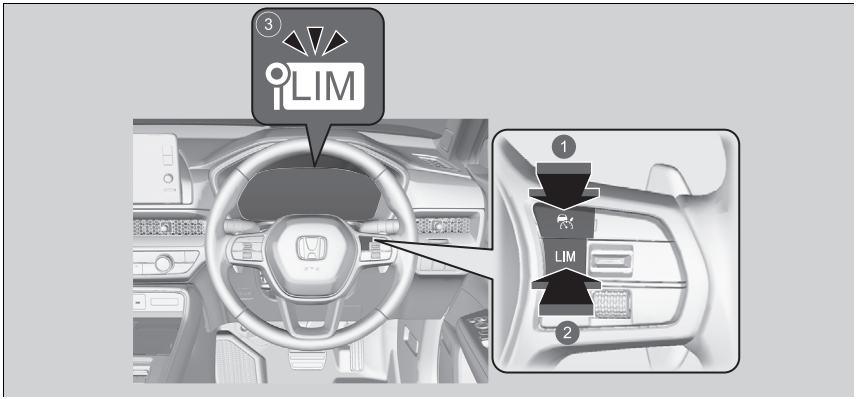

1. Press the button on the steering wheel.
2. If a different indicator comes on, press the **LIM** button to change it to the intelligent speed limiter.
3. **The Intelligent Speed Limiter Indicator (White) is on in the gauge.**
   Intelligent speed limiter is ready to use.

Intelligent Speed Limiter*

The system is designed to detect signs that follow the Vienna Convention standards. Not all signs may be detected, but any signs posted on roadsides should not be ignored. The system does not work on the designated traffic signs of all the countries you travel, nor in all situations.

Traffic Sign Recognition System* P. 681

If the intelligent speed limiter is set to the wrong speed limit, try one of the following:

To cancel

- Press the **CANCEL** button.
- Press the button.
- Press the **LIM** button.

To exceed the speed limit temporarily

- Depressing the accelerator pedal fully.


The intelligent speed limiter may not hold the set speed limit when driving downhill, especially if you are carrying a heavy luggage or towing a trailer. If this occurs, slow down by depressing the brake pedal.

When not using the intelligent speed limiter, turn off the intelligent speed limiter by pressing the button.

You cannot use the intelligent speed limiter and adaptive cruise control (ACC) with Low Speed Follow or adjustable speed limiter at the same time.

 * Not available on all models

To Set the Speed Limit

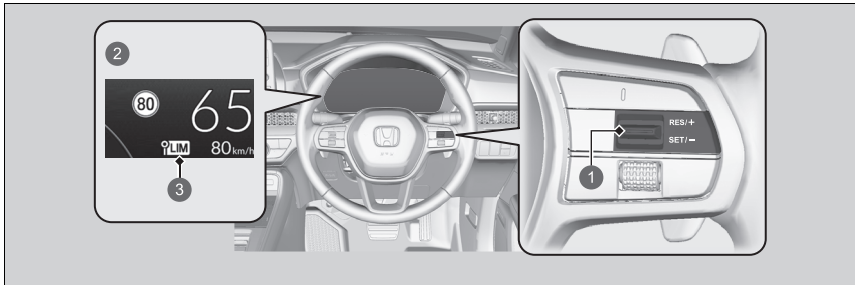

1. **RES/+/SET/–** Switch
   Up or down
2. On when the intelligent speed limiter is set to the speed limit that the traffic sign recognition system detects.
3. Intelligent Speed Limiter Indicator (Green)

- The moment you release the **RES/+/SET/–** switch, the intelligent speed limiter is set to the speed limit that the traffic sign recognition system detects. The speed limit is displayed.

Intelligent Speed Limiter*

Do not use the intelligent speed limiter in areas of different units from the display unit of the intelligent speed limiter.

To Set the Speed Limit

If you set the intelligent speed limiter when the speed limit that the traffic sign recognition system detects is less than 30 km/h, the speed limitation function and warning function may switch to pause.

If your vehicle speed is higher than the speed limit that the traffic sign recognition system detects, your vehicle decelerates slowly to the speed limit or less. If necessary, slow down by depressing the brake pedal. Also, the displayed speed limit blinks continuously when your vehicle exceeds the speed limit by 1 km/h or more.
A few seconds after the speed limit starts blinking, a beeper sounds for about four seconds.
However, when any of the following conditions are met, the beeper will stop.


- The brake pedal is depressed.
- The accelerator pedal is released.
- The vehicle speed becomes less than or equal to the displayed speed limit.

* Not available on all models

Continued


■ **When the traffic sign recognition system detects the new speed limit sign**

The intelligent speed limiter is set to the new speed limit that the traffic sign recognition system detects.

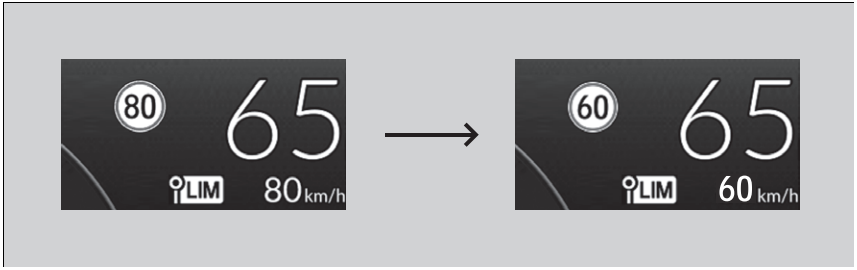

■ **The speed limitation function and warning function may switch to pause if there is no speed limit sign in the screen of the traffic sign recognition system when:**

- The end of speed limit or other designated limit is detected.
- Your vehicle enters/exits motorway or highway.
- You make a turn with a turn signal to change direction at an intersection.

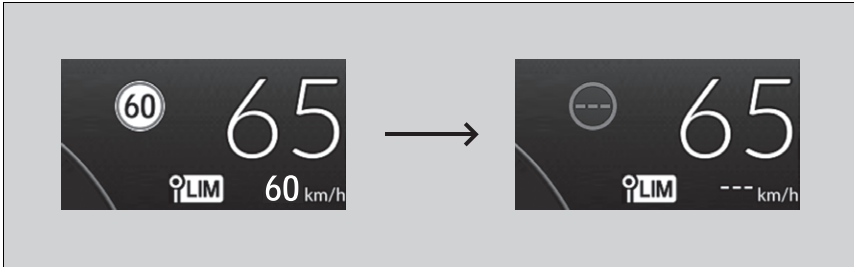

To Set the Speed Limit


The intelligent speed limiter may also switch to pause when the traffic sign recognition system detects only additional speed limit signs.



Driving


■ **When the traffic sign recognition system detects the speed limit sign while the intelligent speed limiter is paused**

The speed limitation function and warning function will be resumed automatically.

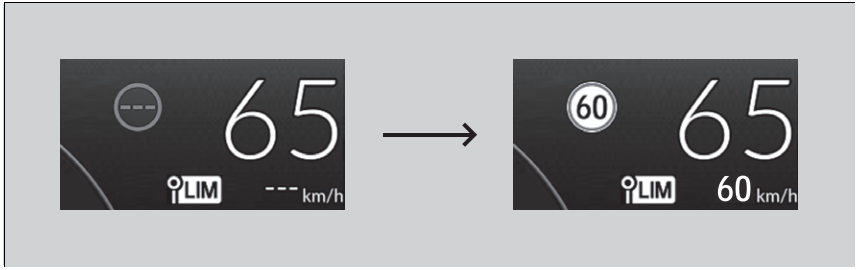

■ **When the traffic sign recognition system does not detect the speed limit sign for a time while the intelligent speed limiter is activated**

While driving, in addition to when the traffic sign recognition system detects no speed limit sign, the traffic sign recognition system may display no speed limit. But, intelligent speed limiter functions continue.

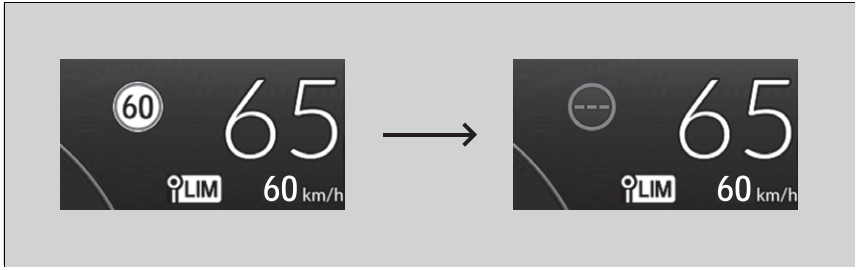


Continued

■ Exceeding the Speed Limit Temporarily

The speed limit can be exceeded by depressing the accelerator pedal fully.
▶ The displayed speed limit blinks.
The beeper sounds once the speed limit has been exceeded.

■ To Cancel

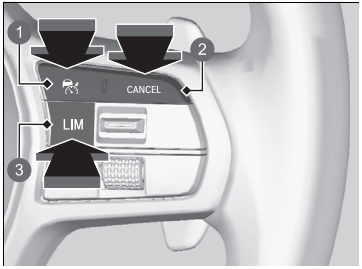

❶ Button
❷ **CANCEL** Button
❸ **LIM** Button

To cancel the intelligent speed limiter, do any of the following:

- Press the **CANCEL** button.
- Press the button.
- Press the **LIM** button.

Exceeding the Speed Limit Temporarily

The beeper sounds when the vehicle speed goes higher than the set speed limit with the accelerator pedal depressed completely.

The intelligent speed limiter resumes working once the vehicle speed goes lower than the set speed limit.

To Cancel

The intelligent speed limiter changes into adaptive cruise control (ACC) with Low Speed Follow or adjustable speed limiter if the **LIM** button is pressed.



❶ Intelligent Speed Limiter Indicator (White)

If there is a problem with the system or traffic sign recognition system when you are using the intelligent speed limiter, the beeper sounds and **OFF** comes on. The intelligent speed limiter will be turned off.

Traffic Sign Recognition System* P. 681

 * Not available on all models

Vehicle Stability Assist (VSA) System

VSA helps to stabilise the vehicle during cornering if the vehicle turns more or less than what was intended. It also assists in maintaining traction on slippery surfaces. It does so by regulating engine and motor output and selectively applying the brakes.

■ VSA Operation



❶ VSA System Indicator

When VSA activates, you may notice that the engine and motor do not respond to the accelerator. You may also notice some noise from the hydraulic brake system. You will also see the indicator blink.

Vehicle Stability Assist (VSA) System

The VSA may not function properly if tyre type and size are mixed. Make sure to use the same size and type of tyre, and the air pressures as specified.

When the VSA system indicator comes on and stays on while driving, there may be a problem with the system. While this may not interfere with normal driving, have your vehicle checked by a dealer immediately.

VSA cannot enhance stability in all driving situations and does not control the entire braking system. You still need to drive and corner at speeds appropriate for the conditions and always leave a sufficient margin of safety.

The main function of the VSA system is generally known as Electronic Stability Control (ESC). The system also includes a traction control function.

The Vehicle Stability Assist (VSA) system, brake system (Amber), Adaptive Cruise Control (ACC) with Low Speed Follow, low tyre pressure/TPMS*, low tyre pressure/deflation warning system*, Collision Mitigation Braking System (CMBS), Road Departure Mitigation and safety support indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the 12-volt battery.
Drive a short distance at more than 20 km/h.
Each indicator should go off. If any do not, have your vehicle checked by a dealer.

* Not available on all models

Continued

■ VSA On and Off

You can partially disable VSA features using the driver information interface.

➔ **Switching the Display** P. 150, 169
➔ **VSA Mode** P. 164

Your vehicle will have normal braking and cornering ability, but traction control function will be less effective.

VSA is turned on every time you turn the power system on, even if you turned it off the last time you drove the vehicle.

Vehicle Stability Assist (VSA) System

In certain unusual conditions when your vehicle gets stuck in shallow mud or fresh snow, it may be easier to free it with the VSA temporarily switched off.

When the VSA is set to OFF (unchecked), the traction control function becomes less effective. This allows for the wheels to spin more freely at low speed. You should only attempt to free your vehicle with the VSA off if you are not able to free it when the VSA is on.

Immediately after freeing your vehicle, be sure to switch VSA on again. We do not recommend driving your vehicle with the VSA system switched off.

You may hear a motor sound coming from the engine compartment while system checks are being performed immediately after turning the power system on or while driving. This is normal.

Australian, Bangladeshi, Bhutanese, Botswanan, Mauritian, Namibian, New Zealand, Seychelles, and South African models

When the VSA system is off, trailer stability assist is also off.

➔ **Trailer Stability Assist*** P. 530

 * Not available on all models

Agile Handling Assist

Lightly brakes each of the front and rear wheels, as needed, when you turn the steering wheel, and helps to support the vehicle's stability and performance during cornering.

Agile Handling Assist

The agile handling assist cannot enhance stability in all driving situations. You still need to drive and corner at speeds appropriate for the conditions and always leave a sufficient margin of safety.

When the VSA system indicator comes on and stays on while driving, the agile handling assist does not activate.

You may hear a sound coming from the engine compartment while the agile handling assist is activated. This is normal.

Real Time AWD with Intelligent Control System*

Your vehicle is equipped with the AWD system. When the system senses a loss of front wheel traction, it automatically transfers some power to the rear wheels. This allows you to utilise all available traction and may increase mobility.

You still need to exercise the same care when accelerating, steering, and braking that you would in a two wheel drive vehicle.

If you excessively spin all four wheels and overheat the AWD system, only the front wheels receive power. Stop until the system cools down.

Real Time AWD with Intelligent Control System*

NOTICE

Do not continuously spin the front tyres of your vehicle. Continuously spinning the front tyres can cause transmission or rear differential damage.

The AWD system may not function properly if tyre type and size are mixed. Make sure to use the same size and type of tyre, and the air pressures as specified.


Tyre and Wheel Replacement P. 766

 * Not available on all models

Taiwanese models

Tyre Pressure Monitoring System (TPMS)

Instead of directly measuring the pressure in each tyre, the TPMS on this vehicle monitors and compares the rolling radius and rotational characteristics of each wheel and tyre while you are driving to determine if one or more tyres are significantly under-inflated.

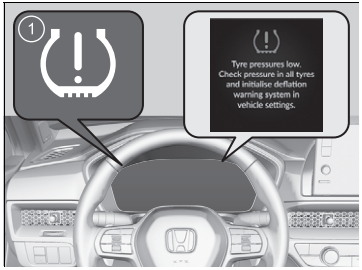

This will cause the low tyre pressure/TPMS indicator to come on and a message to appear on the gauge.

❶ Low Tyre Pressure/TPMS Indicator

Tyre Pressure Monitoring System (TPMS)

The system does not monitor the tyres when driving at low speed.

Conditions such as low ambient temperature and altitude change directly affect tyre pressure and can trigger the low tyre pressure/TPMS indicator to come on.

Tyre pressure checked and inflated in:
- Warm weather can become under-inflated in colder weather.
- Cold weather can become overinflated in warmer weather.

The low tyre pressure/TPMS indicator will not come on as a result of overinflation.

The TPMS may not function properly if tyre type and size are mixed. Make sure to use the same size and type of tyre.

Checking and Maintaining Tyres P. 764

The low tyre pressure/TPMS indicator may come on with a delay or may not come on at all when:
- You rapidly accelerate, decelerate, or turn the steering wheel.
- You drive on snowy or slippery roads.
- The tyre loses air pressure rapidly.

The low tyre pressure/TPMS indicator may come on under the following conditions:
- There is a heavier and uneven load on the tyres than the condition at calibration.

Continued

■ TPMS Calibration

You must start TPMS calibration every time you:
- Adjust the pressure in one or more tyres.
- Rotate the tyres.
- Replace one or more tyres.

Before calibrating the TPMS:
- Set the cold tyre pressure in all four tyres.
  ➡ **Checking Tyres** P. 764

Make sure:
- The vehicle is at a complete stop.
- The transmission is in P.
- The power mode is in ON.

Tyre Pressure Monitoring System (TPMS)


The Vehicle Stability Assist (VSA) system, brake system (Amber), Adaptive Cruise Control (ACC) with Low Speed Follow, low tyre pressure/TPMS, Collision Mitigation Braking System (CMBS), Road Departure Mitigation and safety support indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the 12-volt battery.
Drive a short distance at more than 20 km/h.
Each indicator should go off. If any do not, have your vehicle checked by a dealer.

TPMS Calibration

The calibration process requires approximately 30 minutes of cumulative driving at speeds between 40-100 km/h.
During this period, if power mode is set to ON and the vehicle is not moved within 45 seconds, you may notice the low tyre pressure indicator comes on briefly. This is normal and indicates that the calibration process is not yet complete.

If the low tyre pressure/TPMS indicator comes on even when the properly inflated specified regular tyres are installed, have your vehicle checked by a dealer.

We recommend that the tyres be replaced with the same brand, model, and size as the originals. Ask a dealer for details.

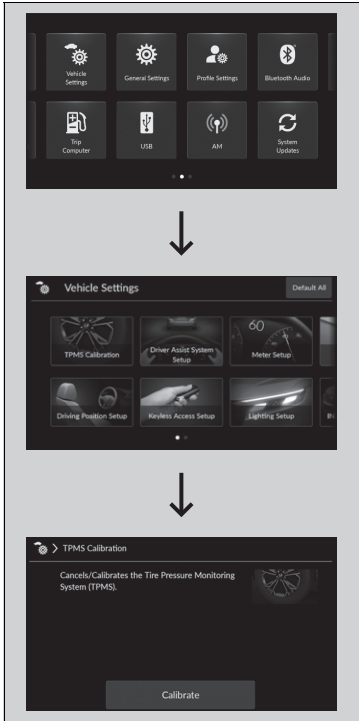

When you calibrate the TPMS, do the following.

Basic Operation P. 409


1. Set the power mode to ON.
2. Press the HOME button.
3. Select **Vehicle Settings**.
4. Select **TPMS Calibration**.
5. Select **Calibrate**.

- If the **Calibration Failed To Start.** message appears, repeat step 5.
- The calibration process finishes automatically.

Except Taiwanese models

Deflation Warning System*

Instead of directly measuring the pressure in each tyre, the deflation warning system on this vehicle monitors and compares the rolling radius and rotational characteristics of each wheel and tyre while you are driving to determine if one or more tyres are significantly under-inflated.

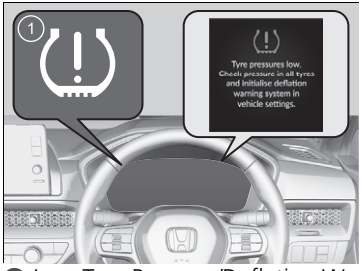

This will cause the low tyre pressure/deflation warning system indicator to come on and a message to appear on the gauge.

❶ Low Tyre Pressure/Deflation Warning System Indicator

■ Deflation Warning System Calibration

You must start deflation warning system calibration every time you:
- Adjust the pressure in one or more tyres.
- Rotate the tyres.
- Replace one or more tyres.

Before calibrating the deflation warning system:
- Set the cold tyre pressure in all four tyres.
  ➡ **Checking Tyres** P. 764

Make sure:
- The vehicle is at a complete stop.
- The transmission is in P.
- The power mode is in ON.

Deflation Warning System*

The system does not monitor the tyres when driving at low speed.

Conditions such as low ambient temperature and altitude change directly affect tyre pressure and can trigger the low tyre pressure/deflation warning system indicator to come on.

Tyre pressure checked and inflated in:
- Warm weather can become under-inflated in colder weather.
- Cold weather can become overinflated in warmer weather.

The low tyre pressure/deflation warning system indicator will not come on as a result of overinflation.


The deflation warning system may not function properly if tyre type and size are mixed.
Make sure to use the same size and type of tyre.
➡ **Checking and Maintaining Tyres** P. 764

The low tyre pressure/deflation warning system indicator may come on with a delay or may not come on at all when:
- You rapidly accelerate, decelerate, or turn the steering wheel.
- You drive on snowy or slippery roads.
- Tyre chains* are used.
- The tyre loses air pressure rapidly.


The low tyre pressure/deflation warning system indicator may come on under the following conditions:
- There is a heavier and uneven load on the tyres, such as when towing a trailer*, than the condition at calibration.
- Tyre chains* are used.

* Not available on all models

Models with Display Audio without Google built-in

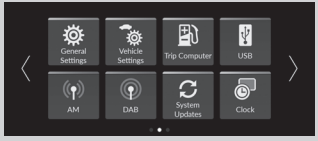



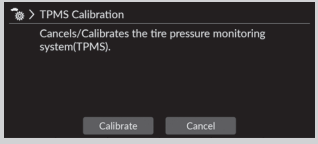

When you calibrate the deflation warning system, do the following.

Basic Operation P. 309

1. Set the power mode to ON.
2. Press the HOME button.
3. Select **Vehicle Settings**.
4. Select **TPMS Calibration**[*1]/**Deflation warning system**[*2].
5. Select **Calibrate** or **Cancel**.

- If the **Calibration Failed To Start.** message appears, repeat step 5.
- The calibration process finishes automatically.

*1: Philippine models
*2: Except Philippine models

Deflation Warning System*

The Vehicle Stability Assist (VSA) system, brake system (Amber), Adaptive Cruise Control (ACC) with Low Speed Follow, low tyre pressure/deflation warning system, Collision Mitigation Braking System (CMBS), Road Departure Mitigation and safety support indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the 12-volt battery. Drive a short distance at more than 20 km/h. Each indicator should go off. If any do not, have your vehicle checked by a dealer.

Deflation Warning System Calibration

The calibration process requires approximately 30 minutes of cumulative driving at speeds between 40-100 km/h.
During this period, if power mode is set to on and the vehicle is not moved within 45 seconds, you may notice the low tyre pressure indicator comes on briefly. This is normal and indicates that the calibration process is not yet complete.

If the tyre chains* are installed, remove them before calibrating the deflation warning system.


If the low tyre pressure/deflation warning system indicator comes on even when the properly inflated specified regular tyres are installed, have your vehicle checked by a dealer.

We recommend that the tyres be replaced with the same brand, model, and size as the originals. Ask a dealer for details.

* Not available on all models

Continued

Models with Display Audio with Google built-in

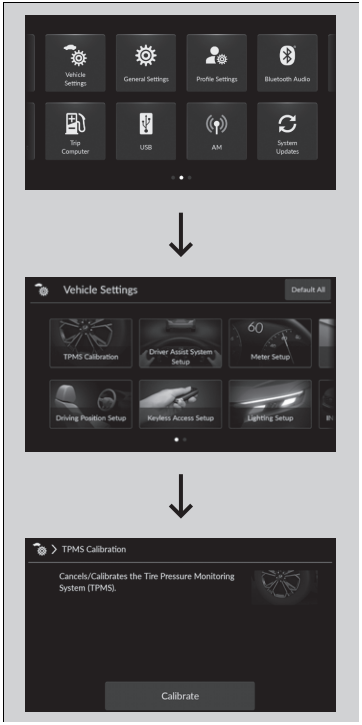

When you calibrate the deflation warning system, do the following.

Basic Operation P. 409

1. Set the power mode to ON.
2. Press the HOME button.
3. Select **Vehicle Settings**.
4. Select **TPMS Calibration***1**/Deflation warning system***2**.
5. Select **Calibrate**.

- If the **Calibration Failed To Start.** message appears, repeat step 5.
- The calibration process finishes automatically.


*1: Philippine models
*2: Except Philippine models

Blind Spot Information System*

When the system detects vehicles approaching from behind in adjacent lanes, the appropriate indicator comes on, providing assistance when you change lanes.

How the System Works

The system activates when your vehicle is moving forward at about 20 km/h or above.

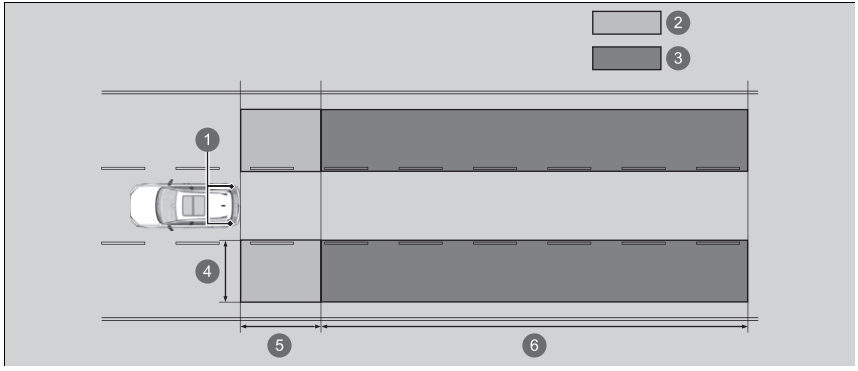

❶ Radar Sensors: underneath the rear bumper corners
❷ Alert Zone 1
❸ Alert Zone 2
Alert zone range
❹ Approx. 0.5 ~ 3 m from vehicle side.
❺ Approx. 3 m from rear bumper.
❻ Approx. 3 ~ 25 m behind from rear bumper. (The faster the approaching vehicle, the further away it will be detected.)

The initially set alert zone is alert zone 1. Over time, after the vehicle has been driven on straight roads with traffic and roadside objects, the system will adapt and expand the alert zone (alert zone 1 and 2).

* Not available on all models

Continued

Blind Spot Information System*

Important Safety Reminder

Like all assistance systems, the blind spot information system has limitations. Always look in your mirrors, to either side of your vehicle, and behind you for other vehicles before changing lanes. Overreliance on the blind spot information system may result in a collision.

Have your vehicle checked by a dealer in the following situations:


- The rear bumper or area around the radar sensors is strongly impacted.
- The indicator does not come on even if a vehicle in the alert zone should have been detected.
- The rear bumper or any system components need to be repaired.

If the rear bumper or any system components are repaired, the system will revert to alert zone 1 only until it is able to adapt and expand to alert zone 1 and 2.

For proper blind spot information system operation:

- Always keep the rear bumper and area around the radar sensors clean.
- Do not cover the rear bumper corner area with labels or stickers of any kind.

■ When the system detects a vehicle

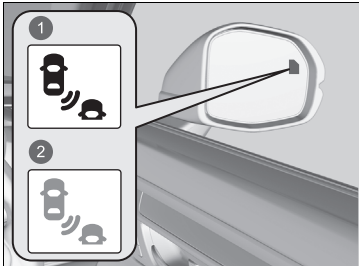

1 Comes On
2 Blinks

Blind spot information system alert indicator: Located on the outside door mirror on both sides.

Comes on when:

- A vehicle approaches you from behind to overtake you at a speed difference of no more than about 50 km/h.
- You pass a vehicle at a speed difference of no more than about 20 km/h.

Blinks and a beeper sounds when:

You use the turn signal lever to signal a turn in the direction of the detected vehicle while the blind spot information system alert indicator is on.

▶ The beeper sounds three times.

Blind Spot Information System*

The system is for your convenience only. Even if an object is within the alert zone, the following situations may occur:

- The blind spot information system alert indicator does not come on and the **Blind spot information not available** message appears on the driver information interface.
- The blind spot information system alert indicator may come on even with the message displayed.

The Vehicle Stability Assist (VSA) system, brake system (Amber), Adaptive Cruise Control (ACC) with Low Speed Follow, low tyre pressure/TPMS*, low tyre pressure/deflation warning system*, Collision Mitigation Braking System (CMBS), Road Departure Mitigation, and safety support indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the 12-volt battery.
Drive a short distance at more than 20 km/h.
Each indicator should go off. If any do not, have your vehicle checked by a dealer.

Turn the system off when towing a trailer.
The system may not work properly for the following reasons:

- The added mass tilts the vehicle and changes the radar coverage.
- The trailer itself can be detected by the radar sensors, causing the blind spot information system alert indicators to come on.

 * Not available on all models

■ Blind Spot Information System On and Off

You can turn the system on and off using the driver information interface.

➔ **Switching the Display** P. 169
➔ **Safety Support** P. 184

The blind spot information system will stay on the previously selected on or off setting each time you turn the power system on.

Blind Spot Information System *

You can change the settings for the blind spot information system.

➔ **Customized Features** P. 366, 465

* Not available on all models

Continued

■ Blind Spot Information System Conditions and Limitations

The blind spot information system alert indicator may not come on under the following conditions:

- There is a large speed difference between your vehicle and the vehicle in the adjacent lane.
- A vehicle is parked in a side lane.
- An object not detected by the radar sensors approaches or passes your vehicle.
- The vehicle driving in the adjacent lane is a motorcycle or other small vehicle.

The blind spot information system may not operate correctly under the following conditions:

- Making a turn at an intersection.
- Objects (guard rails, poles, trees, etc.) are detected.
- An object that does not reflect radio waves well or a motorcycle, is in the alert zone.
- Driving on a curved road.
- A vehicle is moving from a far lane to the adjacent lane.
- The system picks up signal interference such as other radar sensors from another vehicle or strong radio wave transmitted from a facility nearby.
- The rear bumper or the area around the radar sensors is covered by dirt, mud, snow, ice, etc.
- The rear bumper or the area around the radar sensors has been damaged or deformed.
- In bad weather (heavy rain, snow, and fog).
- Making a short turn or driving on a bumpy road that slightly tilts the vehicle.
- An object such as a bicycle rack is attached to the rear of the vehicle.
- When driving for long distances on a road in a trafficless area such as a desert.

High Voltage Battery

The High Voltage battery gradually discharges even if the vehicle is not in use. As a result, if your vehicle is parked for an extended period of time, the battery charge level will become low. Extended periods of time at a low state of charge will shorten battery life. To maintain the battery state of charge, drive your vehicle for more than 30 minutes at least once every three months.


Extreme high temperatures can affect the battery life. You can minimize the effects by parking the vehicle in the shade during the summer.

High Voltage Battery

Be careful not to let the High Voltage battery drain too much. If the battery level becomes close to zero, it will make it impossible to start the engine.


LaneWatch*

LaneWatch is an assistance system that allows you to check the passenger side rear areas displayed on the audio/information screen when the turn signal is activated to the passenger's side.

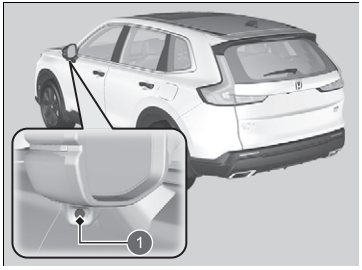

A camera in the passenger side door mirror monitors these areas and allows you to check for vehicles, in addition to your visual check and use of the passenger door mirror. You can also keep the system on for your convenience while driving.

1 Camera

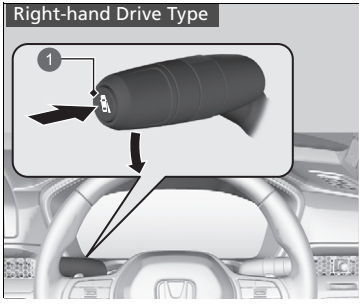

The system activates when you do either of the following operations:

- Press the LaneWatch button.
- Move the turn signal lever to the passenger side.

The system deactivates when you press the LaneWatch button again.

1 LaneWatch Button

LaneWatch*

⚠WARNING

Failure to visually confirm that it is safe to change lanes before doing so may result in a crash and serious injury or death.

Do not rely only on LaneWatch while driving.

Always look in your mirrors, to either side of your vehicle, and behind you for other vehicles before changing lanes.


Important Safety Reminder
Like all assistance systems, LaneWatch has limitations. Overreliance on LaneWatch may result in a collision.

The LaneWatch function can be affected by weather, lighting (including headlights and low sun angle), ambient darkness, camera condition, and loading.

The LaneWatch may not provide the intended display of traffic to the side and rear under the following conditions:

- Your vehicle's suspension has been altered, changing the height of the vehicle.
- Your tyres are over or under inflated.
- Your tyres or wheels are of varied size or construction.

 * Not available on all models

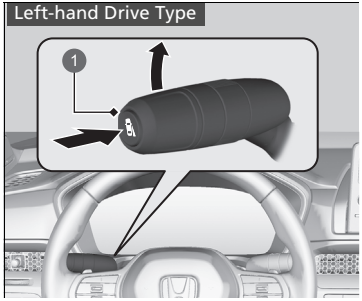

❶ LaneWatch Button

LaneWatch*

The LaneWatch camera view is restricted. Its unique lens makes objects on the screen look slightly different from what they are.


LaneWatch display does not come on when the transmission is in R.

For proper LaneWatch operation:

- The camera is located in the passenger side door mirror. Always keep this area clean. If the camera lens is covered with dirt or moisture, use a soft, moist cloth to keep the lens clean and free of debris.
- Do not cover the camera lens with labels or stickers of any kind.
- Do not touch the camera lens.

* Not available on all models

Continued

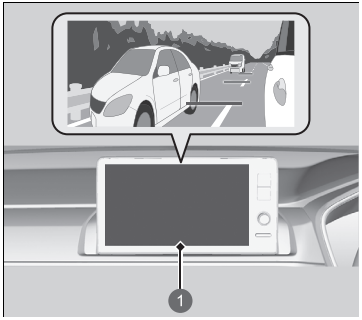

The passenger side view display appears on the audio/information screen.

1 Audio/Information Screen

■ **Customizing the LaneWatch settings**


You can customize the following items using the audio/information screen.

- **Show with turn signal***1/**Show with indicator***2: Selects whether LaneWatch monitor comes on when you operate the turn signal lever.
- **Display Time after Turn Signal Off***1/**Display Time after Indicator Off***2: Changes the remaining LaneWatch display time after you pull the turn signal lever back.
- **Show Reference Line**: Selects whether the reference lines appear on the LaneWatch monitor.
- **Display**: Adjusts display settings.

Customized Features P. 366

*1: Philippine models
*2: Except Philippine models

■ Reference Lines

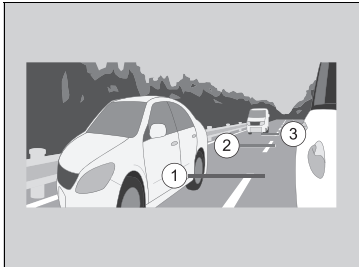

Three lines that appear on the screen can give an idea of how far the vehicles or objects on the screen are from your vehicle, respectively. If an object is near line ① (in red), it indicates that it is close to your vehicle whereas an object near line ③ is farther away.

Reference Lines

The area around the reference line ① (red) is very close to your vehicle. As always, make sure to visually confirm the safety of a lane change before changing lanes.


The distance between your vehicle and lines ①, ② and ③ on the screen vary depending on road conditions and vehicle loading. For example, the reference lines on the screen may seem to appear closer than the actual distances when the rear of your vehicle is more heavily loaded.

Consult a dealer if:

- The passenger side door mirror, or area around it is severely impacted, resulting in changing the camera angle.
- The LaneWatch display does not come on at all.

Adjusting Headlight Distribution*

Driving the right-hand type vehicle in right-hand traffic, or the left-hand type vehicle in left-hand traffic causes headlight glare to oncoming vehicles. You need to alter the headlight beam distribution using masking tape.

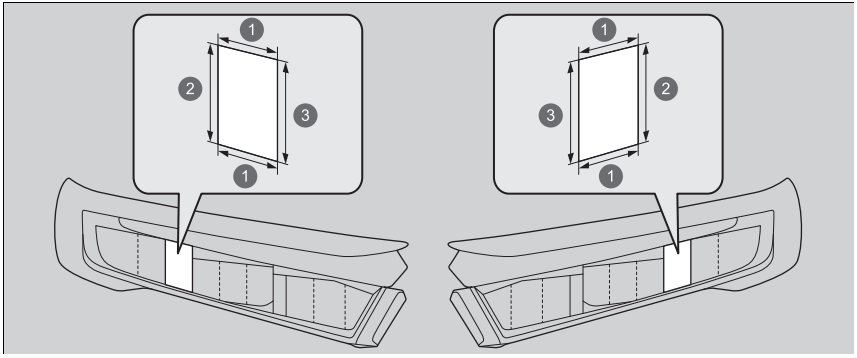

1 45 mm
2 49 mm
3 48 mm

1. Prepare for two pieces of masking tape as shown.
▶ Use masking tape that can shut out light, such as seal type waterproof vinyl.
2. Affix the tape to the lens as shown.

Adjusting Headlight Distribution*

Be careful not to adhere the tape to an incorrect location. If the headlight beam is distributed incorrectly, it may not comply with your country's legal requirements. Ask your dealer for details.

 * Not available on all models

Assists with functions such as acceleration, braking, and steering in order to reduce the burden on the driver, as well as help to avoid or reduce the severity of collisions.

Honda Sensing has the following functions:

■ The functions that do not require switch operations to activate

- Collision Mitigation Braking System (CMBS) ➡ P. 606
- Low Speed Braking Control* ➡ P. 620
- Road Departure Mitigation System ➡ P. 626
- Lead Car Departure Notification System* ➡ P. 677
- Traffic Sign Recognition System* ➡ P. 681
- Auto High-Beam* ➡ P. 247
- Adaptive Driving Beam* ➡ P. 250
- Blind Spot Information System* ➡ P. 593
- Cross Traffic Monitor* ➡ P. 709
- Parking Sensor System ➡ P. 703
- Driver Attention Monitor ➡ P. 179

■ The functions that require switch operations to activate

- Adaptive Cruise Control (ACC) with Low Speed Follow ➡ P. 636
- Lane Keeping Assist System (LKAS) ➡ P. 655

Australian, Bangladeshi, Bhutanese, and New Zealand models

- Traffic Jam Assist ➡ P. 668
- Intelligent Speed Limiter* ➡ P. 577

Honda SENSING


Thai models

CAUTION: This equipment should be operated keeping the radiator at least 20 cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).
This telecommunication equipment conforms to NTC technical requirement.
This telecommunication equipment has EMF radiation conforms to NTC EMF exposure standard.

* Not available on all models

Continued

■ Operation Switches for the Adaptive Cruise Control (ACC) with Low Speed Follow/Lane Keeping Assist System (LKAS)/ Traffic Jam Assist*

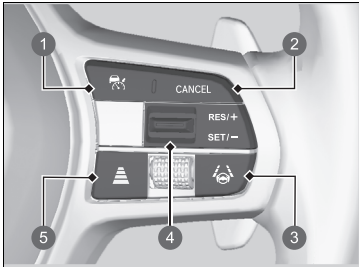

❶ Button
Press to activate standby mode for ACC with Low Speed Follow.
Or press to cancel the system.

❷ **CANCEL** Button
Press to cancel ACC with Low Speed Follow.

❸ LKAS Button
Press to activate standby mode for LKAS and Traffic Jam Assist*.
Or press to cancel these systems.

❹ **RES/+/SET/–** Switch
Press the **RES/+/SET/–** switch up to set or resume the ACC with Low Speed Follow or increase the vehicle speed.
Press the **RES/+/SET/–** switch down to set the ACC with Low Speed Follow or decrease the vehicle speed.


❺ Interval Button
Press to change the ACC with Low Speed Follow following-interval.

 * Not available on all models


■ Gauge Content


You can see the current state of Adaptive Cruise Control (ACC) with Low Speed Follow, Lane Keeping Assist System (LKAS), and Traffic Jam Assist*.

Models with A-type meter

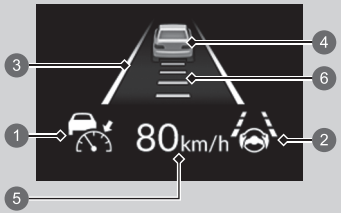

Models with B-type meter

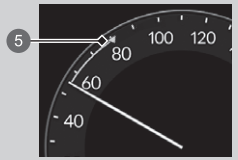

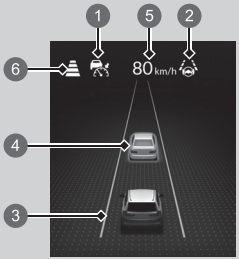

❶ Indicates that ACC with Low Speed Follow is ready to be activated.
- Green: The system is on.
- White: The system is standby.
- Amber: There is a problem with the system.

❷ Indicates that LKAS or Traffic Jam Assist* is ready to be activated.
- Green: The system is operating.
- White: The system is standby.
- Amber: There is a problem with the system.

❸ Indicates that LKAS or Traffic Jam Assist* is activated and whether or not traffic lane lines are detected.
- Green lines: The system is operating.
- White lines: Traffic lane lines are detected.
- Amber line: Lane departure is detected.

❹ Indicates whether or not a vehicle is detected ahead.

Models with B-type meter
- Control target vehicle: White and outlined in green
- Outside of control target vehicle: Grey

❺ Indicates that ACC with Low Speed Follow shows the set vehicle speed.

❻ Indicates that ACC with Low Speed Follow shows the set vehicle interval.

* Not available on all models

Gauge Content

Models with head-up display

You can have the head-up display show you the current state of each function.

Head-Up Display* P. 189

Collision Mitigation Braking System (CMBS)

The system can assist you when it determines there is a possibility of your vehicle colliding with a vehicle (including motorcycles) ahead from behind, an oncoming vehicle in front, a vehicle approaching from the side, a pedestrian, or someone riding a bicycle (moving bicycle).
The CMBS is designed to alert you when the potential for a collision is determined, as well as assist in reducing speed, avoiding collisions, and reducing collision severity.

Collision Mitigation Braking System (CMBS)

Important Safety Reminder
The CMBS is designed to reduce the severity of an unavoidable collision. It does not prevent collisions nor stop the vehicle automatically. It is still your responsibility to operate the brake pedal and steering wheel appropriately according to the driving conditions.


The CMBS may not activate or may not detect a vehicle in front of your vehicle under certain conditions:
➡ **CMBS Conditions and Limitations** P. 612

For directions on the proper handling of the radar sensor, refer to the following page.
➡ **Radar Sensor** P. 689

You can read about handling information for the camera equipped with this system.
➡ **Front Sensor Camera** P. 687

■ How the system works

When to use

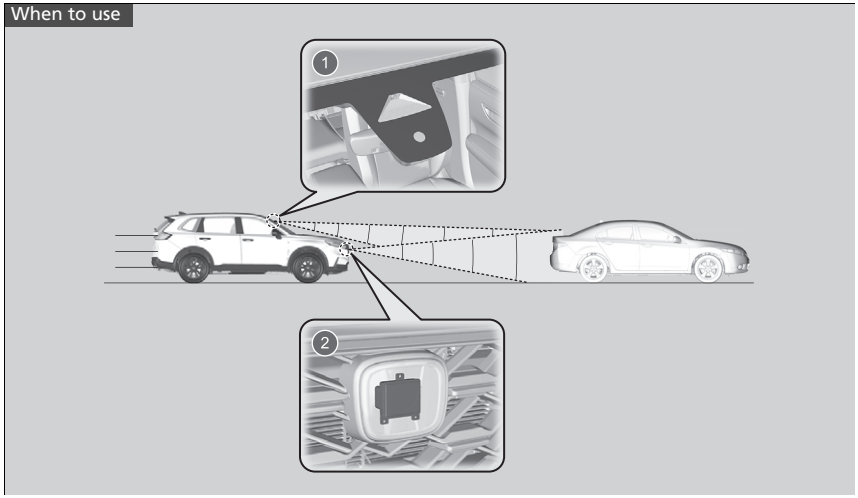

❶ A front sensor camera is located behind the rearview mirror.
❷ The radar sensor is behind the Honda emblem on the front grille.

The system starts monitoring the roadway ahead when your vehicle speed is about 5 km/h or above and will search for a vehicle (including motorcycles), pedestrian, or moving bicycle in front of you.

How the system works

The camera in the CMBS is also designed to detect pedestrians.
However, this pedestrian detection feature may not activate or may not detect a pedestrian in front of your vehicle under certain conditions.
Refer to the ones indicating the pedestrian detection limitations from the list.

➡ **CMBS Conditions and Limitations** P. 612

Continued

The CMBS activates when:


- The speed difference between your vehicle and a vehicle (including motorcycles), pedestrian, or moving bicycle detected in front of you becomes about 5 km/h and over with a chance of a collision.
- Your vehicle drives at about 30 km/h or less and there is a chance of in frontal collision with a detected oncoming vehicle (including motorcycles), pedestrian, or moving bicycle when you turn right*1/left*2 at an intersection.
- Your vehicle speed is about 100 km/h or less and the system determines there is a chance of a collision with:

- An oncoming or stationary vehicle (including motorcycles) detected in front of you.
- A pedestrian or moving bicycle detected in front of you.
- A vehicle approaching from the side in front of you.

The CMBS will be cancelled when your vehicle stops or the system determines there no longer is the potential for a collision.
The CMBS may also be cancelled when a driver operates the steering wheel and the brake or accelerator pedal to avoid a collision.

*1: Right-hand Drive Type
*2: Left-hand Drive Type

■ When the system activates

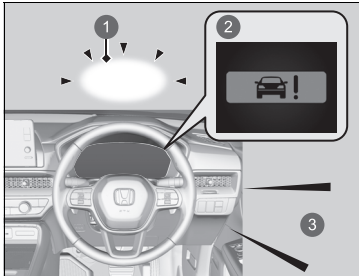

The system provides visual and audible alerts of a possible collision, and stops if the collision is avoided.

▶ Take appropriate action to prevent a collision (apply the brakes, change lanes, etc.)

❶ Head-up Warning Lights*
❷ Visual Alerts
❸ Audible Alert

You can change the distance (**Long**[*1]/**Far**[*2], **Normal** or **Short**[*1]/**Near**[*2]) between vehicles at which the system's earliest collision alert will come on.

Customized Features P. 366, 465

When in **Long**[*1]/**Far**[*2], visual and audible alerts come on at a longer distance from a vehicle ahead than in **Normal** setting, and in **Short**[*1]/**Near**[*2], at a shorter distance than in **Normal**.

*1: Philippine models
*2: Except Philippine models


* Not available on all models

Continued

When the system activates

Models with head-up display




The head-up warning uses a lens located at the front end of the dashboard.
Do not cover the lens or spill any liquid on it.

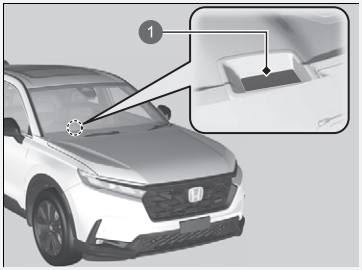

❶ Lens

■ Collision Alert Stages

The system has three alert stages for a possible collision. However, depending on circumstances, the CMBS may not go through all of the stages before initiating the last stage.

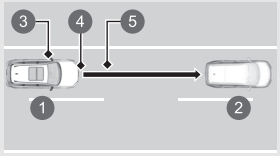Distance between vehicles		CMBS		
		The sensors detect a vehicle	Audible & Visual WARNINGS	Braking
Stage one		There is a risk of a collision with the vehicle ahead of you.	The visual alert flashes. If the distance between your vehicle and the vehicle in front of you continues to decrease, the audible alert sounds in addition to the visual alert flashing. ▶ The collision warning distance can be changed. ➡ **Customized Features** P. 366, 465	—
Stage two		The risk of a collision has increased, time to respond is reduced.	Visual and audible alerts.	Lightly applied
Stage three		The CMBS determines that a collision is unavoidable.		Forcefully applied

❶ Your Vehicle
❷ Vehicle Ahead
❸ **Long**[*1]/**Far**[*2]
❹ **Normal**
❺ **Short**[*1]/**Near**[*2]

*1: Philippine models
*2: Except Philippine models

CMBS On and Off

You can turn the system on and off using the driver information interface.

Switching the Display P. 169
Safety Support P. 184

The CMBS is turned on every time you turn the power system on, even if you turned it off the last time you drove the vehicle.

Collision Mitigation Braking System (CMBS)

You cannot turn the CMBS off while driving.

The CMBS may automatically shut off, and the safety support indicator (amber) and Collision Mitigation Braking System (CMBS) indicator (amber) will come and stay on under certain conditions:

CMBS Conditions and Limitations P. 612

When the CMBS is activated, it will continue to operate even if the accelerator pedal is partially depressed. However, it will be cancelled if the accelerator pedal is fully depressed.

Have your vehicle checked by a dealer if you find any unusual behaviour of the system (e.g., the warning message appears too frequently).

The Vehicle Stability Assist (VSA) system, brake system (Amber), Adaptive Cruise Control (ACC) with Low Speed Follow, low tyre pressure/TPMS*, low tyre pressure/deflation warning system*, Collision Mitigation Braking System (CMBS), Road Departure Mitigation, and safety support indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the 12-volt battery.
Drive a short distance at more than 20 km/h.
Each indicator should go off. If any do not, have your vehicle checked by a dealer.

* Not available on all models

Continued

■ CMBS Conditions and Limitations

In the following situations, the radar sensor or camera may be unable to correctly detect vehicles, pedestrians, moving bicycles, or road conditions, potentially causing the CMBS to operate improperly.

Front Sensor Camera P. 687
Radar Sensor P. 689

■ Environmental conditions

- Driving in bad weather (rain, fog, snow, etc.).
- Sudden changes between light and dark, such as an entrance or exit of a tunnel.
- There is little contrast between objects and the background.
- Driving into low sunlight (e.g., at dawn or dusk).
- Strong light is reflected onto the vehicles (including motorcycles), pedestrians, moving bicycles or roadway.
- Driving in the shadows of trees, buildings, etc.
- Roadway objects or structures are misinterpreted as vehicles and pedestrians.
- Reflections on the interior of the windscreen.
- Driving at night or in a dark place such as a tunnel (due to low-light conditions, pedestrians, moving bicycles or other vehicles [including motorcycles], may not be detected).
- When nearby radio wave emitting devices such as other automotive radar sensors.

■ **Roadway conditions**
- Driving on a snowy or wet roadway (obscured lane marking, vehicle tracks, reflected lights, road spray, high contrast).
- Driving on curvy, winding, or undulating roads.
- The road is hilly or the vehicle is approaching the crest of a hill.
- Driving through an area where there are objects that strongly reflect radio waves onto a vehicle (including motorcycles), pedestrians, or moving bicycles.
- Your vehicle is strongly shaken on uneven road surfaces.

■ **Vehicle conditions**
- Headlight lenses are dirty or the headlights are not properly adjusted.
- The front of the camera is obstructed by dirt, fog, rain, mud, wet snow, accessories, decals, stickers, film, etc.
- The inside of the windscreen is fogged.
- An abnormal tyre or wheel condition (incorrect sizes, varied sizes or construction, improperly inflated, etc.).
- When tyre chains* are installed.
- The vehicle is tilted due to a heavy luggage or suspension modifications.
- Driving with the parking brake applied.
- When the radar sensor behind the Honda emblem on the front grille gets dirty.
- Driving at night or in a dark place (e.g., a tunnel) with the headlights off.
- There is residue on the windscreen from the windscreen wipers.
- Camera vision is blocked by drops of water from the window washer, or by the wiper blades.
- Operation of the vehicle is unstable due to a slippery road, etc.
- The vehicle is towing a trailer*.

* Not available on all models

Continued

■ **Examples of limitations on the correct detection of the radar sensor or camera due to the condition of the vehicle ahead of you, oncoming vehicles, vehicle approaching from the side, pedestrians, or moving bicycles**

- The distance between your vehicle and the vehicle (including motorcycles) ahead of you, oncoming vehicle, vehicle approaching from the side, pedestrian, or moving bicycle ahead of you is too short.
- The vehicle (including motorcycles) ahead of you, oncoming vehicle, vehicle approaching from the side, pedestrian, or moving bicycle suddenly cuts in front of or jumps out in front of you.
- The bicycle is stopped.
- The oncoming vehicle (including motorcycles) or vehicle ahead of you is sideways or facing diagonally.
- When the vehicle (including motorcycles) ahead of you, oncoming vehicle, vehicle approaching from the side, pedestrian, or moving bicycle blends in with the background, preventing the system from recognising them.
- When several pedestrians are moving ahead of you in a group.
- When several bicycles are moving ahead of you in a group.
- When a pedestrian or moving bicycle crosses the road too quickly.
- A pedestrian or moving bicycle approaches from the opposite direction.
- The headlights of the vehicle ahead of you or oncoming vehicle are lit on one side or not lit on either side in a dark place.
- When part of a pedestrian (heads, limbs, etc.) is hidden by a carried object.
- When a pedestrian is bent over or squatting, when their hands are raised, or they are running.
- When the pedestrian is shorter than about 1 metre or taller than about 2 metres in height.
- When the pedestrian is pushing a stroller or bicycle.
- A vehicle is approaching diagonally from the side.
- A specially-shaped vehicle (such as a tank lorry or a lorry without a luggage) is approaching from the side.
- A vehicle approaching from the side is driving on a curve or hill.

Collision Mitigation Braking System (CMBS)

Make sure that all the tyres are of the same specified size, type and brand, and that they are evenly worn. If you use tyres of different sizes, types, brands, or degree of wear, the system may not work properly.

Do not modify the suspension. Altering the height of the vehicle may prevent the system from working properly.

■ Examples of other limitations on detection or system operation

- When the vehicle (including motorcycles) ahead of you is a small motorcycle, motorcycle with a sidecar, wheelchair, three-wheeled vehicle, or other specially shaped vehicle.
- When a vehicle is lower in the rear than the front such as lorries that are not carrying a luggage, or a narrow vehicle.
- When the vehicle (including motorcycles) ahead of you, oncoming vehicle, pedestrian or moving bicycle is not in front of the vehicle.
- The speed difference between your vehicle and the vehicle (including motorcycles) ahead of you, oncoming vehicle, pedestrian or moving bicycle is significantly large.
- The speed difference between your vehicle and a vehicle (including motorcycles), pedestrian, or moving bicycle approaching from the side is significantly large.
- When the vehicle (including motorcycles) or moving bicycle in front of you slows suddenly.
- When the driver operates the brake pedal and steering wheel to avoid a collision.
- When you approach the vehicle (including motorcycles) ahead of you, oncoming vehicle, vehicle approaching from the side, pedestrians, or moving bicycles while accelerating rapidly or operating the steering wheel (except when turning right*1/left*2 at an intersection etc.)*3.
- When the moving bicycle is a child-sized bicycle, folding bicycle, three-wheeler or other bicycle with small tyres, or a long bicycle like a tandem bicycle.
- When the radar and camera cannot correctly identify the shape of the vehicle (including motorcycles) ahead of you, oncoming vehicle, vehicle approaching from the side, pedestrian, or moving bicycle.
- When a vehicle (including motorcycles) that has an extremely high minimum ground clearance is ahead of you or approaching from the side.
- When turning left or right and your turn signal is not activated in the same direction you are turning.

*1: Right-hand Drive Type

*2: Left-hand Drive Type

*3: When there is a possibility of a frontal collision with the oncoming vehicle while turning right*1/left*2, the CMBS is activated. However, it may not be activated if you suddenly turn the steering wheel.

Continued

■ Automatic shutoff

The CMBS may automatically shut itself off and the safety support indicator (amber) and Collision Mitigation Braking System (CMBS) indicator (amber) come and stay on when:


- You drive off-road or on a mountain road, or curved and winding road for an extended period.
- Driving in bad weather (rain, fog, snow, etc.).
- Driving with the parking brake applied.
- The camera temperature gets too high.
- The front of the camera or radar sensor behind the Honda emblem is obstructed by dirt, fog, rain, mud, wet snow, accessories, stickers, film, etc.
- An abnormal tyre condition is detected (incorrect tyre size, flat tyre, etc.).

Once the conditions that caused the CMBS to shut off improve or are addressed (e.g., cleaning), the system comes back on.

■ With Little Chance of a Collision


Even if there is little chance of a collision, the CMBS may activate under the following conditions.
Also, the system may activate if it detects a possibility of collision with pedestrians, moving bicycles, or vehicles.

- Your vehicle approaches or passes another vehicle that is making a left or right turn.
- Your vehicle approaches another vehicle ahead of you and you change lanes to pass.

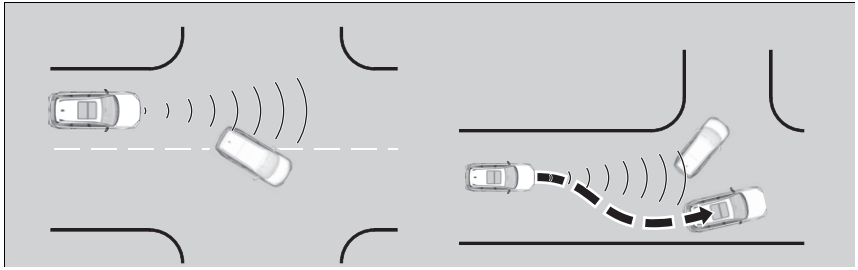


Continued

- When your vehicle approaches vehicles, pedestrians, or moving bicycles.
- When vehicles, pedestrians, or moving bicycles are passing in front of you.
- When you drive under a low structure or through a narrow gate at high speed.
- When you drive over roads with bumps, train tracks, or construction steel plates.
- When there are traffic signs or structures such as guard rails beside the road along a curve.

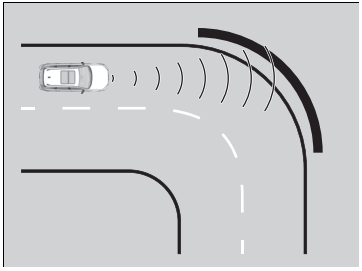

- When driving through curves, your vehicle comes to a point where the oncoming vehicle is right in front of you.

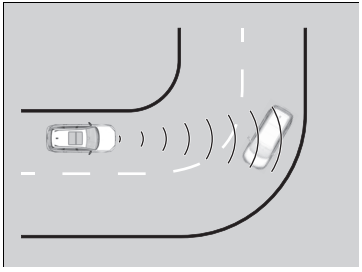

- When approaching stationary vehicles or walls, such as when parking.

- A vehicle approaches from the side as it is driving through a curve.
- You pass by a vehicle (including motorcycles), pedestrian, or bicycle that is turning left or right.
- You pass in front of a vehicle (including motorcycles), pedestrian, or bicycle that is approaching from the side.
- A vehicle (including motorcycles), pedestrian, or bicycle turns left or right while approaching your vehicle from the side.
- You attempt to pass in front of a vehicle (including motorcycles) or bicycle while you are turning left or right.
- A vehicle (including motorcycles) or bicycle is attempting to pass in front of your vehicle while you are turning left or right.
- A vehicle (including motorcycles), pedestrian, or bicycle enters the path of your vehicle and stops in front of you.
- When you are turning left or right, a crossing pedestrian enters the path of your vehicle and stops in front of you.
- You pass close by the side of a vehicle parked on the street.

Low Speed Braking Control*

The Low Speed Braking Control system has three functions: Low Speed Brake, Collision Mitigation Throttle Control, and Rear Collision Mitigation Throttle Control. Using sonar sensors located on the front and rear bumpers, the vehicle detects if there danger of collision with a wall or other obstacle when the accelerator is depressed with too much force, and the system assists in avoiding collisions and reducing damage from impact by limiting power system output.

Low Speed Braking Control*

⚠WARNING

The Low Speed Braking Control System cannot avoid all collisions and may not reduce damage in each situation where the accelerator is mistakenly or aggressively pressed. Overreliance on the system may result in a collision with serious injury or death. Always check your surroundings, your shift position, and your pedal use. Driver remains responsible for safely operating the vehicle.

If the Low Speed Braking Control activates in a situation where you do not want automatic brake application (such as when the vehicle is between two railroad crossing gates), simply press the brake pedal to deactivate the system and then continue to drive as intended.


If the system is activated by curbs/parking curbs or level differences on the road and you are unable to park or clear them, turn the system off.

 * Not available on all models

How the System Works

Low Speed Brake function

The Low Speed Brake function provides a visual and audible alert when the vehicle is moving between approximately 2 and 10 km/h and there is the possibility of a collision with a detected wall or other obstacles, as well as providing assistance with braking.

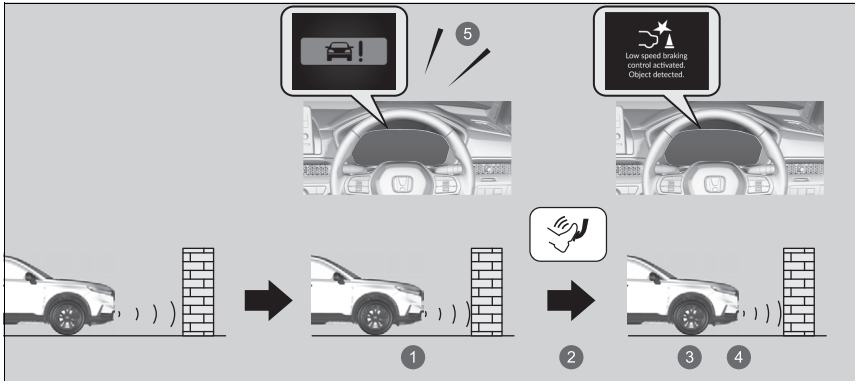

1. The vehicle applies brake
2. Driver depresses brake pedal
3. Stop
4. Remove brake after maintaining stationary position
5. Audible Alert

If only the rear parking sensors are turned off, the Low Speed Brake function will not work when reversing.

Customized Features P. 366, 465

Low Speed Braking Control*

For directions on the proper handling of the sonar sensors, please refer to the following page.

Sonar Sensors* P. 690

The vehicle will release the brake and start moving a few seconds after the system is activated. To keep the vehicle stopped, keep the brake pedal depressed or put the transmission into P.

In order to prevent the system from activating when not needed, always turn it off during vehicle maintenance, when loading on ships, trucks, and so on, or when using a chassis dynamometer or free rollers for inspection.

If you put any accessories (such as a towing hitch or bicycle rack) on or around the rear sensors, the Low Speed Braking Control System may activate if it detects these accessories as an obstacle. In this case, turn off the rear sensor.


Customized Features P. 366, 465

* Not available on all models

Continued

■ Collision Mitigation Throttle Control and Rear Collision Mitigation Throttle Control

When the vehicle is stopped or moving at less than 10 km/h and there is an obstacle such as a wall detected near the front or back of the vehicle, if the accelerator pedal is depressed more than necessary, the system will inform you with a visual and audible alert. At the same time, the system will prevent sudden forward or backwards movement by limiting the output of the power system, then Low Speed Brake function will activate when you get closer to the obstacle.

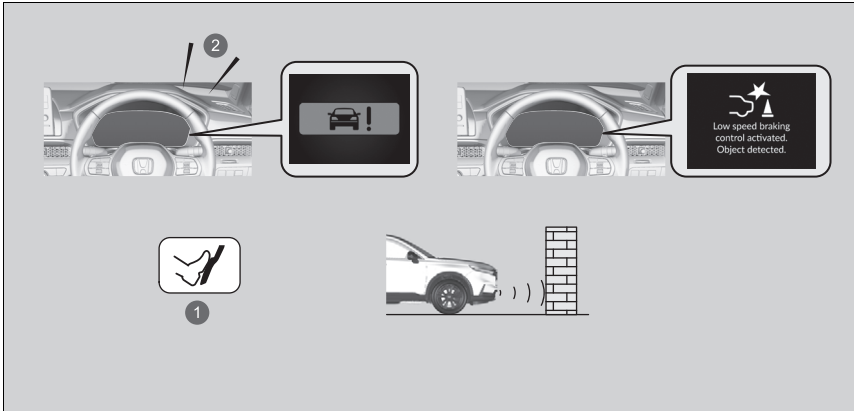

❶ Accidental depression of the accelerator/Limiting the output of the power system
❷ Audible Alert

Collision Mitigation Throttle Control and Rear Collision Mitigation Throttle Control will not activate in the following situations.
When moving forward:
- When on a steep slope or the shift position is in P, R, or N.

When reversing:
- When on a steep slope or the shift position is in a position other than R.

If only the rear parking sensors are turned off, the Collision Mitigation Throttle Control and Rear Collision Mitigation Throttle Control will not work when reversing.

➔ **Customized Features** P. 366, 465

■ System On and Off

You can turn the system on and off using the driver information interface.

➔ **Switching the Display** P. 169
➔ **Safety Support** P. 184

The system is turned on every time you turn the power system on, even if you turned it off the last time you drove the vehicle.

System On and Off

The Low Speed Braking Control system may temporarily turn off after reconnecting the 12-volt battery.
The system will automatically turn ON after the vehicle has been moving at over 20 km/h for some time.
If the system does not turn on, have your vehicle checked by a dealer.

Continued

■ Conditions for Cancellation

Conditions for Collision Mitigation Throttle Control, and Rear Collision Mitigation Throttle Control:

- When the accelerator is no longer depressed.
- When the accelerator is depressed for approximately four seconds.
- When the brake pedal is depressed.

Conditions for Low Speed Brake function cancellation:

- A certain amount of time has passed since activation.

■ Low Speed Braking Control System Conditions and Limitations

The system may not operate correctly under the following conditions:

■ Examples of obstacles the sonar sensors cannot detect

- Obstacles that do not reflect sound waves well, such as people, snow, cloth, sponges, etc.
- Thin obstacles such as fences, bicycles, sign posts, etc.
- Short or small obstacles.
- Obstacles immediately in front of the bumper.
- Obstacles that are not perpendicular to the ground.
- Moving objects or obstacles that suddenly enter the road.

Conditions for Cancellation

After Low Speed Brake and Collision Mitigation Throttle Control have activated once, they will not activate again for the same obstacle.
They can be activated again after driving for some time after the last activation.

Low Speed Braking Control activates separately when moving forward and reversing. (For example, if it activates when moving forward, it can be activated again immediately if reversing.)
However, if Low Speed Brake function has been activated, in order to activate Collision Mitigation Throttle Control and Rear Collision Mitigation Throttle Control again, it is necessary to drive for a certain distance to reset the system.

■ **Examples of situations where the sonar sensors cannot detect obstacles**
- The sonar sensors are dirty (covered by snow, water, mud, etc.).
- The vehicle is too hot or cold.
- The steering wheel is turned sharply when approaching the obstacle at an angle.

■ **Examples of other cases where the system may not work correctly**
- The vehicle is tilted due to heavy luggage or suspension modifications.
- Bad weather conditions such as heavy rain, fog, snow, sandstorms, etc.
- The ambient temperature/humidity is too high or low.
- When going down a very steep slope.
- When driving off-road such as on dirt, grass or rocks.
- When close to other vehicles with sonar sensors or other objects that emit ultrasonic waves.
- An abnormal tyre or wheel condition (incorrect sizes, varied sizes or construction, improperly inflated, etc.).

■ **Situations where the system may activate even without risk of a collision**
- When passing through short or narrow gates.
- When driving on uneven surfaces, grassy areas, or places with steps.
- When a sloped pillar or wall is protruding from a high position.
- When there are obstacles next to the road.
- When driving toward flags, curtains, tree branches, railroad crossing bars, etc.
- When driving on flooded roads.

Road Departure Mitigation System

Australian, Bangladeshi, Bhutanese, and New Zealand models

Alerts and helps to assist you when the system detects a possibility of your vehicle crossing over detected lane markings, or approaching the outer edge of the pavement (into grass or gravel road shoulder) or a detected oncoming vehicle.

Except Australian, Bangladeshi, Bhutanese, and New Zealand models

Alerts and helps to assist you when the system detects a possibility of your vehicle unintentionally crossing over detected lane markings and/or leaving the roadway altogether.

Road Departure Mitigation System

Important Safety Reminder

Like all assistance systems, the Road Departure Mitigation system has limitations.
Overreliance on the Road Departure Mitigation system may result in a collision. It is always your responsibility to keep the vehicle within your driving lane.

Australian, Bangladeshi, Bhutanese, and New Zealand models


The Road Departure Mitigation system alerts you when the system detects that you are approaching the outer edge of the pavement (into grass or gravel road shoulder), an oncoming vehicle, or drifting into another lane without using a turn signal.
The Road Departure Mitigation system may not detect all lane markings or every instance of lane drift.
The Road Departure Mitigation system may not detect that you are approaching the outer edge of the pavement (bordered by grass or gravel road shoulder) or an oncoming vehicle.
The Road Departure Mitigation system may not be able to assist you depending on weather, speed or road conditions.

Except Australian, Bangladeshi, Bhutanese, and New Zealand models

The Road Departure Mitigation system only alerts you when lane drift is detected without a turn signal in use. The Road Departure Mitigation system may not detect all lane markings or lane or roadway departures; accuracy will vary based on weather, speed and lane marker condition. It is always your responsibility to safely operate the vehicle and avoid collisions.

How the System Works

Australian, Bangladeshi, Bhutanese, and New Zealand models

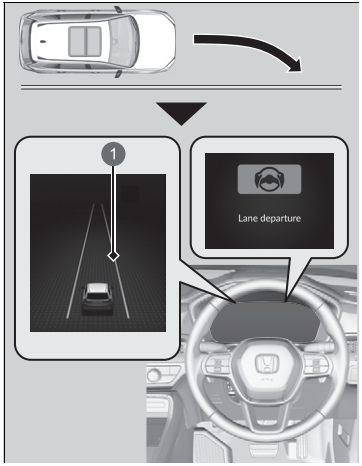

❶ Amber line

The front camera behind the rearview mirror monitors left and right lane markings in white or yellow, the outer edge of the pavement (bordered by grass or gravel road shoulder) or a detected oncoming vehicle.

If your vehicle approaches any detected lane markings, the outer edge of the pavement (bordered by grass or gravel road shoulder) or a detected oncoming vehicle when the turn signals have not been engaged, the system activates.

▶ If the system cannot detect lane markings (in white or yellow), no assistance will be provided to avoid approaching oncoming vehicles. In addition to a visual alert, the system assists with steering and alerts you with rapid steering wheel vibrations to help you remain within the detected lane.
Customized Features P. 366, 465

As a visual alert, the **Lane departure** message appears on the driver information interface.

The system cancels assisting operations when you turn the steering wheel to avoid crossing over detected lane markings or approaching the outer edge of the pavement (into grass or gravel road shoulder) or an oncoming vehicle.

Road Departure Mitigation System


You can read about handling information for the camera equipped with this system.
Front Sensor Camera P. 687

The Road Departure Mitigation system may not work properly or may work improperly under the certain conditions:
Road Departure Mitigation system Conditions and Limitations P. 632

There are times when you may not notice the Road Departure Mitigation system functions due to your operation of the vehicle, or road surface conditions.

Continued

Except Australian, Bangladeshi, Bhutanese, and New Zealand models

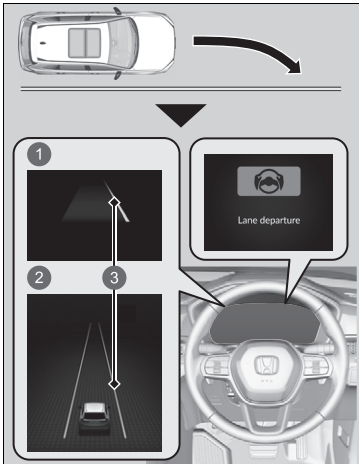

The front camera located behind the rearview mirror monitors left and right lane markings (in white or yellow). If your vehicle is getting too close to detected lane markings without a turn signal activated, the system, in addition to a visual alert, applies steering torque and alerts you with rapid vibrations on the steering wheel, to help you remain within the detected lane.

Customized Features P. 366, 465

As a visual alert, the **Lane departure** message appears on the driver information interface.

❶ Models with A-type meter
❷ Models with B-type meter
❸ Amber line

The system cancels assisting operations when you turn the steering wheel to avoid crossing over detected lane markings.

Road Departure Mitigation System

Australian, Bangladeshi, Bhutanese, and New Zealand models

You can change the settings for the Road Departure Mitigation system.
If LKAS or Traffic Jam Assist is off, the message below may appear if the system has determined that there is a possibility of your vehicle crossing over detected lane markings, the outer edge of the pavement (into grass or gravel road shoulder) or oncoming vehicle.

Customized Features P. 366, 465


Except Australian, Bangladeshi, Bhutanese, and New Zealand models

You can change the settings for the Road Departure Mitigation system.
If LKAS is off, the message below may appear if the system has determined that there is a possibility of your vehicle crossing over detected lane markings.

Customized Features P. 366, 465



All models

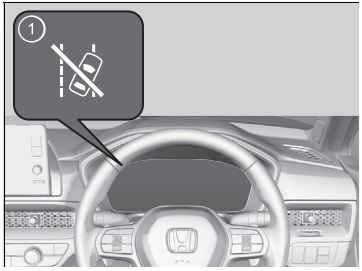

❶ Road Departure Mitigation System Steering Assist Auto OFF indicator

If the system operates several times without detecting driver response, the system beeps to alert you. After that, the Road Departure Mitigation System Steering Assist Auto OFF indicator comes on, the Road Departure Mitigation steering assist is temporarily stopped, and the system will only alert you with the warning sound.

After a few minutes, the Road Departure Mitigation System Steering Assist Auto OFF indicator goes off and the Road Departure Mitigation system is fully restored.

Continued

■ How the System Activates

The system activates when all of the following conditions are met:

- The lane markings are white (yellow).
  The vehicle is travelling between about 72 and 180 km/h.

Australian, Bangladeshi, Bhutanese, and New Zealand models

▶ When oncoming vehicles are running
  The vehicle is travelling between about 30 and 180 km/h.

Australian, Bangladeshi, Bhutanese, and New Zealand models

- The outer edge of the pavement is grass or gravel road shoulder.
  The vehicle is travelling between about 30 and 180 km/h.

All models

- The vehicle is on a straight or slightly curved road.
- The turn signals are off.
- The system makes a determination that the driver is not actively accelerating, braking, or steering.

How the System Activates

The Road Departure Mitigation system may automatically shut off and the safety support indicator (amber) and Road Departure Mitigation indicator (amber) come and stay on.

Indicators P. 122

The Road Departure Mitigation system function can be impacted when the vehicle is:

- Driven on the inside edge of a curve, or outside of a lane.
- Driven in a narrow lane.

■ Road Departure Mitigation system On and Off

You can turn the system on and off using the driver information interface.

➔ **Switching the Display** P. 169
➔ **Safety Support** P. 184

Australian, Bangladeshi, Bhutanese, and New Zealand models

The Road Departure Mitigation system is turned on every time you turn the power system on, even if you turned it off the last time you drove the vehicle.

Except Australian, Bangladeshi, Bhutanese, and New Zealand models

The Road Departure Mitigation system is in the previously selected on or off setting each time you turn the power system on.

*1: Philippine models
*2: Except Philippine models

* Not available on all models

Continued

Road Departure Mitigation system On and Off

Except Australian, Bangladeshi, Bhutanese, and New Zealand models

When you have selected **Warning Only**[*1]/**Warning only**[*2], the system does not operate the steering wheel.

➔ **Customized Features** P. 366, 465

The Vehicle Stability Assist (VSA) system, brake system (Amber), Adaptive Cruise Control (ACC) with Low Speed Follow, low tyre pressure/TPMS*, low tyre pressure/deflation warning system*, Collision Mitigation Braking System (CMBS), Road Departure Mitigation and safety support indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the 12-volt battery.
Drive a short distance at more than 20 km/h.
Each indicator should go off. If any do not, have your vehicle checked by a dealer.

■ Road Departure Mitigation system Conditions and Limitations

Australian, Bangladeshi, Bhutanese, and New Zealand models

The system may not properly detect lane markings (in white or yellow), the outer edge of the pavement (into grass or gravel road shoulder) or an oncoming vehicle under certain conditions. Some examples of these conditions are listed below.

Except Australian, Bangladeshi, Bhutanese, and New Zealand models

The system may not properly detect lane markings and the position of your vehicle under certain conditions. Some examples of these conditions are listed below.

■ Environmental conditions

- There is little contrast between lane lines and the roadway surface.
- Driving in bad weather (rain, fog, snow, etc.).
- Driving on a snowy or wet roadway.
- Driving into low sunlight (e.g., at dawn or dusk).
- Shadows of adjacent objects (trees, buildings, guard rails, vehicles, etc.) are parallel to white (or yellow) lines.
- Sudden changes between light and dark, such as the entrance or exit of a tunnel or the shadows of trees, buildings, etc.
- Strong light is reflected onto the roadway.
- Driving at night or in a dark place such as a tunnel (due to low-light conditions, lane lines, the road surface, or oncoming vehicles may not be illuminated).
- The distance between your vehicle and the vehicle ahead of you is too short, and lane lines and the road surface are not visible.

Australian, Bangladeshi, Bhutanese, and New Zealand models

- The outer edge of the road is bordered by objects, materials, etc. other than grass or gravel.

■ **Roadway conditions**

- Driving on a road with temporary lane markings.
- Faint, multiple, or varied lane markings are visible on the roadway due to road repairs or deteriorated lane markings.
- The roadway has merging, split, or crossing lines, such as at an intersection or crosswalk.
- The lane markings are extremely narrow, wide, or changing.
- Part of the lane markings are hidden by an object, such as a vehicle.
- The road is hilly or the vehicle is approaching the crest of a hill.
- Your vehicle is strongly shaken on uneven road surfaces.
- When objects on the road (curb, guard rail, pylons, etc.) are recognised as white (or yellow) lines.
- Driving on rough or unpaved roads, or over bumpy surfaces.
- Driving on roads with double lane lines.
- Driving on snowy or slippery roads.
- Passing through a junction.
- The pavement is only partially visible due to snow or puddles on the road.
- Driving on unpaved or rutted roads.
- White (or yellow) lines are not recognised correctly due to road conditions such as curves, twists, or hills.

Continued

■ **Vehicle conditions**

- When lighting is weak due to dirt covering the headlight lenses, or there is poor visibility in a dark place due to the headlights being improperly adjusted.
- The front of the camera is obstructed by dirt, fog, rain, mud, wet snow, accessories, decals, stickers, film, etc.
- Driving at night or in a dark place (e.g., a tunnel) with the headlights off.
- When the driver operates the brake pedal and steering wheel.
- There is residue on the windscreen from the windscreen wipers.
- An abnormal tyre or wheel condition (incorrect sizes, varied sizes or construction, improperly inflated, etc.).
- The vehicle is tilted due to heavy luggage in the luggage area or rear seats.
- Tyre chains* are installed.
- The suspension has been modified.
- The vehicle is towing a trailer*.

Australian, Bangladeshi, Bhutanese, and New Zealand models

■ **Examples of limitations on detection due to the condition of oncoming vehicles**

- The oncoming vehicle or vehicle ahead of you is sideways.
- The oncoming vehicle jumps out in front of you.
- When the oncoming vehicle blends in with the background, preventing the system from recognising it.
- The headlights of an oncoming vehicle are lit on one side or not lit on either side in a dark place.
- The distance between your vehicle and the oncoming vehicle is too short.
- Part of the oncoming vehicle is not visible due to the vehicle ahead of you.
- There are multiple oncoming lanes or turning lanes.
- The vehicle in the adjacent lane is parked or moving at an extremely slow speed.

* Not available on all models

Australian, Bangladeshi, Bhutanese, and New Zealand models

■ **Examples of other limitations on detection or system operation**

- When the oncoming vehicle is specially-shaped.
- When the camera cannot correctly identify the shape of the oncoming vehicle.

Australian, Bangladeshi, Bhutanese, and New Zealand models

■ **With Little Chance of a Collision**


The Road Departure Mitigation system may activate in the below conditions.

- When driving through curves, your vehicle comes to a point where an oncoming vehicle is right in front of you.

Adaptive Cruise Control (ACC) with Low Speed Follow

Helps to maintain a constant vehicle speed and a set following-interval behind a vehicle detected ahead of yours and, if the detected vehicle comes to a stop, can decelerate and stop your vehicle, without you having to keep your foot on the brake or the accelerator.

When ACC with Low Speed Follow slows your vehicle by applying the brakes, your vehicle's brake lights will illuminate.

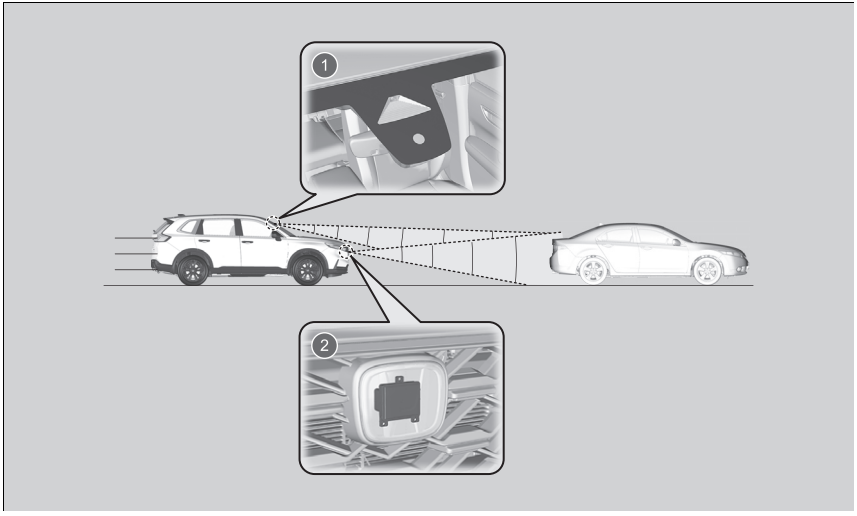

❶ A front sensor camera is located behind the rearview mirror.
❷ The radar sensor is behind the Honda emblem on the front grille.

Adaptive Cruise Control (ACC) with Low Speed Follow

⚠WARNING

Improper use of ACC with Low Speed Follow can lead to a crash.

Use ACC with Low Speed Follow only when driving on motorways and in good road and weather conditions.

⚠WARNING

ACC with Low Speed Follow has limited braking capability and may not stop your vehicle in time to avoid a collision with a vehicle that quickly stops in front of you.

Always be prepared to apply the brake pedal if the conditions require.

⚠WARNING


Exiting a vehicle that has been stopped while the ACC with Low Speed Follow system is operating can result in the vehicle moving without operator control.

A vehicle that moves without operator control can cause a crash, resulting in serious injury or death.

Never exit a vehicle when the vehicle is stopped by ACC with Low Speed Follow.

- Vehicle speed for ACC with Low Speed Follow: **A vehicle is detected ahead within ACC with Low Speed Follow range** – ACC with Low Speed Follow operates at speeds up to 180 km/h.
  No vehicle is detected within ACC with Low Speed Follow range – ACC with Low Speed Follow operates at the speed of 30 km/h or above.
- Shift position for ACC with Low Speed Follow: In D.

■ How to activate the system

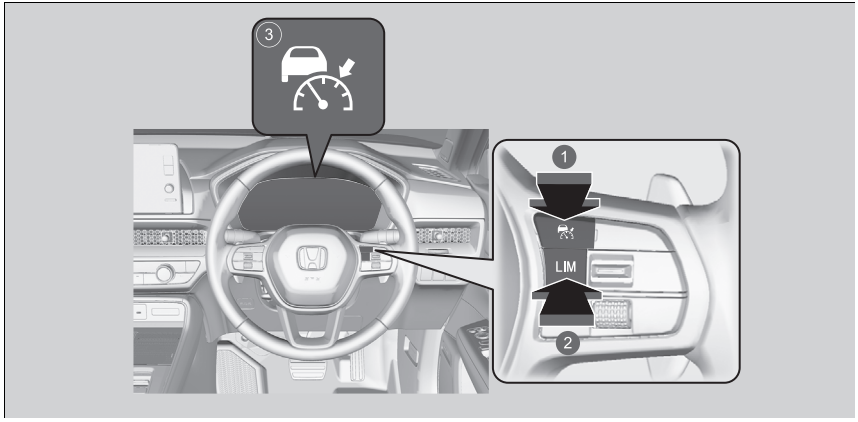

❶ Button
Press the button on the steering wheel.

❷ **LIM** Button*
If a different indicator is displayed, press the **LIM** button to change it to ACC with Low Speed Follow.

❸ (white) is on in the gauge. ACC with Low Speed Follow is ready to use.

* Not available on all models

Continued

Adaptive Cruise Control (ACC) with Low Speed Follow

Important Reminder
As with any system, there are limits to ACC with Low Speed Follow. Use the brake pedal whenever necessary, and always keep a safe interval between your vehicle and other vehicles.

For directions on the proper handling of the radar sensor, refer to the following page.
➡ **Radar Sensor** P. 689


You can read about handling information for the camera equipped with this system.
➡ **Front Sensor Camera** P. 687

The radar sensor for ACC with Low Speed Follow is shared with the Collision Mitigation Braking System (CMBS).
➡ **Collision Mitigation Braking System (CMBS)** P. 606

ACC with Low Speed Follow may not work properly under certain conditions.
➡ **ACC with Low Speed Follow Conditions and Limitations** P. 645

When not using ACC with Low Speed Follow: Turn off adaptive cruise by pressing the button.

■ To Set the Vehicle Speed

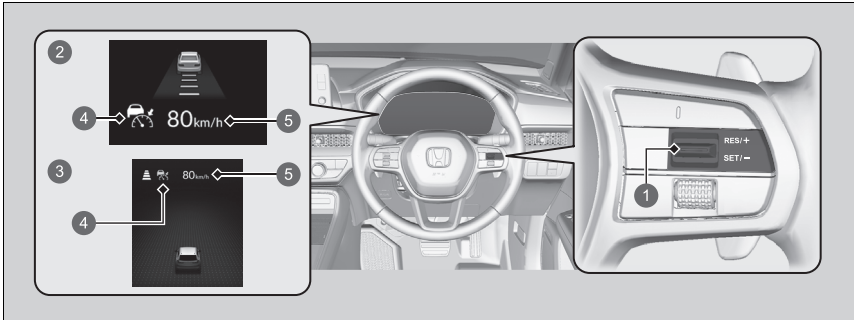

❶ **RES/+/SET/–** Switch
Up or down
❷ On when ACC with Low Speed Follow begins for models with A-type meter
❸ On when ACC with Low Speed Follow begins for models with B-type meter
❹ (green)
❺ Set Vehicle Speed

When driving at about 30 km/h or above: Take your foot off the pedal and press the **RES/+/SET/–** switch up or down when you reach the desired speed. The moment you release the switch, the set speed is fixed, and ACC with Low Speed Follow begins.

Adaptive Cruise Control (ACC) with Low Speed Follow

Do not use ACC with Low Speed Follow under the following conditions:

- On roads with frequent lane-change or continuous stop and go traffic, ACC with Low Speed Follow cannot keep an appropriate distance between your vehicle and the vehicle ahead of you.
- On roads with sharp turns.
- On roads with toll collection facilities or other objects between lanes of traffic, or in parking areas, or facilities with drive through access.
- On roads with bad weather (rain, fog, snow, etc.), ACC with Low Speed Follow may not detect the distance between your vehicle and the vehicle ahead of you properly.
- On roads with slippery or icy surfaces. The wheels may spin out and your vehicle may lose the control on the condition.
- On roads with steep uphill or steep downhill slopes.
- On roads with undulating slopes.

To Set the Vehicle Speed


The Vehicle Stability Assist (VSA) system, brake system (Amber), Adaptive Cruise Control (ACC) with Low Speed Follow, low tyre pressure/TPMS*, low tyre pressure/deflation warning system*, Collision Mitigation Braking System (CMBS), Road Departure Mitigation and safety support indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the 12-volt battery.
Drive a short distance at more than 20 km/h.
Each indicator should go off. If any do not, have your vehicle checked by a dealer.

* Not available on all models


When you use ACC with Low Speed Follow, Straight Driving Assist (a feature of the Electric Power Steering system) is activated.
By enabling the steering system to automatically compensate for natural steering pull, Straight Driving Assist makes it easier for you to keep your vehicle in a straight line.

When driving slower than about 30 km/h: If the vehicle is moving and the brake pedal is not depressed, pressing the switch fixes the set speed to about 30 km/h regardless of current vehicle speed. If your vehicle is stationary, you can set the vehicle speed even with the brake pedal depressed.

Models with A-type meter

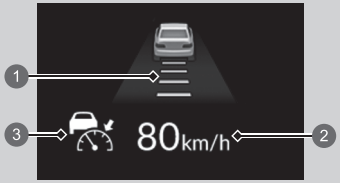

Models with B-type meter

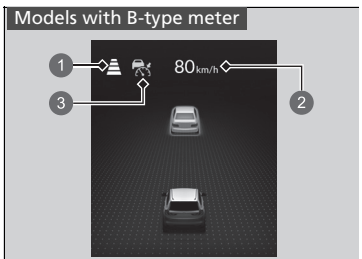

When ACC with Low Speed Follow starts operating, the vehicle icon, interval bars and set speed appear on the gauge.

❶ Set Vehicle Interval
❷ Set Vehicle Speed
❸ (green)


Continued

■ When in Operation

■ There is a vehicle ahead

ACC with Low Speed Follow monitors if a vehicle ahead of you enters the ACC with Low Speed Follow range. If a vehicle is detected doing so, the ACC with Low Speed Follow system maintains or decelerates your vehicle's set speed in order to keep the vehicle's set following-interval from the vehicle ahead.


To Set or Change Following-interval P. 650

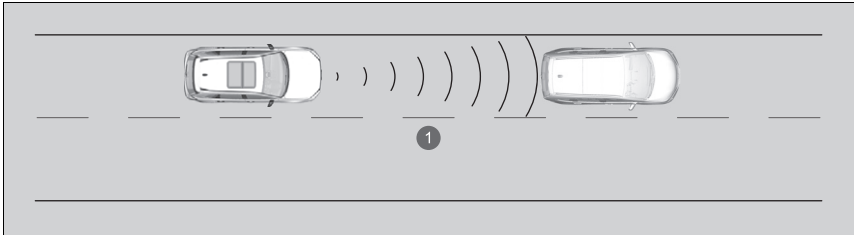


❶ ACC with Low Speed Follow Range: 120 m

When in Operation

If the vehicle ahead of you slows down abruptly, or if another vehicle cuts in front of you, a beeper sounds, a message appears on the driver information interface, and the head-up warning lights* flash.

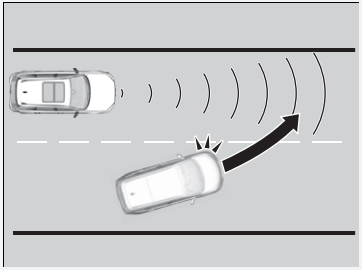


Depress the brake pedal, and keep an appropriate interval from the vehicle ahead.

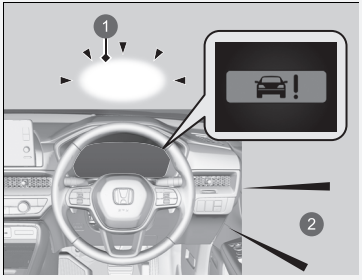

❶ Head-up Warning Lights*
❷ Audible Alert


* Not available on all models

Models with A-type meter

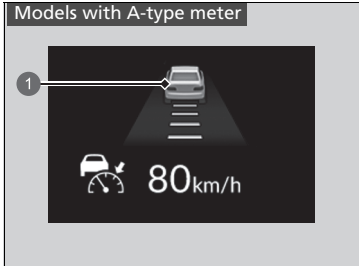

❶ A vehicle icon appears on the gauge

Models with B-type meter

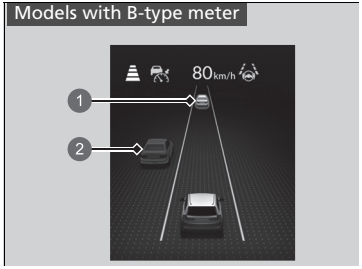

A vehicle icon appears on the gauge.

❶ Control target vehicle: White and outlined in green

❷ Outside of control target vehicle: Grey

When a vehicle whose speed is slower than your set speed comes in or cuts in front of you and is detected by the radar and the camera, your vehicle starts to slow down.

When in Operation

Even if the interval between your vehicle and the vehicle detected ahead is short, ACC with Low Speed Follow may start accelerating your vehicle under the following circumstances:

- The vehicle ahead of you is going at almost the same speed as, or faster than, your vehicle.
- A vehicle that cuts in front of you is going faster than your vehicle, gradually increasing the interval between the vehicles.

You can also set the system to beep when a vehicle detected in front of you comes in and goes out of the ACC with Low Speed Follow detecting range.
A vehicle detect beep on and off can be selected.

Customized Features P. 366, 465

Limitations

You may need to use the brake to maintain a safe interval when using ACC with Low Speed Follow. Additionally, ACC with Low Speed Follow may not work properly under certain conditions.

ACC with Low Speed Follow Conditions and Limitations P. 645

Continued

■ There is no vehicle ahead

Models with A-type meter



Your vehicle maintains the set speed without having to keep your foot on the brake or accelerator pedal.
If there previously was a vehicle detected ahead that kept your vehicle from travelling at the set speed, ACC with Low Speed Follow accelerates your vehicle to the set speed, and then maintains it.

1 A vehicle icon with line contour appears on the gauge.

Models with B-type meter




While driving down steep hills, ACC with Low Speed Follow brakes to inhibit excessive acceleration for maintaining the set speed. However, the vehicle speed may become faster than the set speed.

■ When you depress the accelerator pedal

You can temporarily increase the vehicle speed. In this case, there is no audible or visual alert even if a vehicle is in the ACC with Low Speed Follow range.
ACC with Low Speed Follow stays on unless you cancel it. Once you release the accelerator pedal, the system resumes an appropriate speed for keeping the following-interval while a vehicle ahead is within the ACC with Low Speed Follow range.

When in Operation

- ACC with Low Speed Follow may temporarily control the interval between your vehicle and the vehicle in adjacent lane or surroundings of your vehicle depending on the road conditions (e.g., curves) or vehicle conditions (e.g., operating the steering wheel or the vehicle location in the lane).

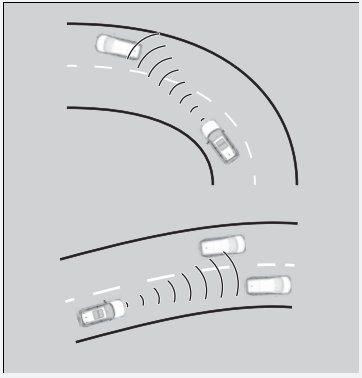


- When the vehicle ahead of you moves away, such as when entering an interchange or rest area, ACC with Low Speed Follow may continue to maintain the set following-interval for a short time.

■ A vehicle detected ahead is within ACC with Low Speed Follow range and slows to a stop

Models with A-type meter



Models with B-type meter

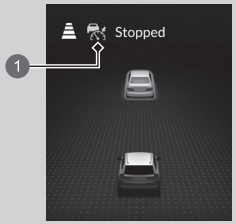

Your vehicle also stops automatically. The **Stopped** message appears on the gauge. When the vehicle ahead of you starts again, if you press the **RES/+/SET/–** switch up or down, or depress the accelerator pedal, ACC with Low Speed Follow will operate again within the previously set speed.

❶ (green)

Continued


Models with A-type meter



If no vehicle is ahead of you before you resume driving, depress the accelerator pedal and ACC with Low Speed Follow will operate again within the prior set speed.

❶ (green)

Models with B-type meter

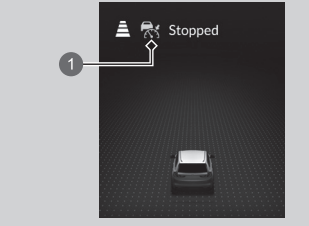

❶ (green)

■ ACC with Low Speed Follow Conditions and Limitations

The system may automatically shut off under certain conditions. Some examples of these conditions are listed below. Other conditions may reduce some of the ACC with Low Speed Follow functions.

➔ **Front Sensor Camera** P. 687
➔ **Radar Sensor** P. 689

■ Environmental conditions

- Driving in bad weather (rain, fog, snow, etc.).
- When nearby radio wave emitting devices such as other automotive radar sensors.
- Driving into low sunlight (e.g., at dawn or dusk).
- Reflections on the interior of the windscreen.

■ Roadway conditions

- Driving on a snowy or wet roadway (obscured lane marking, vehicle tracks, reflected lights, road spray, high contrast).

■ Vehicle conditions

- The front of the camera is obstructed by dirt, fog, rain, mud, wet snow, accessories, decals, stickers, film, etc.
- The area around the front grille is obstructed by dirt, rain, mud, wet snow, accessories, decals, stickers, film, etc.
- An abnormal tyre or wheel condition (incorrect sizes, varied sizes or construction, improperly inflated, etc.).
- The inside of the windscreen is fogged.
- The parking brake is applied.
- The vehicle is tilted due to a heavy luggage or suspension modifications.
- Tyre chains* are installed.
- The vehicle is towing a trailer*.

* Not available on all models

Continued


ACC with Low Speed Follow Conditions and Limitations

If you need the radar sensor to be repaired, or removed, or the front grille is strongly impacted, turn off the system by pressing the button and take your vehicle to a dealer.

Have your vehicle checked by a dealer if you find any unusual behaviour of the system (e.g., the warning message appears too frequently).

■ **Detection limitations**

- A vehicle suddenly crosses in front of you.
- The interval between your vehicle and the vehicle ahead of you is too short.
- A vehicle cuts in front of you at a slow speed, and it brakes suddenly.
- You accelerate rapidly and approach the vehicle ahead of you at high speed.
- The vehicle ahead of you is a motorcycle, bicycle, mobility scooter, or other small vehicle.
- There are animals in front of your vehicle.
- You drive on a curved or winding or undulating road that makes it difficult for the sensor to properly detect a vehicle in front of you.

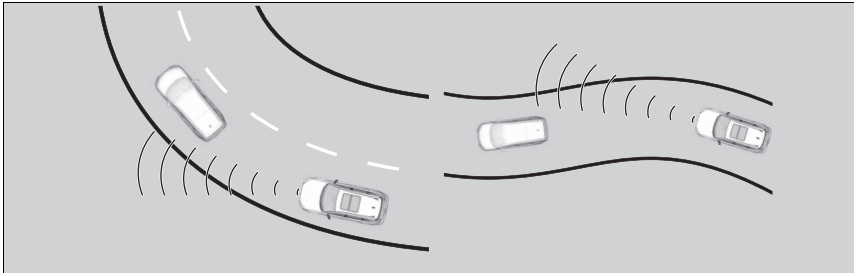


- A vehicle ahead of you stops and the speed difference between your vehicle and the vehicle ahead of you is significantly large.
- An oncoming vehicle suddenly comes in front of you.
- Your vehicle abruptly crosses over in front of an oncoming vehicle.

- Driving through a narrow metal bridge.



- The vehicle ahead of you brakes suddenly.
- The vehicle ahead of you has a unique shape.

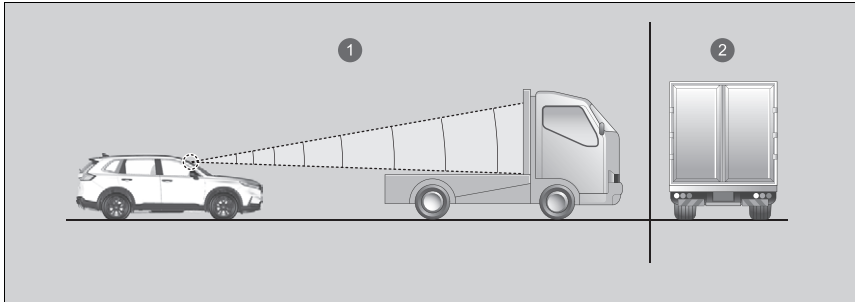


❶ Sensor detects upper section of an empty carrier lorry.
❷ Panel lorry, tanker lorry, etc.

- Your vehicle or the vehicle ahead of you is driving on one edge of the lane.

Continued


- When the minimum ground clearance of a vehicle ahead of you is extremely high.

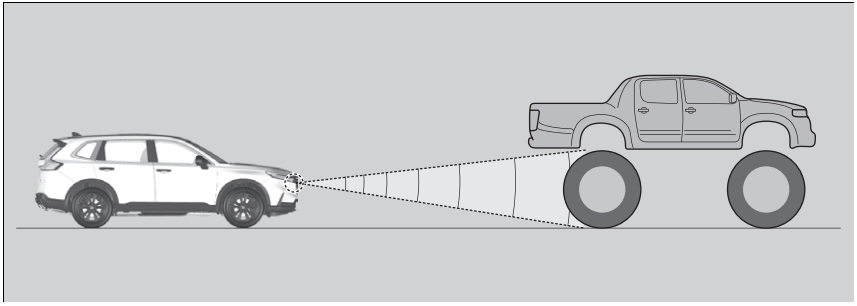

- When the radar and camera cannot correctly identify the shape of the vehicle ahead of you.
- When the vehicle ahead of you blends in with the background, preventing the system from recognising it.

To Adjust the Vehicle Speed

Increase or decrease the vehicle speed using the **RES/+/SET/–** switch on the steering wheel.

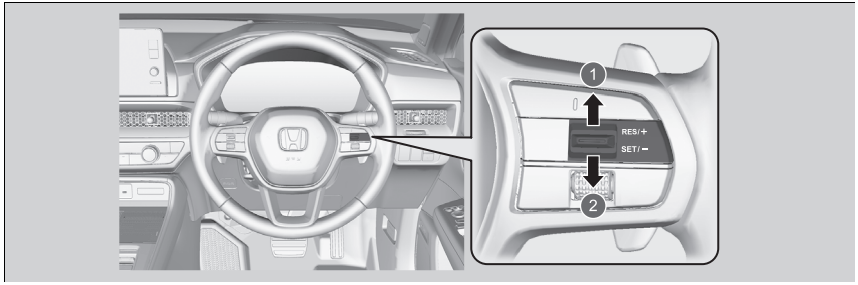

❶ To increase speed
❷ To decrease speed

- Each time you press the **RES/+/SET/–** switch up or down, the vehicle speed is increased or decreased by about 1 km/h accordingly.
- If you press and hold the **RES/+/SET/–** switch up or down, the vehicle speed increases or decreases by about 10 km/h accordingly.


To Adjust the Vehicle Speed

If a vehicle detected ahead is going at a speed slower than your increased set speed, ACC with Low Speed Follow may not accelerate your vehicle. This is to maintain the set interval between your vehicle and the vehicle ahead.

When you depress the accelerator pedal and then press down and release the **RES/+/SET/–** switch, the current speed of the vehicle is set.

Continued

■ To Set or Change Following-interval

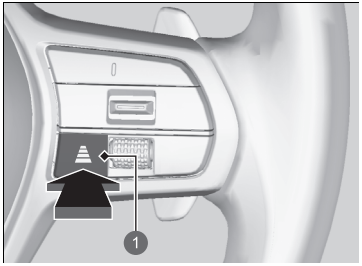

❶ Interval Button

Press the interval button to change the ACC with Low Speed Follow following-interval. Each time you press the button, the following-interval (the interval behind a vehicle detected ahead of you) setting cycles through extra long, long, middle, and short following-intervals.

Determine the most appropriate following-interval setting based on your specific driving conditions. Be sure to adhere to any following-interval requirements set by local regulation.

The higher your vehicle's following-speed is, the longer the short, middle, long or extra long following-interval becomes. See the following examples for your reference.

Following-interval		When the Set Speed is:	
		80 km/h	104 km/h
Short	 *1  *2	22 metres 1 sec	29 metres 1 sec
Middle	 *1  *2	34 metres 1.5 sec	43 metres 1.5 sec
Long	 *1  *2	47 metres 2.1 sec	61 metres 2.1 sec
Extra Long	 *1  *2	64 metres 2.9 sec	83 metres 2.9 sec

When your vehicle stops automatically because a vehicle detected ahead of you has stopped, the interval between the two vehicles will vary based on the ACC with Low Speed Follow interval setting.


*1: Models with A-type meter
*2: Models with B-type meter

To Set or Change Following-interval

The driver must in all circumstances preserve a sufficient braking interval from the vehicle which precedes it and be aware that minimum intervals or times of spacing can be provided by the provisions of the Motorway Code locally applicable and that it is the driver's responsibility to respect those laws.

Continued

■ To Cancel

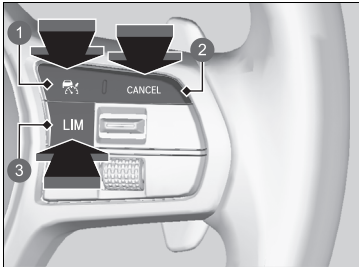

❶ Button
❷ **CANCEL** Button
❸ **LIM** Button*

To cancel ACC with Low Speed Follow, do any of the following:

- Press the **CANCEL** button.
  ▶ The indicator (green) on the gauge changes to the indicator (white).
- Press the button.
  ▶ indicator (green) goes off.
- Press the **LIM** button*.
- Depress the brake pedal while the vehicle is moving forward.
  ▶ The indicator (green) on the gauge changes to the indicator (white).

To Cancel

Resuming the prior set speed: After you have cancelled ACC with Low Speed Follow, you can activate the ACC with Low Speed Follow with the prior set speed displayed on the gauge (in grey) by pressing the **RES/+/SET/–** switch up even if the vehicle is stopped.

When you turn the ACC with Low Speed Follow off by pressing the **CANCEL** button or depressing the brake pedal, the prior set speed is displayed on the gauge in grey.

When pressing the **RES/+/SET/–** switch up, the ACC with Low Speed Follow is activated with displayed speed.

If the indicator (white) is displayed and you press the **RES/+/SET/–** switch up, but no prior set speed (in grey) is displayed, the speed will be set to your vehicle's current speed.

* Not available on all models


■ Automatic cancellation

The beeper sounds and a message appears on the driver information interface when ACC with Low Speed Follow is automatically cancelled. Any of these conditions may cause the ACC with Low Speed Follow to automatically cancel:

- Bad weather (rain, fog, snow, etc.)
- When the radar sensor behind the Honda emblem on the front grille gets dirty.
- The vehicle ahead of you cannot be detected.
- An abnormal tyre condition is detected, or the tyres are skidding.
- Driving on a mountainous road for extended periods, or driving off road.
- Abrupt steering wheel movement.
- When the ABS, VSA, CMBS, Low Speed Braking Control* or Post-Collision Braking System is activated.
- When the ABS or VSA system indicator comes on.
- When the vehicle is stopped on a very steep slope.
- When you manually apply the parking brake.
- When the detected vehicle within the ACC with Low Speed Follow range is too close to your vehicle.
- When accelerating rapidly.
- The camera behind the rearview mirror, or the area around the camera, including the windscreen, gets dirty.
- The vehicle has repeatedly applied the brakes to maintain the set speed (for example, you are descending a long slope).
- When the system doesn't detect any driving actions from the driver for a certain amount of time while the LKAS is also activated.
- When the maximum permissible weight is exceeded.
- When passing through a dark place, such as tunnel.
- When the parking brake and brake system indicator (amber) comes on.


To Cancel

Models with A-type meter

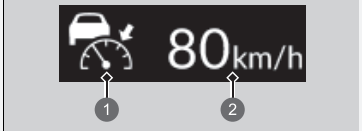

1 (white)
2 Prior Set Speed (grey)

Models with B-type meter

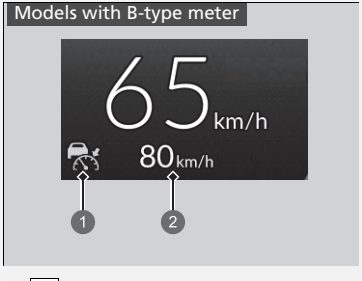

1 (white)
2 Prior Set Speed (grey)

The set speed cannot be set or resumed when ACC with Low Speed Follow has been turned off using the button. Press the button to activate the system, then set the desired speed.

* Not available on all models

Continued

The ACC with Low Speed Follow automatic cancellation can be also triggered by the following causes. In these cases, the parking brake will be automatically applied.

- The driver's seat belt is unfastened when the vehicle is stationary.
- The vehicle stops for more than 10 minutes.
- The power system is turned off.

Lane Keeping Assist System (LKAS)


Provides steering input to help to keep the vehicle in the middle of a detected lane and provides tactile, audible and visual alerts if the vehicle is detected drifting out of its lane.

■ Steering input assist

The system applies torque to the steering to keep the vehicle between the left and right lane lines. The applied torque becomes stronger as the vehicle gets closer to either of the lane lines.

■ Tactile, audible and visual alerts

Rapid vibrations on the steering wheel, audible and a warning display alert you that the vehicle is drifting out of a detected lane.

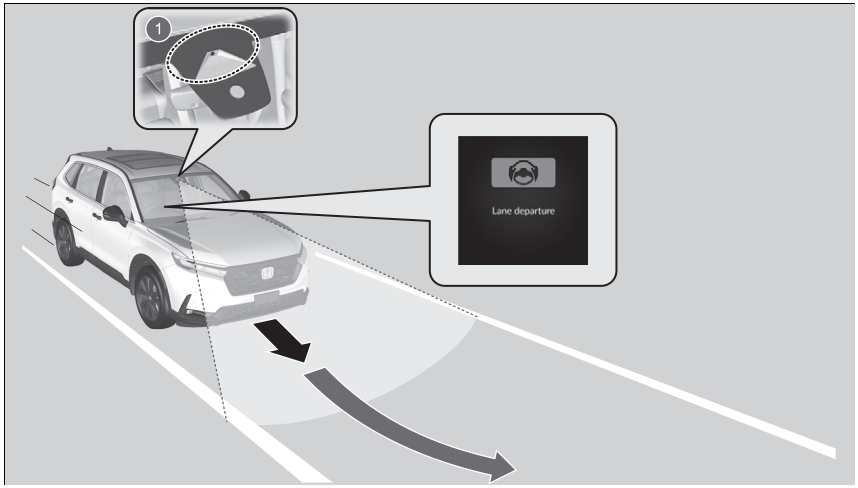

❶ Front Sensor Camera: Monitors the lane lines

Continued

Lane Keeping Assist System (LKAS)

Important Safety Reminders

The LKAS is for your convenience only. It is not an autonomous driving system and always requires driver attention and control. The system does not work if you take your hands off the steering wheel or fail to steer the vehicle.

The LKAS is convenient when it is used on motorways or a dual carriage way.

Do not place objects on the instrument panel. Objects may reflect on the windscreen and prevent correct detection of the traffic lanes.

The LKAS only alerts you when lane drift is detected without a turn signal in use. The LKAS may not detect all lane markings or lane departures; accuracy will vary based on weather, speed, and lane marker condition.
It is always your responsibility to safely operate the vehicle and avoid collisions.


You can read about handling information for the camera equipped with this system.
➡ **Front Sensor Camera** P. 687

The LKAS may not work properly or may work improperly under the certain conditions:
➡ **LKAS Conditions and Limitations** P. 664

When you operate the turn signals to change lanes, the system is suspended, and resumes after the signals are off.
If you make a lane change without operating the turn signals, the LKAS alerts activate, and torque is applied to the steering.

■ Lane Keep Support Function

Provides assistance to keep the vehicle in the centre of the lane. When the vehicle nears a white or yellow line, steering force of the electric power steering will become stronger.

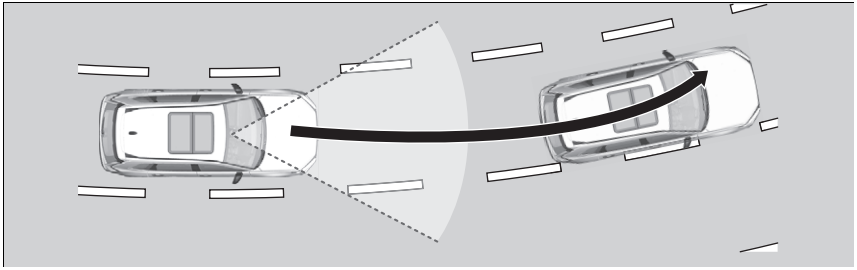


Lane Keeping Assist System (LKAS)

When it fails to detect lanes, the system will temporarily be cancelled. When a lane is detected, the system will recover automatically.

The LKAS may not function as designed while driving in frequent stop and go traffic, or on roads with sharp curves.

■ Lane Departure Warning Function

When the vehicle enters the warning area, the LKAS alerts you with slight steering wheel vibration, and audible and visual warnings.

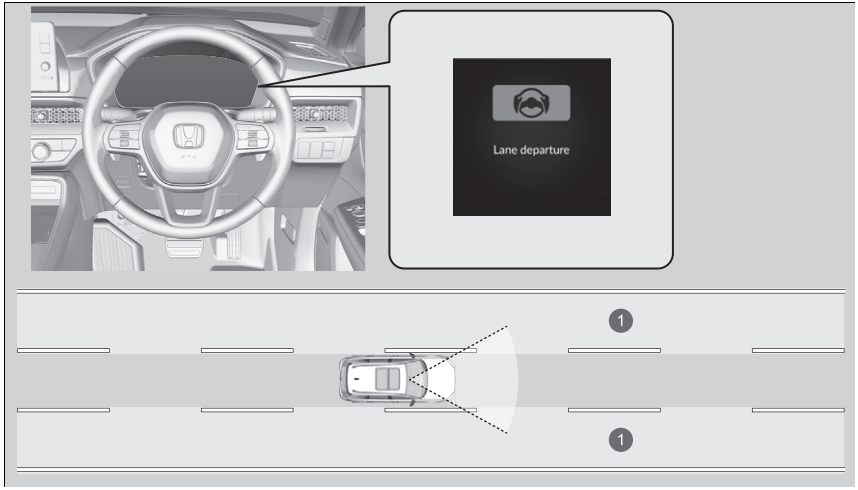

❶ Warning Area

Continued

■ When the System can be Used

The system can be used when the following conditions are met.

- The vehicle is travelling between about 72 and 180 km/h.
- The lane in which you are driving has detectable lane markers on both sides, and your vehicle is in the centre of the lane.
- You are driving on a straight or slightly curved road.
- The turn signals are off.
- The brake pedal is not suddenly depressed.


When the System can be Used

If the vehicle drifts towards either left or right lane line due to the system applying torque, turn off the LKAS and have your vehicle checked by a dealer.

Follow the points below to properly activate the system:

- Always keep the windscreen around the camera clean.
- When cleaning the windscreen, be careful not to apply windscreen cleanser to the camera lens.
- Do not touch the camera lens.
- Do not attach a sticker to the area around the camera.

■ How to activate the system

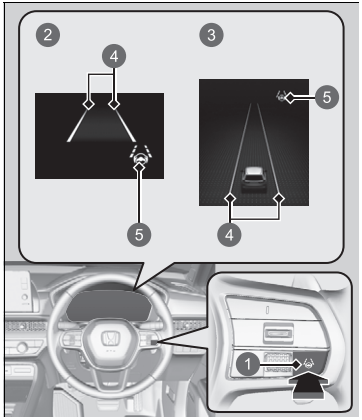

❶ LKAS Button
❷ Models with A-type meter
❸ Models with B-type meter
❹ White Lines
❺ LKAS indicator (white)


1. Press the LKAS button.
▶ LKAS indicator (white) appears on the gauge.
The system is standby.
▶ If traffic lane lines are detected, white lines appear on the gauge.

When the System can be Used

If LKAS button is pressed when the system can be used, LKAS is on without standby.


Continued

Models with A-type meter

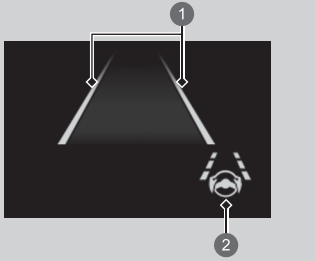

❶ Green lines
❷ LKAS indicator (green)


Models with B-type meter

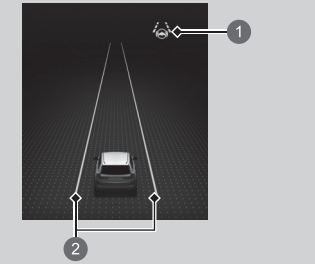

❶ LKAS indicator (green)
❷ Green lines

2. Keep your vehicle near the centre of the lane while driving.
▶ The LKAS indicator changes from white to green, and white lines change to green once the system starts operating after detecting the left and right lane markings.

To Cancel

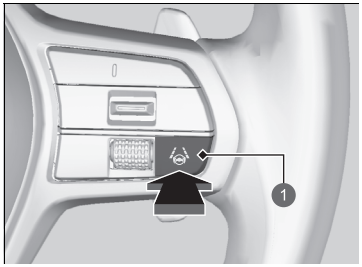

Press the LKAS button.

The LKAS is turned off every time you turn the power system off, even if you turned it on the last time you drove the vehicle.


1 LKAS Button

Continued

■ The LKAS may be automatically suspended when:


When the LKAS is suspended under the following circumstances, green lines on the gauge change to white lines or disappear, and the beeper sounds (if activated).

Models with A-type meter

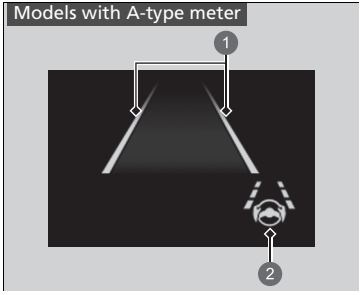

1 White lines
2 LKAS indicator (white)

Models with B-type meter

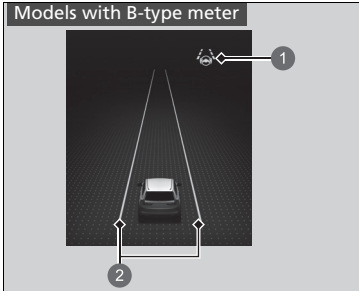

1 LKAS indicator (white)
2 White lines

Except Australian, Bangladeshi, Bhutanese, and New Zealand models

- Decrease the vehicle speed to about 64 km/h or less.
  ▶ Increasing the vehicle speed to about 72 km/h or more resumes the LKAS.

All models

- Your vehicle is driving to the right or the left of the lane.
- The system fails to detect lane lines.
- The steering wheel is turned quickly.
- You fail to steer the vehicle.
- Driving through a sharp curve.
- Driving at a speed in excess of approximately 185 km/h.
- The ABS or VSA system engages.
- The brake pedal is suddenly depressed.
- When the Road Departure Mitigation System is activated.

Once these conditions no longer exist, the LKAS automatically resumes.

The LKAS may be automatically suspended when:

LKAS suspended beep on and off can be selected.
➡ **Customized Features** P. 366, 465

■ **The LKAS may be automatically cancelled when:**

In the following cases, traffic lane lines may disappear on the gauge, the beeper may sound, and the LKAS may be automatically cancelled:

- The camera temperature gets extremely high.
- The camera behind the rearview mirror, or the area around the camera, including the windscreen, is dirty.

Continued

■ LKAS Conditions and Limitations


The system may not detect lane markings (in white or yellow), and LKAS may not function properly under certain conditions, including the following:

■ Environmental conditions


- There is little contrast between lane lines and the roadway surface.
- Driving in bad weather (rain, fog, snow, etc.).
- Driving on a snowy or wet roadway.
- Driving into low sunlight (e.g., at dawn or dusk).
- Shadows of adjacent objects (trees, buildings, guard rails, vehicles, etc.) are parallel to white (or yellow) lines.
- Sudden changes between light and dark, such as the entrance or exit of a tunnel or the shadows of trees, buildings, etc.
- Driving at night or in a dark place such as a tunnel (due to low-light conditions, lane lines or the road surface may not be illuminated).
- The distance between your vehicle and the vehicle ahead of you is too short, and lane lines and the road surface are not visible.
- Strong light is reflected onto the roadway.

■ **Roadway conditions**


- Driving on a road with temporary lane markings.
- Faint, multiple, or varied lane markings are visible on the roadway due to road repairs or deteriorated lane markings.

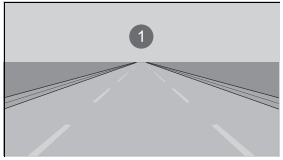

❶ Faded lines

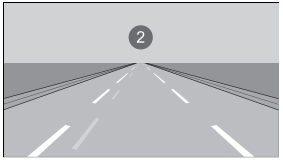


❷ Duplicate lines

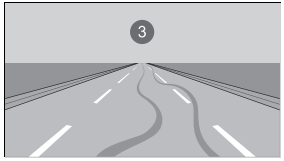

❸ Tyre tracks

- The roadway has merging, split, or crossing lines, such as at an intersection or crosswalk.
- The lane markings are extremely narrow, wide, or changing.

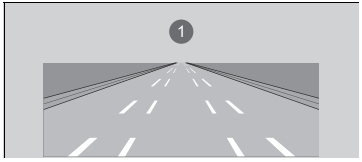


❶ Very wide or narrow traffic lane

- Part of the lane markings are hidden by an object, such as a vehicle.
- The road is hilly or the vehicle is approaching the crest of a hill.
- Your vehicle is strongly shaken on uneven road surfaces.
- When objects on the road (curb, guard rail, pylons, etc.) are recognised as white (or yellow) lines.
- Driving on rough or unpaved roads, or over bumpy surfaces.

Continued

- Driving on roads with double lane lines.
- Driving on snowy or slippery roads.
- The pavement is only partially visible due to snow or puddles on the road.
- There is a film of water or puddles on the road surface.
- White (or yellow) lines are not recognised correctly due to road conditions such as curves, twists, or hills.
- Driving on unpaved or rutted roads.
- Passing through a junction.

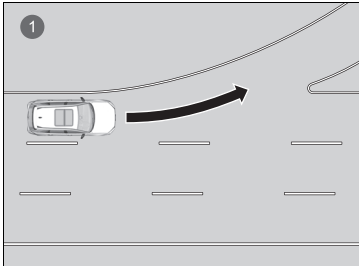

1 Lane void of lines at junction

■ **Vehicle conditions**

- When lighting is weak due to dirt covering the headlight lenses, or there is poor visibility in a dark place due to the headlights being improperly adjusted.
- The front of the camera is obstructed by dirt, fog, rain, mud, wet snow, accessories, decals, stickers, film, etc.
- Driving at night or in a dark place (e.g., a tunnel) with the headlights off.
- There is residue on the windscreen from the windscreen wipers.
- An abnormal tyre or wheel condition (incorrect sizes, varied sizes or construction, improperly inflated, etc.).
- The vehicle is tilted due to a heavy luggage in the luggage area or rear seats.
- The suspension has been modified.
- Tyre chains* are installed.
- The vehicle is towing a trailer*.

* Not available on all models


Australian, Bangladeshi, Bhutanese, and New Zealand models

Traffic Jam Assist

The Traffic Jam Assist system uses a camera mounted to the upper portion of the windscreen to detect and monitor left and right white (or yellow) traffic lane lines. Based on inputs from the camera, the system can apply steering torque to keep your vehicle in the centre of the detected lane.

■ How Traffic Jam Assist works

When you are in heavy traffic and Lane Keeping Assist System (LKAS) is active, the Traffic Jam Assist system, upon detecting the traffic lane lines, will apply steering torque to help keep your vehicle in the centre of the lane.

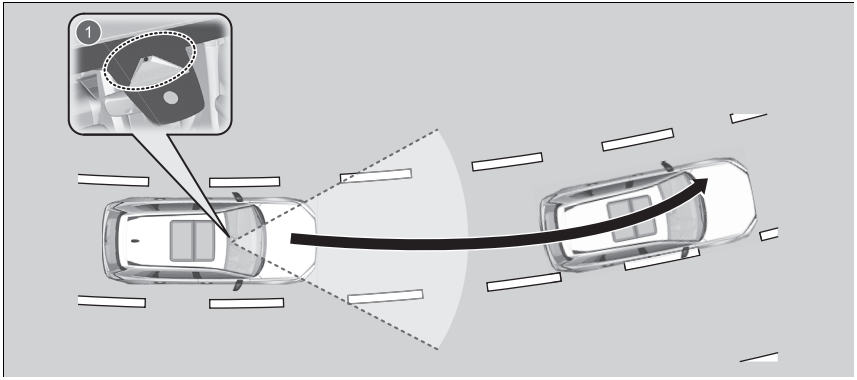

1 Front Sensor Camera
Detects left and right white (or yellow) traffic lane lines

When you use the turn signal to indicate a lane change, Traffic Jam Assist is temporarily deactivated. It is reactivated once the vehicle is travelling in the centre of the lane and the system has detected the traffic lane lines.

Traffic Jam Assist

Important Safety Reminders

Traffic Jam Assist is for your convenience only. It is not an autonomous driving system and always requires driver attention and control. The system does not work if you take your hands off the steering wheel or fail to steer the vehicle.

Traffic Jam Assist is convenient when it is used on motorways or a dual carriage way.

You can read about handling information for the camera equipped with this system.

➡ **Front Sensor Camera** P. 687

The Traffic Jam Assist only alerts you when lane drift is detected without a turn signal in use. The Traffic Jam Assist may not detect all lane markings or lane departures; accuracy will vary based on weather, speed, and lane marker condition.
It is always your responsibility to safely operate the vehicle and avoid collisions.


Traffic Jam Assist may not work properly under certain conditions:

➡ **Traffic Jam Assist Conditions and Limitations** P. 673

When the driver takes full control of the steering, the steering assist function is temporarily cancelled.
The torque applied to the steering may not be noticeable when the driver has full control of the steering, or when the surface of the road is rough or uneven.

■ Lane Departure Warning Function

When the vehicle enters the warning area, the Traffic Jam Assist alerts you with an audible alert as well as a warning display.

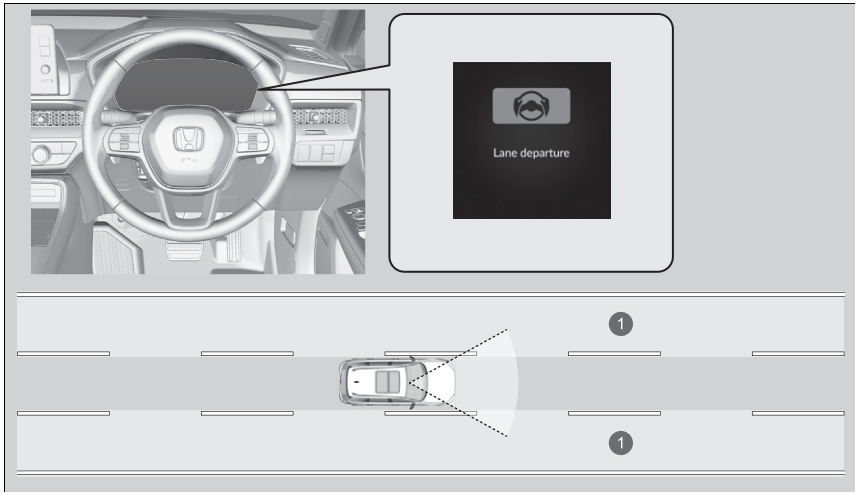

❶ Warning Area

Continued

■ Traffic Jam Assist Activation

Traffic Jam Assist is activated when all of the following conditions exist:

- LKAS is activated.
- The lane in which you are driving has detectable lane markers on both sides, and your vehicle is in the centre of the lane.
- The vehicle is travelling between about 0 and 72 km/h.
- You are driving on a straight or slightly curved road.
- The driver is gripping the steering wheel.
- The shift position is in D or B.

Do not use Traffic Jam Assist in any of the following situations:

- You are travelling on a road with sharp curves.
  ▶ The system may not allow your vehicle to respond in a manner best suited for the road conditions.
- You are entering a toll booth, interchange, service area, or parking area.
- You are driving in adverse weather (rain, fog, snow, etc.).
- The surface of the road is slippery; for example, it is icy or covered with snow.
  ▶ The tyres may slip, causing you to lose control of the vehicle.

Traffic Jam Assist Activation

Refer to the following page for proper handling of the Lane Keeping Assist System (LKAS):


➔ **Lane Keeping Assist System (LKAS)** P. 655

Refer to the following page for steering buttons and displays:

➔ **Operation Switches for the Adaptive Cruise Control (ACC) with Low Speed Follow/Lane Keeping Assist System (LKAS)/Traffic Jam Assist*** P. 604
➔ **Gauge Content** P. 605

* Not available on all models

How Traffic Jam Assist Works

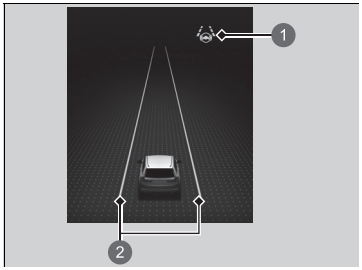

❶ LKAS indicator (green)
❷ Green lines

Keep your vehicle near the centre of the lane while driving.

▶ The LKAS indicator changes from white to green, and white lines change to green once the system starts operating after detecting the left and right lane markings.


How Traffic Jam Assist Works

If your vehicle veers too far to the right or the left of the white (or yellow) traffic lane lines while Traffic Jam Assist is active, deactivate Traffic Jam Assist and have your vehicle checked by a dealer.

In some cases the system cannot properly detect the traffic lane lines and, as a result, will not provide steering assistance.

Traffic Jam Assist Conditions and Limitations P. 673

If the driver takes their hands off the steering wheel or does not adequately maintain control of steering, the warning below will appear.

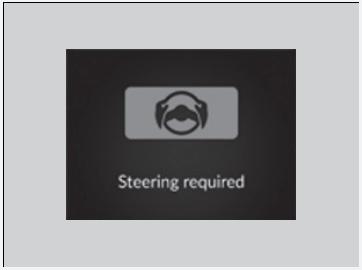

If the driver does not grip the steering wheel after the warning above has repeatedly appeared, a warning buzzer will sound and Traffic Jam Assist will be cancelled.

Continued

■ Cancelling Traffic Jam Assist

Press the LKAS button to cancel Traffic Jam Assist.

■ Traffic Jam Assist may be automatically suspended when:

- The system fails to detect lane lines.
- The steering wheel is turned sharply.
- You fail to steer the vehicle.
- You are driving through a sharp curve.
- The brake pedal is suddenly depressed.

Once these conditions no longer exist, Traffic Jam Assist automatically resumes.

■ Traffic Jam Assist may be automatically cancelled when:

- The temperature of the camera is too high.
- The camera behind the rearview mirror, or the area around the camera, including the windscreen, is dirty.

Upon cancellation, the lane lines will disappear from the screen and the beeper may sound.

Traffic Jam Assist may be automatically suspended when:

You can change the setting for the Traffic Jam Assist suspended beep on and off when you select the **Lane Keeping Assist Suspend Beep** on the audio/information screen.

➡ **Customized Features** P. 366, 465

■ Traffic Jam Assist Conditions and Limitations

The system may not detect lane markings (in white or yellow), and Traffic Jam Assist may not function properly under certain conditions, including the following:


■ Environmental conditions

- There is little contrast between lane lines and the roadway surface.
- Driving in bad weather (rain, fog, snow, etc.).
- Driving on a snowy or wet roadway.
- Driving into low sunlight (e.g., at dawn or dusk).
- Shadows of adjacent objects (trees, buildings, guard rails, vehicles, etc.) are parallel to white (or yellow) lines.
- Sudden changes between light and dark, such as the entrance or exit of a tunnel or the shadows of trees, buildings, etc.
- Driving at night or in a dark place such as a tunnel (due to low-light conditions, lane lines or the road surface may not be illuminated).
- When the lane lines or road surface are not visible, such as when the distance to the vehicle in front of you is extremely short or when at a junction.
- Strong light is reflected onto the roadway.


Continued

■ **Roadway conditions**


- Driving on a road with temporary lane markings.
- Faint, multiple, or varied lane markings are visible on the roadway due to road repairs or deteriorated lane markings.

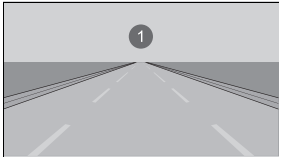

❶ Faded lines

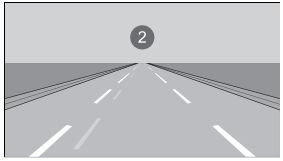


❷ Duplicate lines

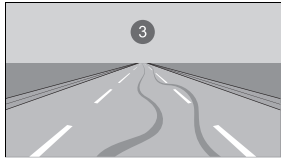

❸ Tyre tracks


- The roadway has merging, split, or crossing lines, such as at an intersection or crosswalk.
- The lane markings are extremely narrow, wide, or changing.

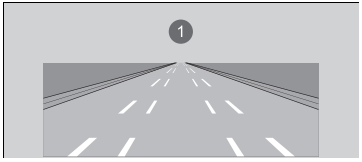

❶ Very wide or narrow traffic lane

- Part of the lane markings are hidden by an object, such as a vehicle.
- The road is hilly or the vehicle is approaching the crest of a hill.
- Your vehicle is strongly shaken on uneven road surfaces.

- When objects on the road (curb, guard rail, pylons, etc.) are recognised as white (or yellow) lines.
- Driving on rough or unpaved roads, or over bumpy surfaces.
- Driving on roads with double lane lines.
- Driving on snowy or slippery roads.
- The pavement is only partially visible due to snow or puddles on the road.
- There is a film of water or puddles on the road surface.
- White (or yellow) lines are not recognised correctly due to road conditions such as curves, twists, or hills.
- Driving on unpaved or rutted roads.
- Passing through a junction.

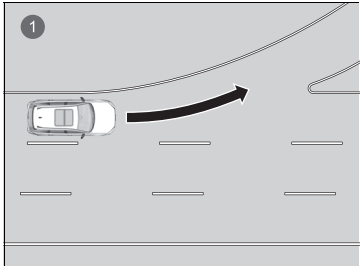

1 Lane void of lines at junction


Continued

■ **Vehicle conditions**

- When lighting is weak due to dirt covering the headlight lenses, or there is poor visibility in a dark place due to the headlights being improperly adjusted.
- The front of the camera is obstructed by dirt, fog, rain, mud, wet snow, accessories, decals, stickers, film, etc.
- Driving at night or in a dark place (e.g., a tunnel) with the headlights off.
- There is residue on the windscreen from the windscreen wipers.
- An abnormal tyre or wheel condition (incorrect sizes, varied sizes or construction, improperly inflated, etc.).
- The vehicle is tilted due to a heavy luggage in the luggage area or rear seats.
- The suspension has been modified.
- Tyre chains are installed.
- The vehicle is towing a trailer.

Lead Car Departure Notification System*

Informs you with visual and audible alerts when your vehicle is stopped even though the vehicle ahead of you has started moving.

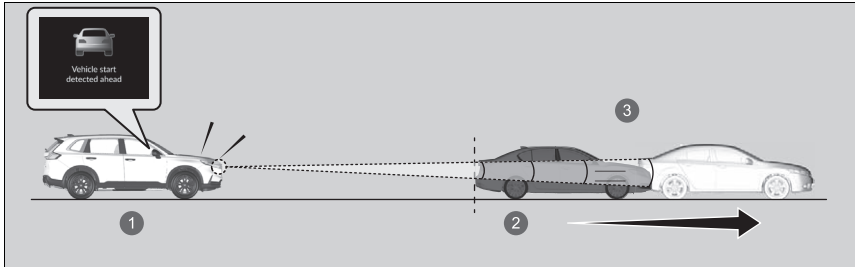

❶ When stopped
❷ Vehicle ahead is stopped
❸ Vehicle ahead starts moving

■ How the System Works

The system detects a stopped vehicle in front of you, on the condition that the vehicles are within 10 m of each other and both vehicles have been stopped for a period of time. When the detected vehicle moves but yours does not, the system will activate.

■ When the shift position is in D or B

The system will work when the brake pedal is depressed, the brake hold function of the automatic brake hold system is in operation, or the vehicle is stopped by ACC with Low Speed Follow.

Lead Car Departure Notification System*

⚠WARNING

Lead Car Departure Notification System is an supplemental system that provides driving assistance. It is not a system that informs you if it is safe to start driving.

Improper use of this system may lead to a collision.

Always visually confirm the safety of your surroundings before driving the vehicle and maintain a safe following-interval when driving.

For directions on the proper handling of the radar sensor, refer to the following page.

➡ **Radar Sensor** P. 689

You can read about handling information for the camera located behind the rearview mirror.

➡ **Front Sensor Camera** P. 687

Like other assistance systems, this system may not function properly depending on weather, environmental conditions, and so on.

* Not available on all models

Continued

■ When the shift position is in N


The system will work when the vehicle is stopped, the brake pedal is depressed, the parking brake is in operation, or the brake hold function of the automatic brake hold system is in operation.

You can choose from two system operation timing modes, **Normal** and **Early**.

Customized Features P. 366, 465

In Normal mode, the system operates when the vehicle ahead of you has moved approximately 3 m from where it stopped.
In Early mode, the system operates as soon as movement has been detected.

■ When the System Activates

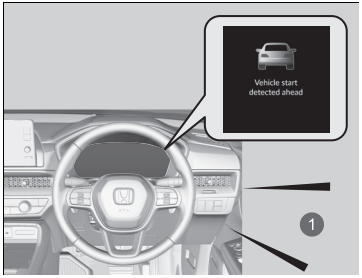

The beeper sounds and a message appears on the driver information interface when the system is activated.

1 Audible Alert

Lead Car Departure Notification System*

You can turn off the Lead Car Departure Notification System.

Customized Features P. 366, 465

The Lead Car Departure Notification System will not activate while the Adaptive Cruise Control (ACC) with Low Speed Follow Indicator (amber) is on.

Adaptive Cruise Control (ACC) with Low Speed Follow P. 636

* Not available on all models

■ Lead Car Departure Notification System Conditions and Limitations

In the following conditions, the system may or may not activate regardless of whether the vehicle ahead of you starts to move.

■ Examples of cases when the radar sensor cannot properly detect another vehicle due to vehicle condition

- The vehicle is tilted due to a heavy luggage or suspension modifications.
- The front grill is dirty.
- When the vehicle was only stopped for a short time.

■ Examples of cases when the radar sensor cannot properly detect another vehicle due to environmental conditions

- Weather conditions are poor (rain, fog, snow, etc.).
- Water or snow has been stirred up or sprayed by the vehicle ahead of you.

■ Examples of cases when the radar sensor cannot properly detect the vehicle ahead of you due to road conditions

- The road is curvy, winding, or sloping.
- There are objects around your vehicle that reflect radio waves strongly, such as when driving through a narrow metal bridge.

Continued

■ **Examples of cases when the radar sensor cannot properly detect the vehicle ahead of you due to the conditions of the vehicle itself**

- The vehicle ahead of you was only stopped for a short time.
- The space between your vehicle and the vehicle ahead of you is too short.
- The vehicle ahead of you is moving too slowly.
- The vehicle ahead of you turns right, left, or around suddenly.

■ **Examples of cases when the radar sensor cannot properly detect the vehicle ahead of you due to other conditions**

- There is a pedestrian, bicycle, or mobility scooter in front of your vehicle, or the vehicle ahead of you has a unique shape.
- Another vehicle, pedestrian or bicycle suddenly moves between your vehicle and the vehicle ahead of you.
- The vehicle ahead of you is not directly in front of you.

Traffic Sign Recognition System*

Reminds you of road sign information, such as the current speed limit your vehicle has just passed through, showing it on the gauge.

■ How the System Works

When the camera located behind the rearview mirror captures traffic signs while driving, the system displays the ones that are recognised as designated for your vehicle. The sign icon will be displayed until the vehicle reaches a predetermined time and distance.
If the system does not detect any traffic signs while you are driving, the sign icon will not be displayed.

Traffic Sign Recognition System*

Not all signs may be displayed, but any signs posted on roadsides should not be ignored. The system does not work on the designated traffic signs of all the countries you travel, nor in all situations.
Do not rely too much on the system. Always drive at speeds appropriate for the road conditions.


Never apply a film or attach any objects to the windscreen that could obstruct the camera's field of vision and cause the system to operate abnormally. Scratches, nicks, and other damage to the windscreen within the camera's field of vision can cause the system to operate abnormally. If this occurs, we recommend that you replace the windscreen with a genuine Honda replacement windscreen. Making even minor repairs within the camera's field of vision or installing an aftermarket replacement windscreen may also cause the system to operate abnormally. After replacing the windscreen, have a dealer recalibrate the camera. Proper calibration of the camera is necessary for the system to operate properly.

You can read about handling information for the camera equipped with this system.
➲ **Front Sensor Camera** P. 687

You can turn the Traffic Sign Recognition System on and off.
➲ **Customized Features** P. 366, 465

* Not available on all models

Continued

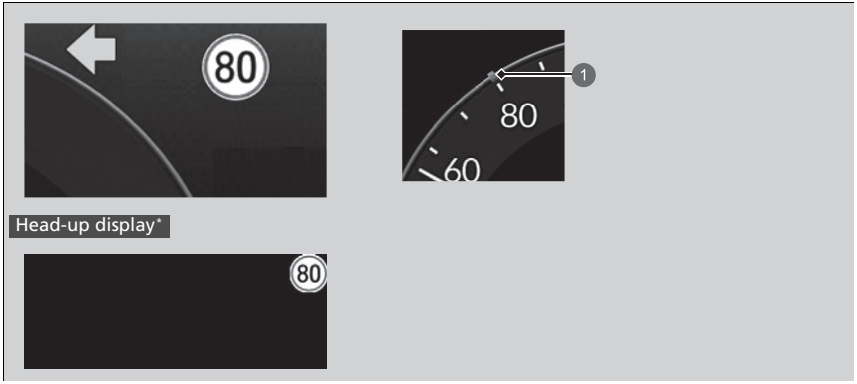

❶ Speed Limit Sign

The sign icon also may switch to another one, or disappear when:
- The end of speed limit or other designated limit is detected.
- Your vehicle enters/exits motorway or highway.
- You make a turn with a turn signal at an intersection.

Traffic Sign Recognition System*

To help reduce the likelihood that high interior temperatures will cause the camera's sensing system to shut off, find a shady area or face the front of the vehicle away from the sun when parking. If you use a reflective sun shade, do not allow it to cover the camera housing.
Covering the camera can concentrate heat on it.

If your vehicle exceeds the detected speed limit, an icon representing the speed limit sign for the current area will blink in the display.
➡ **Customized Features** P. 366, 465

The system's ability to accurately notify the driver of the speed limit is dependent on certain conditions such as the units displayed on the traffic sign as well as the speed and direction of travel of the vehicle. In some cases, the system may display false warnings or other inaccurate information.
➡ **Traffic Sign Recognition System Conditions and Limitations** P. 683

 * Not available on all models

■ Traffic Sign Recognition System Conditions and Limitations

The Traffic Sign Recognition system may incorrectly recognise, be slow to identify, or fail to recognise the traffic sign in the following cases.

■ Environmental conditions

- Driving into low sunlight (e.g., at dawn or dusk).
- Strong light is reflected onto the roadway.
- Driving at night, in dark areas such as long tunnels.
- Driving in bad weather (rain, fog, snow, etc.).
- Sudden changes between light and dark, such as the entrance or exit of a tunnel or the shadows of trees, buildings, etc.
- Water is sprayed by or snow blown from a vehicle ahead.

■ Roadway conditions

- Your vehicle is strongly shaken on uneven road surfaces.

■ Vehicle conditions


- When lighting is weak due to dirt covering the headlight lenses, or there is poor visibility in a dark place due to the headlights being improperly adjusted.
- The front of the camera is obstructed by dirt, fog, rain, mud, wet snow, accessories, decals, stickers, film, etc.
- There is residue on the windscreen from the windscreen wipers.
- An abnormal tyre or wheel condition (incorrect sizes, varied sizes or construction, improperly inflated, etc.).
- The vehicle is tilted due to heavy luggage in the luggage area or rear seats.
- The suspension has been modified.
- Tyre chains are installed.
- Driving at night or in a dark place (e.g., a tunnel) with the headlights off.
- The vehicle is towing a trailer.

* Not available on all models

Continued

Traffic Sign Recognition System Conditions and Limitations

When the Traffic Sign Recognition System malfunctions, appears on the gauge. If this message does not disappear, have your vehicle checked by a dealer.

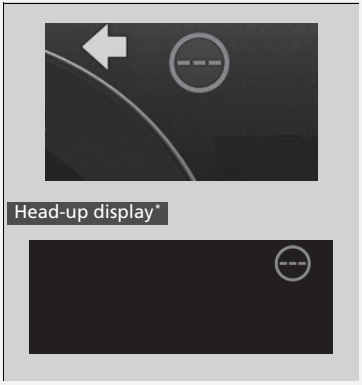

■ **The position or the condition of the traffic sign**

- The sign is in a place that makes it hard to find.
- The sign is located far away from your vehicle.
- The sign is located where it is hard for headlight beams to reach.
- The sign is on a corner or bend in the road.
- The sign is faded or bent.
- The sign is rotated or damaged.
- The sign is covered with mud, snow, or frost.
- Part of the sign is hidden by the trees, or is in the shadow of a vehicle or other object.
- Light (such as a streetlight) is reflected on the surface of the sign, or it is hidden in shadow.
- The sign is too bright or too dark (electric signs).
- Small signs (auxiliary signs, etc.).

■ **Other conditions**

- When you are driving at a high speed.

The Traffic Sign Recognition System may not operate correctly, such as displaying signs that do not adhere to the actual regulations for the roadway or do not exist at all in the following cases.


▶ A speed limit sign may display at a higher or lower speed than the actual speed limit.

- There is a supplementary sign with further information such as weather, time, vehicle type, etc.
- Figures on the sign are hard to read (electric signs, numbers on the sign are blurred, etc.).
- The sign is in the vicinity of the lane you are driving in, even though it is not for the lane, such as a speed limit sign situated at a junction between the side road and the main road.
- There are things that look similar in colour or shape to recognised objects (similar sign, electric sign, signboard, structure, etc.).

Continued

■ Signs Displayed on the Gauge and Head-Up Display*

Up to two speed limit signs can be simultaneously displayed next to each other when detected. Speed limit icons can be displayed on the gauge.
Additional signs that indicate speed limit based on specific period of time can also appear.

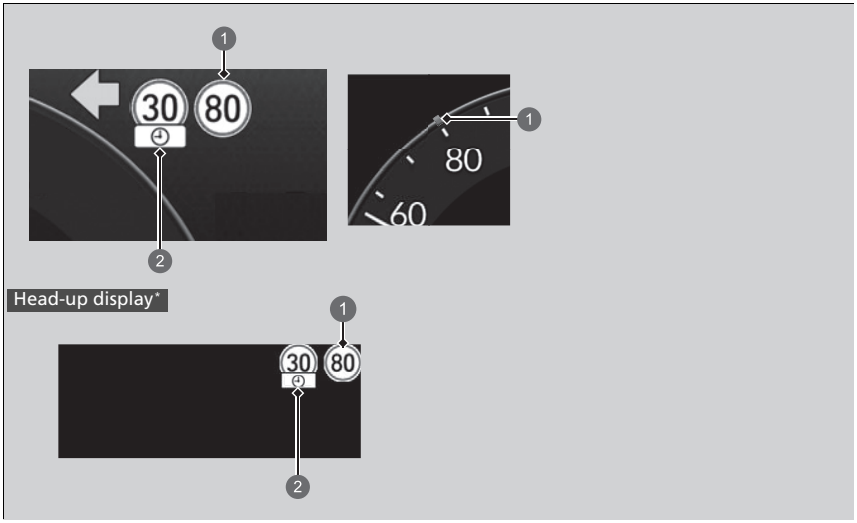

❶ Speed Limit Sign
❷ Additional Speed Limit Sign Based on Conditions*1


Depending on situation, *1 can appear on the right side.

* Not available on all models

Front Sensor Camera

The camera, used in systems such as Collision Mitigation Braking System (CMBS), Road Departure Mitigation System, Adaptive Cruise Control (ACC) with Low Speed Follow, Lane Keeping Assist System (LKAS), Traffic Jam Assist*, Lead Car Departure Notification System*, Traffic Sign Recognition system*, Auto High-Beam*, and Adaptive Driving Beam*, is designed to detect an object that triggers any of the systems to operate their functions.

Camera Location and Handling Tips

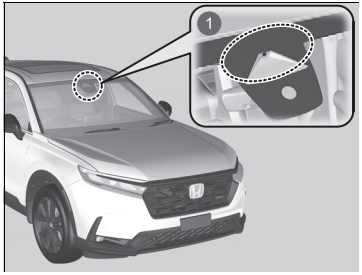

❶ Front Sensor Camera

This camera is located behind the rearview mirror.

To help to reduce the likelihood that high interior temperatures will cause the camera's sensing system to shut off, find a shady area or face the front of the vehicle away from the sun when parking. If you use a reflective sun shade, do not allow it to cover the camera housing. Covering the camera can concentrate heat on it.

Front Sensor Camera

Never apply a film or attach any objects to the windscreen, the bonnet, or the front grille that could obstruct the camera's field of vision and cause the system to operate abnormally.
Scratches, nicks, and other damage to the windscreen within the camera's field of vision can cause the system to operate abnormally. If this occurs, we recommend that you replace the windscreen with a genuine Honda replacement windscreen. Making even minor repairs within the camera's field of vision or installing an aftermarket replacement windscreen may also cause the system to operate abnormally.
After replacing the windscreen, have a dealer recalibrate the camera. Proper calibration of the camera is necessary for the system to operate properly.

Do not place an object on the top of the instrument panel. It may reflect onto the windscreen and prevent the system from detecting lane lines properly.

* Not available on all models

Continued

Front Sensor Camera


If the **Some driver assist systems cannot operate: Camera temperature too high** message appears:

- Use the climate control system to cool down the interior and, if necessary, also use demister mode with the airflow directed towards the camera.
- Start driving the vehicle to lower the windscreen temperature, which cools down the area around the camera.

If the **Some driver assist system cannot operate: Clean front windscreen or poor viewing condition.** message appears:

- Park your vehicle in a safe place, and make sure the windscreen is clean.
  Clean the windscreen if it is dirty. If the message does not disappear after driven for a while, have your vehicle checked by a dealer.

Radar Sensor

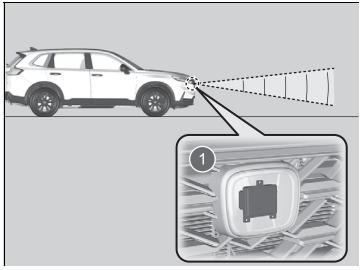

❶ Radar Sensor

The radar sensor is behind the Honda emblem on the front grille.

Radar Sensor

For the system to work properly, observe the following precautions.

- Always keep the emblem and front grille clean.
- Never use chemical solvents or polishing powder for cleaning the emblem and front grille. Clean it with water or a mild detergent.
- Do not put any stickers or paint on the emblem or front grille.
- Do not scratch or damage the emblem or front grille.
- Do not replace the emblem, front grille, or bumper.
- Do not remove or disassemble the radar sensor.

Consult a dealer if:

- The radar sensor cover is strongly impacted.
- The front grille or bumper needs to be repaired.


If the vehicle is involved in any of the following situations, the radar sensor may not work properly. Have your vehicle checked by a dealer:

- Your vehicle is involved in a frontal collision.
- Your vehicle drives through deep water or is submerged in deep water.
- Your vehicle strongly strikes a bump, curb, chock, slope, or embankment that could jar the radar sensor.


Sonar Sensors*

■ Location and range of sensors

The sonar sensors are situated in the front and rear bumpers.

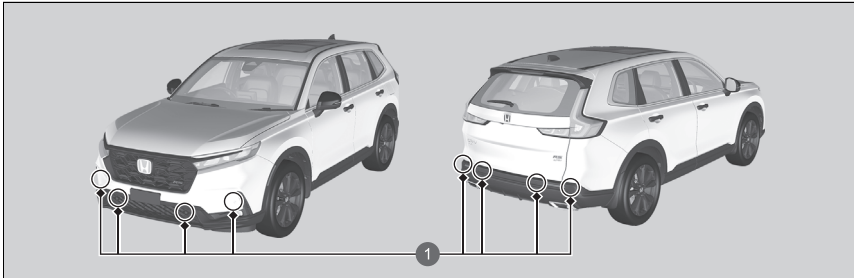

1 Sonar Sensors

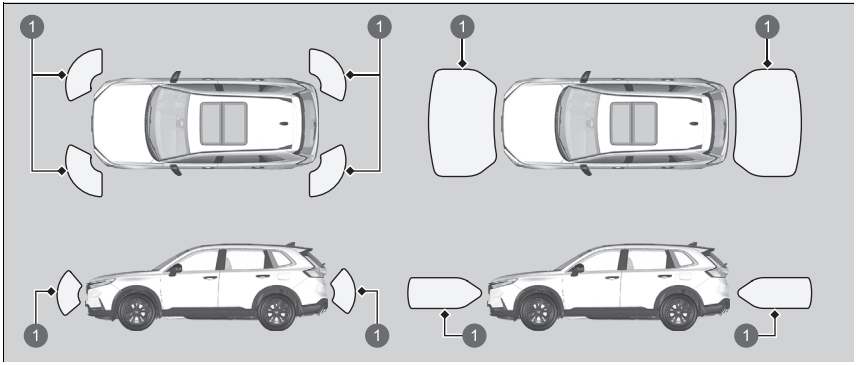

1 Sensor Range

Sonar Sensors*

For the sonar sensors to work properly, do not:
- Place stickers or other objects on or around the sensors.
- Hit the area around the sensors.
- Attempt to take apart any sensor.
- Put any accessories on or around the sensors.

Consult with a dealer if:
- A sensor has been subjected to shock.
- Work needs to be done to the area around a sensor.

In the following cases, the sonar sensors may not work properly. Have your vehicle checked by a dealer.
- The front or rear bumper has made contact with a hill, parking block, curb, embankment, etc.
- The vehicle has been involved in a frontal or rear collision.
- The vehicle has been driven through a deep puddle.

* Not available on all models

Brake System

■ Parking Brake

Use the parking brake to keep the vehicle stationary when parked. When the parking brake is applied, you can manually or automatically release it.



❶ Electric Parking Brake Switch

■ To apply

The electric parking brake can be applied any time the vehicle has 12-volt battery, no matter which position the power mode is in.

Pull the electric parking brake switch up gently and securely.

▶ The indicator in the switch comes on.
▶ The parking brake and brake system indicator (red) comes on.



❶ Electric Parking Brake Switch

■ To release

The power mode must be in ON in order to release the electric parking brake.

1. Depress the brake pedal.
2. Press the electric parking brake switch.
▶ The indicator in the switch goes off.
▶ The parking brake and brake system indicator (red) goes off.

Manually releasing the parking brake using the switch helps your vehicle to start slowly and smoothly when facing downhill on steep hills.

Continued

Brake System

When you depress the brake pedal, you may hear a whirring sound from the engine compartment. This is because the brake system is in operation, and it is normal.

Parking Brake

You may hear the electric parking brake system motor operating from the rear wheel area when you apply or release the parking brake. This is normal.

The brake pedal may slightly move due to the electric parking brake system operation when you apply or release the parking brake. This is normal.

You cannot apply or release the parking brake if the 12-volt battery goes dead.

If the 12-Volt Battery Is Dead P. 810

If you pull up and hold the electric parking brake switch while driving, the brakes on all four wheels are applied by the electric servo brake system until the vehicle comes to a stop. The electric parking brake then applies, and the switch should be released.

■ Automatic parking brake feature operation

If the automatic parking brake feature has been activated:


- The parking brake is applied automatically when you set the power mode to VEHICLE OFF.
- To confirm that the parking brake is applied, check if the parking brake and brake system indicator (red) is on.

➡ **Activating and deactivating the automatic parking brake feature** P. 693

■ To release automatically

Depressing the accelerator pedal releases the parking brake.

Use the accelerator pedal to release the parking brake when you are starting the vehicle facing uphill, or in a traffic jam.

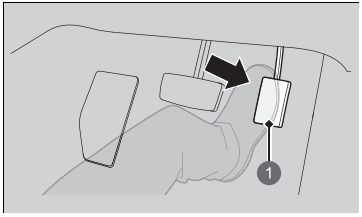

Gently depress the accelerator pedal. When on a hill, it may require more accelerator input to release.

▶ The parking brake and brake system indicator (red) goes off.

❶ Accelerator Pedal

You can release the parking brake automatically when:

- You are wearing the driver's seat belt.
- The power system is on.
- The transmission is not in P or N.

Parking Brake

In the following situations, the parking brake automatically operates.

- When the vehicle stops more than 10 minutes while ACC with Low Speed Follow is activated.
- When the driver's seat belt is unfastened while your vehicle is stopped automatically by ACC with Low Speed Follow.
- When the power system is turned off while ACC with Low Speed Follow is activated.
- When the vehicle stops with the automatic brake hold system activated for more than 10 minutes.
- When the driver's seat belt is unfastened while your vehicle is stopped and brake hold is applied.
- When the power system is turned off while brake hold is applied.
- When there is a problem with the brake hold system while brake hold is applied.

If the parking brake cannot be released automatically, release it manually.

When the vehicle is travelling uphill, the accelerator pedal may need to be pressed farther to automatically release the electric parking brake.

The parking brake cannot be released automatically while the following indicators are on:

- Malfunction indicator lamp
- Transmission system indicator

■ Activating and deactivating the automatic parking brake feature

With the power mode is in ON, carry out the following steps to either activate or deactivate the automatic parking brake feature.

1. Put the transmission into P.

2. Without depressing the brake pedal, pull up and release the electric parking brake switch.

▶ Check that the parking brake and brake system indicator (red) has come on.

3. Pull up and hold the electric parking brake switch. When you hear a beeping sound, release the switch and within three seconds pull up and hold the switch again.

4. When you hear a sound indicating that the procedure is completed, release the switch.

▶ Two beeps indicate that the feature has been activated.

▶ One beep indicates that the feature has been deactivated.

▶ When you have completed activating the feature, the parking brake will remain applied after you turn the power system off.

▶ To confirm that the parking brake is applied, check if the parking brake and brake system indicator (red) is on.

If you need to temporarily deactivate the feature for when having your vehicle towed, follow the procedure explained below.

1. Depress the brake pedal and bring the vehicle to a stop.

2. Set the power mode to VEHICLE OFF and then within two seconds push down the electric parking brake switch.

▶ Activation and deactivation settings for the feature will not be affected.

▶ Before temporarily deactivating the feature, make sure to first turn off both Adaptive Cruise Control (ACC) with Low Speed Follow and the automatic brake hold system.

▶ To confirm that the parking brake is applied, check if the parking brake and brake system indicator (red) is on.

Continued

Parking Brake

The parking brake may not be released automatically while the following indicators are on:

- Parking brake and brake system indicator (amber)
- VSA system indicator
- **ABS** indicator
- Supplemental restraint system indicator

Activating and deactivating the automatic parking brake feature

In cold climates, the parking brake may freeze in place if applied.

When parking the vehicle, chock the wheels and make sure the automatic parking brake feature is deactivated.

Also, when putting your vehicle through a conveyor-type car wash or when having your vehicle towed, deactivate the automatic parking brake feature and leave the parking brake released.

■ Foot Brake

Your vehicle is equipped with disc brakes at all four wheels. The brake assist system increases the stopping force when you depress the brake pedal hard in an emergency situation. The anti-lock brake system (ABS) helps you to retain steering control when braking very hard.

➔ **Brake Assist System** P. 699
➔ **Anti-lock Brake System (ABS)** P. 698

Foot Brake

Check the brakes after driving through deep water, or if there is a buildup of road surface water. If necessary, dry the brakes by lightly depressing the pedal several times.

If you hear a continuous metallic friction sound when applying the brakes, the brake pads need to be replaced. Have your vehicle checked by a dealer.

Applying constant pressure to the brakes while going down a long hill can cause the brakes to heat up, resulting in a loss of stopping power.
Therefore, when descending a long hill, release the accelerator pedal and allow regenerative braking to slow the vehicle down.
To adjust the rate of deceleration, use the deceleration paddle selector.
When the high voltage battery has fully recharged, regenerative braking may not be possible.


➔ **POWER Gauge** P. 146
➔ **CHARGE/DECEL Gauge** P. 146
➔ **High Voltage Battery Charge Level Gauge** P. 147
➔ **Deceleration Paddle Selector** P. 553

Do not rest your foot on the brake pedal while driving, as it will lightly apply the brakes and cause them to lose effectiveness over time and reduce pad life. It will also confuse drivers behind you.

■ Automatic Brake Hold

Keeps the brake applied after releasing the brake pedal until the accelerator pedal is pressed. You can use this system while the vehicle is temporarily stopped, like at traffic lights and in heavy traffic.

■ Turning on the system

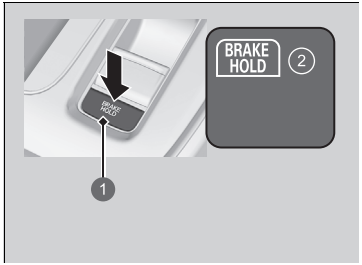

❶ Automatic Brake Hold Button
❷ Comes On

Fasten your seat belt properly, then turn the power system on. Press the automatic brake hold button.

▶ The automatic brake hold system indicator comes on. The system is turned on.

The system is in the previously selected on or off setting each time you fasten the driver's seat belt and turn the power system on.

Automatic Brake Hold

⚠WARNING

Activating the automatic brake hold system on steep hills or slippery roads may still allow the vehicle to move if you remove your foot from the brake pedal.

If a vehicle unexpectedly moves, it may cause a crash resulting in serious injury or death.

Never activate the automatic brake hold system or rely on it to keep a vehicle from moving when stopped on a steep hill or slippery roads.

⚠WARNING


Using the automatic brake hold system to park the vehicle may result in the vehicle unexpectedly moving.

If a vehicle moves unexpectedly, it may cause a crash, resulting in serious injury or death.

Never leave the vehicle when braking is temporarily kept by automatic brake hold and always park the vehicle by putting the transmission in P and applying the parking brake.

Continued

■ Activating the system

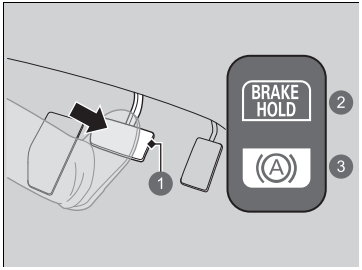


1 Brake Pedal
2 On
3 Comes On

Depress the brake pedal to come to a complete stop. The transmission must not be in P or R.

▶ The automatic brake hold indicator comes on. Braking is kept for up to 10 minutes.

▶ Release the brake pedal after the automatic brake hold indicator comes on.

■ Cancelling the system

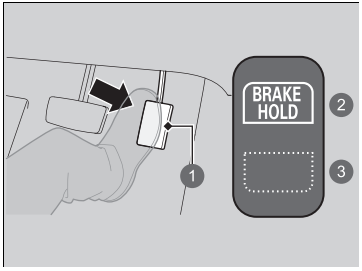

1 Accelerator Pedal
2 On
3 Goes Off

Depress the accelerator pedal while the transmission is in a position other than P or N. The system is cancelled and the vehicle starts to move.

▶ The automatic brake hold indicator goes off. The system continues to be on.

Automatic Brake Hold

⚠WARNING

When using the automatic brake hold, keep your foot on the brake pedal until the automatic brake hold indicator comes on.

If the vehicle unexpectedly moves, it may cause a crash resulting in serious injury or death.

Release your foot from the brake pedal after the automatic brake hold indicator comes on.

While the system is activated, you can turn the power system off or park the vehicle through the same procedure as you normally do.


When Stopped P. 701

You may hear an operating noise if the vehicle moves while the automatic brake hold system is in operation.

■ **The system automatically cancels when:**
- You engage the parking brake.
- You depress the brake pedal and put the transmission into P or R.

■ **The system automatically cancels and the parking brake is applied when:**
- Braking is kept for more than 10 minutes.
- The driver's seat belt is unfastened.
- The power system is turned off.
- There is a problem with automatic brake hold system.

■ **Turning off the automatic brake hold system**

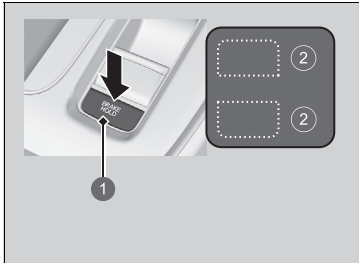

1 Automatic Brake Hold Button
2 Goes Off

Only the automatic brake hold system indicator comes on:
- Press the automatic brake hold button.
  ▶ The automatic brake hold system indicator goes off.

When the automatic brake hold indicator comes on at the same time:
- Press the automatic brake hold button with the brake pedal depressed.
  ▶ The automatic brake hold system indicator and the automatic brake hold indicator go off.

Turning off the automatic brake hold system

Make sure to turn off the automatic brake hold system before using an automated car wash.

If you turn the power system off or unfasten the driver's seat belt while the automatic brake hold system is on, the automatic brake hold system will automatically turn off. In this case, when the driver's seat belt is fastened and the power system is turned back on, the automatic brake hold system will turn on without needing to press the automatic brake hold button.

Anti-lock Brake System (ABS)

■ ABS

Helps to prevent the wheels from locking up, and helps you to retain steering control by pumping the brakes rapidly, much faster than you can.

The electronic brake distribution (EBD) system, which is part of the ABS, also balances the front-to-rear braking distribution according to vehicle loading.

You should never pump the brake pedal. Let the ABS work for you by always keeping firm, steady pressure on the brake pedal. This is sometimes referred to as "stomp and steer."

■ ABS operation

The brake pedal may pulsate slightly when the ABS is working. Depress the brake pedal and keep holding the pedal firmly down. On dry pavement, you will need to press on the brake pedal very hard before the ABS activates. However, you may feel the ABS activate immediately if you are trying to stop on snow or ice.

ABS may activate when you depress the brake pedal when driving on:
- Wet or snow covered roads.
- Roads paved with stone.
- Roads with uneven surfaces, such as potholes, cracks, manholes, etc.

When the vehicle speed goes under 10 km/h, the ABS stops.

Anti-lock Brake System (ABS)

NOTICE

The ABS may not function correctly if you use a tyre of the incorrect size or type.

If the **ABS** indicator comes on while driving, there may be a problem with the system.
While normal braking will not be affected, there is a possibility that the ABS will not be operating. Have your vehicle checked by a dealer immediately.

The ABS is not designed for the purpose of reducing the time or distance it takes for a vehicle to stop: It is designed to limit brake lockup which can lead to skidding and loss of steering control.

In the following cases, your vehicle may need more distance to stop than a vehicle without the ABS:
- You are driving on rough or uneven road surfaces, such as gravel or snow.
- The tyres are equipped with tyre chains*.

The following may be observed with the ABS system:
- Motor sounds coming from the engine compartment when the brakes are applied, or when system checks are being performed after the power system has been turned on and while the vehicle accelerates.
- Brake pedal and/or the vehicle body vibration when ABS activates.

These vibrations and sounds are normal to ABS systems and are no cause for concern.

* Not available on all models

Brake Assist System

Is designed to assist the driver by generating greater braking force when you depress the brake pedal hard during emergency braking.

■ Brake assist system operation


Press the brake pedal firmly for more powerful braking.

When brake assist operates, the pedal may wiggle slightly and an operating noise may be heard. This is normal. Keep holding the brake pedal firmly down.

Emergency Stop Signal

Activates when you brake hard while driving at 60 km/h or above to alert drivers behind you about sudden braking by rapidly flashing hazard warning lights. This may help to alert drivers behind you to take appropriate means to avoid a possible collision with your vehicle.

■ **When the system activates:**

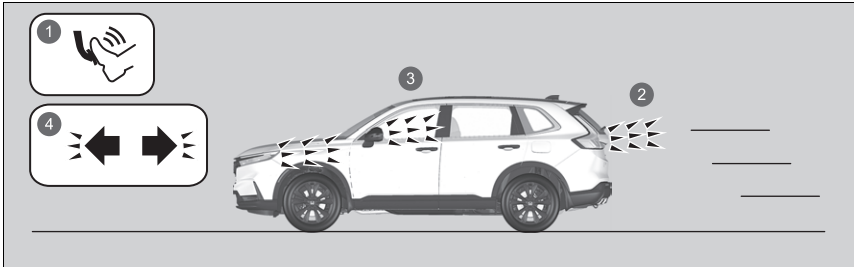

1. Hard Braking
2. Brake Lights Come On
3. Hazard Warning Lights Flash
4. Hazard Warning Indicators Blink

The hazard warning lights stop flashing when:
- You release the brake pedal.
- The ABS is deactivated.
- Your vehicle's decelerating speed becomes moderate.
- You press the hazard warning button.

Emergency Stop Signal

The emergency stop signal is not a system that can prevent a possible rear-end collision caused by your hard braking. It flashes the hazard warning lights at the time you are braking hard. It is always recommended to avoid hard braking unless it is absolutely necessary.

The emergency stop signal does not activate with the hazard warning button pressed in.

If the ABS stops working for a certain period during braking, the emergency stop signal may not activate at all.

When Stopped

1. Depress the brake pedal firmly and come to a complete stop.
2. With the brake pedal depressed, pull up the electric parking brake switch slowly, but fully.
3. Put the transmission into P.
▶ Do not release the brake pedal until you have confirmed that P is shown on the shift position indicator.
4. Turn the power system off.
▶ The parking brake and brake system indicator (red) goes off in about 30 seconds.

Always set the parking brake, especially if you are parked on an incline.

Parking Your Vehicle

⚠WARNING

The vehicle can roll away if left unattended without confirming that Park is engaged.

A vehicle that rolls away could cause a crash resulting in serious injury or death.

Always keep your foot on the brake pedal until you have confirmed that P is shown on the shift position indicator.

Do not park your vehicle near flammable objects, such as dry grass, oil, or timber.
Heat from the exhaust can cause a fire.

Continued

When Stopped

NOTICE

The following can damage the driveline:

- Depressing the accelerator and brake pedals simultaneously.
- Putting the transmission into P before the vehicle stops completely.


When facing uphill, do not hold the vehicle by depressing the accelerator pedal.
Doing so may cause the power system to overheat and fail.

In extremely cold temperatures, the parking brake may freeze up if applied. If such temperatures are expected, do not apply the parking brake but, if parking on a slope, either turn the front wheels so they will contact the curb if the vehicle rolls down the slope or block the wheels to keep the vehicle from moving. If you do not take either precaution, the vehicle may roll unexpectedly, leading to a crash.

Parking Sensor System

The corner and centre sensors monitor obstacles around your vehicle, and the beeper, driver information interface and audio/information screen let you know the approximate distance between your vehicle and the obstacle.

■ The Sensor Location and Range

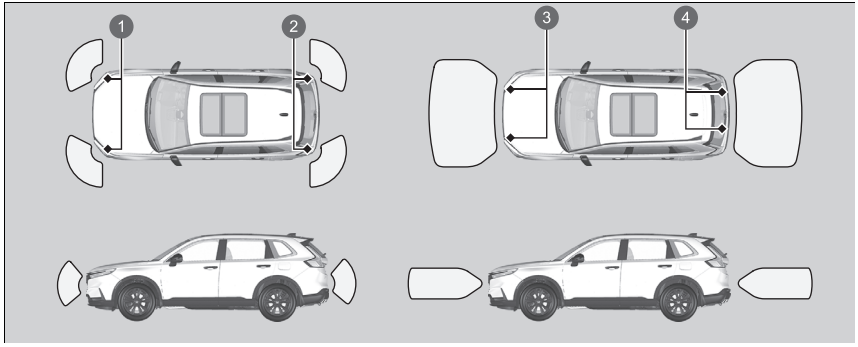

❶ Front Corner Sensors*
❷ Rear Corner Sensors
❸ Front Centre Sensors*
❹ Rear Centre Sensors

Parking Sensor System

Even when the system is on, always confirm if there is no obstacle near your vehicle before parking.

The system may not work properly when:
- The sensors are covered with snow, ice, mud, or dirt.
- The vehicle has been out in hot or cold weather.
- There is something nearby that emits ultrasonic waves or high frequency sounds.
- Driving in bad weather (rain, fog, snow, etc.).

The system may not detect these obstacles:
- Thin or low objects.
- Sonic-absorptive materials, such as snow, cotton, or sponge.
- Objects directly under the bumper.

The system may falsely detect obstacles in the following situations:
- The vehicle is on uneven surface, such as grass, bumps, or a hill.
- When close to other vehicles with sonar sensors or other objects that emit ultrasonic waves.
- There is splashing water near the sensors due to heavy rains, etc.

Do not put any accessories on or around the sensors.

Models with front sensors

▶If you put any accessories (such as a towing hitch* or bicycle rack) on or around the rear sensors, the system may activate if it detects these accessories as an obstacle. In this case, turn off the rear sensor.

➡ **Customized Features** P. 366, 465

* Not available on all models

Continued

■ Parking Sensor System On and Off

You can turn the system on and off using the driver information interface.

Australian, Bangladeshi, Bhutanese, and New Zealand models

The beeper and the warning display are turned off.

➔ **Switching the Display** P. 169
➔ **Safety Support** P. 184

The front corner*, rear corner and rear centre sensors start to detect an obstacle when the transmission is in R, and the vehicle speed is less than 9 km/h.

Models with front sensors

The front corner and front centre sensors start to detect an obstacle when the transmission is in any position other than P or R, and the vehicle speed is less than 9 km/h.

Parking Sensor System

When you set the power mode to ON, the system will be in the previously selected condition.

Models with front sensors

You can turn the rear parking sensor system on and off using the audio/information screen.

➔ **Customized Features** P. 366, 465

Models with Multi-View Camera

When the vehicle is moving forward at 9 km/h or less, the system detects any obstacles in front of the vehicle and the forward camera image will display as the distance between them decreases.

➔ **Multi-View Camera*** P. 715


You can customize whether or not to display the forward camera image when an obstacle is detected.

➔ **Customized Features** P. 366, 465

* Not available on all models

■ Screen Operation

Models with Multi-View Rear Camera

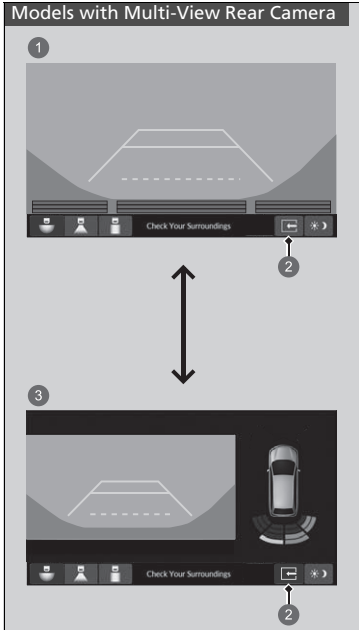


You can switch between split view off and split view on by touching the split screen tab.

❶ Split View Off
❷ Split Screen Tab
❸ Split View On

Continued

Models with Multi-View Camera

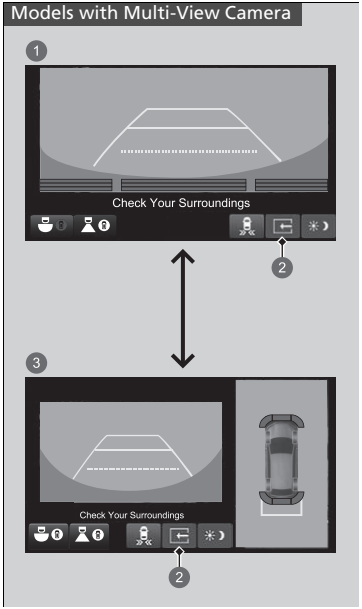

❶ Split View Off
❷ Split Screen Tab
❸ Split View On

When the Distance Between Your Vehicle and Detected Obstacles Becomes Shorter


Australian, Bangladeshi, Bhutanese, and New Zealand models

Parking Sensor Indicator

The parking sensor indicator blinks.

▶ If the system is turned off, only the parking sensor indicator will blink when an obstacle is detected.

All models

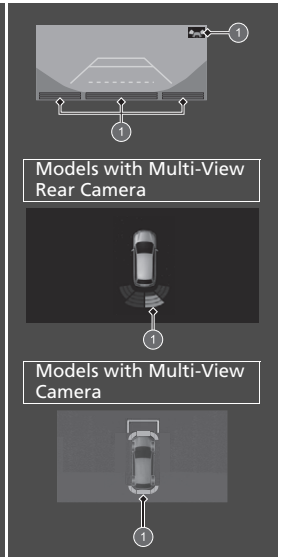Interval between beeps	Distance between the Bumper and Obstacle		Indicator	Driver information interface	Audio/information screen
	Corner Sensors	Centre Sensors			
Moderate	—	Front*: About 70-60*4 or 75-65*5 cm Rear: About 110-75*4 or 110-70*5 cm	Comes on*1/ Blinks*2 in Yellow*3		
Short	Front*: About 55-45*4 or 60-45*5 cm Rear: About 60-45*4 or 65-45*5 cm	Front*: About 60-50*4 or 65-55*5 cm Rear: About 75-60*4 or 70-60*5 cm	Comes on*1/ Blinks*2 in Amber		
Very short	About 45-35 cm	Front*: About 50-40*4 or 55-45*5 cm Rear: About 60-50 cm			
Continuous	About 35 cm or less	Front*: About 40*4 or 45*5 cm or less Rear: About 50 cm or less	Comes on*1/ Blinks*2 in Red		

* Not available on all models

Continued

*1:On the driver information interface
*2:On the audio/information screen
*3:At this stage, only the centre sensors detect obstacles.
*4:Australian, Bangladeshi, Bhutanese, and New Zealand models
*5:Except Australian, Bangladeshi, Bhutanese, and New Zealand models
❶ Indicators light up where the sensor detects an obstacle.

To temporarily turn off the beeper, press the left[*1] or right[*2] selector wheel while it is sounding. Temporary OFF will be cancelled when the shift position is switched or the vehicle speed reaches 14 km/h or higher.

*1: Models with A-type meter
*2: Models with B-type meter

Cross Traffic Monitor*

Monitors the rear corner areas using the radar sensors when reversing, and alerts you if a vehicle approaching from a rear corner is detected.

The system is convenient when you are backing out of a parking space.

Cross Traffic Monitor*

⚠CAUTION

Cross Traffic Monitor cannot detect all approaching vehicles and may not detect an approaching vehicle at all.

Failure to visually confirm that it is safe to back up the vehicle before doing so may result in a collision.


Do not solely rely on the system when reversing; always also use your mirrors, and look behind and to the sides of your vehicle before reversing.

The parking sensor system's alerting buzzer overrides the Cross Traffic Monitor buzzer when the sensors are detecting obstacles at the closest range.

* Not available on all models

Continued

■ How the System Works

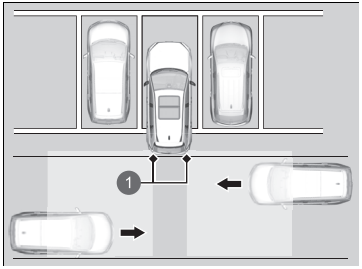

The system activates when:

- The power mode is in ON.
- The Cross Traffic Monitor is turned on.
  ➡ **Cross Traffic Monitor On and Off** P. 712
- The transmission is in R.
- Your vehicle is moving at 5 km/h or lower.

❶ Radar sensors:
Underneath the rear bumper corners.

When a vehicle is detected approaching from a rear corner, Cross Traffic Monitor alerts you with a buzzer and a displayed warning.

The system will not detect a vehicle that approaches from directly behind your vehicle, nor will it provide alerts about a detected vehicle when it moves directly behind your vehicle.

The system does not provide alerts for a vehicle that is moving away from your vehicle, and it may alert for pedestrians, bicycles, or stationary objects.

Cross Traffic Monitor*

Cross Traffic Monitor may not detect or may delay detecting an approaching vehicle, or may alert detection without an approaching vehicle under the following conditions:

- An obstacle, such as another vehicle or a wall near your vehicle's rear bumper, is blocking the radar sensor's scope.
- Your vehicle is moving at a speed of about 5 km/h or higher.
- A vehicle is approaching at a speed other than between about 10 km/h and 25 km/h.
- The system picks up external interference such as other radar sensors from another vehicle or strong radio wave transmitted from a facility nearby.
- Either corner of the rear bumper is covered with snow, ice, mud or dirt.
- When there is bad weather.
- Your vehicle is on an incline.
- Your vehicle is tilted due to a heavy luggage in the rear.
- Your vehicle is reversing towards a wall, a pole, a vehicle, and so on.

If the rear bumper or the sensors have been improperly repaired or the rear bumper has been deformed. Have your vehicle checked by a dealer.


For proper operation, always keep the rear bumper corner area clean.
Do not cover the rear bumper corner area with labels or stickers of any kind.

* Not available on all models

When the System Detects a Vehicle


An arrow icon appears on the side a vehicle is approaching on the audio/information screen.

Models with Multi-View Rear Camera

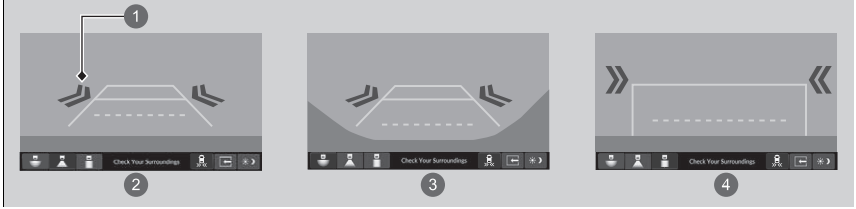

1. Arrow Icon
2. Normal View
3. Wide View
4. Top Down View

Models with Multi-View Camera

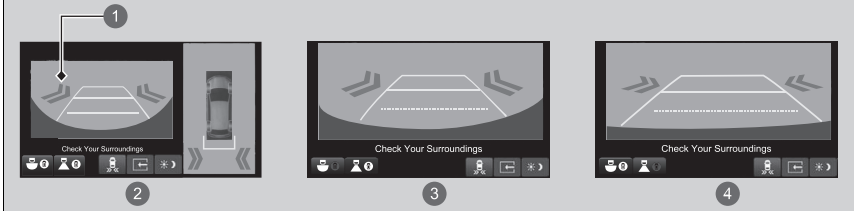

1. Arrow Icon
2. Rear Ground View
3. Rear Wide View
4. Rear Normal View

Continued

When the System Detects a Vehicle


If the on the lower right changes to in amber when the transmission is in R, mud, snow, ice and other debris may have accumulated in the vicinity of the sensor. The system is temporarily cancelled. Check the bumper corners for any obstructions, and thoroughly clean the area if necessary.

If the comes on when the transmission is in R, there may be a problem with the Cross Traffic Monitor system. Do not use the system and have your vehicle checked by a dealer.

If the display remains the same with the transmission in R, there may be a problem with the rear camera system and the Cross Traffic Monitor system. Do not use the system and have your vehicle checked by a dealer.

■ Cross Traffic Monitor On and Off

Models with Multi-View Rear Camera

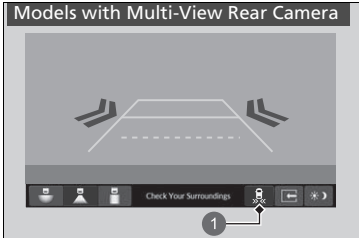


❶ Cross Traffic Monitor Icon

The system can be turned on and off on the audio/information screen by pressing the Cross Traffic Monitor icon.

You can also switch the system on and off from the customized feature on the audio/information screen.

➔ **Customized Features** P. 366, 465

Models with Multi-View Camera

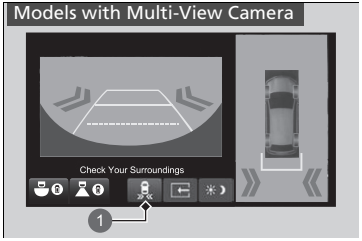


❶ Cross Traffic Monitor Icon

About Your Multi-View Rear Camera

The audio/information screen can display your vehicle's rear view. The display automatically changes to the rear view when the transmission is put into R.

Multi-View Rear Camera Display Area

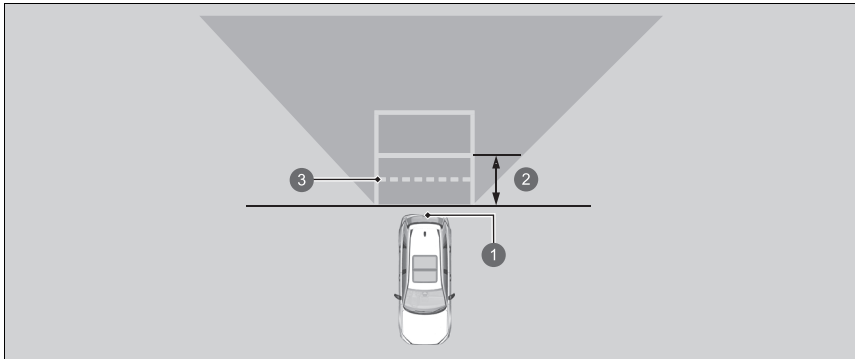

1 Camera
2 Approx. 1 m
3 Tailgate open range

About Your Multi-View Rear Camera

The rear camera view is restricted. You cannot see the corner ends of the bumper or what is underneath the bumper. Its unique lens also makes objects appear closer or farther than they actually are.

Visually confirm that it is safe to drive before backing up. Certain conditions (such as weather, lighting, and high temperatures) may also restrict the rear view. Do not rely on the rearview display which does not give you all information about conditions at the back of your vehicle.


The rear camera view is displayed prior to the audio/information screen.

If the camera lens is covered with dirt or moisture, use a soft, moist cloth to keep the lens clean and free of debris.

* Not available on all models

Continued

You can view three different camera modes on the audio/information screen. Touch the appropriate icon to switch the mode.

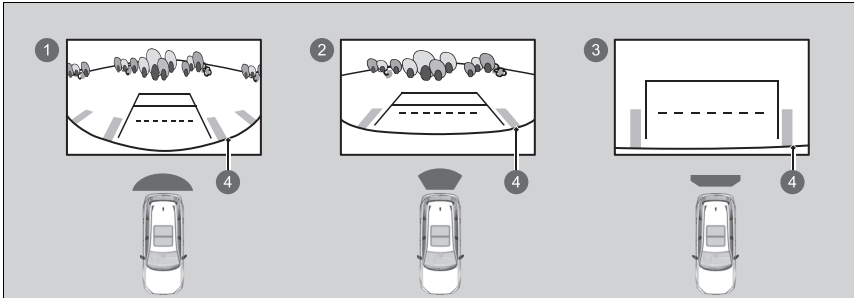

❶ Wide View Mode
❷ Normal View Mode
❸ Top Down View Mode
❹ Bumper

- If you were last using Wide view mode or Normal view mode, the same view mode will be activated the next time you put the transmission into R.
- If you were using Top down view mode before you turned the power system off, Wide view mode will be activated the next time you set the power mode to ON and put the transmission into R.
- If you were using Top down view mode and 10 seconds elapsed after you took the transmission out of R, Wide view mode will be activated the next time you put the transmission into R.
- If you were using Top down view mode and put the transmission back into R within 10 seconds after you took it out of R, Top down view mode will be activated.

About Your Multi-View Rear Camera

You can change the **Fixed Guideline** and **Dynamic Guideline** settings.

➡ **Customized Features** P. 366, 465

Fixed Guideline
ON: Guidelines appear when you put the transmission into R.
OFF: Guidelines do not appear.
Dynamic Guideline
ON: Guidelines move according to the steering wheel direction.
OFF: Guidelines do not move.

If the vehicle's rear view is not displayed on the audio/information screen while the shift position is in R, there may be a problem with the system. Have your vehicle checked by a dealer immediately.

Multi-View Camera*

Is a four camera system that views areas commonly known as "blind spots" from different angles, then displays the images on the audio/information screen. This system can be used to:

- Check for obstacles when you are moving in R.
  - **Checking for obstacles at the back of your vehicle** P. 722
- Check for obstacles in front of the vehicle when parking or maneuvering in confined areas.
  - **Checking the front and sides of your vehicle** P. 724
  - **Checking the sides of your vehicle** P. 727
- Check the right and left sides of the vehicle while crossing at intersections with poor visibility (obstructed view, etc.).
  - **Checking from the front blind view at intersections** P. 726

Multi-View Camera*

⚠WARNING

Failure to visually assess the area around the vehicle (directly or by use of the mirrors) may result in a crash causing serious injury or death.

The areas shown in the multi-view camera system display are limited. The display may not show all pedestrians or other objects around your vehicle.

Do not solely rely only on the multi-view camera system display to assess whether it is safe to move your vehicle.

⚠WARNING

Failure to pay proper attention to your surroundings while driving may result in a crash causing serious injury or death.


To help mitigate the chances of a collision, only look at the multi-view camera system display when it is safe to do so.

The multi-view camera system does not eliminate all blind spots. The system is for your convenience only.


* Not available on all models

Continued

■ Displaying an Image From the Multi-View Cameras

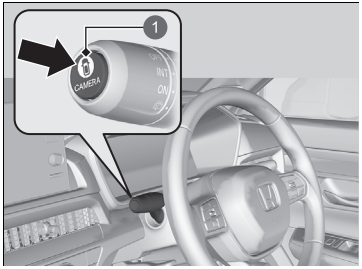

❶ **CAMERA** Button

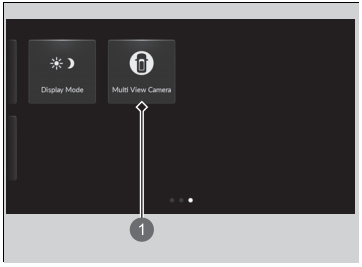

❶ **Multi View Camera**

■ For frontal views:
Press the **CAMERA** button or select **Multi View Camera** when the vehicle is stationary or moving at 20 km/h or slower. Press the button again to switch camera views.

■ For rear views:
Change the shift position to R when the vehicle is stationary. Press the **CAMERA** button again to switch to rear view mode. You can customize the display setting.

➡ **Customized Features** P. 366, 465

Multi-View Camera*


Always keep the camera lenses clean and free from debris.

The navigation system is disabled when the shift position is in R.


If you press the **CAMERA** button or select **Multi View Camera** while the vehicle speed is more than 25 km/h, the standby screen appears.
When the vehicle speed is reduced below 20 km/h, the screen switches to a multi-view camera system image.

* Not available on all models

■ Camera Locations and Images

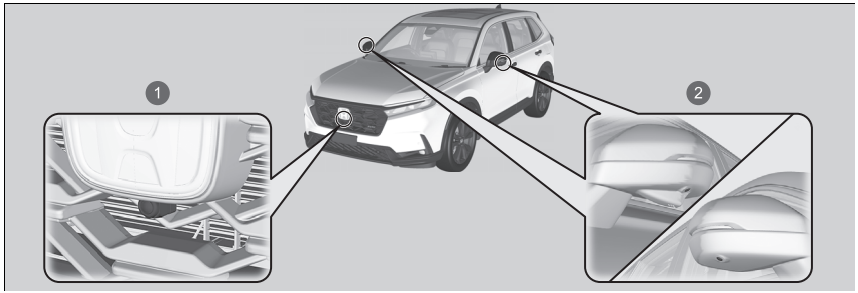


❶ Front View Camera
❷ Side View Cameras

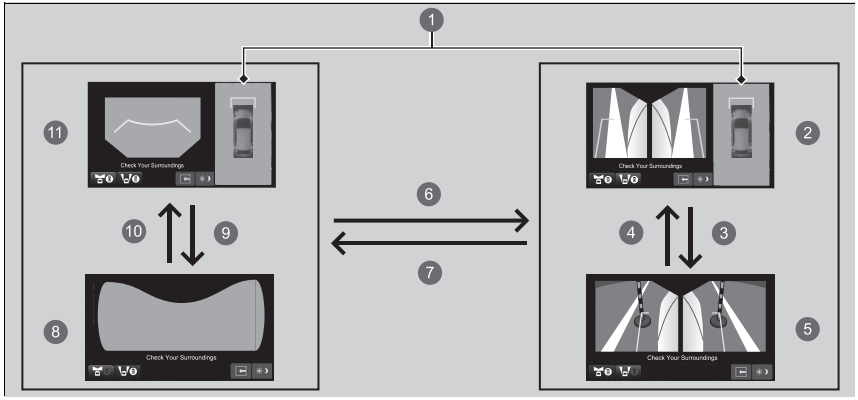


Continued

❶ Ground View: An overhead view created by the combination of images captured by four cameras.
❷ Left and Right Side View + Ground View
❸ or
❹ or
❺ Left and Right Side View
❻ or or **CAMERA** button
❼ or
❽ Front Blind View
❾ or
❿ or
⓫ Front View + Ground View

The unique multi-view camera lenses make distances appear differently than they actually are - objects seen on the audio/information screen may appear closer or further away, and may be distorted. This becomes more apparent the further away an object is from your vehicle.


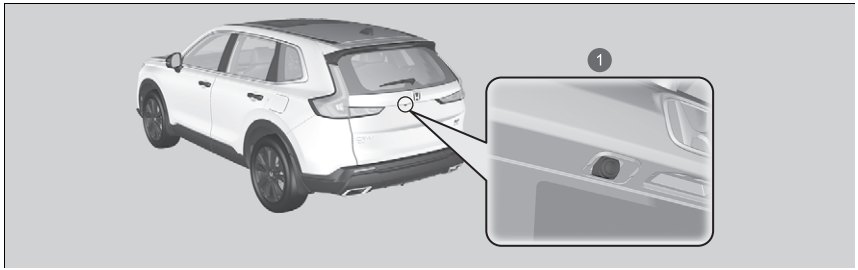


❶ Rear View Camera

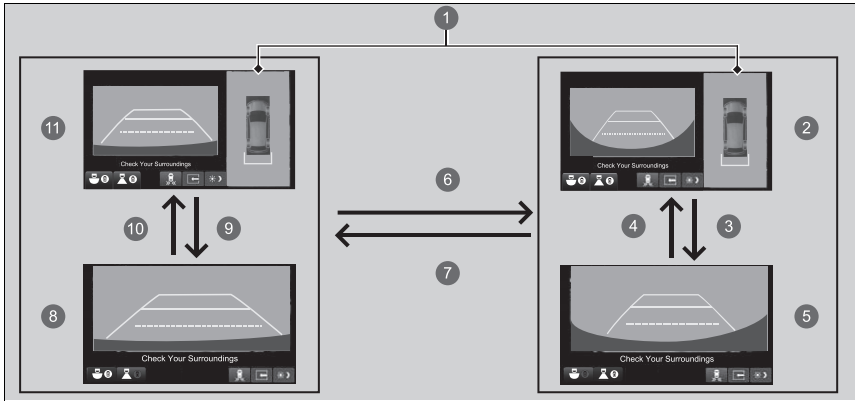

❶ Ground View: An overhead view created by the combination of images captured by four cameras.
❷ Rear Wide View + Ground View
❸ or

Continued

❹  or
❺ Rear Wide View
❻  or or **CAMERA** button
❼  or or **CAMERA** button
❽ Rear Normal View
❾  or
❿  or
⓫ Rear Normal View + Ground View

The unique multi-view camera lenses make distances appear differently than they actually are - objects seen on the audio/information screen may appear closer or further away, and may be distorted. This becomes more apparent the further away an object is from your vehicle.

■ Reference Lines and Guide Lines

Following can be displayed when the multi-view camera system is on.
Fixed Guideline: Helps you to get a sense of a distance between your vehicle and the surroundings. The distance may appear differently than the actual distance.
Dynamic Guideline: Indicates vehicle direction while the steering wheel is in the current position.

Displaying an Image From the Multi-View Cameras

The positions/distances indicated by the guidelines and camera views on the display may differ from the actual positions/distances due to the changes in the vehicle height, road conditions, and other factors. The guidelines should be used as a reference only.

The guidelines can be turned on and off using the audio/information screen.
➡ **Customized Features** P. 366, 465


If you turn the guidelines off, they remain off until you turn them back on.

Continued

■ Using the Multi-View Camera


■ Checking for obstacles at the back of your vehicle

The display automatically changes to the rear view when the shift position is changed to R.

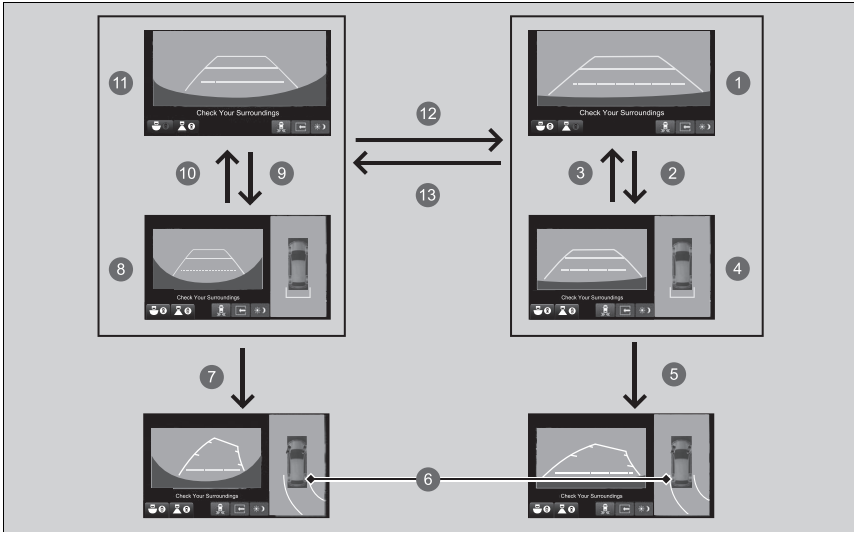

Using the Multi-View Camera

The ground view can be displayed even with the door mirrors folded. However, the viewable angle and blind spot change.

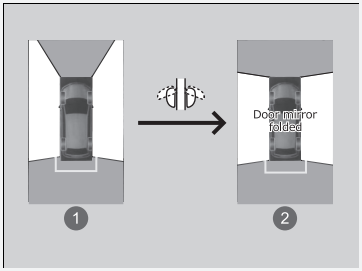


1 Not folded
2 Folded

❶ Rear Normal View
❷ or
❸ or
❹ Rear Normal View + Ground View
❺ When the steering wheel is turned more than 90 degrees.
❻ The projection lines appear 35 cm outside the vehicle body.
❼ When the steering wheel is turned more than 90 degrees.
❽ Rear Wide View + Ground View
❾ or
❿ or
⓫ Rear Wide View
⓬ or or **CAMERA** button
⓭ or or **CAMERA** button

Checking for obstacles at the back of your vehicle

When changing the shift position from/to R, you may experience a delay in switching between the audio/information screen and a rear view image.

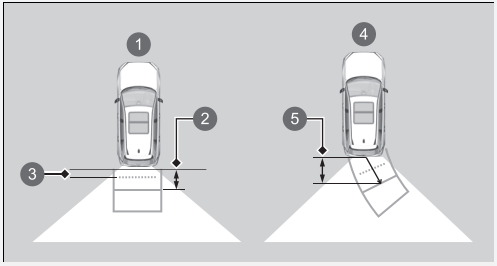


Approximate distances:
❶ The guidelines indicate
❷ 1.1 m
❸ 80 cm
❹ The projection lines indicate
❺ 1.1 m

Continued


■ Checking the front and sides of your vehicle

You can display the front ground view screen using all the four cameras for the system. Pressing the **CAMERA** button when the vehicle speed is at below 20 km/h changes the image as follows.

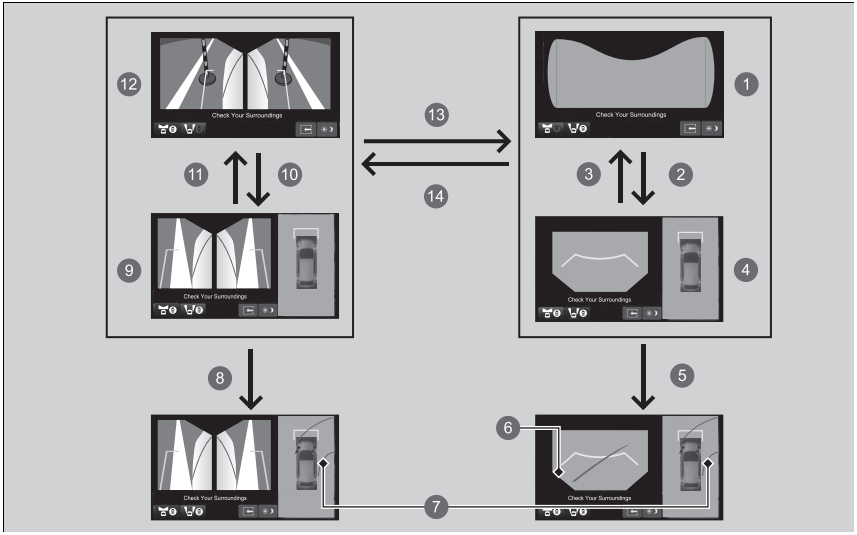

Checking the front and sides of your vehicle

If the vehicle speed exceeds 25 km/h while the front or side view image from the multi-view camera is displayed, the screen automatically switches to the audio/information screen.

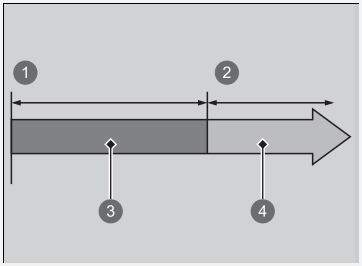


1. 0 km/h
2. 25 km/h
3. Camera Screen
4. Audio/Information Screen

❶ Front Blind View
❷ or
❸ or
❹ Front View + Ground View
❺ When the steering wheel is turned more than 90 degrees.
❻ Blind spots appear in black.
❼ The projection lines appear 35 cm outside the vehicle body.
❽ When the steering wheel is turned more than 90 degrees.
❾ Left and Right Side View + Ground View
❿ or
⓫ or
⓬ Left and Right Side View
⓭ or
⓮ or or **CAMERA** button

Checking the front and sides of your vehicle

Approximate distance the reference line indicates

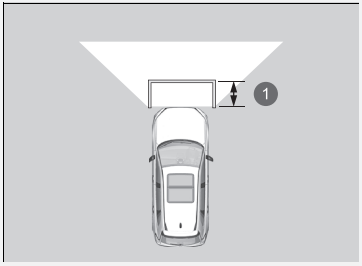


❶ 1.1 m

Continued

■ Checking from the front blind view at intersections

The front blind view screen is useful when you need to check for vehicles crossing from either direction at an intersection with poor visibility.

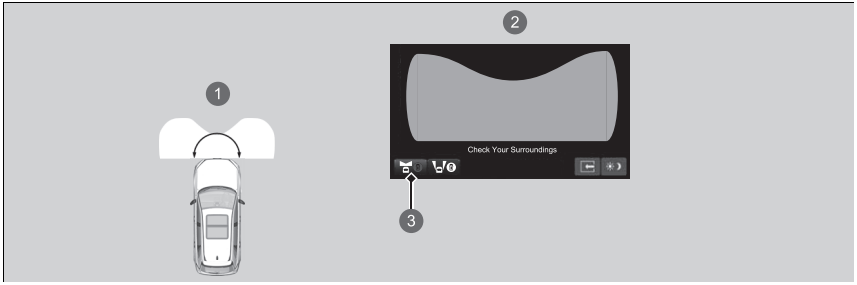


❶ The angle provided by the front blind view screen is 180 degrees.
❷ Front Blind View Screen
❸ When pressing the **CAMERA** button or selecting **Multi View Camera** and Front blind view icon.

Checking from the front blind view at intersections

The front blind view is a wide-angled view. The image will be largely distorted, and objects may appear closer or more distant than they actually are.

■ Checking the sides of your vehicle

The side view screens are convenient when you pull over at a curb or tollbooth, or slowly pass by oncoming vehicles on a narrow road.

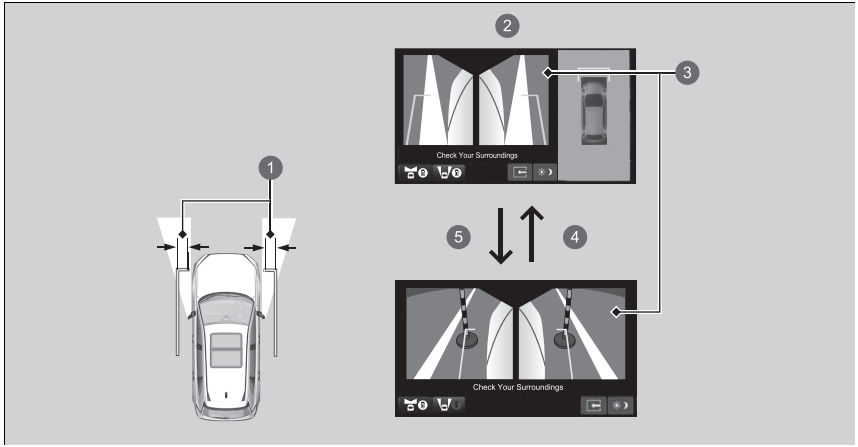

❶ 40 cm
❷ Side View Screen
❸ Side Views: The images from the side cameras
❹ or
❺ or

Approximate distance the projection lines indicate is 40 cm from the vehicle.

Checking the sides of your vehicle

When the door mirrors are folded, the side views cannot be displayed.

Continued

■ Multi-View Camera Limitations

The system may not work properly under the following conditions.

Conditions		Solutions
The projection line is not accurate.		Have your vehicle checked by a dealer.
The images may not appear clearly when:	• You activate the system in bad weather (heavy rain, snow, fog, etc.) or in the dark. • Camera temperatures are high. • A sudden change between light and dark such as an entrance or exit of a tunnel. • You drive into the sunlight (e.g., at dawn or dusk.) • A camera lens is scratched.	Do not use the multi-view camera system but rely only on visual confirmation until the conditions allow the system to work properly.
	• A camera lens is covered with dirt, moisture, or debris. • When water drops or insects get on the camera lens.	Clean camera lenses with a soft cloth moisturised with water, mild detergent or glass cleaner.
	• The audio/information screen is dirty.	Wipe off the screen using a soft dry cloth.
A camera angle is altered.	A camera or the area around the camera has been severely impacted.	Do not use the multi-view camera system and contact a dealer.
An error message is displayed while the multi-view camera system is in use.		
The image does not come on the screen when you press the **CAMERA** button or select **Multi View Camera** on the audio/information screen and the vehicle is moving at 20 km/h or slower.		

Fuel Information

■ Fuel recommendation

Indonesian models

Unleaded petrol, research octane number 90 or higher

Use of lower octane petrol can cause a persistent, heavy metallic knocking noise that can lead to engine damage.

Taiwanese models

Unleaded petrol, research octane number 92 or higher

Use of lower octane petrol can cause a persistent, heavy metallic knocking noise that can lead to engine damage.

Thai models

Unleaded petrol/gasohol up to E20 (80% petrol and 20% ethanol), research octane number 91 or higher

Use of lower octane petrol can cause a persistent, heavy metallic knocking noise that can lead to engine damage.

Except Indonesian, Taiwanese and Thai models

Unleaded petrol, research octane number 91 or higher

Use of lower octane petrol can cause a persistent, heavy metallic knocking noise that can lead to engine damage.

Fuel Information

NOTICE

Use of petrol that contains lead presents the following risks:

- Damage to the exhaust system including the catalytic converter
- Damage to the engine and fuel system
- Detrimental effects on the engine and other systems


Continued

■ **Fuel tank capacity: 57 L**


■ **Engine cleaner**

Fuel quality varies by region. Add genuine injector cleaner agent according to the time and distance instructions in the maintenance schedule.
Please use a genuine Honda injector cleaner agent. If not available, please use a PEA (polyetheramine) based cleaning agent instead.
Regular use of injector cleaner may be needed in countries or regions without a maintenance schedule. Consult your dealer for more information.

How to Refuel

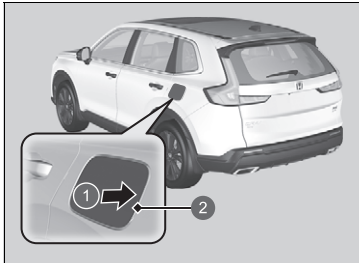

❶ Press
❷ Fuel Fill Door

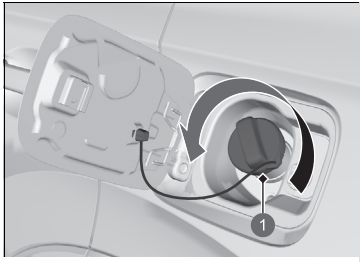

❶ Cap

1. Stop your vehicle with the service station pump on the left side of the vehicle in the rear.
2. Turn the power system off.
3. Unlock the driver's door.
▶ The fuel fill door on the outer side of the vehicle will unlock.
4. Press and release the area indicated by the arrow to release the fuel fill door. You will hear a click and the lid will open slightly.
5. Manually pull the fuel fill door to a fully open position.
6. Remove the fuel fill cap slowly. If you hear a release of air, wait until this stops, then turn the knob slowly to open the fuel fill cap.

How to Refuel

⚠WARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Turn the power system off, and keep heat, sparks, and flames away.
- Handle fuel only outdoors.
- Wipe up spills immediately.


⚠CAUTION

The filler nozzle automatically stops to leave space in the fuel tank so that fuel does not overflow as a result of changes in air temperature.

Do not continue to add fuel after the filler nozzle has automatically stopped. Additional fuel can exceed the full tank capacity and cause fuel to spill.

Use the lock tab or the master door lock switch to unlock the fuel fill door.
The vehicle doors and fuel fill door automatically relock if the remote unlock function is used. This can be deactivated by briefly opening then closing the driver's door.

Continued

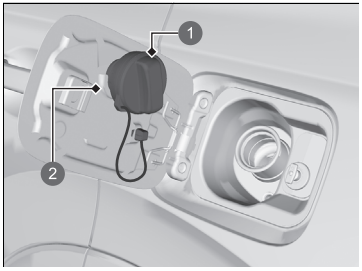

1 Cap
2 Holder

7. Place the fuel fill cap in the holder.
8. Insert the fuel filler nozzle fully.
▶ When the tank is full, the filler nozzle will click off automatically. This leaves space in the fuel tank in case the fuel expands with a change in the temperature.
9. After filling, replace the fuel fill cap, tightening it until you hear it click at least once.
▶ Shut the fuel fill door by hand.

How to Refuel

Using the Walk away auto lock feature will also lock the fuel fill door. Always make sure both the driver's door and fuel fill door are unlocked before attempting to open the fuel fill door.

Locking the doors and tailgate (Walk away auto lock) P. 204

Improving Fuel Economy and Reducing CO_2 Emissions

Achieving fuel economy and reducing CO_2 emissions is dependent on several factors, including driving conditions, load weight, idling time, driving habits, and vehicle condition. Depending on these and other factors, you may not achieve the rated fuel economy of this vehicle.

Maintenance and Fuel Economy

You can optimize your fuel economy with proper maintenance of your vehicle. Follow the maintenance schedule and, if necessary, consult the service information provided for your vehicle.

Maintenance Schedule P. 739

- Use engine oil with the viscosity recommended.
  Recommended Engine Oil P. 747
- Maintain the specified tyre pressure.
- Do not load the vehicle with excess luggage.
- Keep your vehicle clean. A buildup of snow or mud on your vehicle's underside adds weight and increases wind resistance.

Improving Fuel Economy and Reducing CO_2 Emissions


Direct calculation is the recommended method to determine actual fuel consumed while driving.

100	×	Litres of fuel	÷	Kilometres driven	=	L per 100 km

Kilometres driven	÷	Litres of fuel	=	Kilometres per Litre

Maintenance

This chapter discusses basic maintenance.

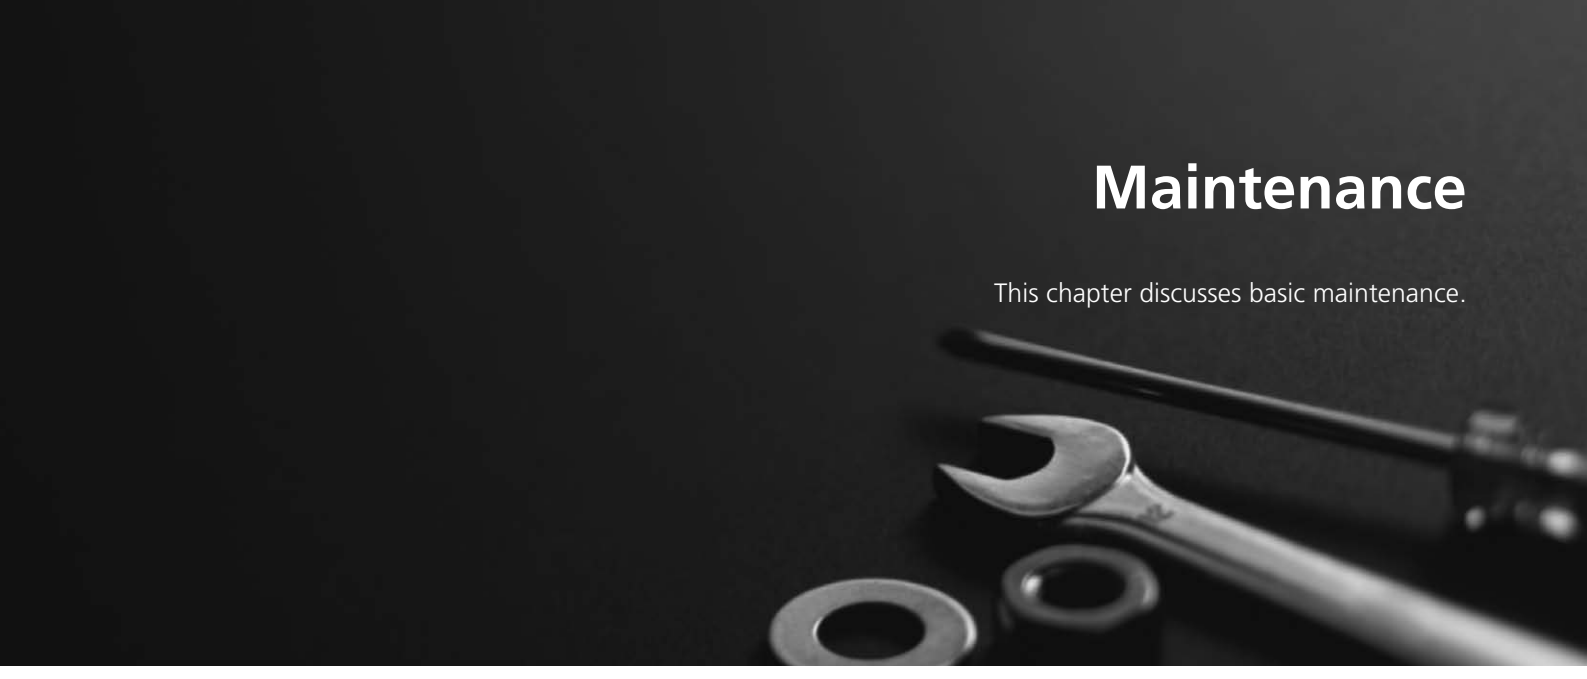

Before Performing Maintenance
Inspection and Maintenance 736
Safety When Performing Maintenance 737
Parts and Fluids Used in Maintenance Service 738
Maintenance Schedule 739
Severe Conditions 742
Maintenance Record (On Vehicles without Service Book) 743
Maintenance Under the Bonnet
Maintenance Items Under the Bonnet ...744
Opening the Bonnet 745
Recommended Engine Oil 747
Oil Check 748
Adding Engine Oil 749
Engine Coolant 750
High Voltage System Coolant 753
Transmission Fluid 754
Brake Fluid 755
Refilling Window Washer Fluid 756
Fuel Filter 756
Replacing Light Bulbs 757
Checking and Maintaining Wiper Blades 760
Checking and Maintaining Tyres
Checking Tyres 764
Wear Indicators 765
Tyre Service Life 765
Tyre and Wheel Replacement 766
Tyre Rotation 767
Snow Traction Devices 768
12-Volt Battery 769
Remote Transmitter Care
Replacing the Remote Battery 772
Climate Control System Maintenance 775
Cleaning
Interior Care 778
Exterior Care 781
Accessories and Modifications 785

Inspection and Maintenance

For your safety, perform all listed inspections and maintenance to keep your vehicle in good condition. If you become aware of any abnormality (noise, smell, insufficient brake fluid, oil residue on the ground, etc.), have your vehicle inspected by a dealer. Refer to the Service Book that came with your vehicle/maintenance schedule in this owner's manual for detailed maintenance and inspection information.

➡ **Maintenance Schedule** P. 739

■ Types of Inspection and Maintenance

■ Routine inspections

Perform inspections before long distance trips, when washing the vehicle, or when refueling.

■ Periodic inspections

- Check the brake fluid level monthly.
  ➡ **Brake Fluid** P. 755
- Check the tyre pressure monthly. Examine the tread for wear and foreign objects.
  ➡ **Checking and Maintaining Tyres** P. 764
- Check the operation of the exterior lights monthly.
  ➡ **Replacing Light Bulbs** P. 757
- Check the condition of the wiper blades at least every six months.
  ➡ **Checking and Maintaining Wiper Blades** P. 760

Safety When Performing Maintenance

Some of the most important safety precautions are given here. However, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether you should perform a given task.

■ Maintenance Safety

- To reduce the possibility of fire or explosion, keep cigarettes, sparks, and flames away from the 12-volt battery, all High Voltage systems, and all fuel related parts.
- Never leave rags, towels, or other flammable objects under the bonnet.
  ▶ Heat from the surrounding parts can ignite them, causing a fire.
- To clean parts, use a commercially available degreaser or parts cleaner, not petrol.
- Wear eye protection and protective clothing when working with the 12-volt battery or compressed air.
- Engine exhaust contains carbon monoxide, which is poisonous and can kill you.
  ▶ Only operate the engine if there is sufficient ventilation.

Safety When Performing Maintenance

⚠WARNING

Improperly maintaining this vehicle or failing to correct a problem before driving can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations and schedules in this owner's manual/Service Book.

⚠WARNING

Failure to properly follow maintenance instructions and precautions can cause you to be seriously hurt or killed.

Always follow the procedures and precautions in this owner's manual.

Continued

■ Vehicle Safety

- The vehicle must be in a stationary condition.
  ▶ Make sure your vehicle is parked on level ground, the parking brake is set, and the power system is turned off.
- Make sure that the radiator fan is stopped before inspecting the engine compartment.
  ▶ Depending on the vehicle condition, the radiator fan may operate even when the power mode is in VEHICLE OFF.
- Be aware that hot parts can burn you.
  ▶ Make sure to let the power system including the engine and exhaust system cool thoroughly before touching vehicle parts.
- Be aware that moving parts can injure you.
  ▶ Do not activate the power system unless instructed, and keep your hands and limbs away from moving parts. When the power mode is on, the engine can automatically start, or the radiator fan may start operating without the engine running.
- Do not touch the high voltage battery and wiring (orange).

Parts and Fluids Used in Maintenance Service

The use of Honda Genuine Parts and fluids is recommended when maintaining and servicing your vehicle. Honda Genuine Parts are manufactured according to the same high quality standards used in Honda vehicles.

Parts and Fluids Used in Maintenance Service

NOTICE

Do not press the engine cover forcibly. This may damage the engine cover and component parts.

Maintenance Schedule

If your vehicle comes with the service book, the maintenance schedule for your vehicle is available in the book. For vehicles without the service book, refer to the following maintenance schedules.

The maintenance schedule outlines the minimum required maintenance that you should perform to ensure the troublefree operation of your vehicle. Due to regional and climatic differences, some additional servicing may be required. Please consult the service information provided for your vehicle for a more detailed description.

Maintenance work should be performed by properly trained and equipped technicians. Your authorised dealer meets all of these requirements.

Continued

Except Australian and New Zealand models

Except Right-hand Drive Type for African

Service at the indicated distance or time - whichever comes first.		km x 1,000	20	40	60	80	100	120	140	160	180	200
		months	12	24	36	48	60	72	84	96	108	120
Replace engine oil		Normal	Every 10,000 km or 1 year									
		Severe	Every 5,000 km or 6 months									
Replace engine oil filter		Normal	Every 20,000 km or 2 years									
		Severe	Every 10,000 km or 1 year									
Replace air cleaner element			Every 30,000 km									
Replace spark plugs			Every 100,000 km									
Replace engine coolant			At 200,000 km or 10 years, thereafter every 100,000 km or 5 years									
Add genuine injector cleaner agent*1			Every 10,000 km or 1 year									
Replace transmission fluid		Normal	Every 150,000 km or 6 years									
		Severe	Every 75,000 km or 3 years*2 Every 80,000 km or 4 years*3									
Replace rear differential fluid*4			•				•				•	
Replace dust and pollen filter			•	•	•	•	•	•	•	•	•	•
Inspect front and rear brakes			Every 10,000 km or 1 year									

*1:Regular use of injector cleaner is required for models designated for Afghanistan, Bangladesh, Cape Verde, Djibouti, Dominica, Equatorial Guinea, Gambia, Grand Cayman, Guatemala, Guinea, Haiti, Honduras, Iraq, Liberia, Nicaragua, Nigeria, Philippines, Peru, Sierra Leone, Togo, and Venezuela.

*2:Except Jordan, Lebanon, Morocco, and Tunisia models

*3:Jordan, Lebanon, Morocco, and Tunisia models

*4:AWD models

Service at the indicated distance or time - whichever comes first.		km x 1,000	20	40	60	80	100	120	140	160	180	200
		months	12	24	36	48	60	72	84	96	108	120
Replace brake fluid			Every 3 years									
Replace fuel filter in tank*1	Normal		Every 210,000 km									
	Severe		Every 130,000 km*3									
Replace fuel filter in tank*2	Normal		Every 180,000 km									
	Severe		Every 110,000 km*3									
Check expiration date for tyre repair kit bottle			Every 1 year									
Rotate tyres (Check tyre inflation and condition at least once per month)			Every 10,000 km									
Visually inspect the following items:												
Driveshaft boots Tie rod ends, steering gear box, and boots Suspension components			Every 10,000 km or 1 year									
Brake hoses and lines (including ABS/VSA) Exhaust system Fuel lines and connections All fluid levels and condition of fluid			•	•	•	•	•	•	•	•	•	•

*1:Except Africa (except South Africa), South America (except Brazil), and Indonesia models
*2:Africa (except South Africa), South America (except Brazil), and Indonesia models
*3:It is recommended that you replace the fuel filter if the fuel you are using is suspected to be contaminated with dust, etc. because the filter may be clogged sooner.

Severe Conditions

Follow the Severe Conditions Maintenance Schedule if you drive your car MAINLY under one or more of the following conditions:

- Driving less than 8 km per trip or, in freezing temperatures, driving less than 16 km per trip.
- Driving in extremely hot, over 35°C condition.
- Extensive idling or long periods of stop-and-go driving.
- Towing trailer*, driving with a loaded car-top carrier, or driving in mountainous conditions.
- Driving on muddy, dusty, or de-iced roads.

NOTE: If you only OCCASIONALLY drive under "severe" conditions, you should follow the Normal Conditions Maintenance Schedule.


 * Not available on all models

Maintenance Record (On Vehicles without Service Book)

Have your servicing dealer record all required maintenance below. Keep receipts for all work done on your vehicle.


	Km or Month	Date	Sign or Stamp
20,000 km (or 12 Mo.)			
40,000 km (or 24 Mo.)			
60,000 km (or 36 Mo.)			
80,000 km (or 48 Mo.)			
100,000 km (or 60 Mo.)			
120,000 km (or 72 Mo.)			
140,000 km (or 84 Mo.)			
160,000 km (or 96 Mo.)			
180,000 km (or 108 Mo.)			
200,000 km (or 120 Mo.)			

Maintenance Items Under the Bonnet

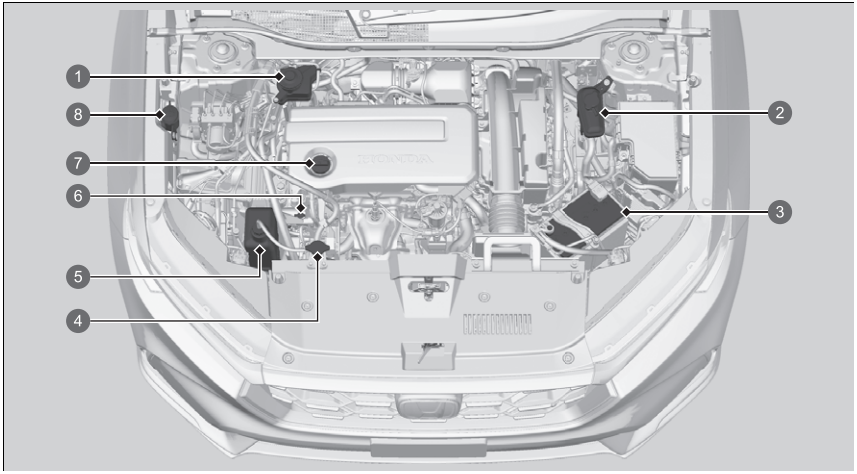


1. Brake Fluid (Black Cap)
2. High Voltage System Coolant Tank
3. 12-volt Battery
4. Radiator Cap
5. Engine Coolant Reserve Tank
6. Engine Oil Dipstick (Orange)
7. Engine Oil Fill Cap
8. Washer Fluid (Blue Cap)

Opening the Bonnet

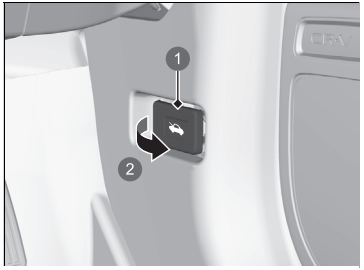

❶ Bonnet Release Handle
❷ Pull

1. Park the vehicle on a level surface, and set the parking brake.
2. Pull the bonnet release handle under the driver's side lower outside corner of the dashboard.
   ▶ The bonnet will pop up slightly.

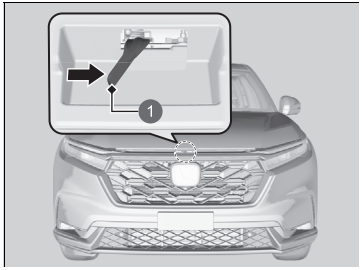

❶ Lever

3. Push the bonnet latch lever (located under the front edge of the bonnet to the centre) to the side and raise the bonnet. Once you have raised the bonnet slightly, you can release the lever.

Opening the Bonnet

NOTICE
Do not open the bonnet when the wiper arms are raised. The bonnet will strike the wipers, resulting in possible damage to the bonnet and/or the wipers.

NOTICE
Do not press the engine cover forcibly. This may damage the engine cover and component parts.

When closing the bonnet, check that the bonnet is securely latched.

If the bonnet latch lever moves stiffly, or if you can open the bonnet without lifting the lever, the latch mechanism should be cleaned and lubricated.

Continued



4. Lift the bonnet up most of the way.
▶ The hydraulic supports will lift it up the rest of the way and hold it up.


When closing, lower it to approximately 30 cm, then press down firmly with your hands.


Recommended Engine Oil

Use a genuine engine oil or another commercial engine oil of suitable type and viscosity (for the ambient temperature) as shown in the image that follows.

Oil is a major contributor to your engine's performance and longevity. If you drive the vehicle with insufficient or deteriorated oil, the engine may fail or be damaged.

Genuine Engine Oil	Commercial Engine Oil
• Honda Genuine Motor Oil	Taiwanese models • ACEA C5 Except Taiwanese models • API service SN or higher grade fuel-efficient oil • API Certification Mark "Starburst"

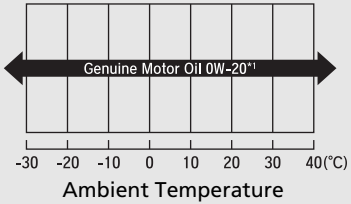

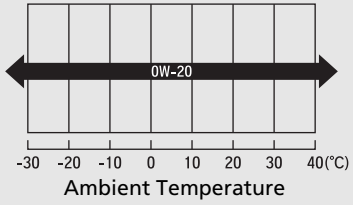

*1:Formulated to improve fuel economy.

Recommended Engine Oil

Engine Oil Additives

Taiwanese models

You cannot use Engine Oil Additives.

Except Taiwanese models

Your vehicle does not require oil additives. In fact, they may adversely affect the engine performance and durability.

Except Taiwanese models


The following seal indicates the oil is energy conserving and that it meets the American Petroleum Institute's latest requirements.




Oil Check

We recommend that you check the engine oil level every time you refuel.
Park the vehicle on level ground.

Turn off the power system. You can check the oil level without the engine having run beforehand. If the engine has been running, wait approximately three minutes before you check the oil.

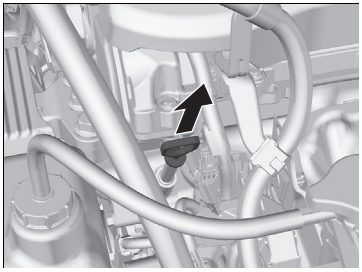

1. Remove the dipstick (orange).
2. Wipe the dipstick with a clean cloth or paper towel.
3. Insert the dipstick back all the way into its hole.

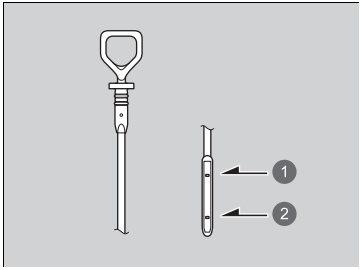


4. Remove the dipstick again, and check the level. It should be between the upper and lower marks. Add oil if necessary.

❶ Upper Mark
❷ Lower Mark

Oil Check

If the oil level is near or below the lower mark, slowly add oil, being careful not to overfill.

Adding Engine Oil

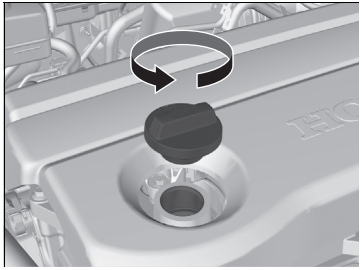

1. Unscrew and remove the engine oil fill cap.
2. Add oil slowly.
3. Reinstall the engine oil fill cap, and tighten it securely.
4. Wait for three minutes and recheck the engine oil dipstick.

Adding Engine Oil

NOTICE

Do not fill the engine oil above the upper mark. Overfilling the engine oil may result in leaks and engine damage.

If any oil spills, wipe it away immediately. Spilled oil may damage the engine compartment components.

Use a neutral detergent to remove it if it spills on the engine cover. Do not use organic solvents such as brake cleaner.


Engine Coolant

Specified coolant: Honda All Season Antifreeze/Coolant Type 2

This coolant is premixed with 50% antifreeze and 50% water. Do not add any straight antifreeze or water.

We recommend you check the engine coolant level every time you refuel. Check the reserve tank first. If it is completely empty, also check the coolant level in the radiator. Add the engine coolant accordingly.

■ Reserve Tank

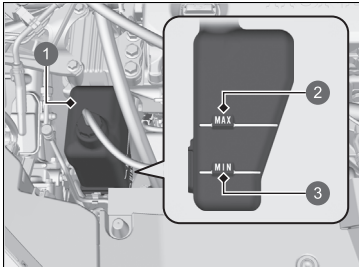

❶ Reserve Tank
❷ **MAX**
❸ **MIN**

1. **Make sure the engine and radiator are cool.**
2. Check the amount of coolant in the reserve tank.
   ▶ If the coolant level is below the **MIN** mark, add the specified coolant until it reaches the **MAX** mark.

Engine Coolant

⚠WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.


Always let the engine and radiator cool down before removing the radiator cap.

NOTICE

If temperatures consistently below -30°C are expected, the coolant mixture should be changed to a higher concentration. Consult your Honda dealer for details about a suitable coolant mixture.


If Honda antifreeze/coolant is not available, you may use another major brand of non-silicate coolant as a temporary replacement. Check that it is a high quality coolant recommended for aluminium engines. Continued use of any non-Honda coolant can result in corrosion, causing the cooling system to malfunction or fail. Have the cooling system flushed and refilled with Honda antifreeze/coolant as soon as possible.

Do not add rust inhibitors or other additives to your vehicle's cooling system. They may not be compatible with the coolant or with the engine components.

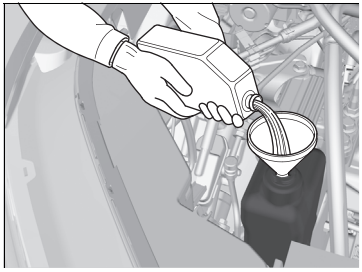

3. Inspect the cooling system for leaks.

■ Radiator

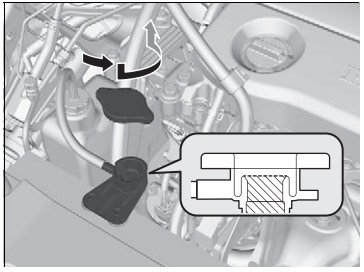

❶ Radiator Cap

1. Make sure the engine and radiator are cool.
2. Turn the radiator cap 1/8th turn anticlockwise and relieve any pressure in the cooling system.
3. Push down and turn the radiator cap anticlockwise to remove it.
4. The coolant level should be up to the base of the filler neck. Add coolant if it is low.
5. Put the radiator cap back on, and tighten it fully.

≫Radiator

NOTICE

Pour the fluid slowly and carefully so you do not spill any. Clean up any spills immediately; they can damage components in the engine compartment.

Continued

■ Radiator Cap

Models with pictogram label




- Never open when hot.
- Hot coolant will scald you.
- Relief pressure valve begins to open at 108 kPa.

High Voltage System Coolant

When checking the coolant level, make sure to follow the procedures listed below. If the coolant level is below the **MIN** mark, have your vehicle inspected by a dealer.

■ Coolant Tank

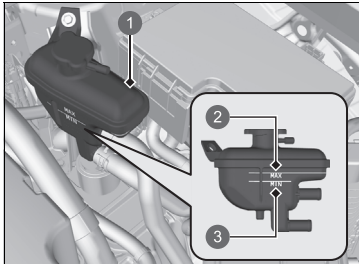


❶ Coolant Tank
❷ **MAX**
❸ **MIN**

1. Check the coolant level in the tank.
2. If the coolant level has dropped below the **MIN** level, have your vehicle serviced at a dealer.
▶ Only a properly trained technician can refill the coolant and check the system for leaks.

■ Coolant Tank Cap

Models with pictogram label

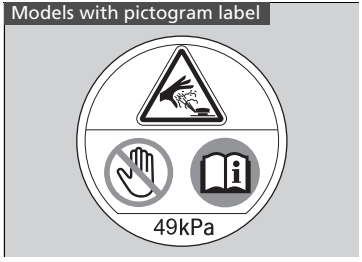

- Never open when hot.
- Hot coolant will scald you.
- Relief pressure valve begins to open at 49 kPa.

■High Voltage System Coolant

Do not add rust inhibitors or other additives to your vehicle's cooling system. They may not be compatible with the coolant or with the motor components.

Transmission Fluid

Specified fluid: Honda HEVF-Type 1

Have a dealer check the fluid level and replace if necessary.
Follow your vehicle's maintenance service timing of when to change transmission fluid.

Maintenance Schedule P. 739

Do not attempt to check or change the transmission fluid yourself.

Transmission Fluid

NOTICE

Do not mix Honda HEVF-Type 1 with other transmission fluids.


Using a transmission fluid other than Honda HEVF-Type 1 may adversely affect the operation and durability of your vehicle's transmission, and damage the transmission.

Any damage caused by using a transmission fluid that is not equivalent to Honda HEVF-Type 1 is not covered by Honda's new vehicle limited warranty.

Brake Fluid

Specified fluid: Brake Fluid with DOT 3 or DOT 4

■ Checking the Brake Fluid

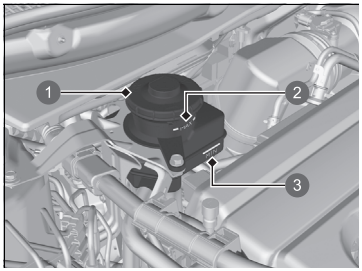

The fluid level should be between the **MIN** and **MAX** marks on the side of the reserve tank.

❶ Reserve Tank
❷ **MAX**
❸ **MIN**

Brake Fluid


NOTICE

Brake fluid marked DOT 5 is not compatible with your vehicle's braking system and can cause extensive damage.

We recommend using a genuine product.

If the brake fluid level is at or below the **MIN** mark, have a dealer inspect the vehicle for leaks or worn brake pads as soon as possible.

Refilling Window Washer Fluid

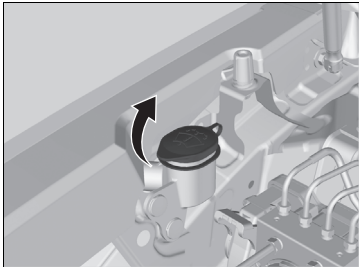

Check the amount of window washer fluid.

If the level is low, fill the washer reservoir.

Pour the washer fluid carefully. Do not overflow the reservoir.

Fuel Filter

Replace fuel filter according to the time and distance recommendations in the maintenance schedule.

Have a qualified technician change the fuel filter. Fuel in the system can spray out and create a hazard if all fuel line connections are not handled correctly.

Refilling Window Washer Fluid

NOTICE

Do not use engine antifreeze or a vinegar/water solution in the windscreen washer reservoir.
Antifreeze can damage your vehicle's paint. A vinegar/water solution can damage the windscreen washer pump.
Use only commercially available windscreen washer fluid.
Avoid prolonged use of hard water to prevent lime scale buildup.

Headlights

Headlights are LED type. Have an authorised Honda dealer inspect and replace the light assembly.

Front Turn Signal Lights and Position/Daytime Running Lights

Front turn signal lights and position/daytime running lights are LED type. Have an authorised Honda dealer inspect and replace the light assembly.

Front Fog Lights

Front fog lights are LED type. Have an authorised Honda dealer inspect and replace the light assembly.

Active Cornering Lights*

Active cornering lights are LED type. Have an authorised Honda dealer inspect and replace the light assembly.

Side Turn Signal/Emergency Indicator Lights

Door mirror side turn lights are LED type. Have an authorised Honda dealer inspect and replace the light assembly.

Headlights

The headlight aim is set by the factory, and does not need to be adjusted. However, if you regularly carry heavy items in the luggage area or tow a trailer*, have the aiming readjusted at a dealer or by a qualified technician.

* Not available on all models

Brake Lights, Taillights, Rear Side Marker Lights, and Rear Turn Signal Lights

Brake lights, taillights, rear side marker lights, and rear turn signal lights are LED type. Have an authorised Honda dealer inspect and replace the light assembly.

Taillights, Rear Fog Light*, and Back-Up Lights

Taillights, rear fog light*, and back-up lights are LED type. Have an authorised Honda dealer inspect and replace the light assembly.

Rear Licence Plate Light

Rear licence plate light is LED type. Have an authorised Honda dealer inspect and replace the light assembly.

High-Mount Brake Light

High-mount brake light is LED type. Have an authorised Honda dealer inspect and replace the light assembly.


 * Not available on all models

Other Light Bulbs


■ Vanity Mirror Light Bulbs

When replacing, use the following bulbs.

Vanity Mirror Light: 1.4 W

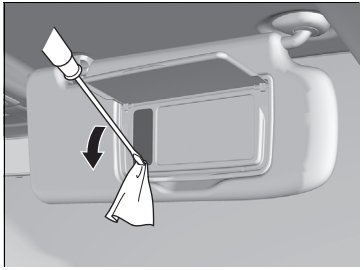

1. Pry on the edge of the cover using a flat-tip screwdriver to remove the cover.
▶ Wrap the flat-tip screwdriver with a cloth to prevent scratches.

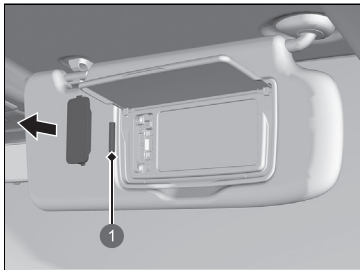


❶ Bulb


2. Remove the old bulb and insert a new bulb.

Checking Wiper Blades

If the wiper blade rubber has deteriorated, it will leave streaks and become noisy, and the hard surfaces of the blade may scratch the window glass.

Lifting the Front Wiper Arms

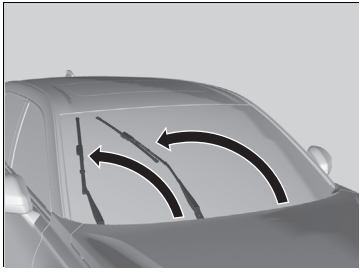

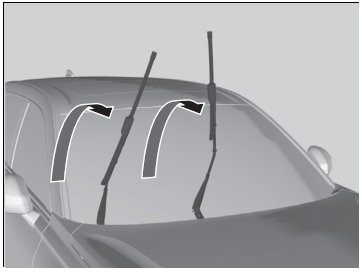

1. Set the power mode to ON, then to VEHICLE OFF.
2. Within 10 seconds of setting the power mode to VEHICLE OFF, hold the wiper switch in the **MIST** position for more than two seconds.
   ▶ Both wiper arms are set to the maintenance position as shown in the image.
3. Lift both wiper arms.


Lifting the Front Wiper Arms

NOTICE

When lifting the wiper arms, always follow the instructions to move them into the maintenance position.

The wiper arms may be damaged if they are moved manually.

Changing the Front Wiper Blade

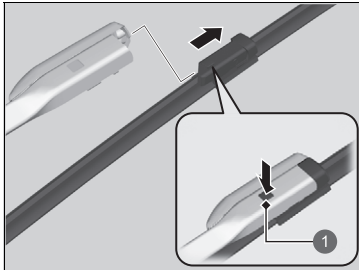

❶ Tab


1. Lift both wiper arms.
   ➡ **Lifting the Front Wiper Arms** P. 760
2. Depress the lock tab, then slide the wiper blade off the wiper arm.
3. Slide the new wiper blade onto the wiper arm until it clicks into place.
4. Lower both wiper arms.
5. Set the power mode to ON, then set the wiper switch to the **MIST** position once.
   ▶ The wiper arms return to the standard position.

Changing the Front Wiper Blade

NOTICE


Avoid dropping the wiper arm onto the windscreen, as it may damage the wiper arm and/or the windscreen.

Changing the Rear Wiper Blade Rubber

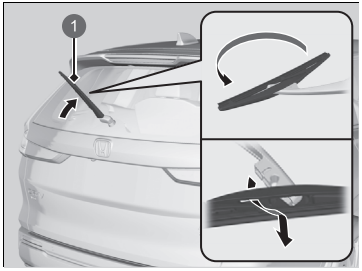

1. Raise the wiper arm off.
2. Pivot the bottom end of the wiper blade up until it comes off from the wiper arm.

1 Wiper Arm

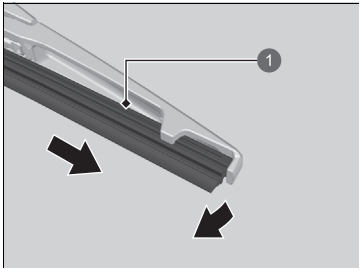

3. Slide the blade out of the wiper.

1 Blade


Changing the Rear Wiper Blade Rubber

NOTICE

Do not try to forcefully lift up the wiper arm.
The wiper arm may be damaged if it is lifted too high.


NOTICE

Avoid dropping the wiper arm, as it may damage the rear window.

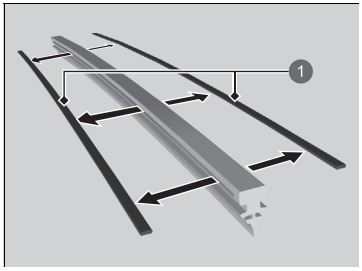

4. Remove the retainers from wiper blade and mount to a new rubber blade.

❶ Retainer

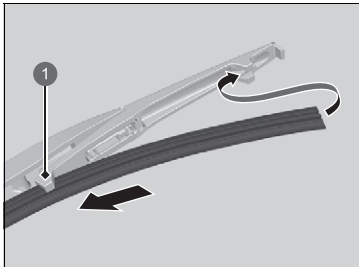

5. Slide the new wiper blade onto the holder.
▶ Make sure it is engaged correctly, then install the wiper blade assembly onto the wiper arm.

❶ Holder

Checking Tyres

To safely operate your vehicle, your tyres must be of the proper type and size, in good condition with adequate tread, and properly inflated.

■ Inflation guidelines

Properly inflated tyres provide the best combination of handling, tread life, and comfort. Refer to the driver's doorjamb label for the specified pressure.

Underinflated tyres wear unevenly, adversely affect handling and fuel economy, and are more likely to fail from overheating.

Overinflated tyres make your vehicle ride harshly, are more prone to road hazards, and wear unevenly.

Every day before you drive, look at each of the tyres. If one looks lower than the others, check the pressure with a tyre gauge.

At least once a month or before long trips, use a gauge to measure the pressure in all tyres. Even tyres in good condition can lose 10–20 kPa (0.1–0.2 bar, 1–2 psi) per month.

■ Inspection guidelines

Every time you check inflation, also examine the tyres and valve stems.
Look for:

- Bumps or bulges on the side or in the tread. Replace the tyre if you find any cuts, splits, or cracks in the side of the tyre. Replace it if you see fabric or cord.
- Remove any foreign objects and inspect for air leaks.
- Uneven tread wear. Have a dealer check the wheel alignment.
- Excessive tread wear.
  ➡ **Wear Indicators** P. 765
- Cracks or other damage around valve stem.

Checking Tyres

⚠WARNING

Using tyres that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tyre inflation and maintenance.

Measure the air pressure when tyres are cold. This means the vehicle has been parked for at least three hours, or driven less than 1.6 km. If necessary, add or release air until the specified pressure is reached.

If checked when hot, tyre pressure can be as much as 30–40 kPa (0.3–0.4 bar, 4–6 psi) higher than if checked when cold.

Taiwanese models

Whenever tyre pressure is adjusted, you must calibrate the TPMS.

➡ **TPMS Calibration** P. 588


Except Taiwanese models

Whenever tyre pressure is adjusted, you must calibrate the deflation warning system*.

➡ **Deflation Warning System Calibration** P. 590

* Not available on all models

Wear Indicators

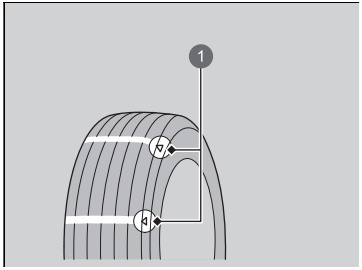

1 Example of a Wear Indicator mark

The groove where the wear indicator is located is about 1.6 mm shallower than elsewhere on the tyre. If the tread has worn so that the indicator is exposed, replace the tyre. **Worn out tyres have poor traction on wet roads.**

Tyre Service Life

The life of your tyres is dependent on many factors, including driving habits, road conditions, vehicle loading, inflation pressure, maintenance history, speed, and environmental conditions (even when the tyres are not in use).

In addition to regular inspections and inflation pressure maintenance, it is recommended that you have annual inspections performed once the tyres reach five years old. All tyres should be removed from service after 10 years from the date of manufacture, regardless of their condition or state of wear.

Checking Tyres

Have a dealer check the tyres if you feel a consistent vibration while driving. New tyres and any that have been removed and reinstalled should be properly balanced.

Tyre and Wheel Replacement

Replace your tyres with radials of the same size, load range, speed rating, and maximum cold tyre pressure rating (as shown on the tyre's sidewall). Using tyres of a different size or construction can cause certain vehicle systems such as the ABS and Vehicle Stability Assist (VSA) system to work incorrectly.

It is best to replace all four tyres at the same time. If that isn't possible, replace the front or rear tyres in pairs.

Make sure that the wheel's specifications match those of the original wheels.

Tyre and Wheel Replacement

⚠WARNING


Installing improper tyres on your vehicle can affect handling and stability. This can cause a crash in which you can be seriously hurt or killed.

Always use the size and type of tyres recommended in the tyre information label on your vehicle.

Tyre Rotation

Rotating tyres according to the maintenance schedule helps to distribute wear more evenly and increase tyre life.


■ Tyres without rotation marks

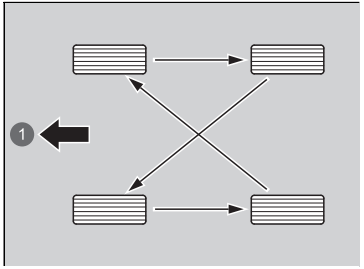

Rotate the tyres as shown here.

1 Front

■ Tyres with rotation marks

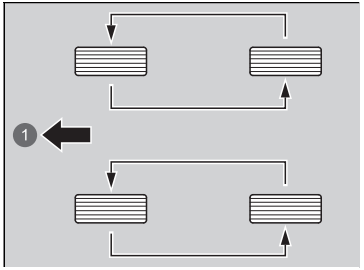


Rotate the tyres as shown here.

1 Front

* Not available on all models

Tyre Rotation

Tyres with directional tread patterns should only be rotated front to back (not from one side to the other). Directional tyres should be mounted with the rotation indication mark facing forward, as shown below.

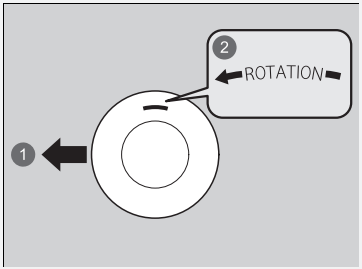

1 Front
2 Rotation Mark

When the tyres are rotated, make sure the air pressures are checked.

Wheel nut torque for the tyres that come standard-equipped with your vehicle is as follows.
Wheel nut torque:
127 N·m (13 kgf·m, 94 lbf·ft)

Taiwanese models

Whenever tyres are rotated, you must calibrate the TPMS.
➔ **TPMS Calibration** P. 588

Except Taiwanese models

Whenever tyres are rotated, you must calibrate the deflation warning system*.
➔ **Deflation Warning System Calibration** P. 590

Snow Traction Devices

If driving on snowy or frozen roads, mount winter tyres, or tyre chains; reduce speed; and maintain sufficient distance between vehicles when driving.

Be particularly careful when operating the steering wheel or brakes to prevent skidding.

Use tyre chains, winter tyres, or all season tyres when necessary or according to the law.

When mounting, refer to the following points.

For winter tyres:
- Select the size and load ranges that are the same as the original tyres.
- Mount the tyres to all four wheels.

For tyre chains:
- Consult a dealer before purchasing any type of chains for your vehicle.
- Install them on the front tyres only.
- Because your vehicle has limited tyre clearance, we strongly recommend using the chains listed below:

Australian, Bangladeshi, Bhutanese, and New Zealand models

Original Tyre Size*1	Chain Type
235/60R18 103H	**RUD-matic classic 4716134**
235/55R19 101Y	**RUD-matic classic V 19642**

*1:Original tyre size is mentioned on the tyre information label on the driver's doorjamb.

All models
- Follow the chain manufacturer's instruction when installing. Mount them as tightly as you can.
- Check that the chains do not touch the brake lines or suspension.
- Drive slowly.

Snow Traction Devices

⚠WARNING

Using the wrong chains, or not properly installing chains, can damage the brake lines and cause a crash in which you can be seriously injured or killed.

Follow all instructions in this owner's manual regarding the selection and use of tyre chains.

NOTICE

Traction devices that are the wrong size or improperly installed can damage your vehicle's brake lines, suspension, body, and wheels. Stop driving if they are hitting any part of the vehicle.


When tyre chains are mounted, follow the chain manufacturer's instructions regarding vehicle operational limits.

Use tyre chains only in an emergency or when they are legally required for driving through a certain area.

Use greater caution when driving with tyre chains on snow or ice. They may have less-predictable handling than good winter tyres without chains.

If your vehicle is equipped with summer tyres, be aware that these tyres are not designed for winter driving conditions. For more information, contact a dealer.

Checking the 12-Volt Battery

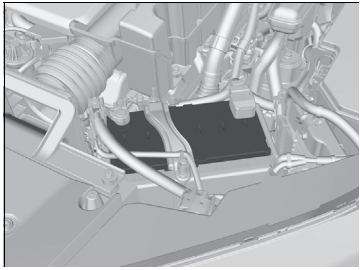

The condition of the battery is monitored by a sensor located on the negative terminal of the battery. If there is a problem with this sensor, the driver information interface will display a warning message. If this happens, have your vehicle inspected by a dealer.

Check the battery terminals for corrosion monthly.

If your vehicle's battery is disconnected or goes dead:

- The audio system is disabled*.

Reactivating the audio system P. 307

12-Volt Battery

⚠WARNING

The battery gives off explosive hydrogen gas during normal operation.

A spark or open flame can cause the battery to explode with enough force to kill or seriously hurt you.

Keep all sparks, open flames, and smoking materials away from the battery.

Wear protective clothing and a face shield, or have a skilled technician do any battery maintenance.

⚠WARNING

The battery contains sulfuric acid (electrolyte) which is highly corrosive and poisonous.

Getting electrolyte in your eyes or on your skin can cause serious burns. Wear protective clothing and eye protection when working on or near the battery.

Swallowing electrolyte can cause fatal poisoning if immediate action is not taken.

KEEP OUT OF THE REACH OF CHILDREN

* Not available on all models

Charging the 12-Volt Battery

Disconnect both battery cables to prevent damaging your vehicle's electrical system. Always disconnect the negative (–) cable first, and reconnect it last.

If the battery cable is removed while a system update is being performed, the electrical system can be permanently damaged. Only remove the battery cable when a system update is not being performed.

12-Volt Battery

Emergency Procedures
Eyes: Flush with water from a cup or other container for at least 15 minutes. (Water under pressure can damage the eye.) Call a physician immediately.
Skin: Remove contaminated clothing. Flush the skin with large quantities of water. Call a physician immediately.
Swallowing: Drink water or milk. Call a physician immediately.

When you find corrosion, clean the battery terminals by applying a baking powder and water solution. Clean the terminals with a damp towel. Cloth/towel dry the battery. Coat the terminals with grease to help prevent future corrosion.

When replacing the battery, the replacement must be of the same specifications.
Consult a dealer for more information.

The 12-volt battery installed in this vehicle is specifically designed for a model with System Updates.
Using a 12-volt battery other than this specified type may shorten the battery life, and prevent System Updates from activating. If you need to replace the battery, make sure to select the specified type and size. Ask a dealer for more details.

Specifications P. 838

12-Volt Battery

The Vehicle Stability Assist (VSA) system, brake system (Amber), Adaptive Cruise Control (ACC) with Low Speed Follow, low tyre pressure/TPMS*, low tyre pressure/deflation warning system*, Collision Mitigation Braking System (CMBS), Road Departure Mitigation and safety support indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the 12-volt battery.


Drive a short distance at more than 20 km/h. Each indicator should go off. If any do not, have your vehicle checked by a dealer.

* Not available on all models

Replacing the Remote Battery


■ Keyless remote

If the indicator does not come on when the button is pressed, replace the battery.

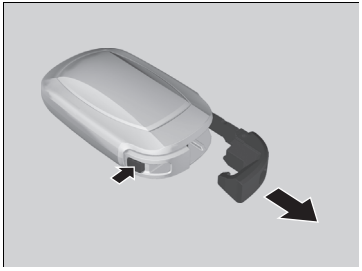

Battery type: CR2032

1. Remove the built-in key.

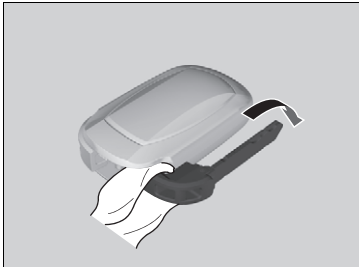

2. With the buttons facing down, remove the upper half of the cover by carefully prying on the slot with the key grip.
▶ Wrap a key grip with a cloth to prevent scratching the keyless remote.

Replacing the Remote Battery

⚠⚠WARNING

CHEMICAL BURN HAZARD
The battery that powers the remote transmitter can cause severe internal burns and can even lead to death if swallowed.
Keep new and used batteries away from children.
If you suspect that a child has swallowed the battery, seek medical attention immediately.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

CAUTION: Do not exposed to excessive heat such as sunshine, fire or the like, that can result in an explosion or the leakage of flammable liquid or gas during use, storage or transportation.


CAUTION: Do not dispose of a battery into fire or a hot oven, or give mechanically crushing or cutting of a battery, that can result in an explosion.

CAUTION: Do not subjected to extremely low air pressure at high altitude that may result in an explosion or the leakage of flammable liquid or gas.

A warning mark is located adjacent to the button battery*.

NOTICE
An improperly disposed of battery can damage the environment. Always confirm local regulations for battery disposal.

* Not available on all models

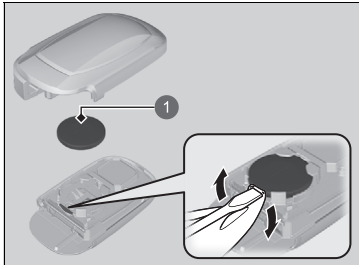

❶ Battery

3. Remove the battery by prying on the edge with flat-tip screwdriver. Make sure to replace the battery with the correct polarity.
▶ Wrap a flat-tip screwdriver with a cloth to prevent scratching the keyless remote.

Replacing the Remote Battery

Replacement batteries are commercially available or at a dealer.


According to Australian Standard;

WARNING

- The battery that powers the remote transmitter is hazardous – new and used batteries should be kept away from children.
- Lithium button/coin batteries can cause severe or fatal injuries in 2 hours or less if it is swallowed or placed inside any part of the body.
- Medical attention should be sought immediately if it is suspected the battery has been swallowed or placed inside any part of the body.

Continued


■ Card Key*

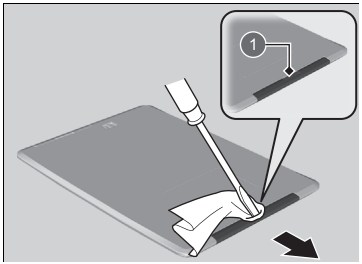

❶ Groove

Battery type: CR2412

1. Put the H logo side down of the card key.
2. Push to slide the groove of the battery holder using a flat-tip screwdriver and remove the battery holder.
▶ Wrap a flat-tip screwdriver with a cloth to prevent scratching the battery holder.

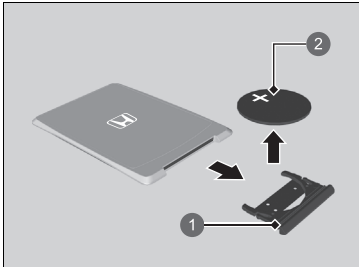

❶ Battery Holder
❷ Battery

3. Remove the battery. Make sure to replace the battery with the correct polarity.
4. To reinstall the battery holder, push the battery holder into the card key until it clicks.
▶ Make sure to install the battery holder in the correct side.

 * Not available on all models


Dust and Pollen Filter

When to Replace the Dust and Pollen Filter

Replace the dust and pollen filter according to your vehicle's recommended maintenance schedule. It is recommended to replace the filter even sooner if the vehicle has been driven in a dusty environment.

Maintenance Schedule P. 739

How to Replace the Dust and Pollen Filter

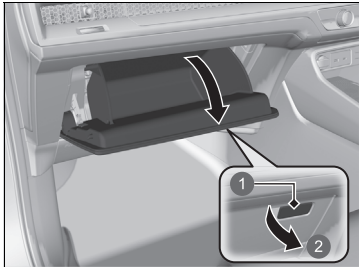

1. Open the glove box.

❶ Handle
❷ Pull


Dust and Pollen Filter

If the airflow from the climate control system deteriorates noticeably, and the windows fog up easily, the filter may need to be replaced.

The dust and pollen filter collects pollen, dust, and other debris in the air.


If you are not sure how to replace the dust and pollen filter, have it replaced by a dealer.

Continued

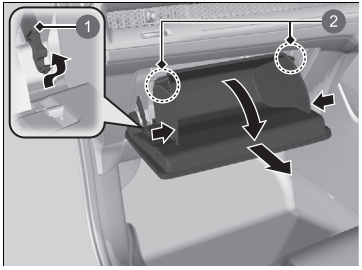

❶ Stopper
❷ Tab

2. Push the stopper on the passenger's side of the glove box to detach it from the glove box.
3. Disengage the two tabs by pushing on each side panel.
4. Remove the glove box.

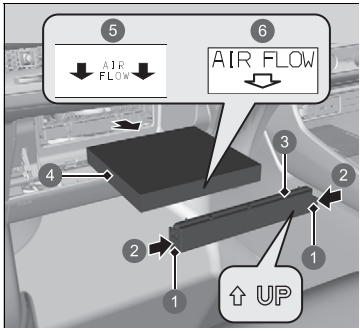

1. Tab
2. Push
3. Cover
4. Dust and Pollen Filter
5. Except Australian, Bangladeshi, Bhutanese, Jordanian, Lebanese, Moroccan, New Zealand, and Tunisian models
6. Australian, Bangladeshi, Bhutanese, Jordanian, Lebanese, Moroccan, New Zealand, and Tunisian models


5. Push in the tabs on the corners of the filter case cover, and remove it.
6. Remove the filter from the case.
7. Install a new filter in the case.
▶ Put the **AIR FLOW** arrow directed side down.

Interior Care

Use a vacuum cleaner to remove dust before using a cloth.
Use a damp cloth with a mixture of mild detergent and warm water to remove dirt.
Use a clean cloth to remove detergent residue.

■ Cleaning Seat Belts

Use a soft brush with a mixture of mild soap and warm water to clean the seat belts. Let the belts air dry. Wipe the loops of the seat belt anchorages using a clean cloth.

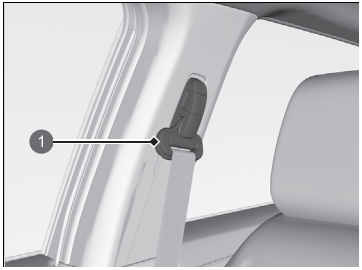

1 Loop

Interior Care

Do not spill liquids inside the vehicle. Electrical devices and systems may malfunction if liquids are splashed on them.

Do not use silicone-based sprays on electrical devices such as audio devices and switches. Doing so may cause the items to malfunction or cause a fire inside the vehicle.
If a silicone-based spray is inadvertently used on electrical devices, consult a dealer.

Depending on their composition, chemicals and liquid aromatics may cause discolouration, wrinkles, and cracking to resin-based parts and textiles.
Do not use alkali solvents or organic solvents such as benzene or petrol.


After using chemicals, make sure to gently wipe them away using a dry cloth.
Do not place used cloths on top of resin-based parts or textiles for long periods of time without washing.

Be careful not to spill a liquid type air freshener.

■ Cleaning the Window

Wipe using a glass cleaner.

■ Floor Mats

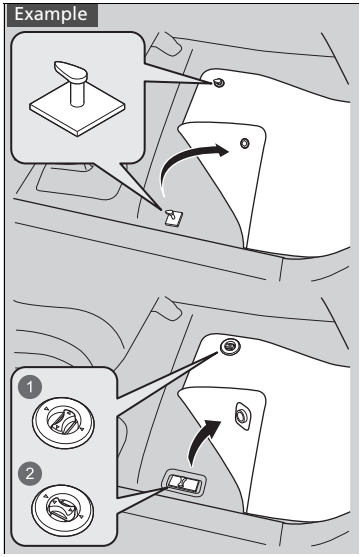

The driver's floor mat hooks over floor anchorages, which keep the mat from sliding forward.

Do not put any additional floor mats on top of the anchored mat.

❶ Unlock
❷ Lock

Cleaning the Window

Wires are mounted to the inside of the rear window. Wipe along the same direction as the wires with a soft cloth so as not to damage them.

Be careful not to spill fluids, such as water or glass cleaner, on or around the cover of the electrical components around the rearview mirror.

Floor Mats

If you use any floor mats that were not originally provided with your vehicle, make sure they are designed for your specific vehicle, fit correctly, and are securely anchored by the floor anchorages. Position any rear seat floor mats properly. If not properly positioned, the floor mats can interfere with the front seat functions.

Continued

■ Maintaining Genuine Leather

To properly clean leather:

1. Use a vacuum or soft dry cloth first to remove any dirt or dust.
2. Clean the leather with a soft cloth dampened with a solution comprised of 90% water and 10% neutral soap.
3. Wipe away any soap residue with a clean damp cloth.
4. Wipe away residual water and allow leather to air dry in the shade.

Maintaining Genuine Leather

It is important to clean or wipe away dirt or dust as soon as possible. Spills can soak into leather, resulting in stains. Dirt or dust can cause abrasions in the leather. In addition, please note that some dark coloured clothing can rub onto the leather seats, resulting in discolouration or stains.

Exterior Care

Dust off the vehicle body after you drive. Regularly inspect your vehicle for scratches on painted surfaces. A scratch on a painted surface can result in body rust. If you find a scratch, promptly repair it.


■ Washing the Vehicle

Wash the vehicle regularly. Wash more frequently when driving in the following conditions:

- If driving on roads with road salt.
- If driving in coastal areas.
- If tar, soot, bird droppings, insects, or tree sap is stuck to painted surfaces.

Washing the Vehicle

Do not spray water into the air intake vents. It can cause a malfunction.

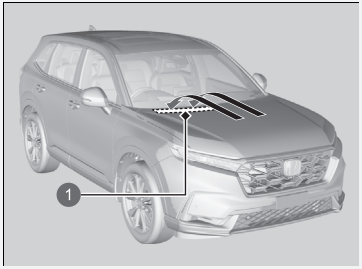

1 Air Intake Vents

Lock the doors when washing the vehicle.
Do not spray water onto the fuel fill door directly. A high-pressure spray may cause it to open.

If you need to lift the wiper arms away from the windscreen, first set the wiper arms to the maintenance position.

Lifting the Front Wiper Arms P. 760

If water and any chemicals are on the brakes when your vehicle is being washed, drive a short distance and apply the brakes several times before parking. Parking while brakes are wet may cause them to be stuck by rust.

Continued

■ Using an Automated Car Wash

- Make sure to follow the instructions indicated on the automated car wash.
- Fold in the door mirrors.
- For models equipped with automatic intermittent wipers, turn the wipers off.

■ Using High Pressure Cleaners

- Keep sufficient distance between the cleaning nozzle and the vehicle body.
- Take particular care around the windows. Standing too close may cause water to enter the vehicle interior.
- Do not spray high pressure water directly into the engine compartment. Instead, use low pressure water and a mild detergent.
- Do not spray water directly onto the camera or the area around it. Water may enter the lens and cause the camera to malfunction.

■ Applying Wax

A good coat of automotive body wax helps to protect your vehicle's paint from the elements. Wax will wear off over time and expose your vehicle's paint to the elements, so reapply as necessary.

■ Maintaining the Bumpers and Other Resin-Coated Parts

If you get petrol, oil, engine coolant, or battery fluid on resin-coated parts, they may stain or the coating may peel. Promptly wipe it away using a soft cloth and clean water.

Using an Automated Car Wash

Except Australian, Bangladeshi, Bhutanese, New Zealand, and Vietnamese models

When using an automated car wash that pulls the vehicle through with a conveyor, make sure the transmission in N position.

➡ **If you want to keep the transmission in N position (car wash mode)** P. 551

Applying Wax

NOTICE

Chemical solvents and strong cleaners can damage the paint, metal, and plastic on your vehicle. Wipe away spills immediately.

Maintaining the Bumpers and Other Resin-Coated Parts

Ask a dealer about the correct coating material when you want to repair the painted surface of the parts made of resin.

■ Cleaning the Window

Wipe using a glass cleaner.

■ Maintaining Aluminium Wheels

Aluminium is susceptible to deterioration caused by salt and other road contaminants. When necessary, as early as possible use a sponge and mild detergent to wipe away these contaminants. Do not use a stiff brush or harsh chemicals (including some commercial wheel cleaners). These can damage the protective finish on aluminium alloy wheels, resulting in corrosion. Depending on the type of finish, the wheels also may lose their lustre or appear burnished. To avoid water stains, wipe the wheels dry with a cloth while they are still wet.


■ Fogged Exterior Light Lenses

The inside lenses of exterior lights (headlights, brake lights, etc.) may fog temporarily if you have driven in the rain, or after the vehicle has been run through a car wash. Dew condensation also may build up inside the lenses when there is a significant enough difference between the ambient and inside lens temperatures (similar to vehicle windows fogging up in rainy conditions). These conditions are natural processes, not structural design problems in the exterior lights.
Lens design characteristics may result in moisture developing on the light lens frame surfaces. This also is not a malfunction.
However, if you see large amounts of water accumulation, or large water drops building up inside the lenses, have your vehicle inspected by a dealer.

Continued

■ Painting the Vehicle

Except Indonesian and Taiwanese models

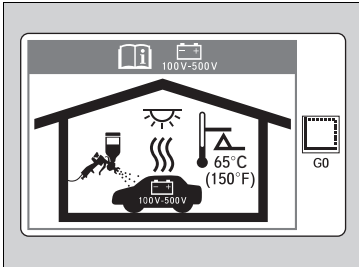

High temperature may damage the high voltage battery used to power the electric motor.
When painting the vehicle in a heated paint booth, make sure the temperature does not exceed 65°C.

Indonesian and Taiwanese models

Refer to the temperature notice label affixed to the left side doorjamb before painting the vehicle.

Accessories

When installing accessories, check the following:

- Do not install accessories on the windscreen. They can obstruct your view and delay your reaction to driving conditions.
- Do not install any items other than Honda Genuine Accessories designated for your vehicle over areas marked **SRS AIRBAG**, on the sides or backs of the front seats, on the sides of the rear seats (for models with rear side airbags), on front or side pillars, or near the side windows. Items other than Honda Genuine Accessories designated for your vehicle installed in these areas may interfere with proper operation of the vehicle's airbags or may be propelled into you or another occupant if the airbags deploy.
- Be sure electronic accessories do not overload electrical circuits or interfere with proper operation of your vehicle.
  Fuses P. 827
- Before installing any electronic accessory, have the installer contact a dealer for assistance. If possible, have a dealer inspect the final installation.

Accessories and Modifications

⚠WARNING

Improper accessories or modifications can affect your vehicle's handling, stability, and performance, and cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding accessories and modifications.

⚠WARNING

Use of improperly designed, engineered or manufactured high voltage battery assemblies could cause a fire in your vehicle.

A vehicle fire could result in a crash or injury.

Only use a genuine Honda high voltage battery assembly, or its equivalent, in your vehicle.

Modifications

Do not modify your vehicle in a manner that may affect its handling, stability, or reliability, or install non-genuine Honda parts or accessories that may have a similar effect.

Even minor modifications to vehicle systems can affect overall vehicle performance. Always make sure all equipment is properly installed and maintained, and do not make any modification to your vehicle or its systems that might cause your vehicle to no longer meet your country's and local regulations.

The on-board diagnostic port (OBD-II/SAE J1962 connector) installed on this vehicle is intended to be used with automobile system diagnostic devices or with other devices that Honda has approved. Use of any other type of device may adversely affect the vehicle's electronic systems or allow them to be compromised, possibly resulting in a system malfunction, drained battery, or other unexpected problems.

Do not modify or attempt to repair your vehicle's high voltage hybrid power system or otherwise modify vehicle electrical systems. Disassembling or modifying electrical equipment can result in a crash or a fire.

If you ever need to replace your vehicle's high voltage battery assembly outside of warranty coverage, we highly recommend that you only use a Genuine Honda high voltage battery assembly. Genuine Honda high voltage battery assemblies are designed to work with your vehicle's hybrid power system and have been designed, engineered, and manufactured to avoid overcharging situations. Non-genuine high voltage battery assemblies may not have been similarly designed, engineered, and manufactured, and installation of such assemblies could result in overcharging, fires, loss of power, or other conditions that may increase the likelihood of a crash or injury.

Accessories and Modifications

When properly installed, mobile phones, alarms, two-way radios, radio antennas, and low-powered audio systems should not interfere with your vehicle's computer controlled systems, such as your airbags and anti-lock brakes.

Honda Genuine Accessories are recommended to ensure proper operation on your vehicle.

Some Honda Genuine Accessories are supplied with an exclusive owner's manual for the operation and care detail of the product. If an accessory owner's manual is provided to you, please refer to it for full detail.

If any Honda Genuine Accessories become inoperable, refer to the separate accessory owner's manual (if applicable) or consult a dealer for assistance to troubleshoot the potential faulty condition.

Handling the Unexpected

This chapter explains how to handle unexpected troubles.

If a Tyre Goes Flat
Temporarily Repairing a Flat Tyre..... 788
Handling of the Jack..... 804
Power System Won't Start
Checking the Procedure..... 805
If the Keyless Remote/Card Key* Battery is Weak 806
Emergency Power System On..... 808
Emergency Power System Off..... 809
If the 12-Volt Battery Is Dead 810
Shift Lever Does Not Move..... 813
Overheating 815
Indicator Coming On/Blinking
If the Engine oil pressure low Warning Appears 817
If the 12-Volt Battery Charging System Indicator Comes On 818
If the Reduced stopping power Warning Appears 819
If the Malfunction Indicator Lamp Comes On or Blinks 820
If the Brake System Indicator (Red) Comes On or Blinks 821
If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On 822
If the Electric Power Steering (EPS) System Indicator Comes On 823
Taiwanese models
If the Low Tyre Pressure/TPMS Indicator Comes On or Blinks.....824
Except Indonesian and Taiwanese models
If the Low Tyre Pressure/Deflation Warning System Indicator Comes On or Blinks 825
Oceanian and Vietnamese models
If the Transmission System Indicator Blinks along with the Warning Message 826
Fuses
Fuse Locations 827
Inspecting and Changing Fuses..... 831
Emergency Towing..... 834
If You Cannot Unlock the Fuel Fill Door....835
If You Cannot Open the Tailgate 836

* Not available on all models

Temporarily Repairing a Flat Tyre

If the tyre has a large cut or is otherwise severely damaged, you will need to have the vehicle towed. If the tyre only has a small puncture, from a nail for instance, you can use the temporary tyre repair kit so that you can drive to the nearest service station for a more permanent repair.


If a tyre goes flat while driving, grasp the steering wheel firmly and brake gradually to reduce speed. Then, stop in a safe place.

1. Park the vehicle on a firm, level, non-slippery surface and apply the parking brake.
2. Put the transmission into P.
3. Turn on the hazard warning lights and set the power mode to VEHICLE OFF.

Temporarily Repairing a Flat Tyre

The kit should not be used in the following situations. Instead, contact a dealer or a roadside assistance to have the vehicle towed.

- The tyre sealant has expired.
- More than one tyre is punctured.
- The puncture or cut is larger than 4 mm.
- The tyre side wall is damaged or the puncture is outside the contact area.

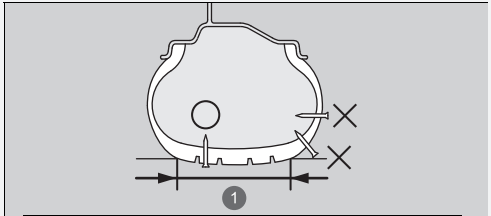

When the puncture is:	Kit Use
Smaller than 4 mm	Yes
Larger than 4 mm	No


1 Contact Area

- Damage has been caused by driving with the tyres extremely under inflated.
- The tyre bead is no longer seated.
- The rim is damaged.

Do not remove a nail or screw that punctured the tyre. If you remove it from the tyre, you may not be able to repair the puncture using the kit.

Getting Ready to Temporarily Repair the Flat Tyre

Except Taiwanese models

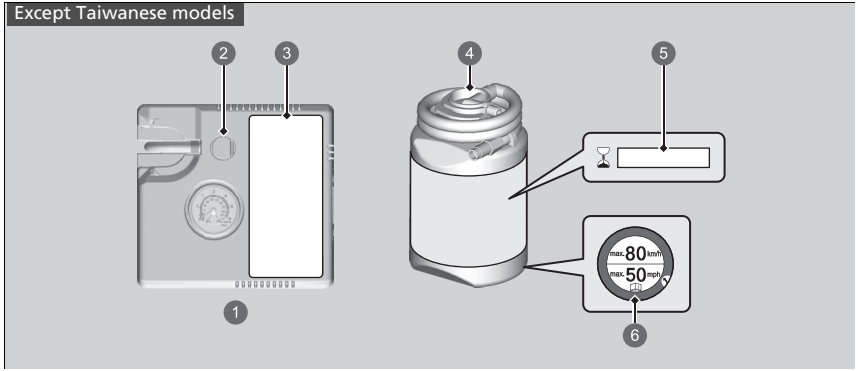

1. Air Compressor
2. Deflate Button
3. Instruction Label
4. Sealant Bottle
5. Expiration Date
6. Speed Restriction Label


Getting Ready to Temporarily Repair the Flat Tyre

Except Taiwanese models

Speed restriction label is applied to the bottom of the sealant bottle.
When making a temporary repair, carefully read the instruction label applied on the kit.

Continued

Taiwanese models

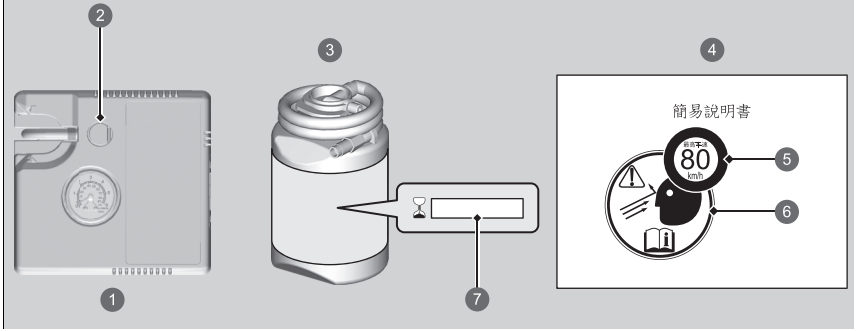


❶ Air Compressor
❷ Deflate Button
❸ Sealant Bottle
❹ Instruction Manual
❺ Speed Restriction Label
❻ Wheel Label
❼ Expiration Date

Getting Ready to Temporarily Repair the Flat Tyre

Taiwanese models


When making a temporary repair, carefully read the instruction manual provided with the kit.

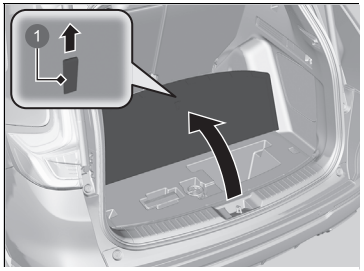

❶ Strap

Except Taiwanese models


1. Open the tailgate.
2. Pull the strap and open the luggage area floor lid.

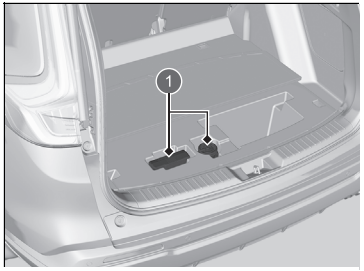

❶ Tyre Repair Kit

3. Take the kit out of the luggage floor box.
4. Place the kit face up on flat ground near the flat tyre, away from traffic. Do not place the kit on its side.

Continued

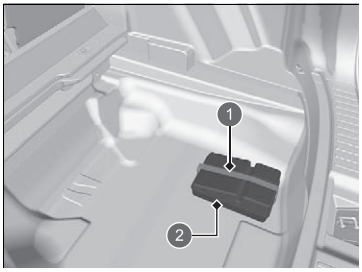


❶ Strap
❷ Bag

Taiwanese models


1. Open the tailgate.
2. Unfasten the strap and take the bag out of the luggage area.
3. Take the kit out of the bag.
4. Place the kit face up on flat ground near the flat tyre, away from traffic. Do not place the kit on its side.

Injecting Sealant and Air

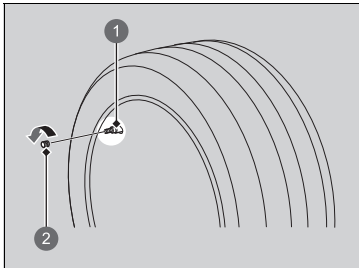

❶ Tyre Valve Stem
❷ Valve Cap

1. Remove the valve cap from the tyre valve stem.

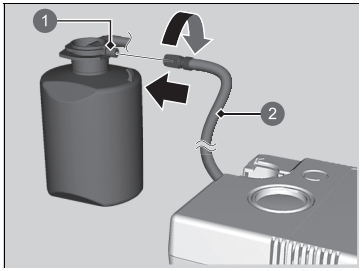

❶ Bottle Tyre Valve
❷ Air Compressor Hose

2. Shake the sealant bottle.
3. Attach the air compressor hose onto the bottle tyre valve. Screw it until it is tight.

Injecting Sealant and Air

⚠WARNING

Tyre sealant contains substances that are harmful and can be fatal if swallowed.

If accidentally swallowed, do not induce vomiting. Drink plenty of water and get medical attention immediately.


For skin or eye contact, flush with cool water and get medical attention if necessary.

Keep the sealant bottle out of the reach of children.

The sealant is latex based and can permanently stain clothing and other materials. Be careful during handling and wipe up any spills immediately.


Turn the air compressor off when connecting the air compressor hose.

Continued

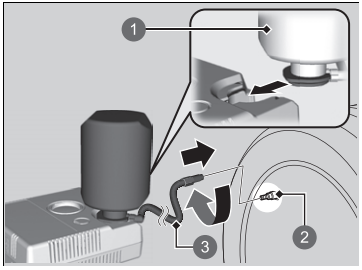


1 Sealant Bottle
2 Tyre Valve Stem
3 Sealant/Air Hose

4. Upside down the sealant bottle, then attach the bottle into the cutout of the air compressor.
5. Attach the sealant/air hose onto the tyre valve stem. Screw it until it is tight.

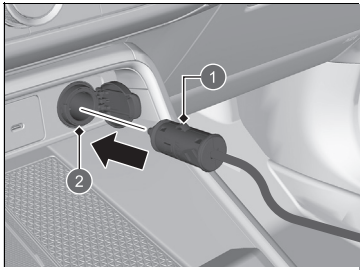

❶ Plug
❷ Accessory Power Socket

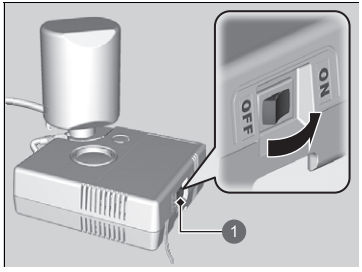

❶ Air Compressor Switch

6. Plug in the compressor to the accessory power socket.
▶ Be careful not to pinch the cord in a door or window.
➔ **Accessory Power Sockets** P. 289
▶ Do not plug any other electric devices into other accessory power sockets.
7. Turn the vehicle's power system on.
➔ **Carbon Monoxide Gas** P. 119

8. Turn the air compressor on to inflate the tyre.
▶ The compressor starts injecting sealant and air into the tyre.
9. After the air pressure reaches the specified pressure, turn off the air compressor.
▶ Check the air pressure gauge on the air compressor.
▶ Refer to the driver's doorjamb label for the specified pressure.

Injecting Sealant and Air

⚠WARNING

Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid buildup of toxic carbon monoxide.


Breathing this colourless, odourless gas can cause unconsciousness and even death. Only run the engine to power the air compressor with the vehicle outdoors.

NOTICE
Do not operate the temporary tyre repair kit compressor for more than 15 minutes. The compressor can overheat and become permanently damaged.

You hear a motor sound coming from the activated air compressor. This is normal.


Until the sealant injection is complete, the pressure shown on the pressure gauge will appear higher than actual. After the sealant injection is complete, the pressure will drop and then begin to rise again as the tyre is inflated with air. This is normal. To accurately measure the air pressure using the gauge, turn the air compressor off only after the sealant injection is complete.

Continued

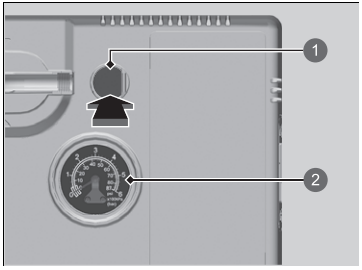

1 Deflate Button
2 Pressure Gauge

10. Unplug the power plug from the accessory power socket.
11. Unscrew the sealant/air hose from the tyre valve stem. Reinstall the valve cap.
12. Detach the bottle from the air compressor.
13. Press the deflate button until the gauge returns to 0 kPa (0 bar, 0 psi).

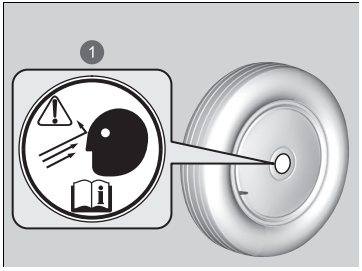

1 Wheel Label

Taiwanese models

14. Apply the wheel label to the flat surface of the wheel.
▶ The wheel surface must be clean to ensure the label adheres properly.

All models

15. Store the tyre repair kit in the luggage area.

Injecting Sealant and Air

If the required air pressure is not reached within 10 minutes, the tyre may be too severely damaged for the kit to provide the necessary seal and your vehicle will need to be towed.


See a Honda dealer for a replacement sealant bottle and proper disposal of an empty bottle.

Inform the use of tyre sealant when you ask a Honda dealer or the road assistant service for replacing or repairing the flat tyre.

This air compressor is designed for the automotive tyre. Check the following:
- The power supply of the air compressor is limited to your vehicle's 12-volt DC accessory power socket.
- Do not operate the temporary tyre repair kit compressor for more than 15 minutes. The compressor can overheat and become permanently damaged.
  Make it cool down when using the compressor continuously.


■ Distributing the Sealant in the Tyre

Except Taiwanese models

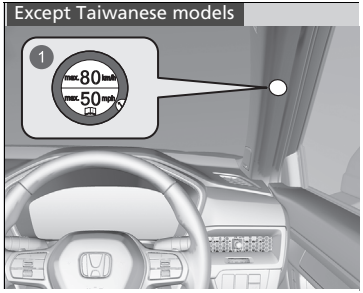

❶ Speed Restriction Label


Taiwanese models

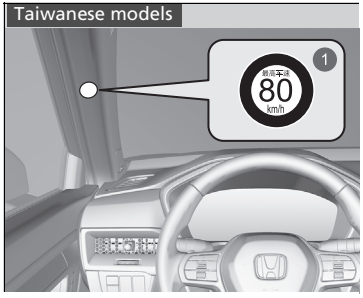

❶ Speed Restriction Label

1. Apply the speed restriction label to the location as shown.
2. Drive the vehicle for about 10 minutes or 3 to 10 kilometres.
▶ Do not exceed 80 km/h.
3. Stop the vehicle in a safe place.

Continued

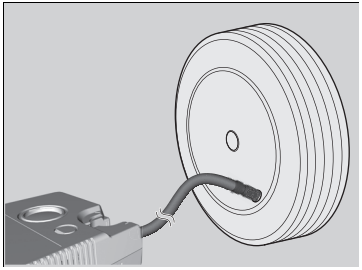

4. Recheck the air pressure using the gauge on the air compressor.
▶ Do not turn the air compressor on to check the pressure.

5. If the air pressure is:

- Less than 130 kPa (1.3 bar, 19 psi):

Do not add air or continue driving. The leak is too severe. Call for help and have your vehicle towed.

➡ **Emergency Towing** P. 834

Models with 235/60R18 103H tyres

- Front:240 kPa (2.4 bar, 35 psi)/rear:220 kPa (2.2 bar, 32 psi) or more:

Models with 235/55R19 101Y tyres

- 230 kPa (2.3 bar, 33 psi) or more:

All models

Continue driving for another 10 minutes or until you reach the nearest service station. Do not exceed 80 km/h.

▶ If the air pressure does not go down after the 10 minute driving, you do not need to check the pressure any more.

Models with 235/60R18 103H tyres

- Greater than 130 kPa (1.3 bar, 19 psi), but less than front:240 kPa (2.4 bar, 35 psi)/rear:220 kPa (2.2 bar, 32 psi):

Turn the air compressor on to inflate the tyre until the tyre pressure reaches front:240 kPa (2.4 bar, 35 psi)/rear:220 kPa (2.2 bar, 32 psi).

Injecting Sealant and Air P. 793

Models with 235/55R19 101Y tyres

- Greater than 130 kPa (1.3 bar, 19 psi), but less than 230 kPa (2.3 bar, 33 psi):

Turn the air compressor on to inflate the tyre until the tyre pressure reaches 230 kPa (2.3 bar, 33 psi).

Injecting Sealant and Air P. 793


All models

Then, drive carefully for 10 more minutes or until you reach the nearest service station.

Do not exceed 80 km/h.

▶ You should repeat this procedure as long as the air pressure is within this range.

Continued

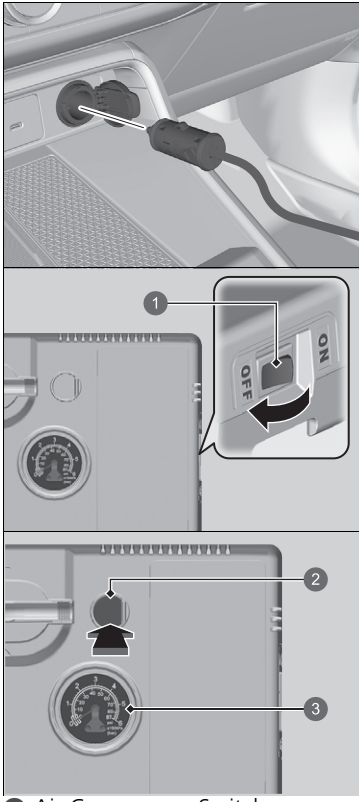

1 Air Compressor Switch
2 Deflate Button
3 Air Pressure Gauge

6. Unplug the kit from the accessory power socket.
7. Unscrew the air hose from the tyre valve stem. Reinstall the valve cap.
8. Press the deflate button until the gauge returns to 0 kPa (0 bar, 0 psi).
9. Repackage and properly stow the kit.

Distributing the Sealant in the Tyre


⚠WARNING

Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid buildup of toxic carbon monoxide.

Breathing this colourless, odourless gas can cause unconsciousness and even death. Only run the engine to power the air compressor with the vehicle outdoors.

■ Inflating an Under-inflated Tyre

You can use the kit to inflate a non-punctured under-inflated tyre.

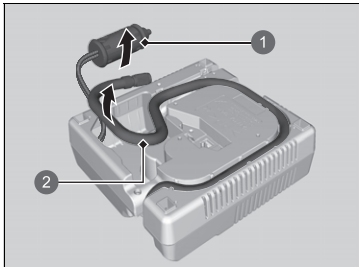


❶ Power Plug
❷ Air Hose

1. Take the kit out of the luggage area.
➡ **Getting Ready to Temporarily Repair the Flat Tyre** P. 789

2. Place the kit face up on flat ground near the tyre to be inflated, away from traffic. Do not place the kit on its side.

3. Remove the air hose from the kit.

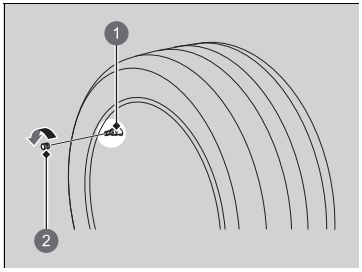

❶ Tyre Valve Stem
❷ Valve Cap

4. Remove the valve cap.

Inflating an Under-inflated Tyre

⚠WARNING


Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid buildup of toxic carbon monoxide.

Breathing this colourless, odourless gas can cause unconsciousness and even death. Only run the engine to power the air compressor with the vehicle outdoors.

NOTICE


Do not operate the temporary tyre repair kit compressor for more than 15 minutes. The compressor can overheat and become permanently damaged.

Continued

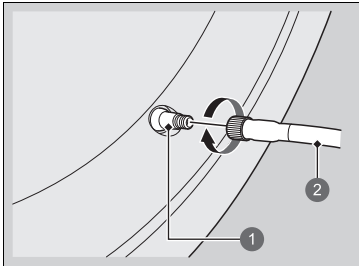


❶ Tyre Valve Stem
❷ Air Hose

5. Attach the air hose onto the tyre valve stem. Screw it until it is tight.

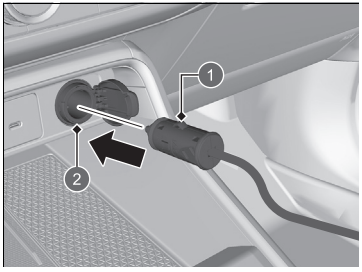

❶ Plug
❷ Accessory Power Socket

6. Plug in the compressor to the accessory power socket.
▶ Be careful not to pinch the cord in a door or window.
➡ **Accessory Power Sockets** P. 289
7. Turn the vehicle's power system on.
➡ **Carbon Monoxide Gas** P. 119

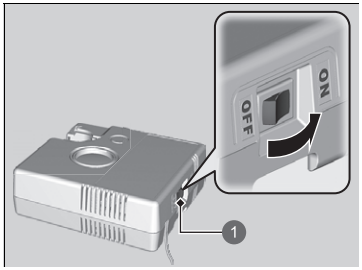


❶ Air Compressor Switch

8. Turn the air compressor switch on to inflate the tyre.
▶ The compressor starts to inject air into the tyre.
▶ If you have started the engine, leave it running while injecting air.
9. Inflate the tyre to the specified air pressure.
10. Turn off the air compressor.
▶ Check the pressure gauge on the air compressor.
▶ If overinflated, press the deflate button.
11. Unplug the power plug from the accessory power socket.
12. Unscrew the air hose from the tyre valve stem. Reinstall the valve cap.
13. Repackage and properly stow the kit.

Handling of the Jack

Your vehicle has jacking points as shown.
When replacing your tyres, consult a dealer.

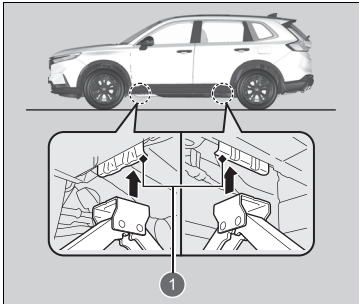

❶ Jacking Points

Checking the Procedure

If the power system won't start, check the following items and take appropriate action.

Checklist	Condition	What to Do
Check if the related indicator or driver information interface messages come on.	The **Temperature too low for vehicle to operate** message appears.	• You must wait for an increase in the ambient temperature or move the vehicle to a warmer location. • Contact dealer if necessary.
	The **To start, touch start button with emblem side of remote** message appears.	➡ **If the Keyless Remote/Card Key* Battery is Weak** P. 806
	Oceanian and Vietnamese models The transmission system indicator blinks and **Transmission system problem. Apply parking brake when parked.** message appears.	➡ **If the Transmission System Indicator Blinks along with the Warning Message** P. 826
Check the fuses.		Check all fuses, or have your vehicle checked by a dealer. ➡ **Inspecting and Changing Fuses** P. 831
Check the power system starting procedure.		Follow the instructions, and try to start the power system again. ➡ **Turning on the Power** P. 535
Check the shift position.	The transmission is not in P.	Change the shift position to P.
Check the immobilizer system indicator.	When the immobilizer system indicator is blinking, the power system cannot be turned on.	➡ **Immobilizer System** P. 225 ➡ **Immobilizer System Indicator** P. 135

If you cannot turn on the power system after checking all the items in the list above, have your vehicle checked by a dealer.


If you must start the vehicle immediately, use an assisting vehicle or booster battery to jump start it.
➡ **If the 12-Volt Battery Is Dead** P. 810

Depending on the situation, it may be possible to temporarily turn the power system on using the emergency starting procedure.
➡ **Emergency Power System On** P. 808

* Not available on all models

If the Keyless Remote/Card Key* Battery is Weak

If the beeper sounds, the **To start, touch start button with emblem side of remote** message appears on the driver information interface, the **POWER** button flashes, and the (Ready) indicator does not come on, turn on the power system as follows:

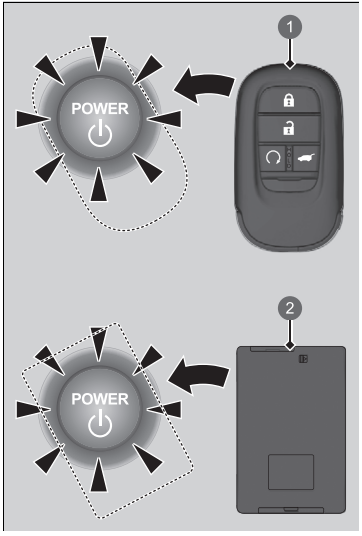


1. Keyless Remote
2. Card Key*

1. Press the **POWER** button.
▶ The beeper sounds and the **POWER** button flashes for about 30 seconds.

2. Touch the centre of the **POWER** button with the **H** logo on the keyless remote or card key* while the **POWER** button is flashing. The buttons on the keyless remote or card key* should be facing you.
▶ The beeper sounds, and the **POWER** button stays on for about 10 seconds.

 * Not available on all models

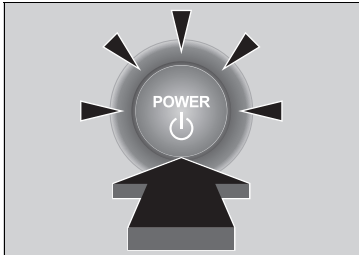

3. Depress the brake pedal and press the **POWER** button while the **POWER** button is on.
▶ The (Ready) indicator comes on.
▶ If you don't depress the pedal, the mode will change to ACCESSORY.

Emergency Power System On

If the power system cannot be turned on using the normal starting procedure, you may be able to turn it on using the emergency start procedure below.
Do not use this procedure if it is not an emergency.

1. Make sure the parking brake is applied.
2. Check that the transmission is in P, then set the power mode to ACCESSORY.
3. Firmly depress the brake pedal, then press and hold the **POWER** button for at least 15 seconds.

This should be considered a system malfunction even if you are able to turn the power system on using the above procedure.
Have your vehicle checked by a dealer immediately.

Emergency Power System On

Except Oceanian and Vietnamese models

Refer to the following if you cannot move the shift lever out of the P position.

Shift Lever Does Not Move P. 813

Emergency Power System Off

The **POWER** button may be used to turn the power system off due to an emergency situation even while driving. If you must turn the power system off, do either of the following operations:

- Press and hold the **POWER** button for about two seconds.
- Firmly press the **POWER** button three times.

The steering wheel will not lock. However, because turning off the power system disables the power assist the power system provides to the steering and braking systems, it will require significantly more physical effort and time to steer and slow the vehicle. Use both feet on the brake pedal to slow down the vehicle and stop immediately in a safe place.

Except Oceanian and Vietnamese models

The power mode is in ACCESSORY when the power system is stopped.
To change the mode to VEHICLE OFF, put the transmission into P after the vehicle comes to a complete stop. Then, press the **POWER** button twice without depressing the brake pedal.

Oceanian and Vietnamese models

The transmission automatically changes to P after the vehicle comes to a complete stop. Then, the power mode changes to VEHICLE OFF.


Emergency Power System Off

NOTICE

Do not press the **POWER** button while driving unless it is absolutely necessary for the power system to be turned off.
If you press the **POWER** button while driving, the beeper sounds.

Jump Starting Procedure

Turn off the power to electric devices, such as audio and lights. Turn off the power system, then open the bonnet.

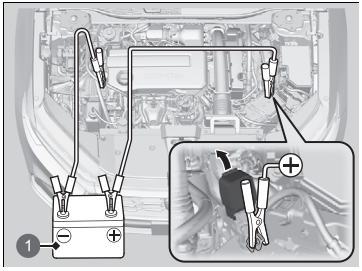

❶ Booster Battery

1. Open the battery terminal cover on your vehicle's 12-volt battery positive ⊕ terminal.
2. Connect the first jumper cable to your vehicle's 12-volt battery ⊕ terminal.
3. Connect the other end of the first jumper cable to the booster battery ⊕ terminal.
   - ▶ Use a 12-volt booster battery only.
   - ▶ When using an automotive battery charger to boost your 12-volt battery, select a lower charging voltage than 15-volt. Check the charger manual for the proper setting.
4. Connect the second jumper cable to the booster battery ⊖ terminal.

Jump Starting Procedure

⚠WARNING


A 12-volt battery can explode if you do not follow the correct procedure, seriously injuring anyone nearby.

Keep all sparks, open flames, and smoking materials away from the 12-volt battery.

NOTICE

If a 12-volt battery sits in extreme cold, the electrolyte inside can freeze. Attempting to jump start with a frozen 12-volt battery can cause it to rupture.

Securely attach the jumper cables clips so that they do not come off when the engine vibrates. Be careful not to tangle the jumper cables or allow the cable ends to touch each other while attaching or detaching the jumper cables.

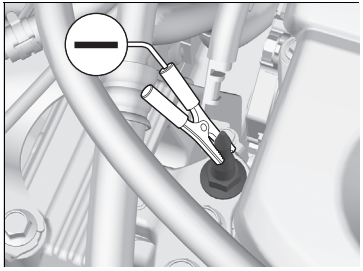

5. Connect the other end of the second jumper cable to the engine mounting bolt as shown. Do not connect this jumper cable to any other part.
6. If your vehicle is connected to another vehicle, start the assisting vehicle's engine and increase its RPM slightly.
7. Attempt to start your vehicle's engine. If it turns over slowly, check that the jumper cables have good metal-to-metal contact.

Jump Starting Procedure

12-volt battery performance degrades in cold conditions and may prevent the engine from starting.

Continued

■ What to Do After the Power System Starts

Once your vehicle's power system has started, remove the jumper cables in the following order.

1. Disconnect the jumper cable from your vehicle's ground.
2. Disconnect the other end of the jumper cable from the booster battery ⊖ terminal.
3. Disconnect the jumper cable from your vehicle's 12-volt battery ⊕ terminal.
4. Disconnect the other end of the jumper cable from the booster battery ⊕ terminal.

Have your vehicle inspected by a nearby service station or a dealer.

Jump Starting Procedure

The Vehicle Stability Assist (VSA) system, brake system (Amber), Adaptive Cruise Control (ACC) with Low Speed Follow, low tyre pressure/TPMS*, low tyre pressure/deflation warning system*, Collision Mitigation Braking System (CMBS), Road Departure Mitigation and safety support indicators may come on in amber along with a message in the gauge when you set the power mode to ON after reconnecting the 12-volt battery.
Drive a short distance at more than 20 km/h. Each indicator should go off. If any do not, have your vehicle checked by a dealer.

* Not available on all models


Shift Lever Does Not Move

Except Oceanian and Vietnamese models

Follow the procedure below if you cannot move the shift lever out of the P position.

■ Releasing the Lock

Left-hand Drive Type

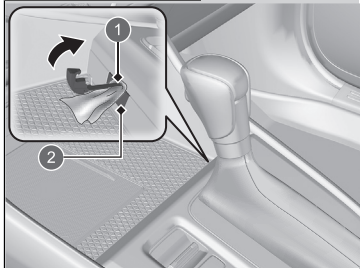

❶ Shift Lock Release Slot
❷ Cover


1. Set the parking brake.
2. Set the power mode to VEHICLE OFF.
3. Remove the built-in key from the keyless remote or card key*.

Left-hand Drive Type


4. Wrap a cloth around the tip of the built-in key. Put it into the shift lock release slot as shown in the image, and remove the cover.

* Not available on all models

Continued

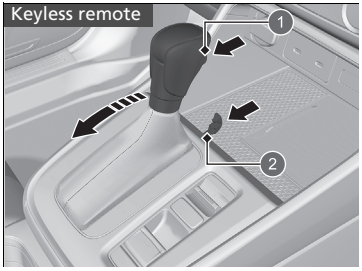

❶ Release Button
❷ Shift Lock Release Slot

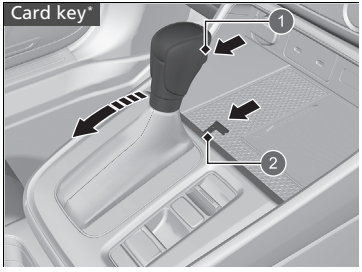

❶ Release Button
❷ Shift Lock Release Slot

All models

5. Insert the key into the shift lock release slot.
6. While pushing the key in, press the shift lever release button, and place the shift lever into [N].
▶ The lock is now released. Have the shift lever checked by a dealer as soon as possible.

 * Not available on all models

How to Handle Overheating

Overheating symptoms are as follows:

- The **Power system temperature high. Power may be reduced.** message appears on the driver information interface.
- The **Engine temperature too hot. Do not drive. Allow engine to cool.** message appears on the driver information interface.
- Steam or spray comes out of the engine compartment.

The Power system temperature high. Power may be reduced. Message Appears on the Driver Information Interface

The **Power system temperature high. Power may be reduced.** message appears on the driver information interface when the power system temperature is high.

1. Immediately park the vehicle in a safe place.
▶ Set the parking brake, and put the transmission into P. Turn off all accessories and turn on the hazard warning lights.
2. Keep the power mode in ON, and wait until the message disappears.
▶ If the message does not disappear, have your vehicle inspected at a dealer.

The Engine temperature too hot. Do not drive. Allow engine to cool. Message Appears on the Driver Information Interface

First thing to do

1. Immediately park the vehicle in a safe place.
2. Turn off all accessories and turn on the hazard warning lights.
▶ **No steam or spray present:** Keep the power system on and open the bonnet.
▶ **Steam or spray is present:** Turn off the power system and wait until it subsides. Then, open the bonnet.

Continued

How to Handle Overheating

⚠WARNING

Steam and spray from an overheated engine can seriously scald you.


Do not open the bonnet if steam is coming out.

NOTICE

Continuing to drive with the **Engine temperature too hot. Do not drive. Allow engine to cool.** message on the driver information interface may damage the engine.

If the **Power system temperature high. Power may be reduced.** appears on the driver information interface, your vehicle has less ability to accelerate and may be harder to start on an incline.

■ Next thing to do

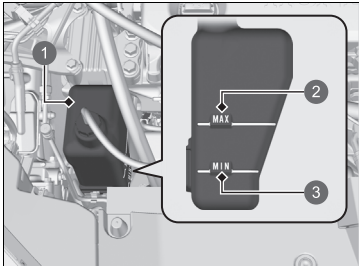

❶ Reserve Tank
❷ **MAX**
❸ **MIN**

1. Check that the cooling fan is operating and turn the power system off once the **Engine temperature too hot. Do not drive. Allow engine to cool.** message on the driver information interface disappears.
▶ If the cooling fan is not operating, immediately turn the power system off.
2. Once the engine has cooled down, inspect the coolant level and check the cooling system components for leaks.
▶ If the coolant level in the reserve tank is low, add coolant until it reaches the **MAX** mark.
▶ If there is no coolant in the reserve tank, check that the radiator is cool. Cover the radiator cap with a heavy cloth and open the cap. If necessary, add coolant up to the base of the filler neck, and put the cap back on.

■ Last thing to do

Once the engine has cooled sufficiently, turn the power system on.
If the **Engine temperature too hot. Do not drive. Allow engine to cool.** message does not appear, resume driving. If it appears again, contact a dealer for repairs.

How to Handle Overheating

⚠WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.


Always let the engine and radiator cool down before removing the radiator cap.

If the coolant is leaking, contact a dealer for repairs.

Use water as an emergency/temporary measure only. Have a dealer flush the system with proper antifreeze as soon as possible.

If the Engine oil pressure low Warning Appears

Except African models with Right-hand Drive Type

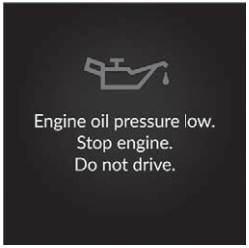

African models with Right-hand Drive Type



■ **Reasons for the warning to appear**

Appears when the engine oil pressure is low.

■ **What to do as soon as the warning appears**

1. Immediately park the vehicle on level ground in a safe place.

2. If necessary, turn the hazard warning lights on.

■ **What to do after parking the vehicle**

1. Turn the power system off and let it sit for approximately three minutes.

2. Open the bonnet and check the oil level.
▶ Add oil as necessary.
➡ **Oil Check** P. 748

3. Start the engine and check the **Engine oil pressure low** warning.
▶ The warning disappears: Start driving again.
▶ The warning does not disappear within 10 seconds: Immediately turn the power system off and contact a dealer for repairs.

If the Engine oil pressure low Warning Appears

NOTICE

Running the engine with low oil pressure can cause serious mechanical damage almost immediately.

If the 12-Volt Battery Charging System Indicator Comes On



■ **Reasons for the indicator to come on**

Comes on when there is a problem with the charging system.

■ **What to do when the indicator comes on**

Stop in a safe place and have your vehicle checked by a dealer immediately.

If the 12-Volt Battery Charging System Indicator Comes On

If you need to stop temporarily, do not turn off the power system. The power system uses the 12-volt battery to activate. You may not be able to turn the power system on again if you have turned it off with this indicator on.

If the Reduced stopping power Warning Appears

Except African models with Right-hand Drive Type



African models with Right-hand Drive Type



■ **Reasons for the warning to appear**

Appears when braking ability is reduced.

■ **What to do as soon as the warning appears**

Slow down and drive carefully. Have your vehicle checked by a dealer.

If the Malfunction Indicator Lamp Comes On or Blinks



■ **Reasons for the indicator lamp to come on or blink**

- Comes on when there is a problem with the emissions control systems or electric vehicle system*1.
- Blinks when engine misfiring is detected.

■ **What to do when the indicator lamp comes on**

- Avoid high speeds and immediately get your vehicle inspected at a dealer.

Oceanian, Bangladeshi, Bhutanese, Malaysian, Moroccan and Thai models

- Comes on when there is no petrol in the fuel tank, and goes off after vehicle is refueled, power mode is turned on, vehicle is driven, and the power system is turned off multiple times. If it does not go off, have your vehicle checked by a dealer.

■ **What to do when the indicator lamp blinks**

Park the vehicle in a safe place with no flammable items and wait at least 10 minutes or more with the engine stopped until it cools.

*1: Oceanian, Bangladeshi, Bhutanese, Malaysian, Moroccan and Thai models

If the Malfunction Indicator Lamp Comes On or Blinks

NOTICE

If you drive with the malfunction indicator lamp on, the emissions control system and the engine could be damaged.

If the malfunction indicator lamp blinks again when restarting the engine, drive to the nearest dealer at 50 km/h or less. Have your vehicle inspected.

If the Brake System Indicator (Red) Comes On or Blinks



■ **Reasons for the indicator to come on**

- The brake fluid is low.
- There is a malfunction in the brake system.

■ **What to do when the indicator comes on while driving**

Depress the brake pedal lightly to check pedal pressure.

- If normal, check the brake fluid level the next time you stop.
- If abnormal, take immediate action. Pull the [−] deceleration paddle selector several times to help slow the vehicle using regenerative braking.

■ **Reasons for the indicator to blink**

There is a problem with the electric parking brake system.

■ **What to do when the indicator blinks**

Avoid using the parking brake and have your vehicle checked by a dealer immediately.

If the Brake System Indicator (Red) Comes On or Blinks

Have your vehicle repaired immediately.
It is dangerous to drive with low brake fluid. If there is no resistance from the brake pedal, stop immediately in a safe place. If necessary, pull the [−] deceleration paddle selector to help slow the vehicle using regenerative braking.

If the brake system indicator (red) and **ABS** indicator come on simultaneously, the electronic brake distribution system is not working. This can result in vehicle instability under sudden braking.
Have your vehicle inspected by a dealer immediately.

If the brake system indicator (red) blinks at the same time when the brake system indicator (amber) comes on, the parking brake may not work.
Avoid using the parking brake and have your vehicle checked by a dealer immediately.

➡ **If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On**
P. 822

If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On


(Red)


(Amber)

■ **If the brake system indicator (red) comes on or blinks at the same time when the brake system indicator (amber) comes on, release the parking brake manually or automatically**

➡ **Parking Brake** P. 691

- If the brake system indicator (red) continuously comes on or blinks at the same time when the brake system indicator (amber) comes on, stop the vehicle in a safe place and have it inspected by a dealer immediately.
  ▶ To prevent the vehicle from moving, put the transmission into P.
- If only the brake system indicator (red) is turned off, avoid using the parking brake and have your vehicle checked by a dealer immediately.

If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On

If you apply the parking brake, you may not be able to release it.

If the brake system indicator (red) and the brake system indicator (amber) come on at the same time, the parking brake is working.

If the brake system indicator (red) blinks at the same time when the brake system indicator (amber) comes on, the parking brake may not work because it is checking the system.

If the Electric Power Steering (EPS) System Indicator Comes On



■ **Reasons for the indicator to come on**

Comes on when there is a problem with the EPS system or Driver Attention Monitor System.

■ **What to do when the indicator comes on**

- Stop the vehicle in a safe place and turn on the power system again. If the indicator comes on and stays on, immediately have your vehicle inspected by a dealer.
- If **Do not drive** displays on the driver information interface, immediately stop in a safe place and contact a dealer.

Taiwanese models

If the Low Tyre Pressure/TPMS Indicator Comes On or Blinks



■ **Reasons for the indicator to come on or blink**

A tyre pressure is significantly low, or the TPMS has not been calibrated. If there is a problem with the TPMS, the indicator blinks for about one minute, and then stays on.

■ **What to do when the indicator comes on**

Drive carefully and avoid abrupt cornering and hard braking.

Stop your vehicle in a safe place. Check the tyre pressure and adjust the pressure to the specified level. The specified tyre pressure is on a label on the driver side doorjamb.

▶ Calibrate the TPMS after the tyre pressure is adjusted.

TPMS Calibration P. 588

■ **What to do when the indicator blinks, then remains on**

Have the tyre inspected by a dealer as soon as possible.

If the Low Tyre Pressure/TPMS Indicator Comes On or Blinks

NOTICE

Driving on an extremely underinflated tyre can cause it to overheat. An overheated tyre can fail. Always inflate your tyres to the prescribed level.

Except Indonesian and Taiwanese models

If the Low Tyre Pressure/Deflation Warning System Indicator Comes On or Blinks



■ **Reasons for the indicator to come on or blink**

A tyre pressure is significantly low, or the deflation warning system has not been calibrated. If there is a problem with the deflation warning system, the indicator blinks for about one minute, and then stays on.

■ **What to do when the indicator comes on**

Drive carefully and avoid abrupt cornering and hard braking.

Stop your vehicle in a safe place. Check the tyre pressure and adjust the pressure to the specified level. The specified tyre pressure is on a label on the driver side doorjamb.

▶ Calibrate the deflation warning system after the tyre pressure is adjusted.

Deflation Warning System* P. 590

■ **What to do when the indicator blinks, then remains on**

Have the tyre inspected by a dealer as soon as possible.

If the Low Tyre Pressure/Deflation Warning System Indicator Comes On or Blinks


NOTICE

Driving on an extremely underinflated tyre can cause it to overheat. An overheated tyre can fail. Always inflate your tyres to the prescribed level.

* Not available on all models

Oceanian and Vietnamese models

If the Transmission System Indicator Blinks along with the Warning Message

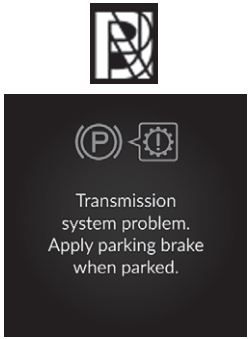

■ **Reasons for the indicator to blink**
The transmission is malfunctioning.

■ **What to do when the indicator blinks**
Immediately have your vehicle inspected by a dealer.

If the Transmission System Indicator Blinks along with the Warning Message

You may not be able to turn on the power system.

Make sure to set the parking brake when parking your vehicle.

Call a professional towing service if you need to tow your vehicle.


➡ **Emergency Towing** P. 834

Fuse Locations


If any electrical devices are not working, set the power mode to VEHICLE OFF and check to see if any applicable fuse is blown.

Engine Compartment Fuse Box

Located near the 12-volt battery. Push the tabs to open the box.
Fuse locations are shown on the image below.
Locate the fuse in question by the fuse number in the image and chart.

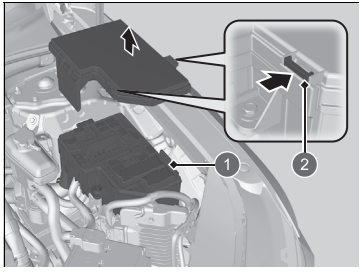

1 Fuse Box
2 Tab

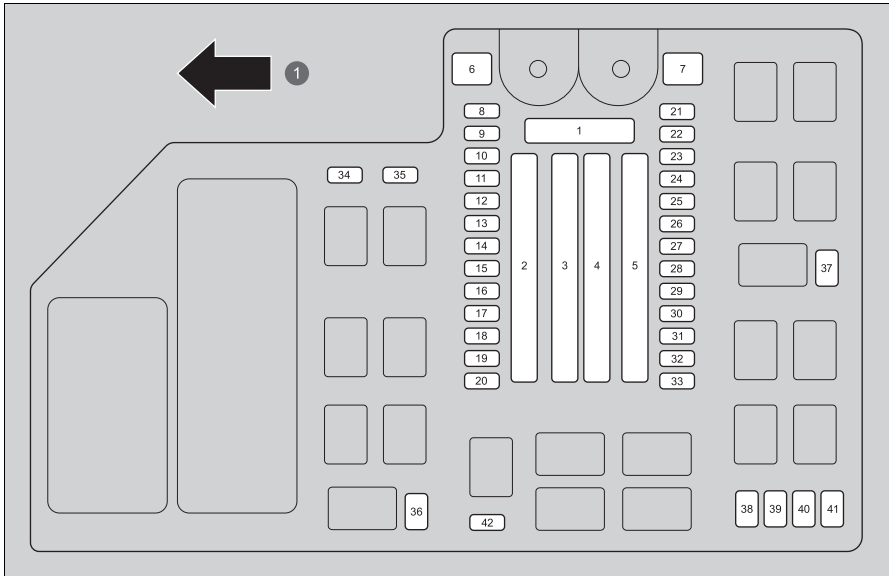

1 Front

■ Circuit protected and fuse rating

	Circuit Protected	Amps
1	Main Fuse	175 A
2	–	30 A
	–	40 A
	Fuse Box Option 1	60 A
	–	40 A
	Fuse Box Option 2	60 A
	–	60 A
	Fuse Box Main 1	60 A
3	Audio AMP*	30 A
	–	30 A
	–	40 A
	Rear Demister	30 A
	–	50 A
	Blower Motor	40 A
	Power Tailgate Motor	40 A
4	ABS/VSA FSR	40 A
	ABS/VSA Motor	40 A
	Engine EWP	40 A
	Electric Servo Brake	40 A
	IG Main 1	30 A
	RFC Sub	40 A
	IG Main 2	30 A
5	Sub Fuse 1	30 A
	Wiper	30 A
	EPS	70 A
	–	30 A
	RFC Main	40 A
	P-ACT Motor*	30 A
	Fuse Box Main 2	60 A
6	–	–
7	Relay Module 2	20 A
8	–	–
9	Back Up	10 A
10	–	–
11	Rear Fog Light*	10 A
12	–	–
13	Audio Sub	15 A*1 / 7.5 A*2, *3
14	–	–
15	Front Fog Lights	10 A
16	–	–
17	–	–
18	Horn	15 A
19	Front Washer	15 A
20	Audio	15 A
21	Relay Module 1	20 A
22	DBW	15 A
23	Hazard	10 A
24	VBU	10 A
25	IGP	15 A
26	Electric VTC	20 A
27	Left Headlight	20 A
28	Injector	20 A
29	Stop lights	10 A
30	Right Headlight	20 A
31	IG Coil	15 A
32	ICM	10 A
33	PCU EWP	10 A
34	–	–
35	–	–
36	–	–
37	–	–
38	IGA	10 A
39	IGB	10 A
40	P-ACT Unit*	10 A
41	IGPS LAF	7.5 A
42	IG1 Monitor 2	5 A


*1:Models with Display Audio with Google built-in and Normal AMP
*2:Models with Display Audio without Google built-in
*3:Models with BOSE AMP and Multi-View Camera


* Not available on all models

Interior Fuse Box


Located under the dashboard.
Fuse locations are shown on the image below.
Locate the fuse in question by the fuse number in the image and chart.

Left-hand Drive Type

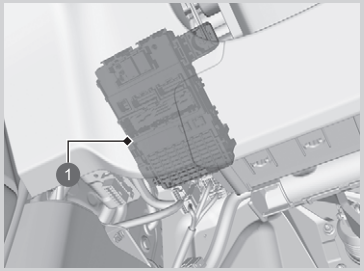

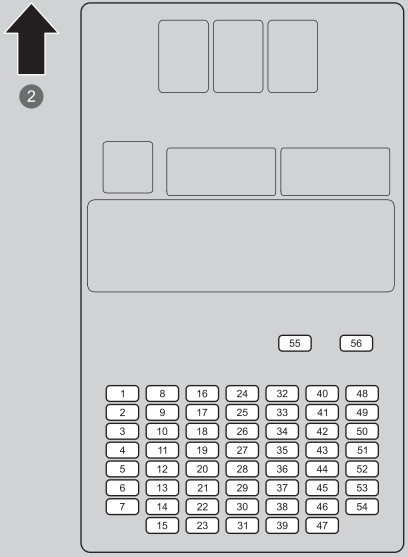

Right-hand Drive Type

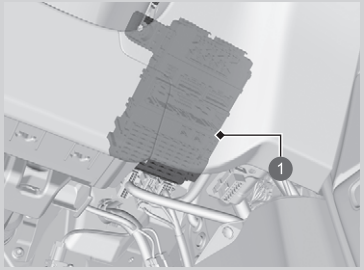

❶ Fuse Box
❷ Up


Continued

■ Circuit protected and fuse rating

	Circuit Protected	Amps
1	Driver's Power Window	20 A
2	Front Passenger's Power Window	20 A
3	Rear Right Side Power Window	20 A
4	Rear Left Side Power Window	20 A
5	Option	10 A
6	SRS	10 A
7	–	–
8	–	–
9	Front Accessory Power Socket	20 A
10	Door Lock	20 A
11	Meter	10 A
12	–	–
13	Option 2	10 A
14	Option 6 (VB SOL)	10 A
15	Driver's Door Unlock*	10 A
16	IMG	10 A
17	–	–
18	–	–
19	–	–
20	USB Charger	10 A
21	Accessory Power Socket (Luggage Area)	20 A
22	SMART	10 A
23	Driver's Door Lock*	10 A
24	E-DPS*	20 A
25	SBW*	10 A
26	SRS	10 A
27	ACG	10 A
28	Option 5 (ABS)	10 A
29	Fuel Pump	20 A
30	Left Side Door Unlock	10 A
31	Right Side Door Unlock*	10 A
32	Panoramic Roof*	20 A
33	USB Charger PD*	10 A
34	–	–
35	Sunshade*	20 A
36	Rear Seat Heater*	20 A
37	–	–
38	–	–
39	Right Side Door Lock*	10 A
40	Driver's Power Seat Sliding	20 A
41	Driver's Power Seat Reclining	20 A
42	P-ACT	10 A
43	Option	10 A
44	Daytime Running Light	5 A
45	ACC	10 A
46	–	–
47	Left Side Door Lock	10 A
48	Front Seat Heater*	20 A
49	Passenger's Power Seat Reclining*	20 A
50	Driver's Power Seat Lumbar Support	10 A
51	IGA 2 (IG Hold 3)	20 A
52	Power Tailgate Closer	20 A
53	Passenger's Power Seat Sliding*	20 A
54	Option 1	10 A
55	–	–
56	–	–

* Not available on all models

Inspecting and Changing Fuses

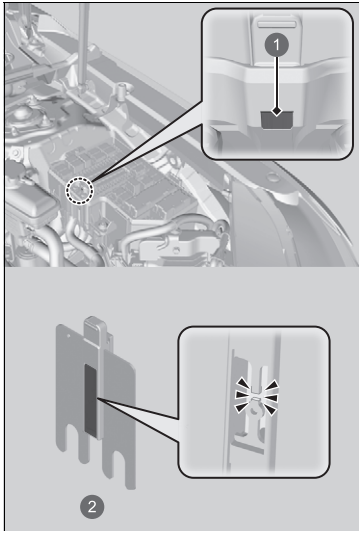

1 Hole
2 Main Fuse

1. Set the power mode to VEHICLE OFF. Turn headlights and all accessories off.
2. Remove the fuse box cover.
3. Check the main fuse in the engine compartment fuse box.
   ▶ Look at the fuse through the hole.
   ▶ If the fuse is blown, have it replaced by a dealer.

Inspecting and Changing Fuses

NOTICE


Replacing a fuse with one that has a higher rating greatly increases the chances of damaging the electrical system.

Use the charts to locate the fuse in question and confirm the specified amperage.

Fuse Locations P. 827


Replace with a fuse of the same specified amperage.

Continued

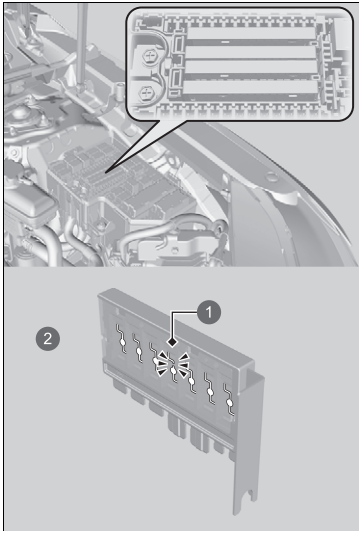

❶ Blown Fuse
❷ Combined Fuse

4. Check the combined fuses in the engine compartment fuse box.
▶ Look into the space between the fuses.
▶ If the fuse is blown, have it replaced by a dealer.

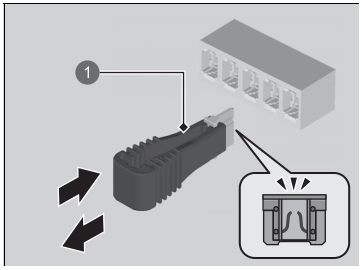

1 Fuse Puller

5. Inspect the small fuses in the engine compartment and the vehicle interior.
▶ If there is a blown fuse, remove it with the fuse puller and replace it with a new one.

Emergency Towing

Call a professional towing service if you need to tow your vehicle.

■ Flatbed equipment
The operator loads your vehicle on the back of a truck.
This is the best way to transport your vehicle.

2WD models

■ Wheel lift equipment
The tow truck uses two pivoting arms that go under the front tyres and lift them off the ground. The rear tyres remain on the ground. **This is an acceptable way to tow your vehicle.**

Emergency Towing

NOTICE
Trying to lift or tow your vehicle by the bumpers will cause serious damage. The bumpers are not designed to support the vehicle's weight.


NOTICE
Improper towing such as towing behind a motorhome or other motor vehicle can damage the transmission.

Never tow your vehicle with just a rope or chain. It is very dangerous since ropes or chains may shift from side to side or break.

2WD models
Make sure the parking brake is released. If you cannot release the parking brake, your vehicle must be transported by the flatbed equipment.
Parking Brake P. 691


What to Do If Unable to Unlock the Fuel Fill Door

If you cannot unlock the fuel fill door, use the following procedure.

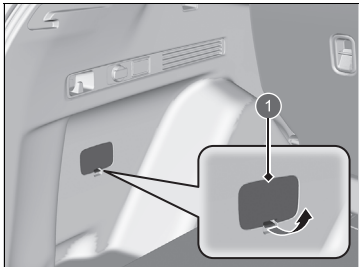

1. Open the tailgate and remove the cover.

❶ Cover

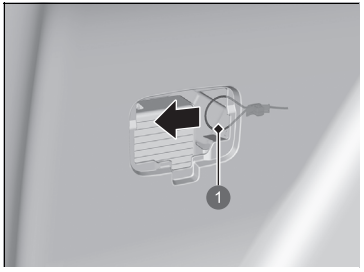

2. Pull the release cord as shown.
3. Open the fuel fill door.
➔ **How to Refuel** P. 731


❶ Release Cord

What to Do If Unable to Unlock the Fuel Fill Door

After taking these steps, contact a dealer to have the vehicle checked.


What to Do If Unable to Open the Tailgate

If you cannot open the tailgate, use the following procedure.

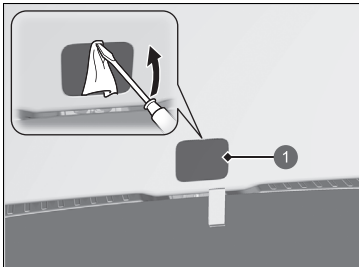

1 Cover

1. Use a flat-tip screwdriver and remove the cover on the back of the tailgate.
▶ Wrap the flat-tip screwdriver with a cloth to prevent scratches.

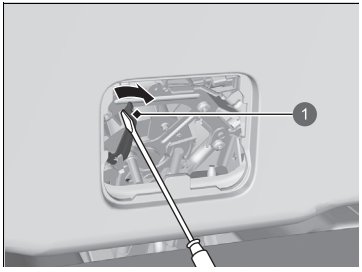

1 Lever

2. To open the tailgate, push the tailgate while sliding the lever to the right with the flat-tip screwdriver.

What to Do If Unable to Open the Tailgate

When you open the tailgate from inside, make sure there is enough space around the tailgate, and it does not hit anyone or any object.

Following up:
After taking these steps, contact a dealer to have the vehicle checked.

Information

This chapter includes your vehicle's specifications, locations of identification numbers, and other information required by regulation.

Specifications 838
Identification Numbers
Vehicle Identification Number (VIN), Engine Number, Motor Number and Transmission Number 841
Devices that Emit Radio Waves* 843
Open Source Licence 854

* Not available on all models

■ Vehicle Specifications

Model	CR-V
Curb Weight	1,715 kg - 1,815 kg*1 1,724 kg - 1,732 kg*2 1,725 kg - 1,759 kg*3 1,728 kg - 1,809 kg*4 1,741 kg - 1,828 kg*5 1,758 kg - 1,760 kg*6 1,761 kg - 1,764 kg*7 1,825 kg*8
Maximum Permissible Weight	See the certification label on the driver's doorjamb*6
	See the certification label on the passenger's doorjamb*8
	2,350 kg*9
Maximum Permissible Axle Weight	See the certification label on the driver's doorjamb*6
	See the certification label on the passenger's doorjamb*8
	Front 1,260 kg*9
	Rear 1,150 kg*9

*1: Thai models
*2: Malaysian models
*3: Vietnamese models
*4: Cambodian, Laos, and Philippine models
*5: Australian, Bangladeshi, Bhutanese, and New Zealand models
*6: Jordanian, Lebanese, Moroccan, and Tunisian models
*7: Indonesian models
*8: Botswanan, Mauritian, Namibian, Seychelles, and South African models
*9: Except African and Middle Eastern models

■ Engine Specifications

Type	Water-cooled in-line 4-cylinder DOHC	
Bore x Stroke	81 × 96.7 mm	
Displacement	1,993 cm^3	
Compression Ratio	13.9 : 1	
Spark Plugs	NGK	DILZKAR7G11Y

■ Fuel

Fuel: Type	**Indonesian models** Unleaded petrol, research octane number 90 or higher **Taiwanese models** Unleaded petrol, research octane number 92 or higher **Thai models** Unleaded petrol/gasohol up to E20 (80% petrol and 20% ethanol), research octane number 91 or higher **Except Indonesian, Taiwanese, and Thai models** Unleaded petrol, research octane number 91 or higher
Fuel Tank Capacity	57 L

■ 12-Volt Battery

Capacity	36AH(5)/45AH(20)

■ Washer Fluid

Tank Capacity	1.5 L

■ Light Bulbs

Headlights (Low Beam)	LED
Headlights (High Beam)	LED
Front Fog Lights	LED
Front Turn Signal/Position/Daytime Running Lights	LED
Active Cornering Lights*	LED
Side Turn Signal Lights (on Door Mirrors)	LED
Brake Lights	LED
Taillights	LED
Rear Turn Signal Lights	LED
Rear Side Marker Lights	LED
Back-Up Lights	LED
Rear Fog Light*	LED
High-Mount Brake Light	LED
Rear Licence Plate Light	LED
Interior Lights	
Front Map Lights	LED
Rear Map Lights	LED
Ambient Lights*	LED
Foot Lights*	LED
Vanity Mirror Lights	1.4 W
Centre Console Light	LED
Glove Box Light*	LED
Door Inner Handle Lights*	LED
Console Compartment Light	LED
Beverage Holder Light*	LED
Luggage Area Lights	LED

■ Air Conditioning

Refrigerant Type	HFC-134a (R-134a)
Charge Quantity	520 - 570 g

■ Brake Fluid

Specified	Brake Fluid with DOT 3 or DOT 4

■ Transmission Fluid

Specified	Honda HEVF-Type 1	
Capacity	Change	2.4 L*1 2.8 L*2

*1: 2WD models
*2: AWD models

■ Engine Oil

Recommended	Taiwanese models ·Honda Genuine Motor Oil 0W-20 ·ACEA C5 0W-20 Except Taiwanese models ·Honda Genuine Motor Oil 0W-20 ·API service SN or higher grade 0W-20	
Capacity	Change	3.7 L
	Change including filter	4.0 L

■ Rear Differential Fluid*

Specified	Honda DPSF-II
Capacity	Change 1.247 L

* Not available on all models

Continued

■ Engine Coolant

Specified	Honda All Season Antifreeze/Coolant Type2
Ratio	50/50 with distilled water
Capacity	5.75 L*1 (change including the remaining 0.72 L in the reserve tank) 5.70 L*2 (change including the remaining 0.72 L in the reserve tank)

*1: Left-hand Drive Type
*2: Right-hand Drive Type

■ Tyre

Regular	Size	235/60R18 103H*1 235/55R19 101Y*2
	Pressure	See the label on driver's doorjamb
Wheel Size	Regular	18 x 7 1/2J*1 19 x 7 1/2J*2

*1: Models with 18 inch wheel
*2: Models with 19 inch wheel

■ Brake

Type	Power assisted
Front	Ventilated disc
Rear	Solid disc
Parking	Electric parking brake system

■ Vehicle Dimensions

Length		4,691 mm*1, *2, *3, *4, *5, *15, *18 4,704 mm*6, *7 4,706 mm*8
Width		1,866 mm
Height		1,674 mm*8, *13 1,681 mm*3, *5, *7, *9, *11, *15, *18 1,684 mm*14 1,691 mm*4, *10, *12
Wheelbase		2,700 mm*10 2,701 mm*3, *5, *8, *9, *15, *18 2,702 mm*2, *4, *6, *7
Track	Front	1,608 mm*10 1,611 mm*9, *15 1,612 mm*4, *12, *14, *16 1,613 mm*3, *7, *8, *11, *13, *17, *18
	Rear	1,623 mm*10 1,627 mm*9, *15 1,638 mm*4, *12, *14 1,640 mm*3, *5, *7, *8, *11, *13, *18

*1: Thai models
*2: Philippine models
*3: Cambodian and Laos models
*4: Botswanan, Mauritian, Namibian, Seychelles, and South African models
*5: Malaysian models
*6: Australian and New Zealand models
*7: Bangladeshi and Bhutanese models
*8: Jordanian, Lebanese, Moroccan, and Tunisian models
*9: Thai models with 2WD
*10: Thai models with AWD
*11: Australian and New Zealand models with 2WD
*12: Australian and New Zealand models with AWD
*13: Philippine models with 2WD
*14: Philippine models with AWD
*15: Vietnamese models
*16: Malaysian models with A-type meter
*17: Malaysian models with B-type meter
*18: Indonesian models


Australian, Bangladeshi, Bhutanese, Botswanan, Mauritian, Namibian, New Zealand, Seychelles, and South African models

■ Max. Towing Weight

Trailer with brakes	750 kg
Trailer without brakes	600 kg
The maximum permissible vertical load on the coupling device	75 kg

Vehicle Identification Number (VIN), Engine Number, Motor Number and Transmission Number

Your vehicle has a 17-digit vehicle identification number (VIN) used to register your vehicle for warranty purposes, and for licensing and insuring your vehicle. The locations of your vehicle's VIN, engine number, motor number and transmission number are shown as follows.

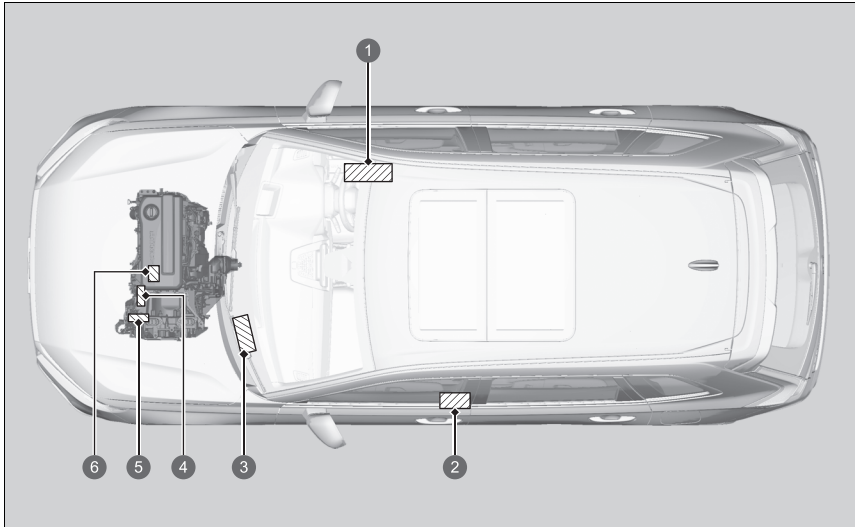


❶ Vehicle Identification Number
❷ Certification Label*/Vehicle Identification Number*/Certification Plate*
❸ Vehicle Identification Number*
❹ Motor Number
❺ Transmission Number
❻ Engine Number

* Not available on all models

Vehicle Identification Number (VIN), Engine Number, Motor Number and Transmission Number

The interior vehicle identification number (VIN) is located under the cover.

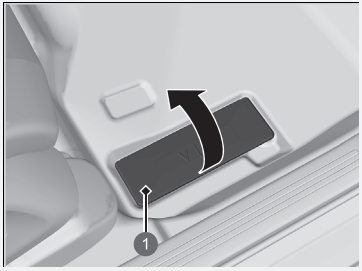

❶ Cover

Environmental Protection Regulation

Taiwanese models

NOTICE

Used batteries to be disposed of shall be collected in conformity with the regulations of Environmental Protection Administration.



■ Close proximity exhaust noise test

- Requirements for testing: Since the engine generally does not run while the vehicle is stationary, you must wait until the high-voltage battery is depleted by at least 80% so that the engine will automatically start and continue running to supply electricity to the battery. During this charging period, it is possible to test the exhaust noise. Before testing, make sure that all the electrical components (climate control system, lights, etc.) are turned off.
- Depleting the high-voltage battery: To accelerate battery depletion, set the power system to READY and then turn on all the electrical components.

 * Not available on all models

Devices that Emit Radio Waves*

The following products and systems on your vehicle emit radio waves when in operation.

Australian models

Adaptive Cruise Control/ Collision Mitigation Braking System


Botswanan models

Keyless Access System		Adaptive Cruise Control/ Collision Mitigation Braking System
BCM	FOB	
BOCRA REGISTERED NO : BOCRA/TA/2020/5766	BOCRA REGISTERED NO : BOCRA/TA/2020/5502	BTA REGISTERED NO: BOCRA/TA/2022/7110

Botswanan models

Hands-Free Telephone System	Wireless Charger
BOCRA REGISTERED No: BOCRA/TA/2020/5231	BOCRA REGISTERED No: BOCRA/TA/2022/7515

* Not available on all models

Continued

Indonesian models

Keyless Access System FOB
The web-address of QR Code is: https://sertifikasi.postel.go.id/ valid?section=4f94ec92c3a7c44073065befddad1b22S3r107620S3r07b0b99ff69237359f67408f220423ba

Indonesian models

Adaptive Cruise Control/ Collision Mitigation Braking System	
	

Moroccan models

Keyless Access System BCM	FOB
	

Moroccan models

Adaptive Cruise Control/ Collision Mitigation Braking System	Hands-Free Telephone System
AGREE PAR L'ANRT MAROC Numéro d'agrément : MR00032137ANRT2022 Date d'agrément : 12/01/2024	AGRÉÉ PAR L'ANRT MAROC Numéro d'agrément: MR 19569 ANRT 2019 Date d'agrément: 25/04/2019

Philippine models

Keyless Access System		
BCM	FOB	Card Key
No.ESD-RCE-2023291	No.ESD-RCE-2022596C	
NTC Type Accepted	NTC Type Accepted	NTC Type Accepted No.: ESD-RCE-2023320

South African models

Adaptive Cruise Control/ Collision Mitigation Braking System
ICASA TA-2022/0153

Taiwanese models

USB Charger	
http://www.alpine.com/e/RoHS/UCU.pdf	
 D74006 RoHS(Pb)	
(1 Port USB CHARGER) 最大額定電流 3.0 A 12.0 V 直流電源； 負極接地 12.0 V 3.0 A MAX	(2 Port USB CHARGER) 最大額定電流 6.0 A 12.0 V 直流電源； 負極接地 12.0 V 6.0 A MAX

Devices that Emit Radio Waves*

Taiwanese models

低功率射頻器材技術規範 章節3.8.2警語
取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

* Not available on all models

Thai models

Keyless Access System

BCM



FOB



Thai models

Adaptive Cruise Control/ Collision Mitigation Braking System





เครื่องโทรคมนาคมและอุปกรณ์นี้ มีความสอดคล้องตามมาตรฐานหรือข้อกำหนดของ กสทช.
เครื่องวิทยุคมนาคมนี้มีระดับการแผ่คลื่นแม่เหล็กไฟฟ้าสอดคล้องตามมาตรฐานความปลอดภัยต่อสุขภาพของมนุษย์จากการใช้เครื่องวิทยุคมนาคมที่คณะกรรมการกิจการโทรคมนาคมแห่งชาติประกาศกำหนด

Thai models

Blind Spot Information System/Cross Traffic Monitor
 1) This telecommunication equipment is in compliance with NBTC requirements 2) This radiocommunication equipment has the electromagnetic field strength in compliance with the Safety Standard for the Use of Radiocommunication Equipment on Human Health announced by the National Telecommunications Commission.

Thai models

TCU	
TLHOBIBN0D4	TLHOBINN0D5
	

This telecommunication equipment conforms to the standard or technical requirements of NBTC

This radiocommunication equipment has the electromagnetic field strength in compliance with the Safety Standard for the Use of Radiocommunication Equipment on Human Health announced by the National Telecommunications Commission.


Thai models

Digital Key



Vietnamese models

Keyless Access System


BCM

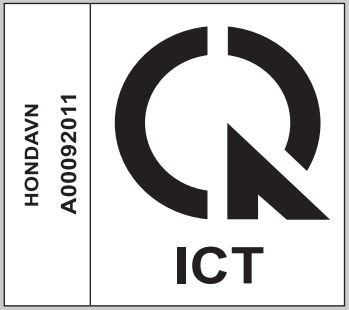

FOB

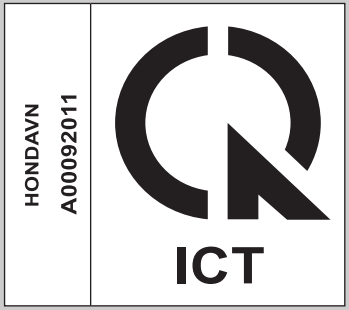

Card Key*

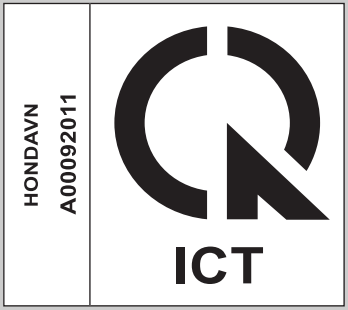

Vietnamese models

Adaptive Cruise Control/
Collision Mitigation Braking System



Wireless Charger



Information

* Not available on all models

Vietnamese models

TCU


■ Meter open source licence

The software embedded in this product includes open source software. Refer to the following website for details regarding the open source software.
https://www.nippon-seiki.co.jp/global/business_ic_meter/

■ TCU open source licence*

Models with Display Audio without Google built-in

Free/Open Source Software Information
This product contains Free/Open Source Software(FOSS).
The licence information and/or the source code of such FOSS can be found at the following URL.
https://www.denso.com/global/en/opensource/tcu/honda/

Models with Display Audio with Google built-in

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices and other relevant documents, please visit *https://opensource.lge.com*. LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

■ Multi-View Camera open source licence*

Free/Open Source Software Information
This product contains Free/Open Source Software(FOSS).
The licence information and/or the source code of such FOSS can be found at the following URL.
http://car.panasonic.jp/oss/n03pkdl6

* Not available on all models

■ **Front sensor camera open source licence**

"The product includes code under public domain : https://www.jonolick.com/uploads/7/9/2/1/7921194/jo_jpeg.cpp
The code is based on https://github.com/jpeg-js/jpeg-js/blob/master/lib/encoder.js
Copyright (c) 2008, Adobe Systems Incorporated

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

* Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

* Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

* Neither the name of Adobe Systems Incorporated nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.
*/
/*

Numbers

12-Volt Battery
If the 12-Volt Battery Is Dead 810
Maintenance (Checking the Battery) 769
12-Volt Battery Charging System Indicator 127, 818

A

ABS (Anti-lock Brake System) 698
Accessories and Modifications 785
Accessory Power Sockets 289
Acoustic Vehicle Alerting System 557
Active Cornering Lights 244
Adaptive Cruise Control (ACC) with Low Speed Follow 636
Indicator 139
Adaptive Driving Beam 250
Indicator 134
Adding
Coolant 750
Engine Oil 749
Washer 756
Additives, Engine Oil 747
Adjustable Speed Limiter 571
Indicator 139
Adjusting
Armrest 276
Clock 196
Front Seats 265
Head Restraints 273
Headlights 246
Mirrors 260
Rear Seats 269
Sound 325
Steering Wheel 259
Agile Handling Assist 585
Air Conditioning System (Climate Control System) 298
Changing the Mode 299
Defrosting the Windscreen and Windows 300
Dust and Pollen Filter 775
Plasmacluster 302
Recirculation/Fresh Air Mode 299
Sensor 303
Synchronization Mode 301
Using Automatic Climate Control 298
Air Pressure 764, 840
Airbags 65
After a Collision 67
Airbag Care 82
Centre Airbag 74
Event Data Recorder 1
Front Airbags (SRS) 67
Indicator 81, 130
Knee Airbags 70
Sensors 65
Side Airbags 76
Side Curtain Airbags 79
All-Wheel Drive (AWD) System 586
AM/FM Radio 334, 430, 435
Android Auto™ 359, 451
Anti-lock Brake System (ABS) 698
Indicator 130
Apple CarPlay 353, 447
Armrest 276
Audio Remote Controls 312, 412
Audio System 306
Adjusting the Sound 325, 425
Android Auto™ 359, 451
App Shortcut Function 316
Apple CarPlay 447
Audio System Function 309
Audio/Information Screen 415
Basic Operation 309, 409
Clock Setup 322, 422
Customized Features 465
DAB 339
Display Setup 326, 426
Error Messages 504
General Information 506
Google built-in 458
How to Update 327
How to Update Wirelessly 329, 428
How to Update with a USB Device 330
Limitations for Manual Operation 389
MP3/WMA/AAC 345
Power Flow 363, 455
Profile Settings 464
Radio Data System (RDS) 337
Reactivating 307
Security Code 307

Selecting an Audio Source 321, 421
Start Up 308, 407
Status Area 321, 420
System Updates 327, 427
System Updates Settings 328, 429
Theft Protection 307
USB Flash Drives 345, 440, 507
USB Ports 311, 411
User Information 460
Wallpaper Setup 323, 423
Wi-Fi Connection 352, 446
Audio/Information Screen 315, 415
Auto High-Beam 247
Indicator 134
Automatic Brake Hold 695
Indicator 126, 695
Automatic Brake Hold System
Indicator 126, 695
Automatic Folding Door Mirror Function 263
Automatic Intermittent Wipers 254
Average Fuel Economy 154, 174
Average Speed 156, 176
AWD (All-Wheel Drive) 586
AWD Torque Distribution Monitor 183

B

Battery 14, 769
12-Volt 769, 838
12-Volt Battery Charging System Indicator 127, 818
High Voltage 14, 597
If the 12-Volt Battery Is Dead 810
Maintenance (Checking the 12-Volt Battery) 769
Maintenance (Replacing) 772
Belts (Seat) 51
Beverage Holders 282
Blind Spot Information System 593
***Bluetooth*® Audio** 349, 443
Booster Seats (For Children) 117
Brake System 691
Anti-lock Brake System (ABS) 698
Automatic Brake Hold 695
Brake Assist System 699
Fluid 755
Foot Brake 694
Indicator (Amber) 126, 822
Indicator (Red) 124, 125, 821, 822
Parking Brake 691
Bulb Replacement
Active Cornering Lights 757
Brake Lights, Taillights, Rear Side Marker Lights, and Rear Turn Signal Lights 758
Front Fog Lights 757
Front Turn Signal Lights, Position/Daytime Running Lights 757
Headlights 757
High-Mount Brake Light 758
Rear Licence Plate Light 758
Side Turn Signal/Emergency Indicator Lights 757
Taillights, Rear Fog Light, and Back-Up Lights 758
Vanity Mirror Lights 759
Bulb Specifications 839

C

Carbon Monoxide Gas 119
Carrying Luggage 523, 525
Centre Airbag 74
Certification Label 841
Changing Bulbs 757
CHARGE/DECEL Gauge 146
Child Restraint System 84
Booster Seats 117
Child Restraint System for Infants 87
Child Restraint System for Small Children 89
Installing a Child Restraint System with a Lap/Shoulder Seat Belt 111
Larger Children 116
Rear-facing Child Restraint System 87
Selecting a Child Restraint System 90
Using Tether 113
Child Safety 84
Childproof Door Locks 212

Childproof Door Locks 212
Cleaning the Exterior 781
Cleaning the Interior 778
Climate Control System 298
Changing the Mode 298
Defrosting the Windscreen and Windows 300
Dust and Pollen Filter 775
Plasmacluster 302
Recirculation/Fresh Air Mode 299
Sensors 303
Synchronization Mode 301
Using Automatic Climate Control 298
Clock 166, 196
CMBS (Collision Mitigation Braking System) 606
Coat Hook 283
Collision Mitigation Braking System (CMBS) 606
Console Compartment 281
Controls 195
Coolant (Engine)
Adding the Coolant 750
Overheating 815
Cross Traffic Monitor 709
Cup Holders 282
Customize Display 165, 167, 187
Customized Features 366, 375, 465

D

DAB 339
Daytime Running Lights 243
Dead Battery 810
Deceleration Paddle Selector 553
Defaulting All the Settings 385, 486
Deflation Warning System 590
Indicator 133, 825
Initialisation 590
Defrosting the Windscreen and Windows 300
Demister 256
Devices that Emit Radio Waves 843
Dimming
Headlights 239
Rearview Mirror 261
Dipstick (Engine Oil) 748
Display Audio 308, 407
Display Setup 326
Door Mirrors 262
Doors 197
Auto Door Locking 213
Auto Door Unlocking 213
Door and/or Tailgate Open Message 50
Keys 197
Locking/Unlocking the Doors from the Inside 210
Locking/Unlocking the Doors from the Outside 201
Lockout Prevention System 209
Drive Mode Switch 558, 562
Driver Attention Monitor 158, 179
Driver Information Interface ... 150, 166, 169
Switching the Display 150, 169
Driving 521
Braking 691
Shifting Position 545, 547
Transmission 544
Turning on the Power 535
Driving Guidelines for Your Utility Vehicle 542
Driving Position Memory System 257
Dust and Pollen Filter 775

E

e:HEV 13
ECON Mode Indicator 137
Elapsed Time 156, 176
Electric Power Steering (EPS) System
Indicator 130, 823
Emergency Power System Off 809
Emergency Power System On 808
Emergency Stop Signal 700
Emergency Towing 834
Engine
If the 12-Volt Battery Is Dead 810
Number 841
Oil 747
Starting 535

Engine Coolant
Adding the Coolant ... 750
Overheating ... 815
Engine Oil ... 747
Adding ... 749
Checking ... 748
Low Oil Pressure Warning ... 817
Recommended Engine Oil ... 747
EPS (Electric Power Steering) System ... 823
EV Indicator ... 128
Exhaust Gas Hazard (Carbon Monoxide) ... 119
Exterior Care (Cleaning) ... 781
Exterior Mirrors ... 262

F

Features ... 305
Filter
Dust and Pollen ... 775
Flat Tyre ... 788
Fluids
Brake ... 755
Cooling System ... 750
Transmission ... 754
Windscreen Washer ... 756
FM/AM Radio ... 334, 430, 435
Fog lights ... 242
Folding Down the Rear Seats ... 270
Foot Brake ... 694
Four-Wheel Drive System ... 586
Front Airbags (SRS) ... 67
Front Seat Heaters ... 295
Front Seats ... 264
Adjusting ... 265
Front Sensor Camera ... 687
Fuel ... 35, 729
Average Fuel Economy ... 154, 174
Economy and CO_2 Emissions ... 733
Gauge ... 146
Instant Fuel Economy ... 154, 174
Low Fuel Indicator (Amber) ... 129
Range ... 154, 174
Recommendation ... 729
Refueling ... 729
Fuel Economy and CO_2 Emissions ... 733
Fuel Fill Cap ... 35, 731
Fuel Fill Door ... 35, 731, 835
Fuses ... 827
Inspecting and Changing ... 831
Locations ... 827, 829

G

Gauges ... 146
Glass (care) ... 779, 783
Glove Box ... 280
Google built-in ... 458

H

Hands-Free Telephone (HFT) System ... 386, 487
Automatic Import of Cellular Phonebook and Call History ... 495
Automatic Import of Mobile Phonebook and Recent calls ... 396
Automatic Transferring ... 397, 496
Favorite Contacts ... 398
Favourite Contacts ... 497
HFT Buttons ... 386, 487
HFT Menus ... 390, 489
HFT Status Display ... 388, 488
Limitations for Manual Operation ... 389, 488
Making a Call ... 402, 499
Options During a Call ... 405, 503
Phone Settings Screen ... 392
Phone Setup ... 393, 492
Receiving a Call ... 404, 502
Ringtone ... 397, 496
Hazard Warning Button ... 6, 7
Head Restraints ... 273
Headlights ... 239
Active Cornering Lights ... 244
Adaptive Driving Beam ... 250
Adjuster ... 246
Aiming ... 757
Auto High-Beam ... 247
Dimming ... 239
Operating ... 239
Head-Up Display ... 189

Heated Steering Wheel 294
Heaters (Front Seat) 295
Heaters (Rear Seat) 296
HFT (Hands-Free Telephone) 386, 487
High Beam Indicator 134
High Voltage Battery 597
High Voltage Battery Charge Level Gauge 147
Hill Descent Control System 569
Indicator 138
Hill Start Assist System 541
Honda SENSING 36, 603
Hybrid Vehicle
e:HEV 13

I

Identification Numbers 841
Engine, Motor and Transmission 841
Vehicle Identification 841
If You Cannot Open the Tailgate 836
Immobilizer System 225
Indicator 135
Indicators 122
12-Volt Battery Charging System 127
Adaptive Cruise Control (ACC) with Low Speed Follow (Amber) 139
Adaptive Cruise Control (ACC) with Low Speed Follow (White/Green) 139
Adaptive Cruise Control (ACC) with Low Speed Follow Interval 140
Adjustable Speed Limiter (White/Green) 139
Anti-lock Brake System (ABS) 130
Auto High-Beam/Adaptive Driving Beam 134
Automatic Brake Hold 126, 695
Automatic Brake Hold System 126, 695
Collision Mitigation Braking System (CMBS) (Amber) 141
Collision Mitigation Braking System (CMBS) (Grey) 141
Deceleration Paddle Selector 128
ECON Mode 137, 558
Electric Power Steering (EPS) System 130
EV 128
Front Fog Light 134
High Beam 134
Hill Descent Control System (White/Green) 138
Immobilizer System 135
INDIVIDUAL Mode 137, 562
Intelligent Speed Limiter (White/Green) ... 139
Lane Keeping Assist System (LKAS) (Amber) 140
Lane Keeping Assist System (LKAS) (White/Green) 140
Lights On 134
Low Fuel (Amber) 129
Low Tire Pressure/Deflation Warning System 133
Low Tire Pressure/TPMS 132, 587
Malfunction Indicator Lamp 127
NORMAL Mode 137, 558, 562
Parking Brake and Brake System (Amber) 126, 822
Parking Brake and Brake System (Red) 124, 125, 821, 822
Parking Sensor 138
Power System 128
Ready 128
Rear Fog Light 134
Road Departure Mitigation (Amber) 141
Road Departure Mitigation (Grey) 141
Road Departure Mitigation System Steering Assist Auto OFF 141
Safety Support (Amber) 142
Safety Support (Green/Grey) 145
Seat Belt Reminder 129
Security System Alarm 136
Shift Position 127
SPORT Mode 137, 558, 562
Supplemental Restraint System 130
System Message 138
Transmission System 127, 826
Turn Signal and Hazard Warning 134
Vehicle Stability Assist (VSA) OFF 131, 584
Vehicle Stability Assist (VSA) System 131, 583
INDIVIDUAL Mode Indicator 137
Instant Fuel Economy 154, 174
Instrument Panel 121

Intelligent Speed Limiter 577
Indicator 139
Interior Convenience Items 277
Interior Lights 277
Interior Rearview Mirror 260

J

Jacking Points 804
Jump Starting 810

K

Key Number Tag 199
Keyless Access System 201
Keyless Lockout Prevention 209
Keys 197
Lockout Prevention 209
Number Tag 199
Rear Door Won't Open 212
Remote Transmitter 207
Kickdown 544
Knee Airbags 70

L

Lane Keeping Assist System (LKAS) 655
LaneWatch 598
Lead Car Departure Notification System 677
Legal Information on Apple CarPlay/Android Auto 519
Lights 239, 757
Active Cornering Lights 244
Adaptive Driving Beam 250
Auto High-Beam 247
Bulb Replacement 757
Daytime Running Lights 243
Fog Light 242
High Beam Indicator 134
Interior 277
Light Switches 239
Lights On Indicator 134
Load Limit 525
Locking/Unlocking 197
Auto Door Locking/Unlocking 213
Childproof Door Locks 212
From Inside 210
From Outside 201
Keys 197
Using a Key 208
Lockout Prevention System 209
Low 12-Volt Battery Charge 818
Low Fuel Indicator (Amber) 129
Low Keyless Remote/Card Key Signal Strength 200
Low Oil Pressure Warning 817
Low Speed Braking Control 620
Low Tyre Pressure/Deflation Warning System Indicator 133, 825
Low Tyre Pressure/TPMS Indicator 824
Lower Anchorages 106
Lubricant Specifications Chart 839
Luggage (Load Limit) 525
Luggage Floor Box 286
Luggage Hooks 284

M

Maintenance 735
12-Volt Battery 769
Brake Fluid 755
Cleaning 778
Climate Control 775
Cooling System 750
Oil 748
Precautions 736
Remote Transmitter 772
Replacing Light Bulbs 757
Safety 737
Schedule 739
Transmission Fluid 754
Tyres 764
Under the Bonnet 744
Malfunction Indicator Lamp 127, 820
Map Lights 278
Maximum Permissible Weight 525, 838
Meters, Gauges 146
Mirrors 260
Adjusting 260
Door 262
Interior Rearview 260
Modifications (and Accessories) 785
MP3 345

Multi-View Camera 715
Multi-View Rear Camera 713

N

Navigation 157, 177
NORMAL Mode Indicator 137
Numbers (Identification) 841

O

Odometer 146
Off-road Guidelines 533
Oil (Engine) 747
  Adding 749
  Checking 748
  Low Oil Pressure Warning 817
  Recommended Engine Oil 747
  Viscosity 747
Open Source Licences 514, 854
Opening/Closing
  Bonnet 745
  Panoramic Roof 231
  Power Windows 227
  Tailgate 214
Other Interior Convenience Items 289
Outside Temperature Display 148
Overheating 815

P

Panoramic Roof 231
Parking Brake 691
Parking Brake and Brake System Indicator (Amber) 126, 822
Parking Brake and Brake System Indicator (Red) 124, 125, 821, 822
Parking Sensor System 703
Passing Indicators 240
Petrol 35, 729
  Economy and CO_2 Emissions 733
  Gauge 146
  Information 729
  Instant Fuel Economy 154, 174
  Low Fuel Indicator (Amber) 129
  Refueling 729
Phone 156
Playing *Bluetooth*® Audio 349, 443
POWER Button 235
Power Flow 363
Power Flow Monitor 171
Power Flow/Engine Status Display/High Voltage Battery Charge Level Gauge 152
POWER Gauge 146
Power System
  Won't Start 805
Power System Indicator 128
Power System Won't Start 805
Power Tailgate 216
Power Windows 227
Precautions While Driving 542
Pregnant Women 62
Profile Settings 464
Puncture (Tyre) 788

R

Radiator 751
Radio (AM/FM) 430, 435
Radio (FM/AM) 334
Radio Data System (RDS) 337, 433
Range 154, 174
RDS (Radio Data System) 337, 433
Ready Indicator 128
Real Time AWD with Intelligent Control System 586
Rear Demister Button 256
Rear Seat Heaters 296
Rear Seats 269
Rearview Mirror 260
Refueling 729
  Fuel Gauge 146
  Low Fuel Indicator (Amber) 129
  Petrol 729, 838
Regulations 843
Remote Transmitter 207
Replacement
  Battery 772
  Bulbs 757
  Fuses 827, 829
  Rear Wiper Blade Rubber 762
  Tyre 766

Wiper Blade Rubber 760
Resetting a Trip Meter 154, 174
Road Departure Mitigation 626
On and Off 631

S

Safe Driving 45
Safety Check 50
Safety Labels 120
Safety Message 0
Safety Support 162, 184
Seat Belts 51
Adjusting the Shoulder Anchorage 59
Checking 63
Fastening 57
Installing a Child Restraint System with a Lap/Shoulder Seat Belt 111
Pregnant Women 62
Reminder 54
Warning Indicator 54, 129
Seat Heaters 295, 296
Seats 264
Adjusting 264
Front Seats 264
Rear Seat Heaters 296
Rear Seats 269
Seat Heaters 295
Security System 225
Immobilizer System Indicator 135
Security System Alarm Indicator 136
Selecting a Child Restraint System 90
Setting the Clock 196
Shift Button 547
Operation 549
Shift Lever 31, 545
Operation 31, 546
Releasing 813
Won't Move 813
Shift Position Indicator 127, 546, 549
Shifting (Transmission) 545, 547
Shoulder Anchorage 59
Side Airbags 76
Side Curtain Airbags 79
Spark Plugs 838
Specifications 838
Specified Fuel 729, 838
Speed Alarm 178
Speed Limiter, Adjustable 571
Speed Limiter, Intelligent 577
Speedometer 146
SPORT Mode Indicator 137
SRS Airbags (Airbags) 67
Steering Wheel 259
Adjusting 259
Stopping 701
Storage Items 280
Sunglasses Holder 285
Supplemental Restraint System (SRS) 67
Switches
(Around the Steering Wheel) 6, 7, 8, 235
System Message Indicator 138
System Updates 327, 427

T

Tailgate 214
Unable to Open 836
TCU Open Source Licence 854
Temperature
Outside Temperature Display 148
Temperature Sensor 148, 303
Temporarily Repairing a Flat Tyre 788
Temporary Repair Kit (TRK) 788
Time (Setting) 196
Tire Pressure Monitoring System (TPMS) 587
Indicator 132
Towing a Trailer 526
Equipment and Accessories 528
Load Limits 526
Towing Your Vehicle
Emergency 834
TPMS (Tyre Pressure Monitoring System) 587
Indicator 132, 824
Traffic Jam Assist 668
Traffic Sign Recognition System 681
Transmission 544, 545, 547
Creeping 544
Fluid 754
Kickdown 544
Number 841

Operating the Shift Button 549
Operating the Shift Lever 545
Operation 31
Shift Lever Does Not Move 813
Shift Position Indicator 127, 546, 549
Shifting 547
Trip Meter 154, 174
TRK (Temporary Repair Kit) 788
Troubleshooting 787
Blown Fuse 827, 829
Brake Pedal Vibrates 41
Buzzer Sounds When Opening Door 42
Emergency Towing 834
Noise When Braking 42, 43
Overheating 815
Power System Won't Start 805
Puncture/Flat Tyre 788
Rear Door Won't Open 41, 212
Shift Lever Won't Move 813
Warning Indicators 122
Turn Signals
Indicators (Instrument Panel) 134
Turning on the Power
Does Not Activate 805
If the 12-Volt Battery Is Dead 810
Tyres 764
Air Pressure 840
Checking and Maintaining 764
Inspection 764
Puncture (Flat Tyre) 788
Rotation 767
Tyre Chains 768
Wear Indicators 765
Winter 768

U

Unlocking the Doors 201
USB Flash Drives 345, 440, 507
USB Ports 311, 411
User Information 460

V

Vanity Mirrors 11
Vehicle Identification Numbers 841
Vehicle Stability Assist (VSA) 583
OFF Button 584
OFF Indicator 131
System Indicator 131
Viscosity (Oil) 747, 839
Voice Control Operation 331
Audio Commands 332
General Commands 332
List Commands 333
Navigation Commands 333
Phone Commands 332
Standard Commands 333
Voice Portal Screen 332
Voice Recognition 331
VSA (Vehicle Stability Assist) 583

W

Wallpaper 323, 423
Warning Indicator On/Blinking 817
Warning Labels 120
Warnings 165, 188
Watts 839
Wear Indicators (Tyre) 765
Wi-Fi Connection 352, 446
Window Washers 253
Adding/Refilling Fluid 756
Switch 253
Windows (Opening and Closing) 227
Windscreen
Cleaning 779, 783
Defrosting/Defogging 256, 300
Washer Fluid 756
Wiper Blades 760
Wipers and Washers 253
Winter Tyres 768
Tyre Chains 768
Wipers and Washers 253
Automatic Intermittent Wipers 254
Checking and Replacing Wiper Blades 760
Rear 255
Wireless Charger 290
WMA 345
Worn Tyres 764